

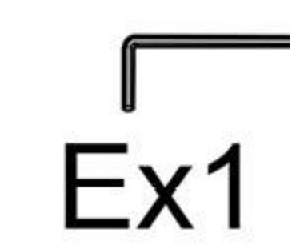
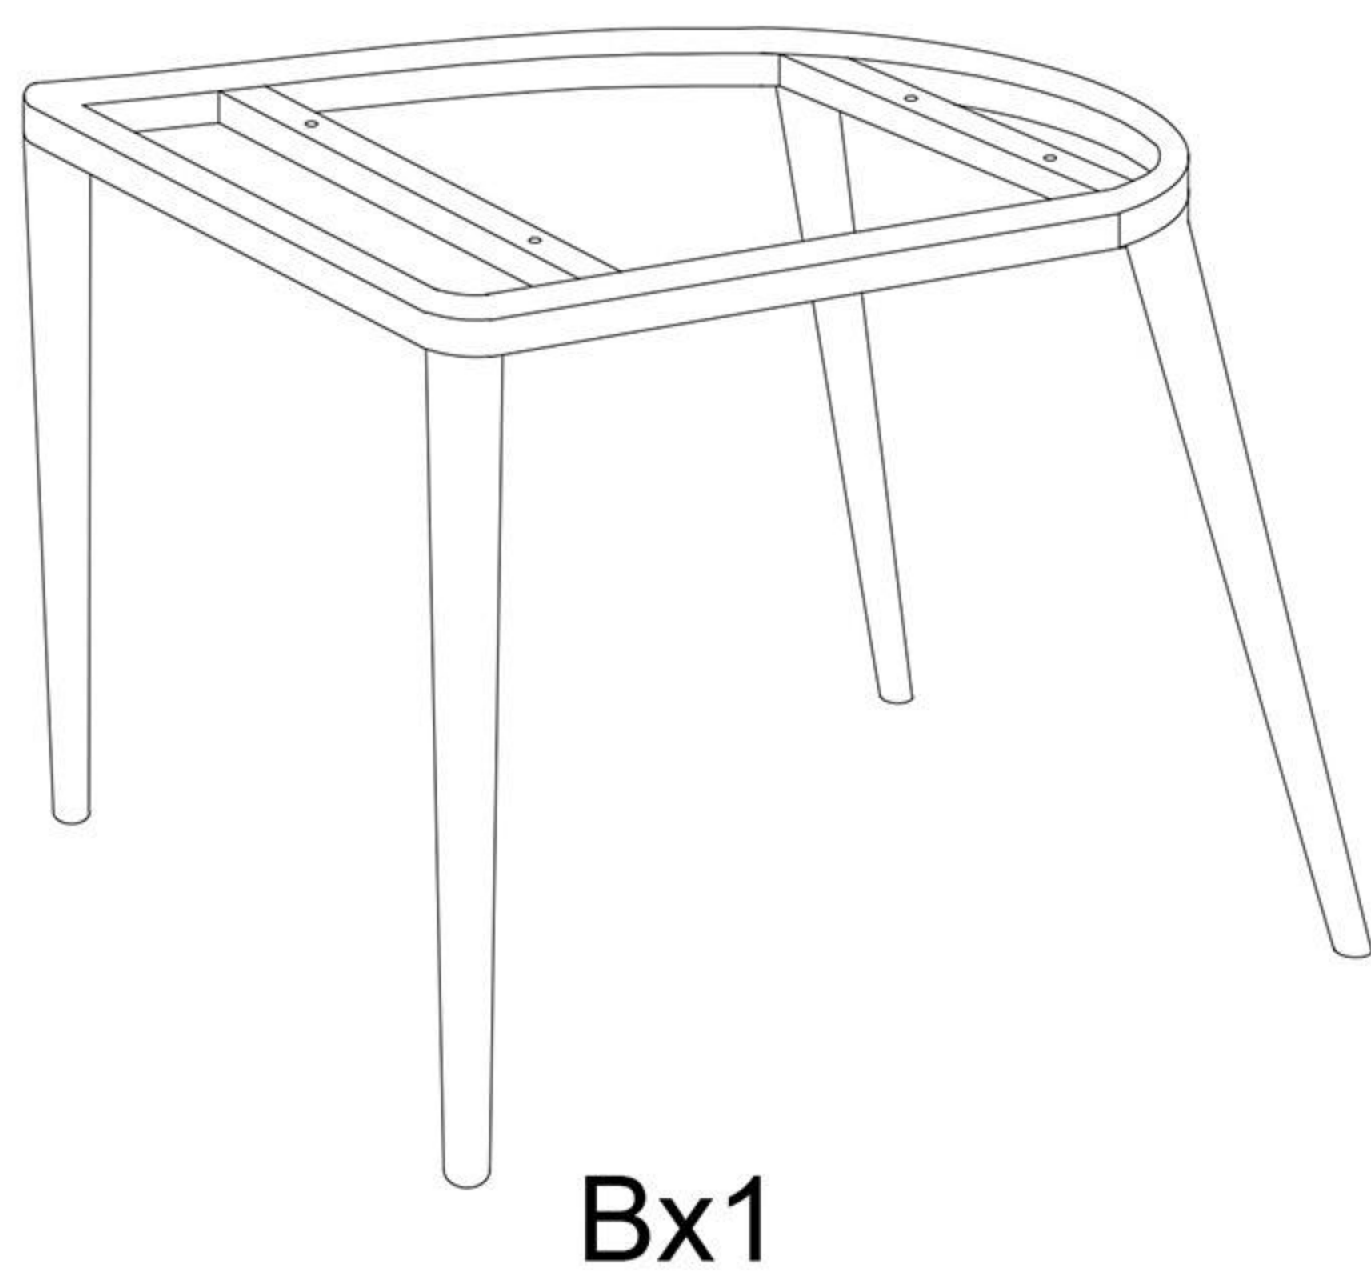
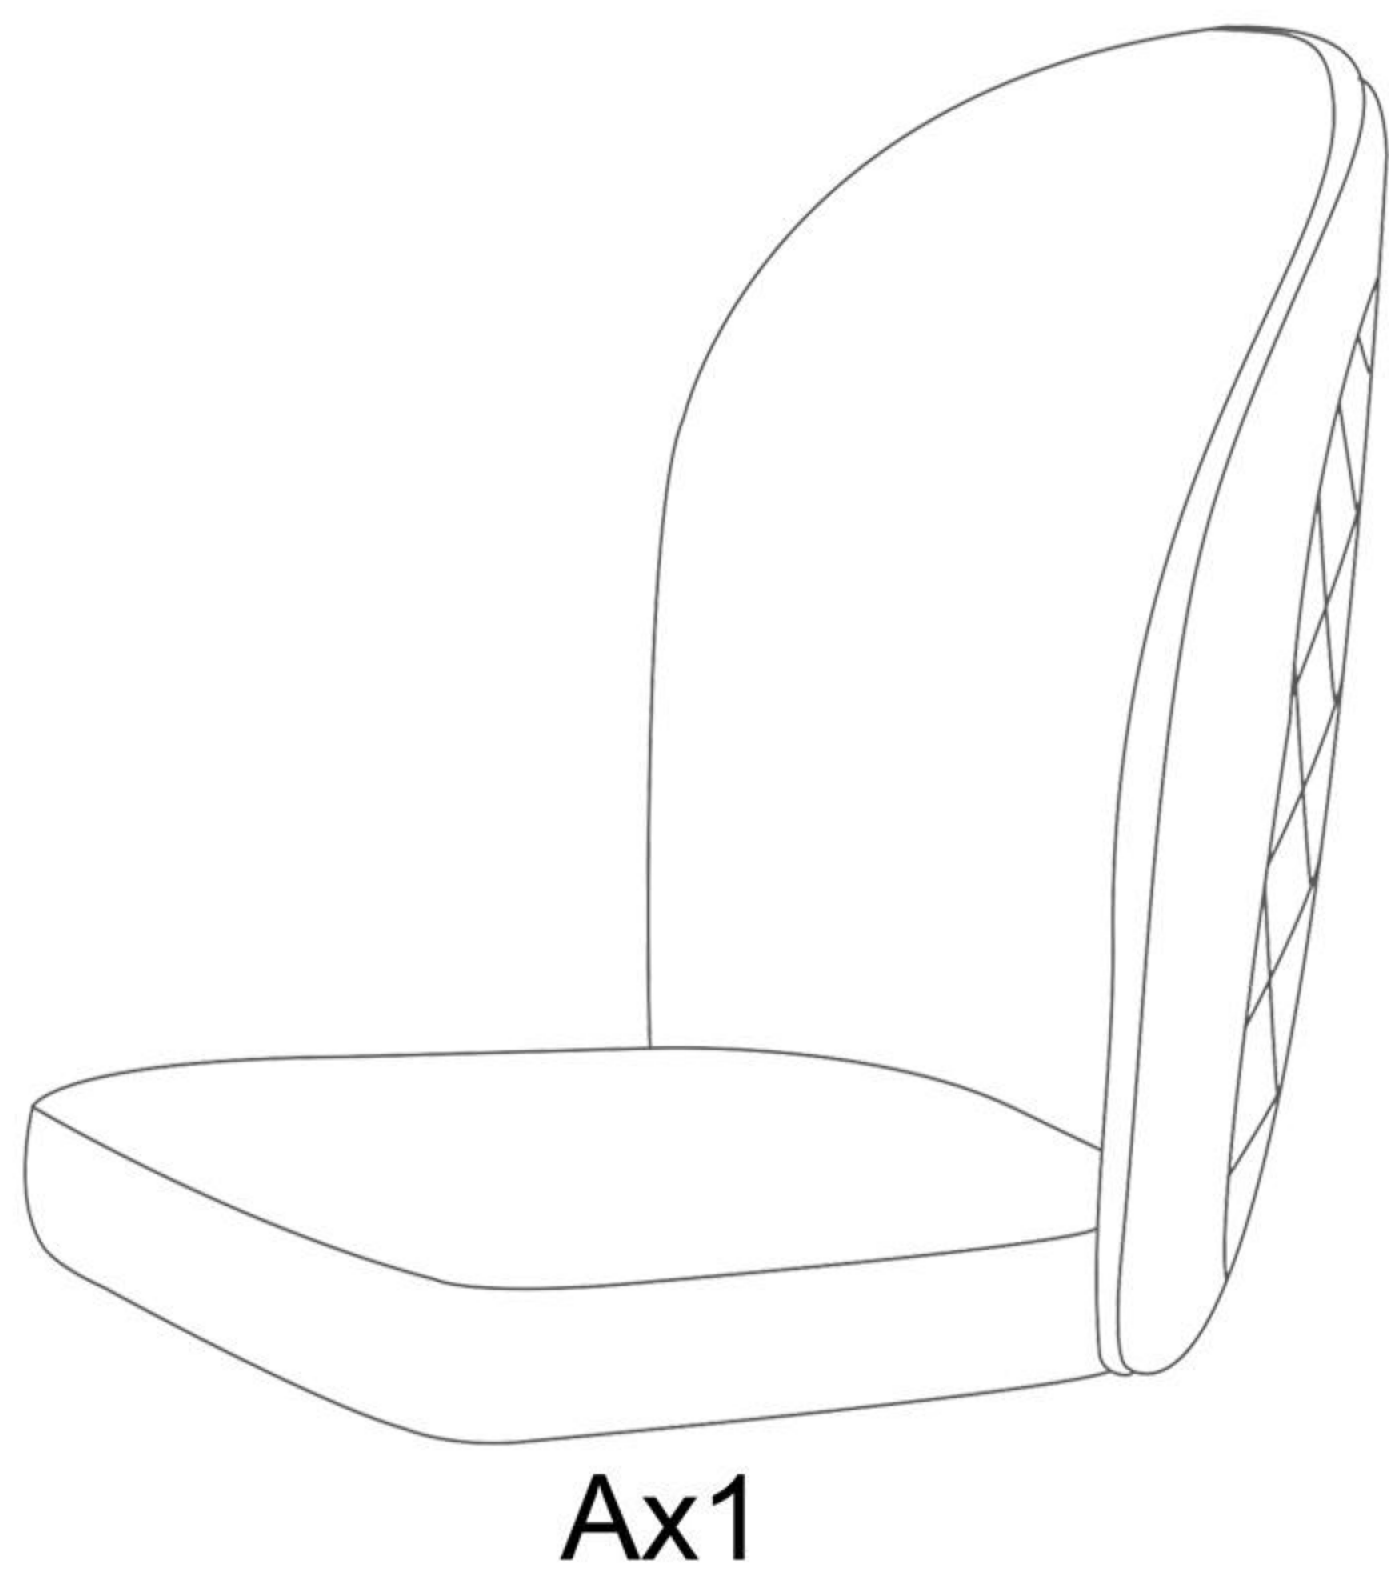
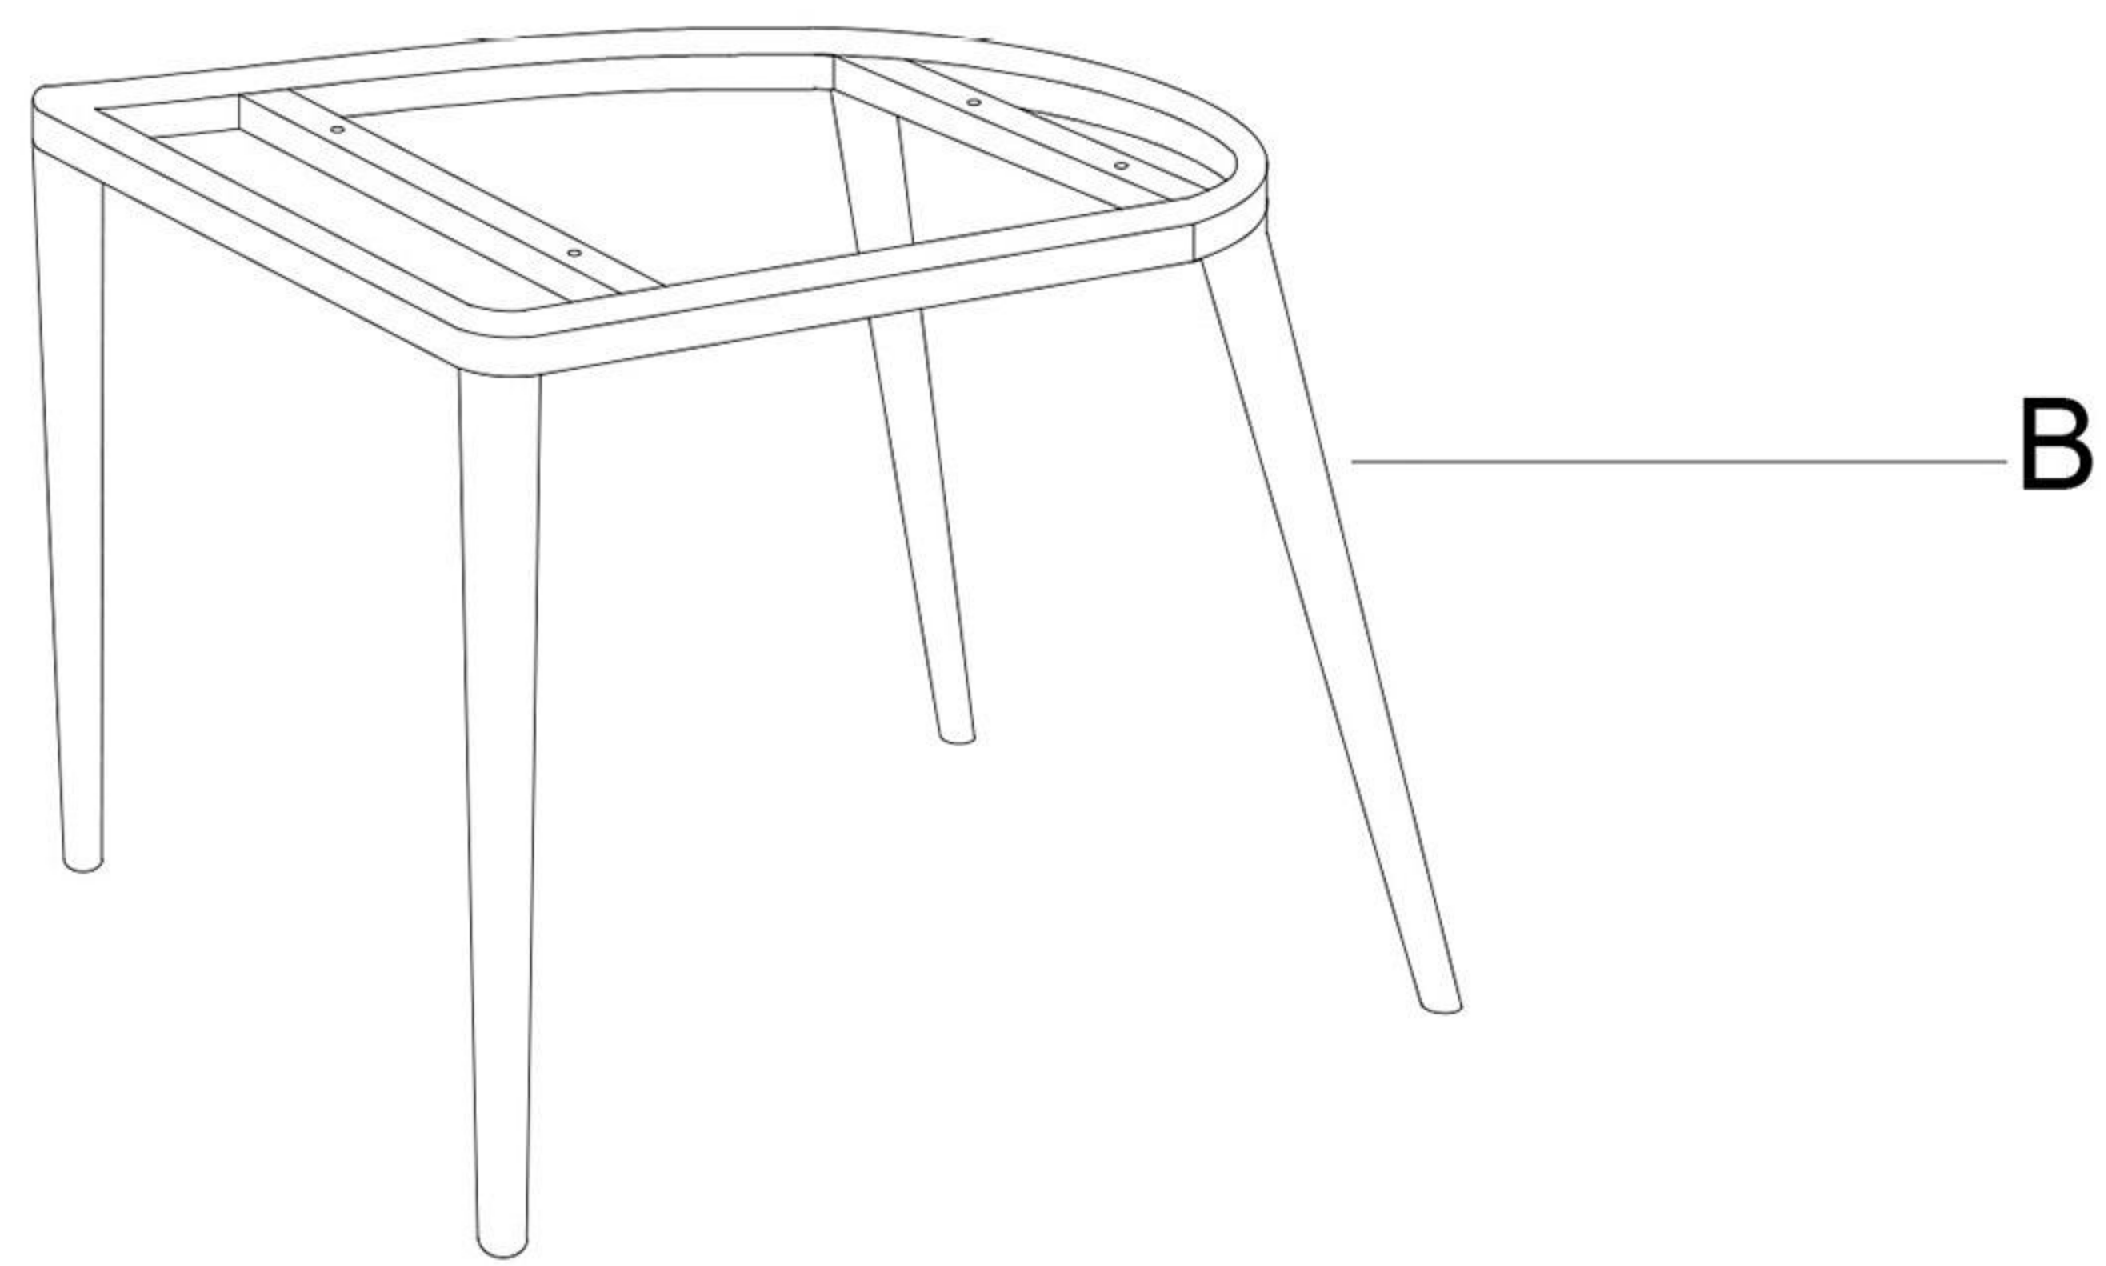


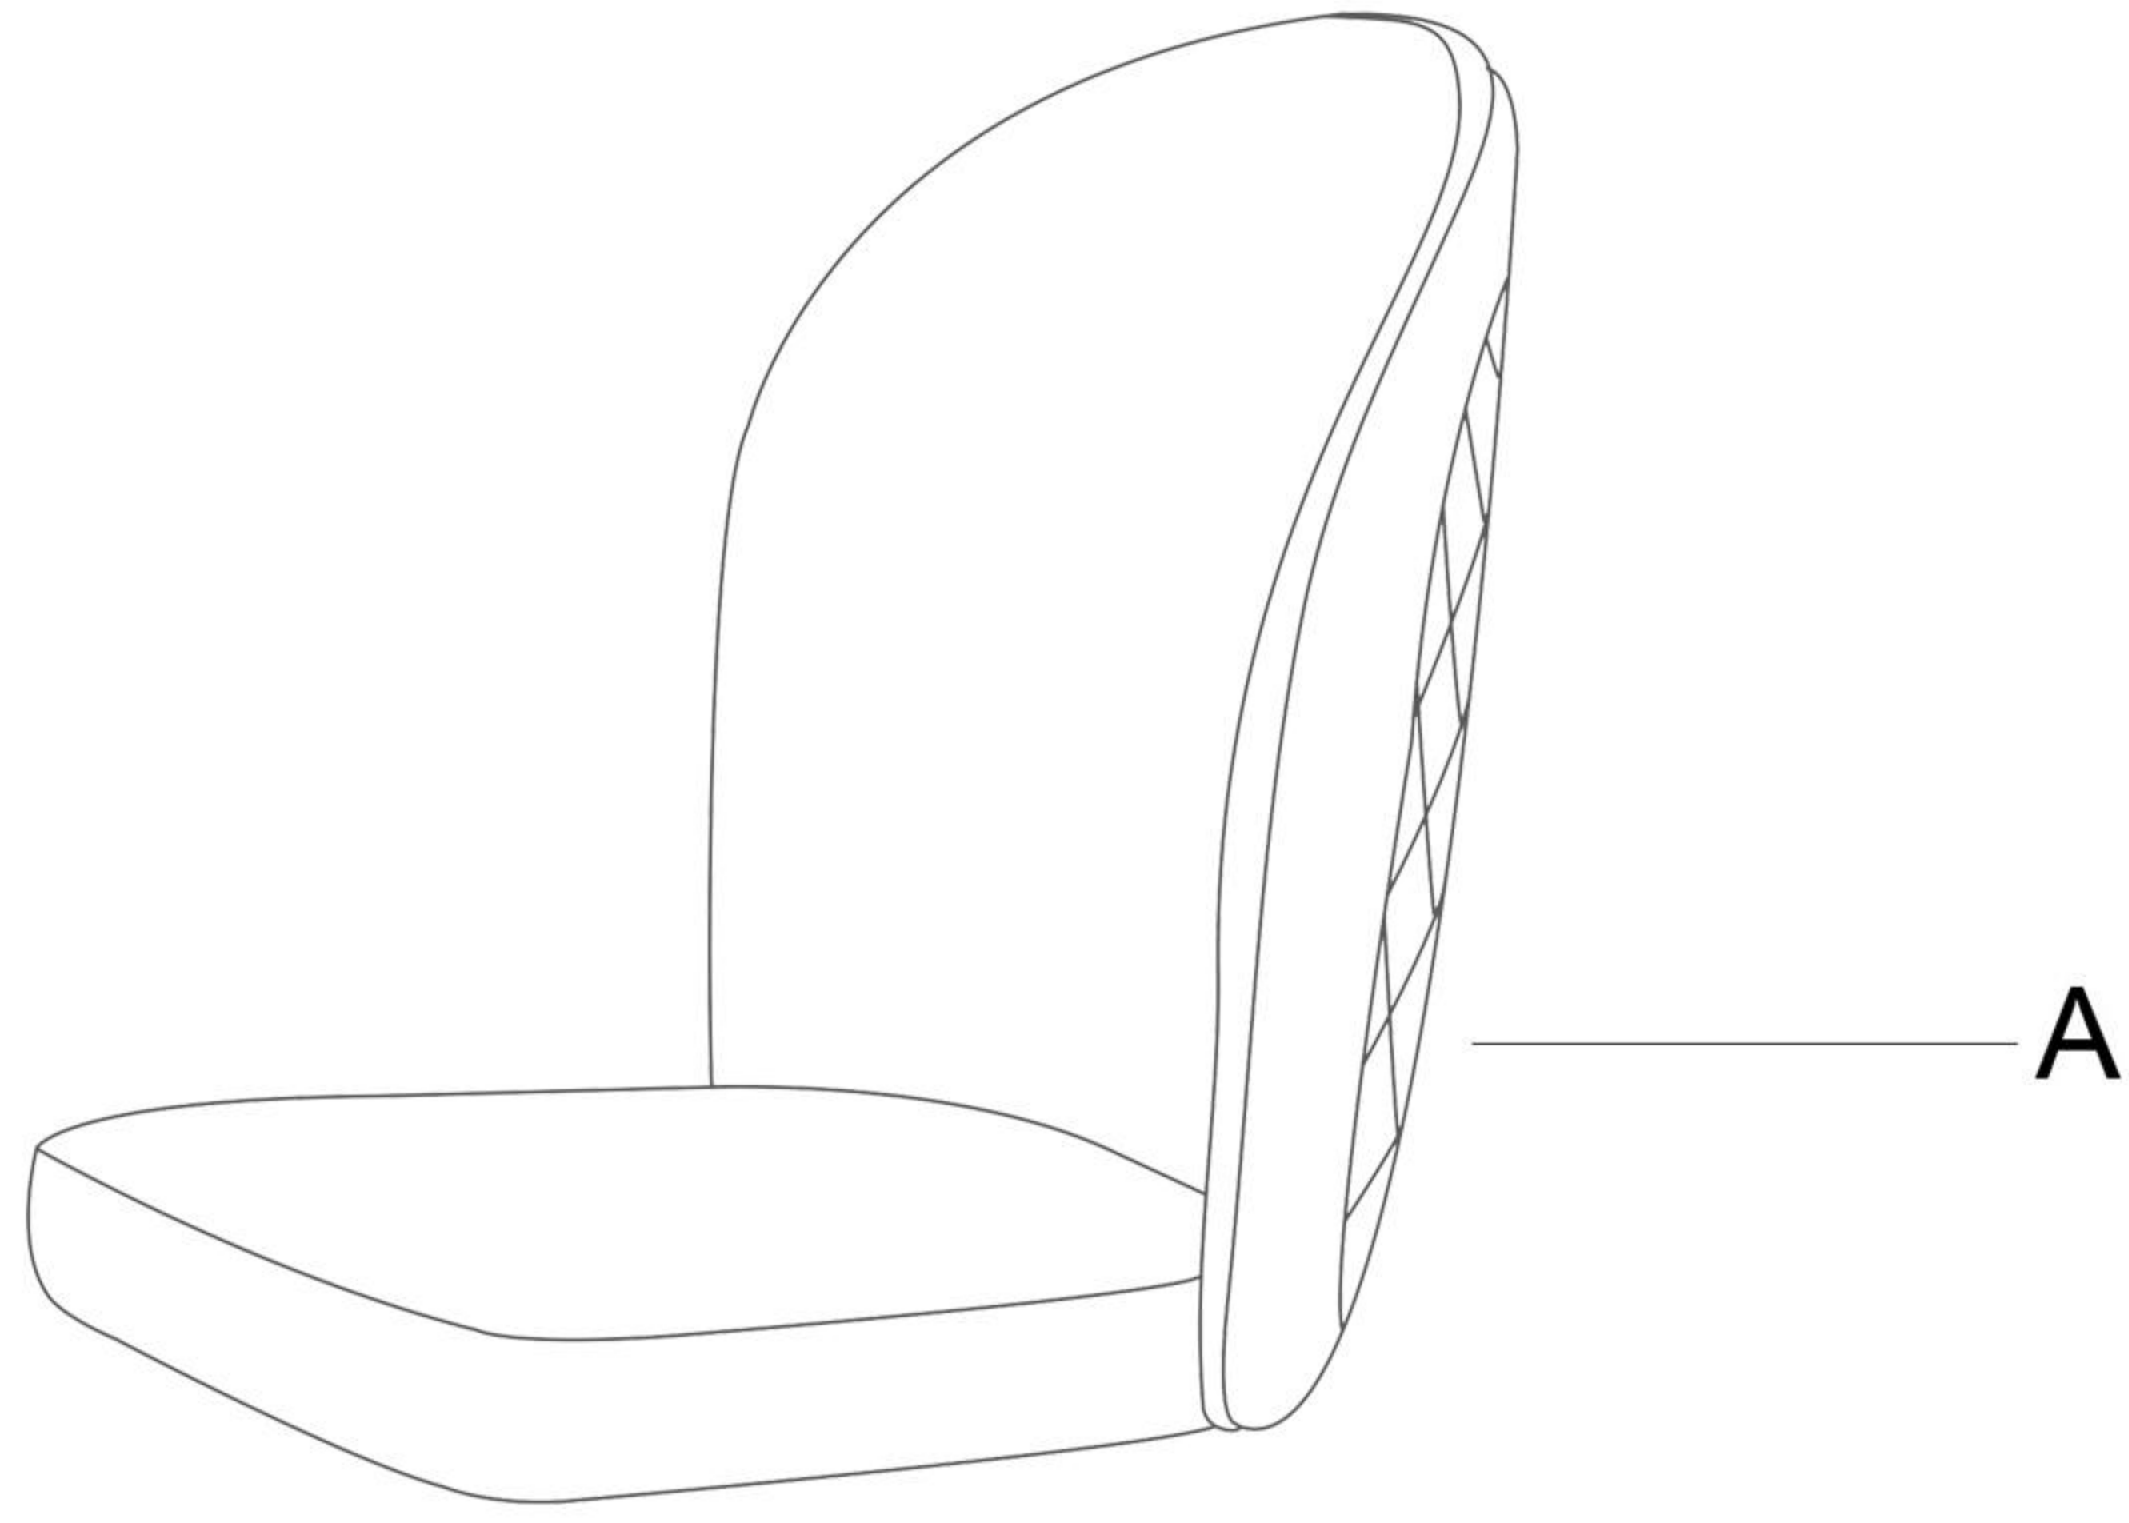


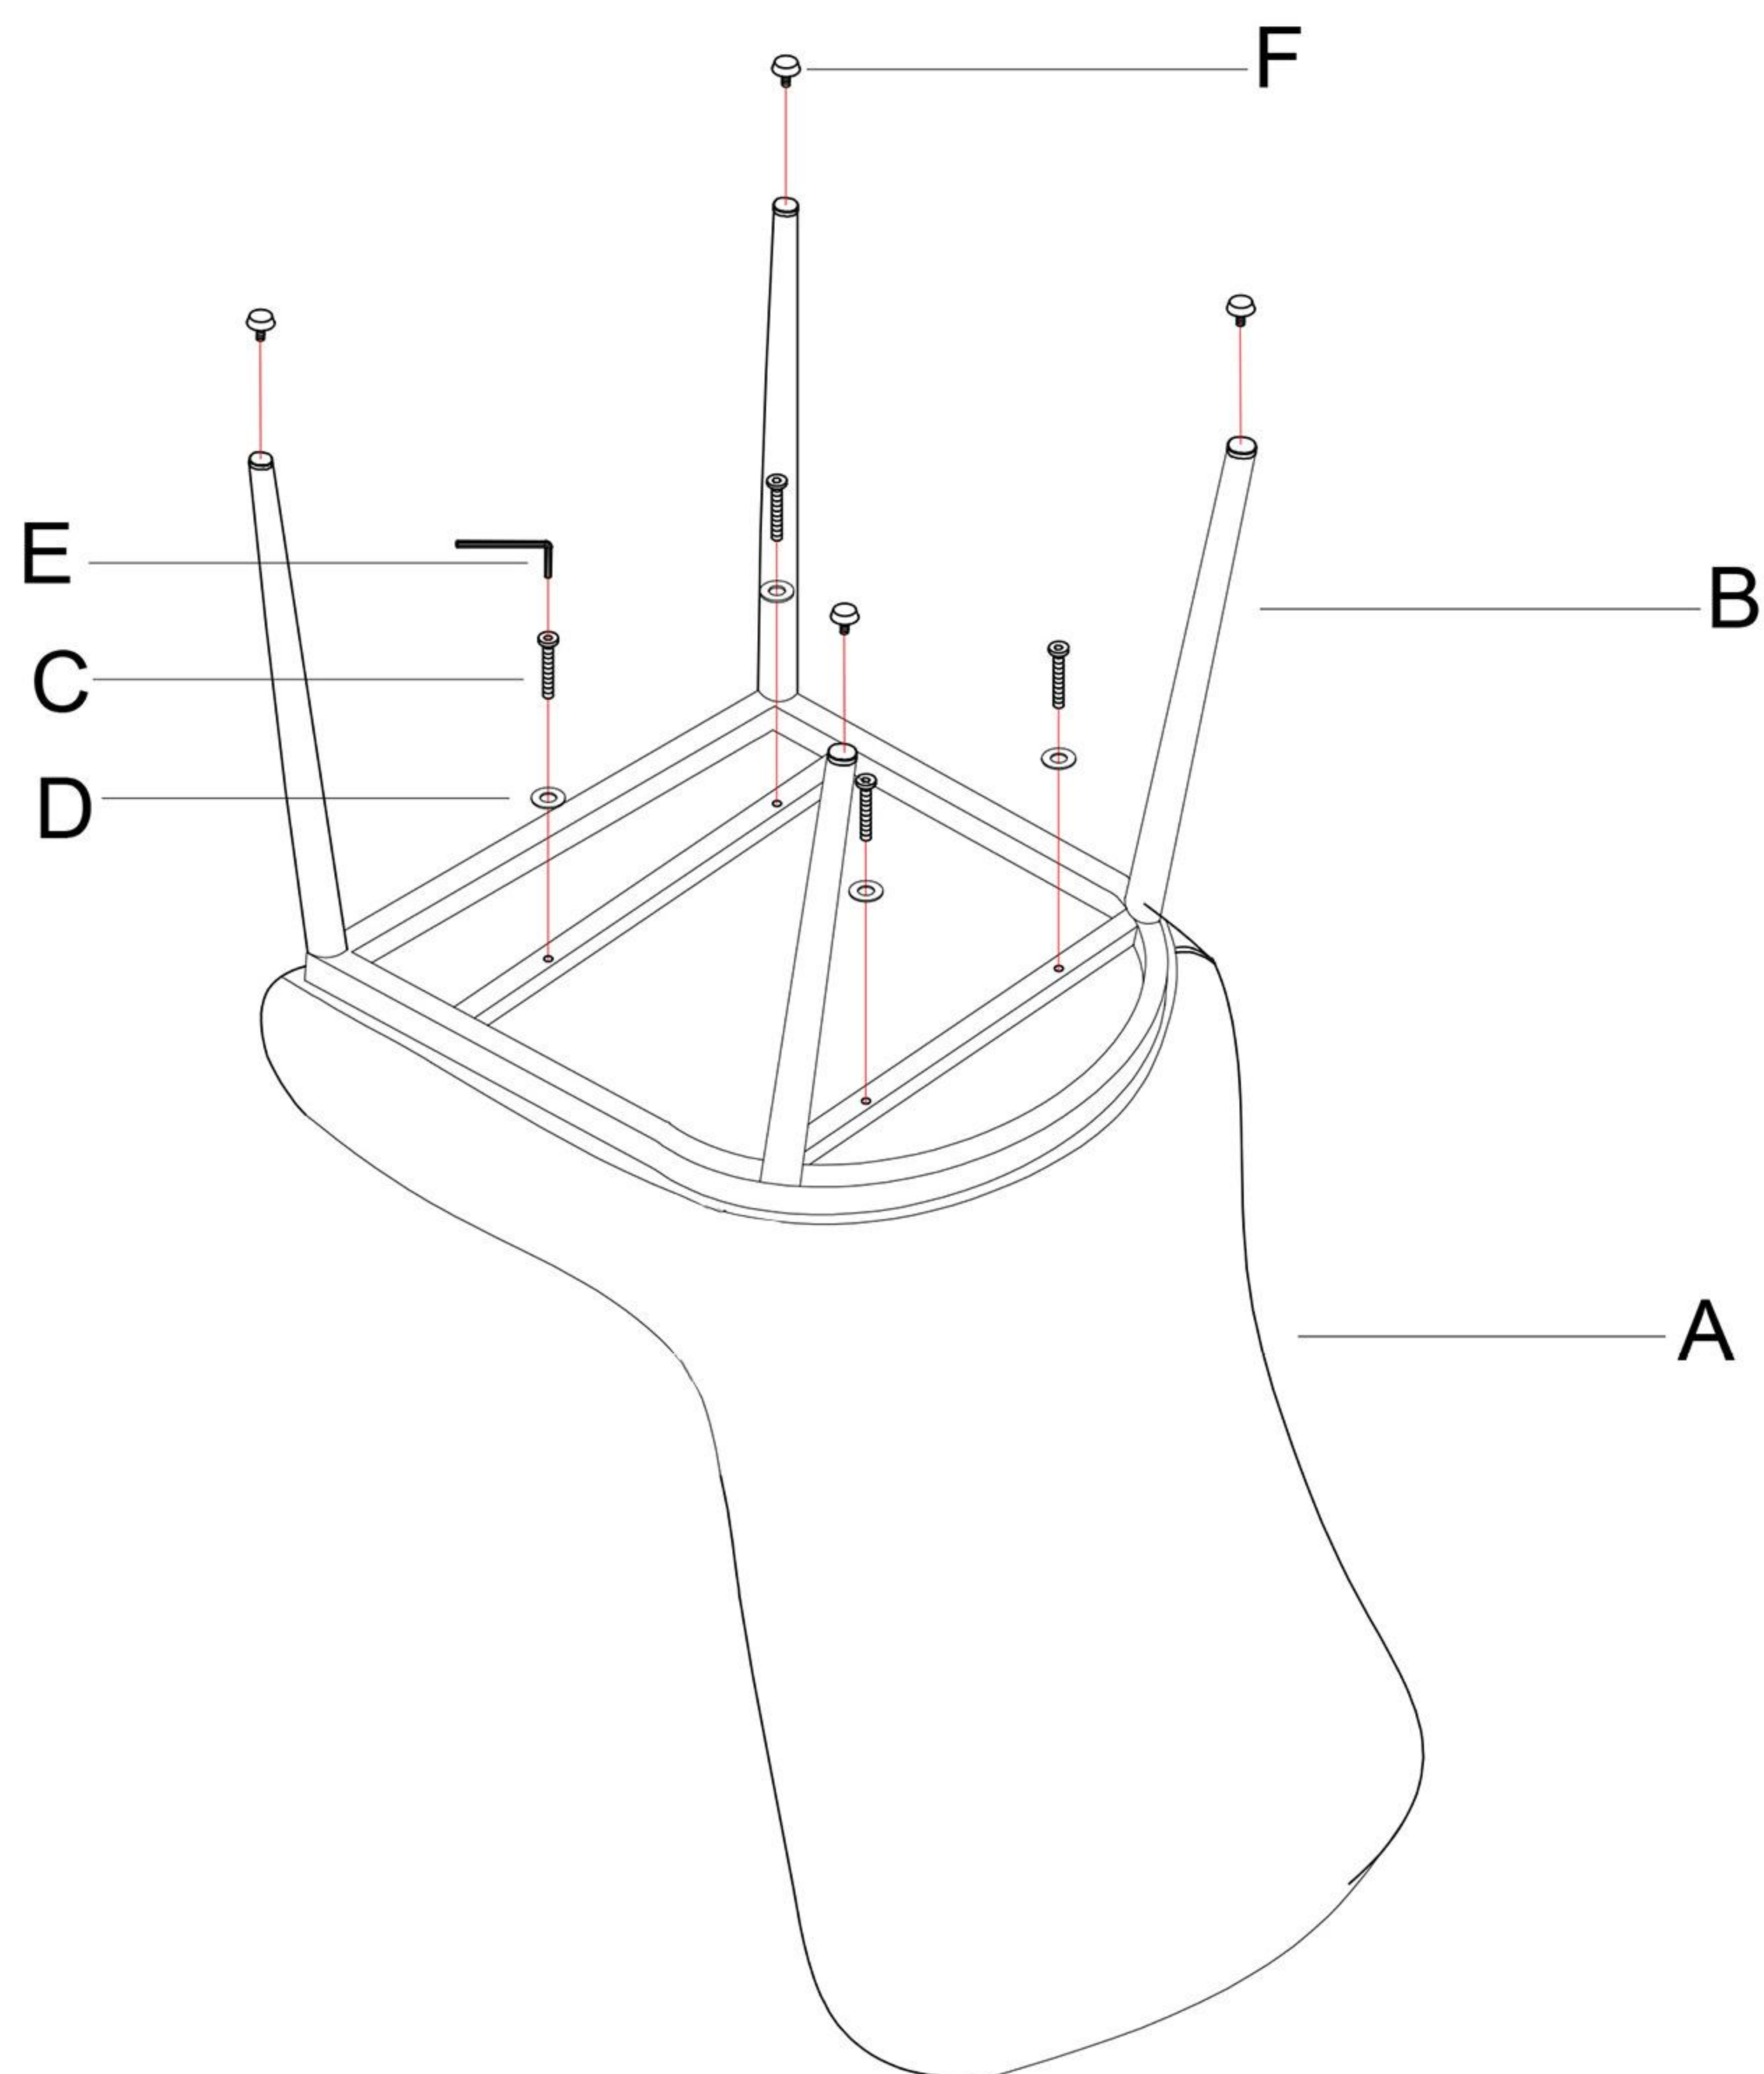
Parts List

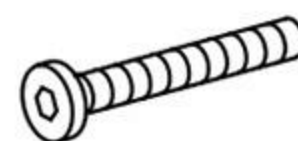


Step 1

P.2/2

- C  x4
- D  x4
- E  x1
- F  x4



Step 2

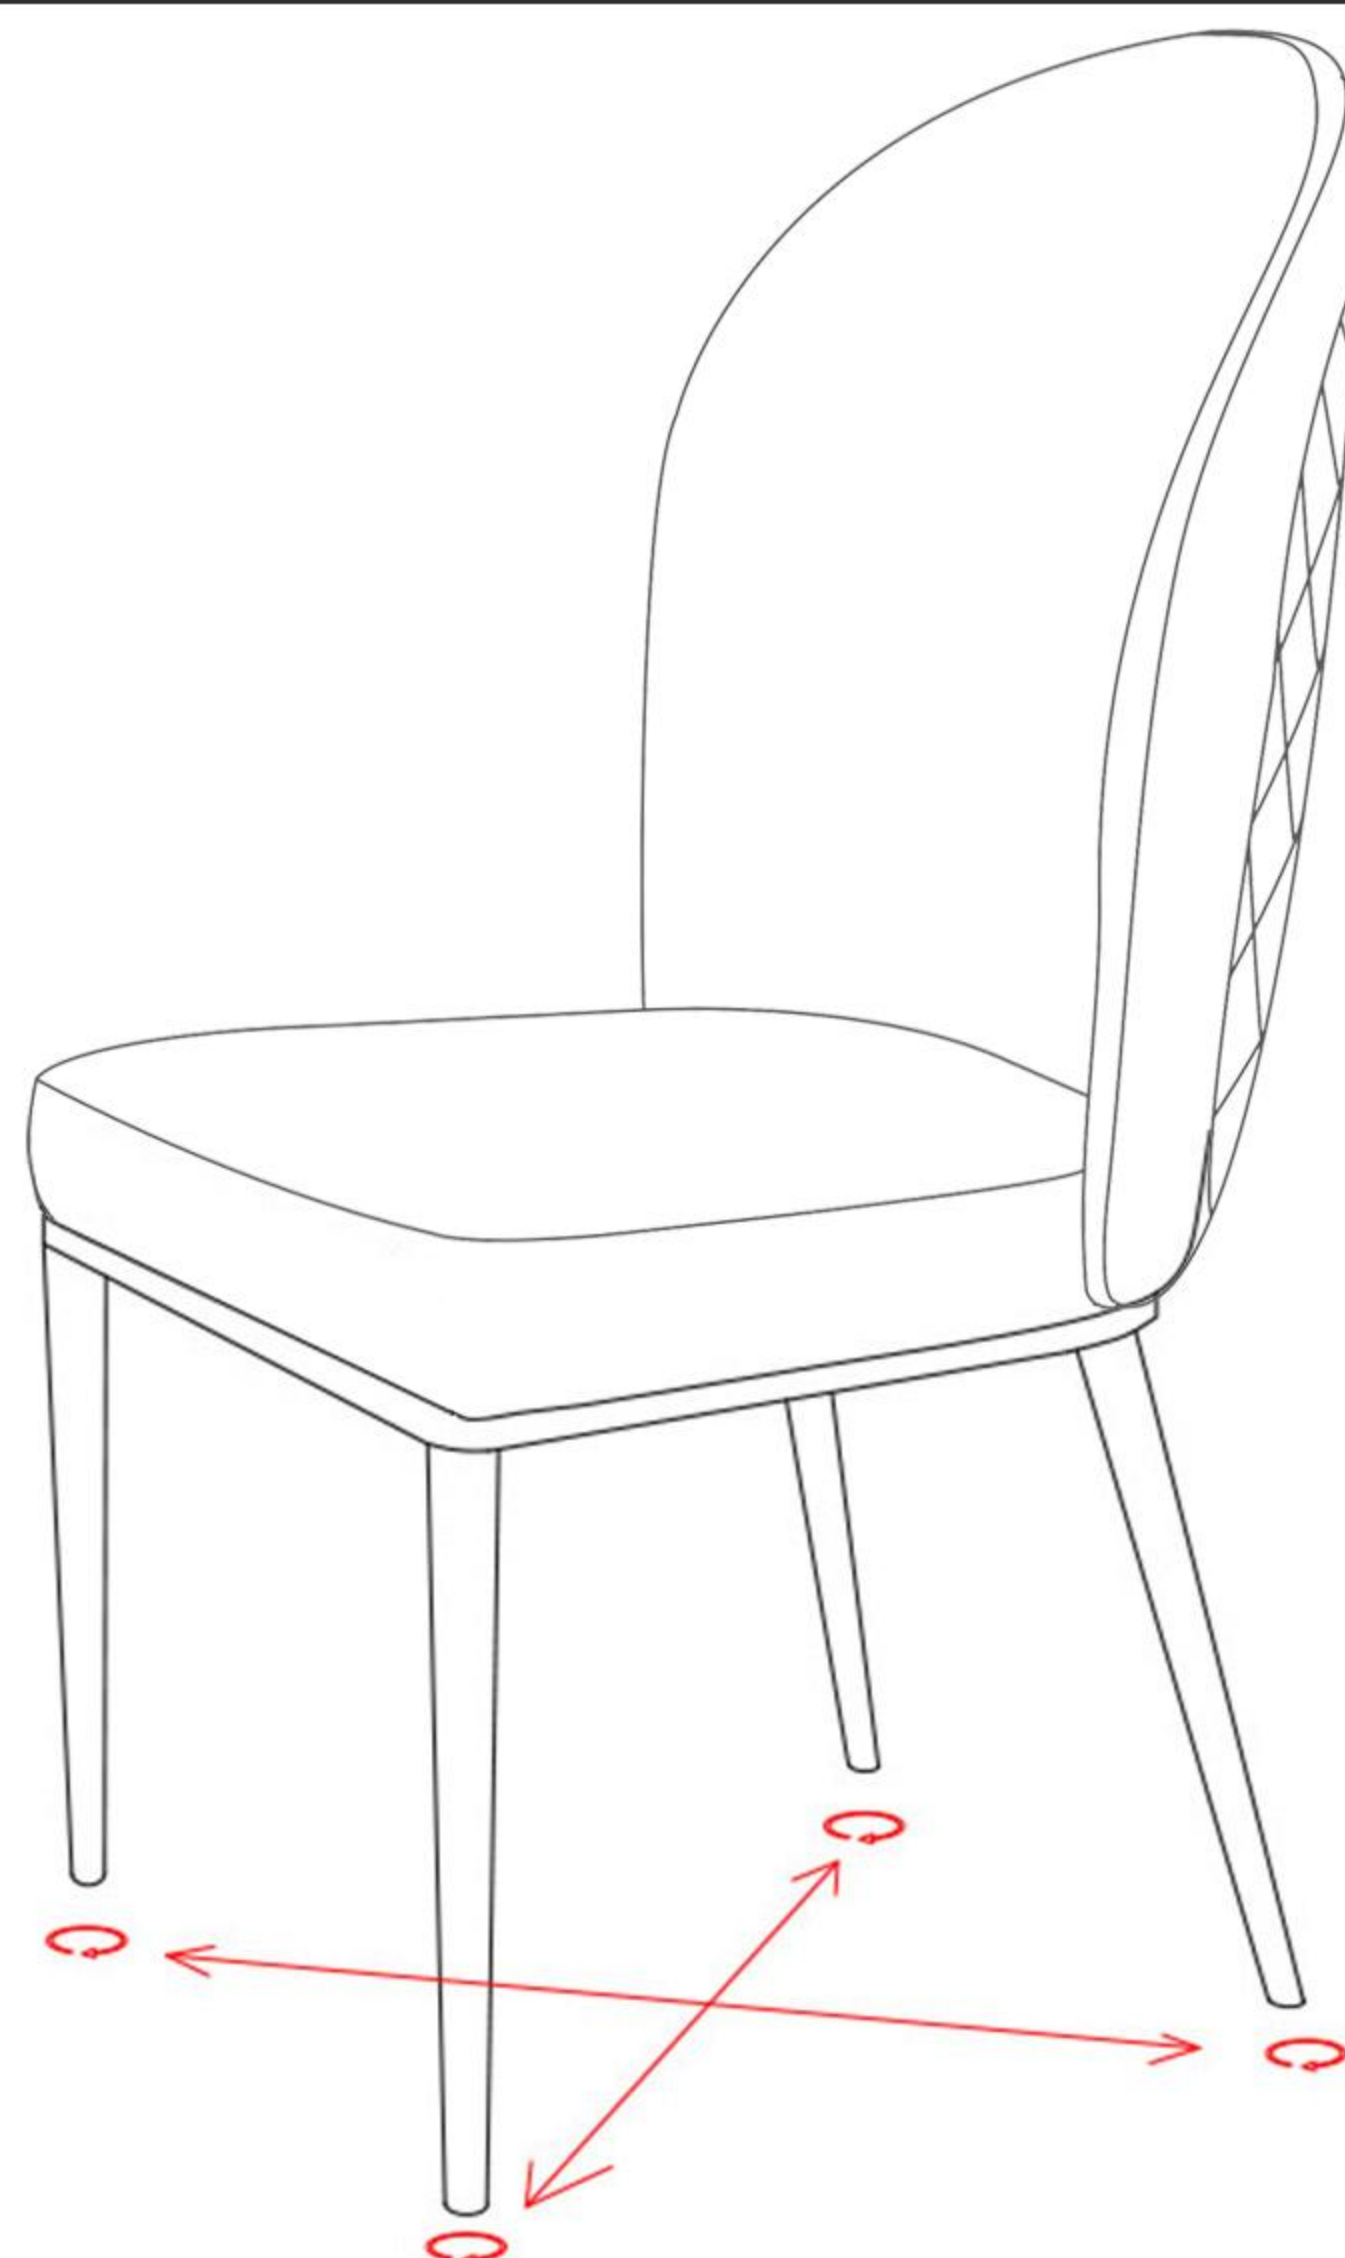

1. Firstly, put the installed chair on the horizontal ground, make sure the foot pads on four chair legs are in contact with the ground.
2. Secondly, if there is any foot pad on the chair legs not contacting with the ground, please rotate the foot pads out in a counterclockwise direction to ensure the contact and remain stable.