


# DC Fan Lamp Remote Controller User Manual

## FUNCTION INSTRUCTION OF EMITTER

- ① Timer
- ② Light ON OFF
- ③ Rotation Direction
- ④ Fan Shutdown
- ⑤ Speed Controller

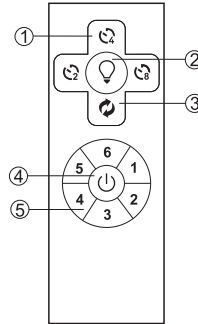

### KINDLY REMINDERS:

1. If the emitter can not control the fan, learning code matching mode is used between emitter and receiver.  
Turn "ON" the supply power within 10 seconds and press the emitter's "⏻" button for 5 seconds, it can load normally after hearing a long sound "bee", which means learning successfully and it can works normally.  
(PS: Learning mode is not accepted after turn "ON" the supply power for 10 seconds)
2. When the emitter cannot control the receiver, please check the battery switch touching normally or not, correction of the positive and negative, full or empty of the power.
3. When the emitter cannot control the receiver, please check is there any existence of similar remote controlled products nearby, then check whether they works, because remote controlled product with the same frequency will disturb each other.
4. The App Linking method.(Only Intellectual product)  
Turn on the supply power within 60 seconds and Press the emitter's 'WIFI Pairing' button for 5 seconds, still hear continuous 'bee' sound.
5. Please take out the battery from the emitter when leaving unused for long time.
6. **When installing the fan, the fan ceiling cover don't press the antenna(or other wire), it is easy to breakdown the wire and short-circuited.**