


Assembly Installation

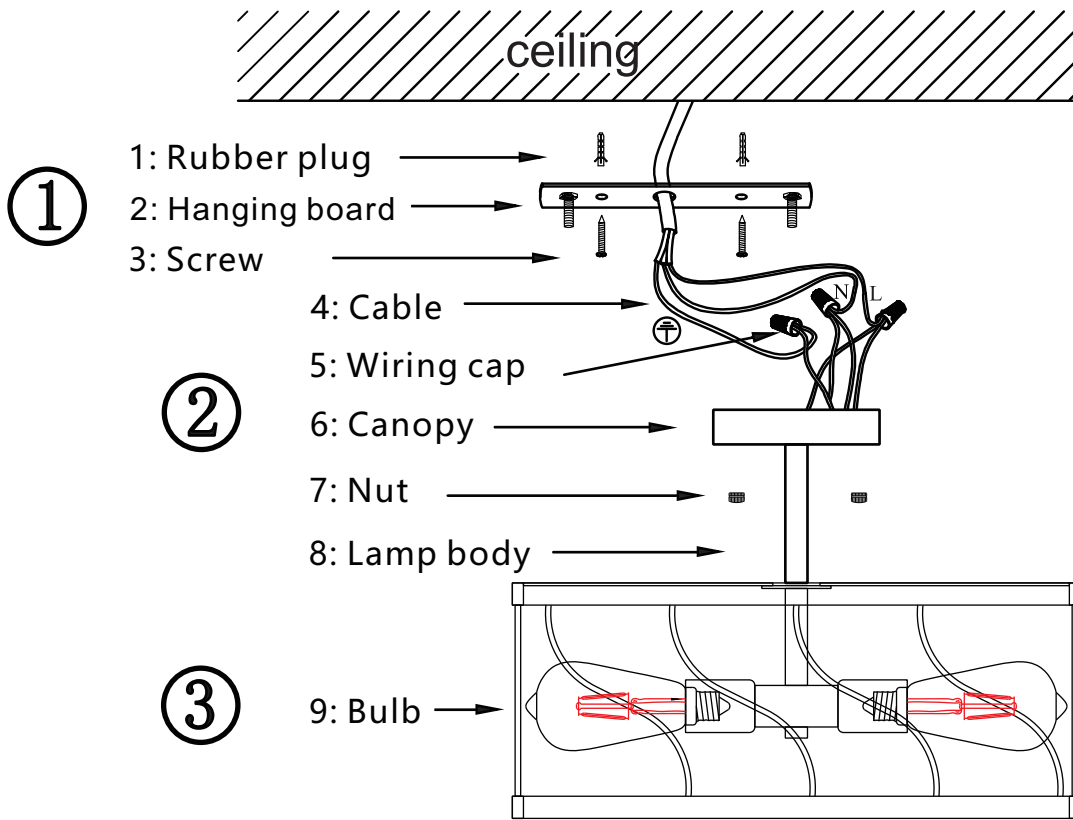

Installation steps

 
Install in sequence by serial number



110~240V

50Hz/60Hz

E26 



110~240V
50HZ/60HZ

- Only the technical personnel can be allow to fix and m aintain
- You must turn off the power before to fix
- If the glass is breakdown you must change it immediately
- There must keep some space for radiation

