 


# Instruction Manual

Remote Tower Fan

Model No.: 5348

---

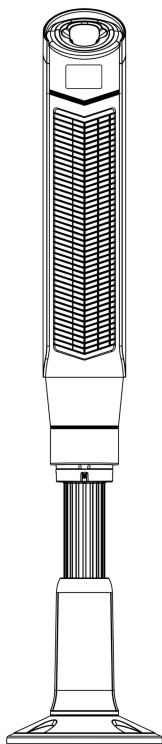

Thank you for purchasing this product! Please read this manual carefully before operating this product. If you have any questions about the product, such as missing parts, product damage, product assembly and operation etc., please contact us via Amazon Message or customer service phone: 213-4467172; 661-4358826

## Part 1 IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be obeyed, including the following:

### **READ ALL INSTRUCTIONS BEFORE USING**

**WARNING: To reduce the risk of fire, electric shock, or personal injuries:**

1. This fan is for household use only.
2. Before first use, check whether your voltage corresponds to the product nameplate requirements.
3. For safety reasons, please check the status of the power cord and plug before use.
4. When not in use, be sure to turn off the fan and unplug it from the power socket.
5. Be careful when using this equipment near children.
6. Do not run the power cord under carpets, and do not cover the cord with throw rugs. Do not put cord under furniture or appliances. Arrange cord away from traffic areas so that people will not be tripped over by it.
7. Do not operate any fan with the damaged cord or plug. Discard the fan or return it to an authorized service facility for examination and repair.
8. If the fan's power supply cord is damaged, it must be replaced by the manufacturer or its service agent to avoid potential safety hazards.
9. Use the fan in well-ventilated areas. Place the fan at least 8 inches from any walls to ensure the proper air flow during use. The fan cannot be located directly under or close to the curtain.
10. Do not obstruct the airflow with any objects or place anything in the opening of the fan.
11. Do not use the fan in areas where curtains may be sucked in.
12. Only place the fan on a hard, flat, dry floor.

13. Do not use the product in extreme temperatures, humidity, or dusty environments.
14. Do not put heavy objects on the fan.
15. Do not place the fan below the power outlet that will suck the cord inside to cause damage.
16. When the fan is oscillating, do not touch the fan manually to avoid damage.
17. Be sure to turn off the power supply before unplugging the power cord from the power outlet to avoid short circuit, fire, or electric shock.
18. Do not twist or pull the power cord out.
19. In order to avoid the danger of electric shock, do not unplug the fan when your hands are wet.
20. Children under 8 years old should not operate the fan.
21. This appliance is not suitable for people (including children) with reduced physical/sensory/mental abilities or people who lack experience and knowledge. Unless the above-mentioned people are supervised or instructed by a person who is responsible for their safety.
22. Children should be supervised to ensure that they do not play with the appliance.
23. Ensure that the fan is switched off and unplugged from the power supply before removing the guard.
24. To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
25. Please unplug or disconnect the appliance from the power supply before the repair work is carried out.
26. This product has overload protection (fuse). A blown fuse indicates an overload or short circuit. If the fuse is blown, unplug the product from the socket. Replace the fuse (select the appropriate fuse rating according to the product label) by following the user maintenance instructions and check the product. If the replacement fuse is blown, there may be a short circuit, and the product should be discarded or returned to an authorized service facility for

examination/repair.

 
### **Warning:**

This appliance has a polarized plug (one blade is wider than the other). In order to reduce the risk of electric shock, the plug can only be inserted into the electrical outlet/receptacle one way. If the plug cannot be fully inserted into the power outlet, reverse the plug. If it is still not suitable, please contact a qualified electrician. Do not attempt to destroy this safety function alone.

## **To Change the fuse**

**The following should ONLY be conducted by qualified professionals:**

1. Grasp the plug and remove it from the electric receptacle. Do not unplug by pulling on the cord.
2. As shown in the figure below, slide the fuse access cover on the top of the plug towards the blade and open the fuse cover.
3. Remove the fuse carefully. Push the fuse from the other side or turn the fuse holder upside down to remove fuse.



4. Fire risk. Replace the fuse only with a 5-amp 125-volt fuse.
5. Close the fuse cover by sliding the fuse access cover on the top of the plug away from the blades.
6. Fire risk. Do not replace the polarized plug as it has a safety device that should not be removed.

Discard product if its polarized plug is damaged.

**SAVE THESE INSTRUCTIONS**

 
## Part 2 Brief introduction

This tower fan is equipped with multiple functions, such as 8 speeds, 3 modes, 360 degree oscillation, 24H timer, remote control and ionizer. With the above functions, our tower fan can provide you a cool, healthy and luxurious lifestyle.

## Part 3 Specification

MODEL NO	RATED	POWER	CLASS
<b>5348</b>	120V, 60Hz	50W	II

## Part 4 Structure and parts


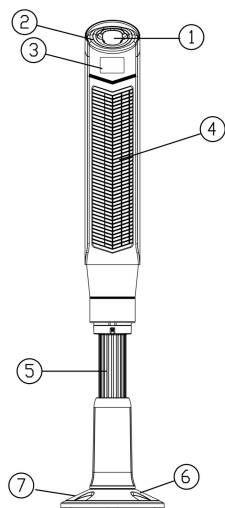


- 1-----Control panel
- 2-----Head
- 3-----LED screen
- 4-----Air outlet
- 5-----Support
- 6-----Base A
- 7-----Base B



Parts list			
Description	Quantity	Description	Quantity
Remote control	1	Instruction manual	1
Base	2	Screws(1) (ST4*12mm)	2
Screws(2) (ST4*20mm)	4		

## Part 5 Installing

 
 
1. Take out the two bases from the gift box. Forming the base A and B into one unit. (Shown in pic.1) Then fasten base A and base B with 2 pcs of screws(1). (Shown in pic.2)

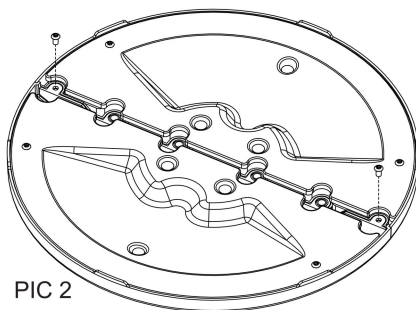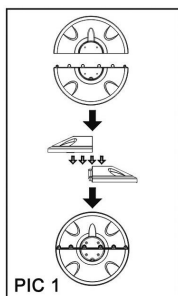

  
2. Connect fan body to the base with 4 pcs of screws(2). (Shown in the below figure)

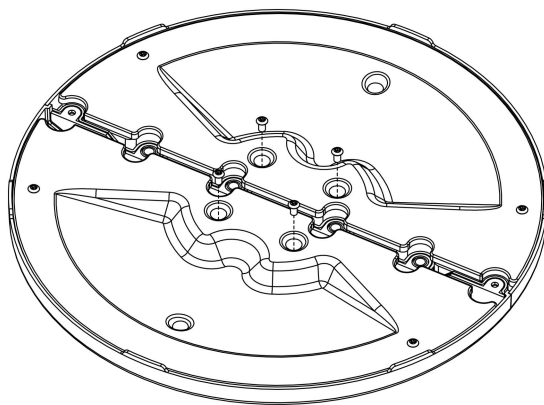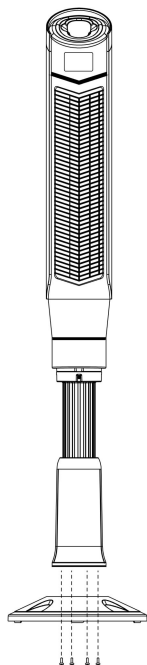

## Part 6 Function

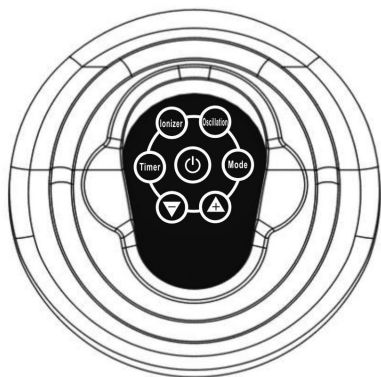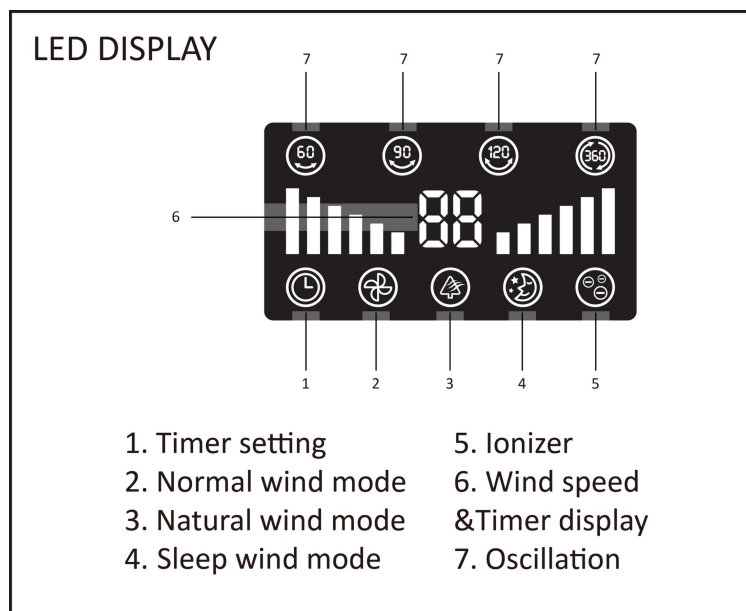  

Control panel

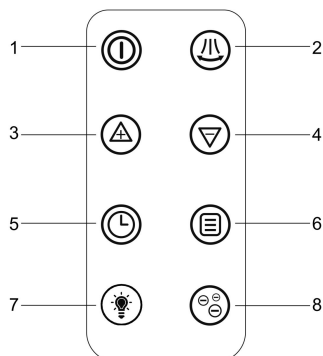 



Remote control

1. Power button
2. Oscillation button
3. Wind speed and timer add button
4. Wind speed and timer minus button
5. Timer button
6. Fan mode button

7. Light go out button
8. Ionizer button


## 1. ON/OFF

Press  button on the control panel or press  button on the remote control to turn the fan ON/OFF. Press it once, the fan will start operating. Press it again to stop the fan.


## 2. Mode

The model has three modes: Normal/ Natural/ Sleeping. When you turn on the fan, the default mode is Normal wind mode. The LED screen will indicate normal wind mode.


### Normal wind mode:

The Normal light indicator  will be switched ON when this mode is selected.

### Natural wind mode:

The Natural light indicator  will be ON when this mode is selected. The fan will run like real natural wind, alternating between high wind and low wind.

### Sleep wind mode:

The Sleep light indicator  will be ON when this mode is selected. The fan will run in the current natural wind mode, and reduce 1 natural wind level every half an hour. Keep natural wind speed level 1 until it turns off.


## 3. Oscillation

Press "Oscillation" button to start oscillation function. The oscillation degrees are optional: 60, 90, 120, and 360 degrees.

 →  →  →  → None ..... Circle

## 4. Ionizer

Press "Ionizer" button to start ionizer.

The ionizer light indicator  will be ON when selecting this function



## 5. Timer


Press “Timer” button, then press “+” or “-” to choose the duration of time. The timer is 24 hours at most. To cancel the set timer, press the “Timer” button again and press “-” button to set it as 00 Hr.

## 6. Wind Speed



 
Press “+” or “-” button to choose the wind speed ranging from 1-8.

## 7. Light

Press and hold “Mode” button for 3 seconds on the control panel or press button  on the remote controller, the light on the screen will go out. If you want to turn on the light on the screen, press any button except the power button.

## 8. Height adjustment

1. Rotate the height adjustment column lock anticlockwise to unlock the height adjustment column.
2. Hold the tower fan body to adjust the range of height (0-18cm).
3. Rotate the height adjustment column lock clockwise to lock the height adjustment column tightly.

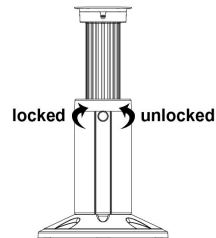

# Part 7 Maintenance and Storage

1. Always remove the plug from the socket-outlet and allow the fan to stop before cleaning it.
2. Clean the external surfaces of the fan with a soft damp cloth (not dripping wet cloth)

### **WARNING:**

**Do not immerse the fan into the water.**

**Do not use any cleaning chemicals such as detergents and**

**abrasives. Do not allow the interior to get wet as this could cause dangerous problems.**

3. When the unit is not in use, make sure that it is unplugged from the wall socket. To store the fan, you may pack it in the original carton and store it in a cool and dry place.

4. In case of malfunction or doubt, do not try to repair the fan yourself, otherwise it may result in a fire hazard or electric shock.

## **Part 8 After sales service**

This appliance has a warranty of 1 year from the date of purchase, considering the following notes:

1. Guarantee is only valid showing the invoice or purchase ticket.
2. Damage caused during transportation, negligence, incorrect installation or installation, and external influences such as atmosphere or electric rays, floods, humidity, etc. are not covered by the guarantee.
3. This warranty will void when it is discovered that they have been subjected to repairs, alterations or interventions by any unauthorized persons.

Thank you for purchasing this product! If you have any questions about the product, such as missing parts, damaged products, product assembling, and operation, please contact us via **Amazon Message** or customer service number: **213-4467172 or 661-4358826.**

**IMPORTANT**

Please call our customer service department for any consulting:

**213-4467172**

**661-4358826**

(8:30am - 5:30pm P.S.T.)

DATED PROOF OF PURCHASE IS REQUIRED FOR WARRANTY SERVICE.

**AVIS**

Veuillez appeler le service à la clientèle pour toutes questions au:

**213-4467172**

**661-4358826**

(8:30am - 5:30pm P.S.T.)

PREUVE D'ACHAT ORIGINALE REQUISE POUR SERVICE DE GARANTIE.

**IMPORTANTE**

Sólo hay que llamar nuestro departamento de servicio  
al cliente en caso de tener preguntas o inquietudes:

**213-4467172**

**661-4358826**

(8:30am - 5:30pm P.S.T.)

SE REQUIERE PRUEBA DE COMPRA CON FECHA PARA SERVICIO BAJO  
GARANTÍA.

**Address: ROWAN ELECTRIC APPLIANCE LLC**

**28407 Ascent Way, Santa Clarita, CA 91350**

**Phone: 213-4467172 or 661-4358826**