
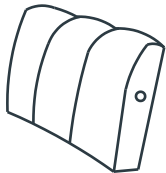
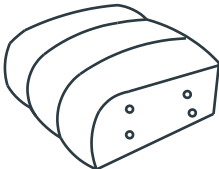
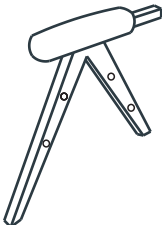


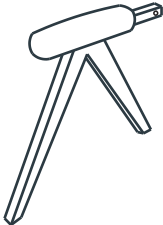



ITEMNO. HR3725

Thank you for purchasing the Arm Chair, Please read the instructions and warnings carefully before use, to ensure safe and satisfactory operation of this product. we are committed to making great products possible. From our in-house Design Team, to our Buyers, we work together to bring great designs to life. Our expert Product Technologists work collaboratively with our buyers and suppliers to assure the legality, safety and quality of the product we sell. We are all committed to designing and developing products to the highest industry standards. We hope you are happy with your product and welcome any feedback or comments you may have.



PARTS LIST

A	x1	B	x1	C	x1	D	x1
							
Backrest		Seat		Left Arm		Right Arm	

  HARDWARE LIST


1	x8	2	x4	3	x10	4	x10
							
M8*35mm		M8*60mm		M8 Spring Washer		M8*22*2 Flat Washer	
5	x1	6	x2				
							
Allen key		Screw cap					

  SPARE

1	x1	2	x1	3	x1	4		5	x1
									
M8*35mm		M8*60mm		M8 Spring Washer		M8*22*2 Flat Washer		Screw cap	

Be sure to check all packing material carefully for small parts, which may have come loose inside the cart on during shipment.


STEP1

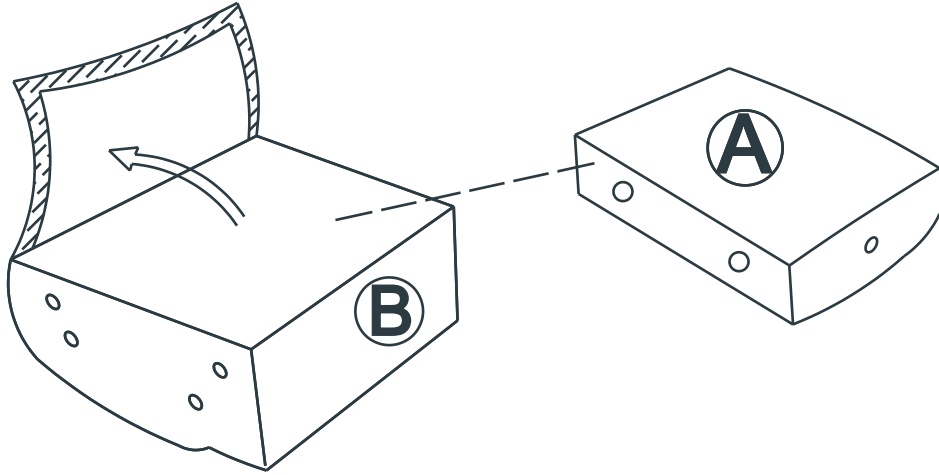

NOTE:

Open the zipper at the bottom of the seat cushion and remove the backrest from inside.


STEP2

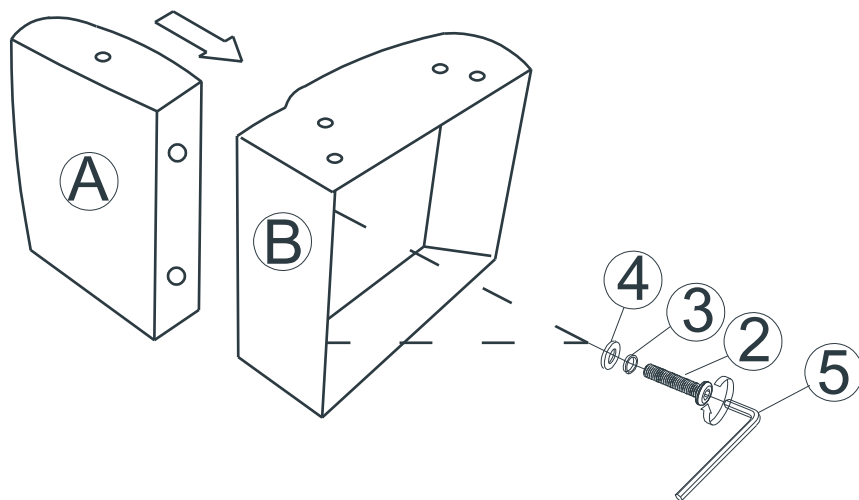

NOTE:


Fully tighten the bolts in sequence after all bolts proper connected.

STEP3

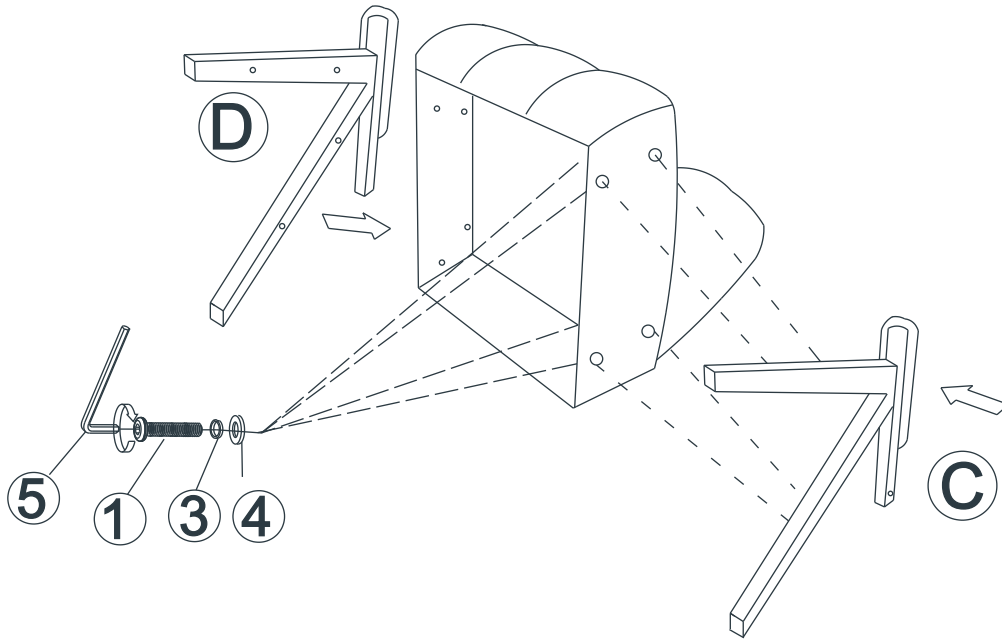


NOTE:
screws 80% first after all bolts proper connected.

STEP4 **NOTE:**
Fully tighten all the screws in Steps 3, 4.

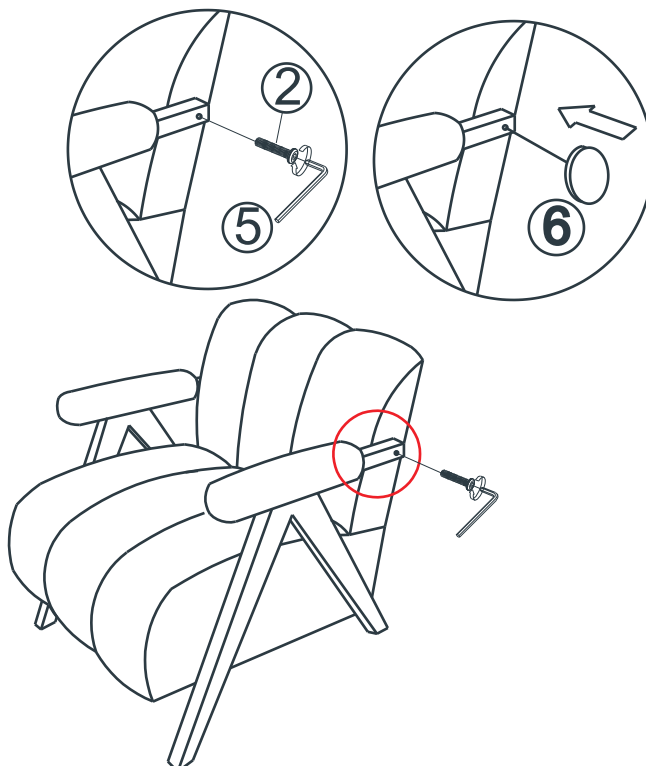

STEP5

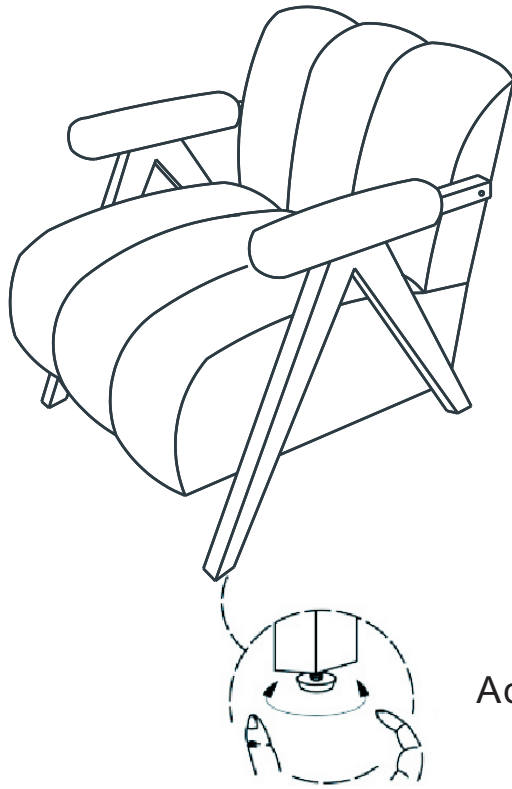

Adjustable foot pad

MAINTENANCE AND WARNING

Keep furniture away from heat.

- ⌘ Do not clean furniture with harsh cleansers or polish. Do not use detergents, Solvents, abrasives, spray packs or leather cleaner. Use non-color mild soap with warm water clean spills(Mix 1:10 soap to water)
- ⌘ Do not place furniture under direct sunlight, material will possibly fade over time.
- ⌘ Do not use on site dry Cleaning machine.
- ⌘ Children should not climb or jump on the furniture.
- ⌘ Do not write on furniture without a padded barrier to protect the surface.
- ⌘ Not for commercial use, For residential use only.
- ⌘ The maximum load is 300 LBS.

WARRANTY

We strive to offer high-quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed. We provide 30 days warranty starting from the time you receive the item. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive replacement parts by purchasing them with our company if they are available.

For return, please check the return policy with the retailer or market place you bought from. Appreciate your purchasing from us. Pop up your life by our furniture piece!