

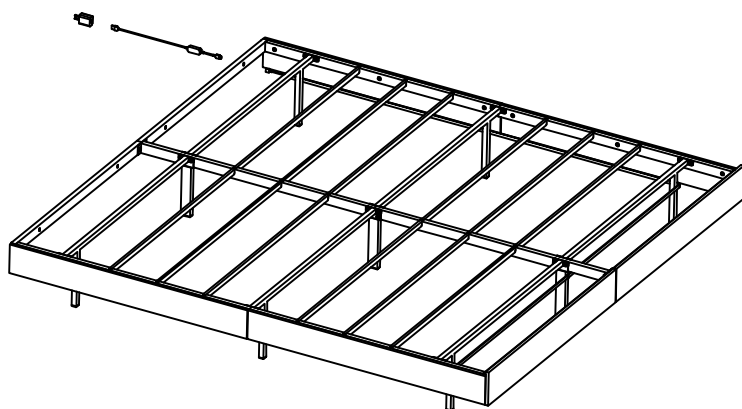


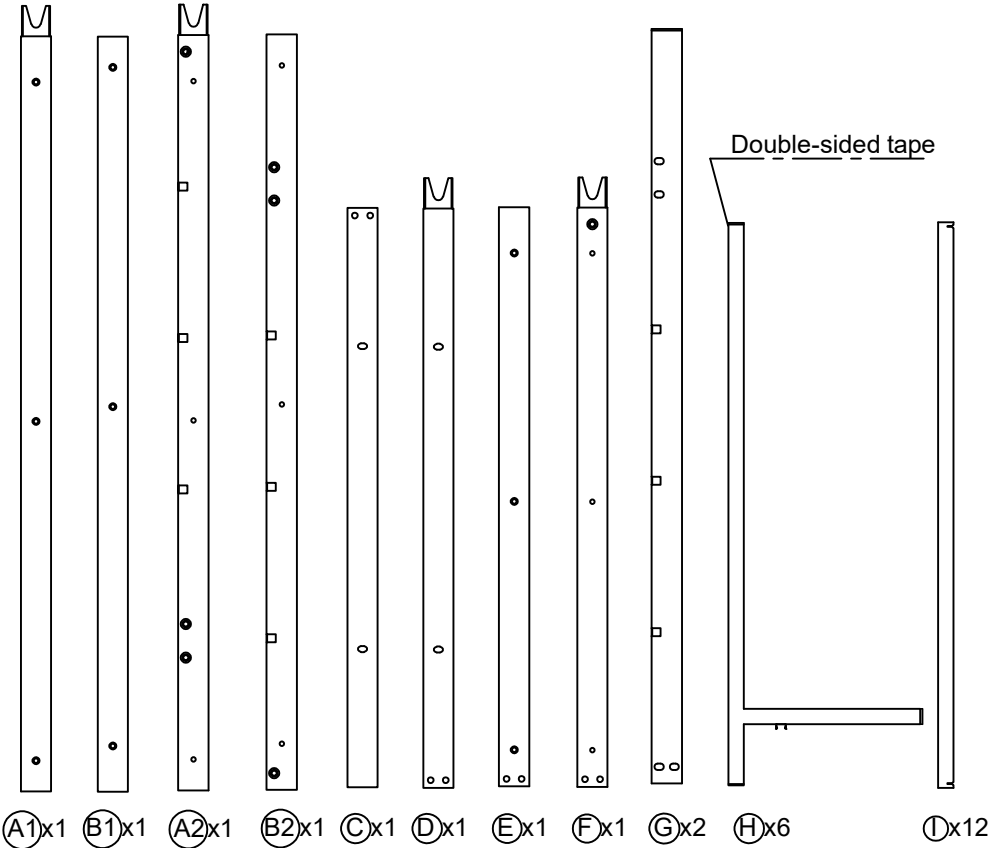


Model:C236-KF-BK+LP, C236-QF-BK+LP, C236-FF-BK+LP

PRODUCT GUIDE AND INSTALLATION MANUAL


Parts List:

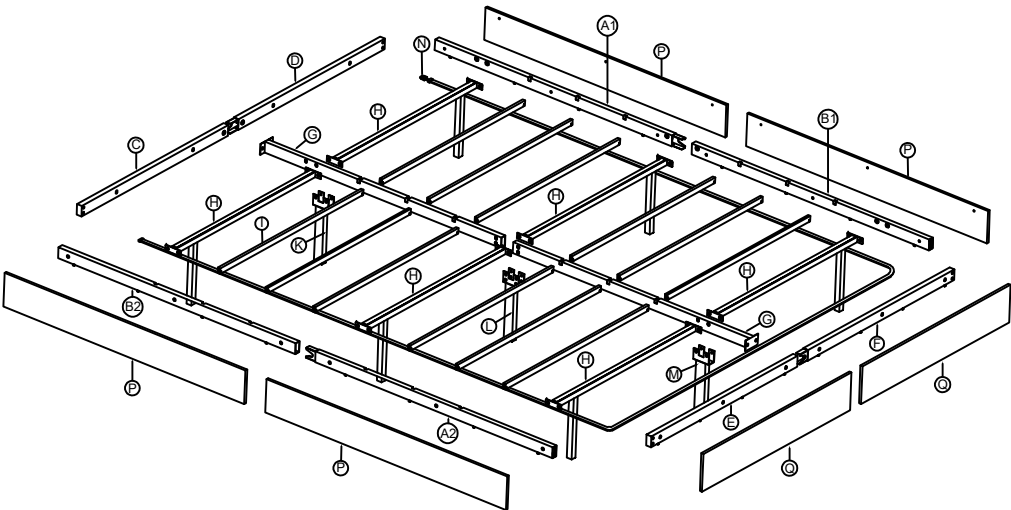


Parts List:

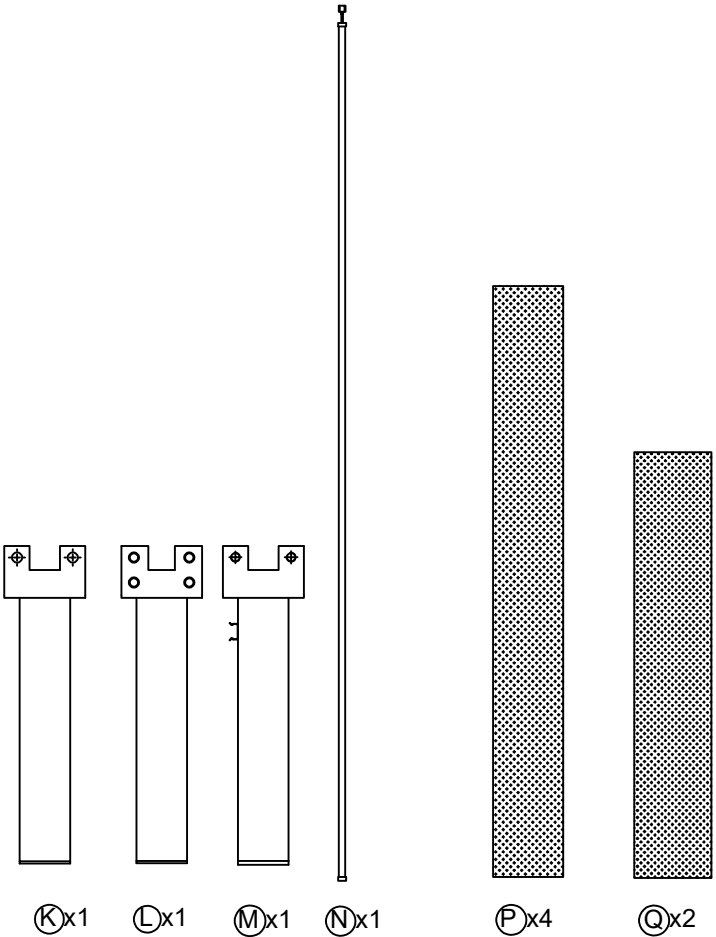


M-N-O (Lamp string)

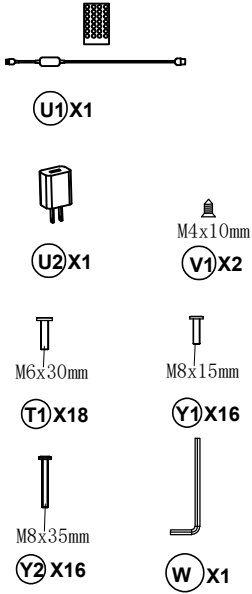


Step 1

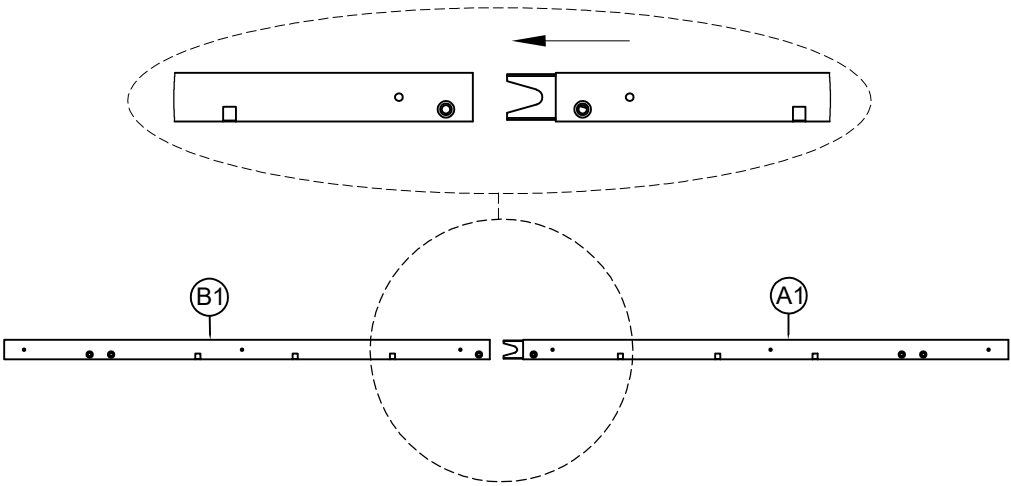


Step 2

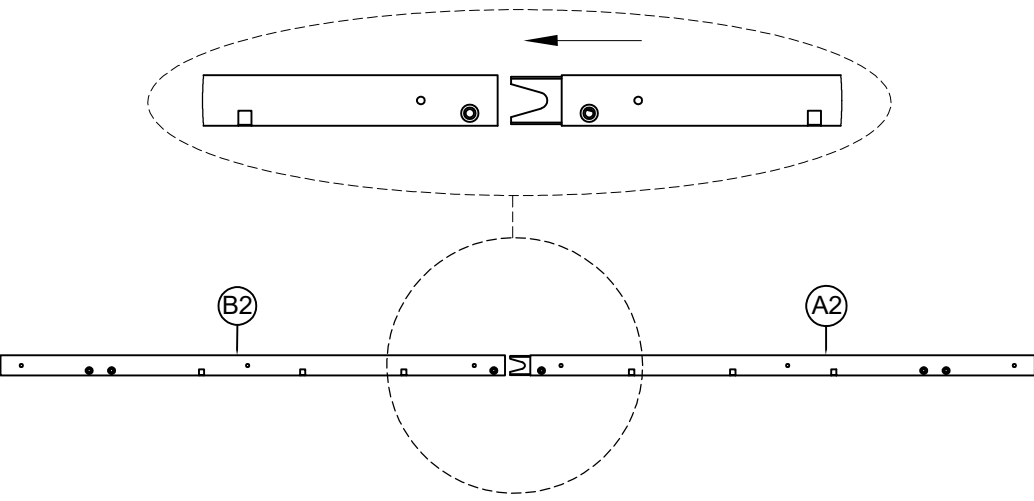


Step 3

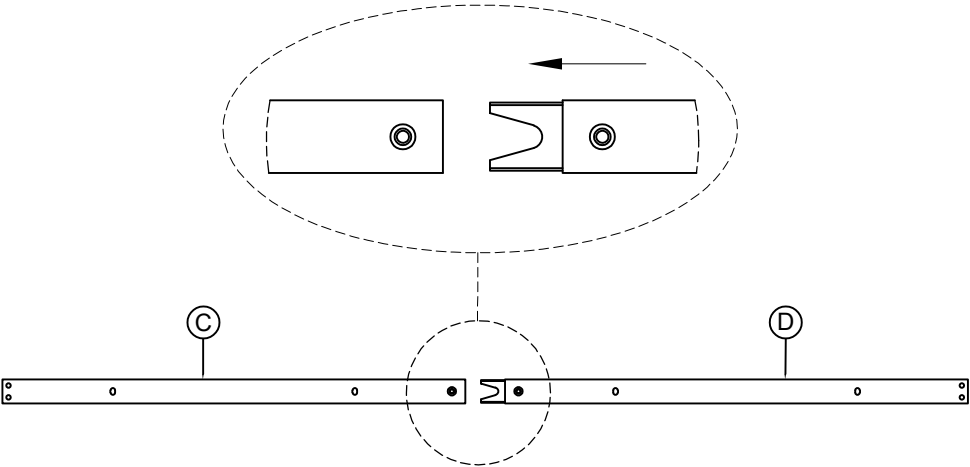


Step 5

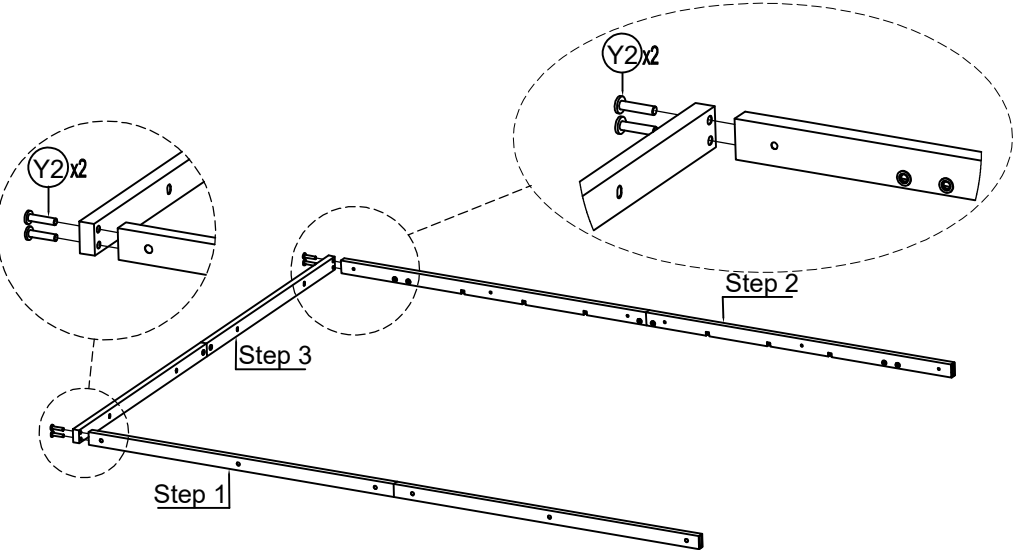


Step 4

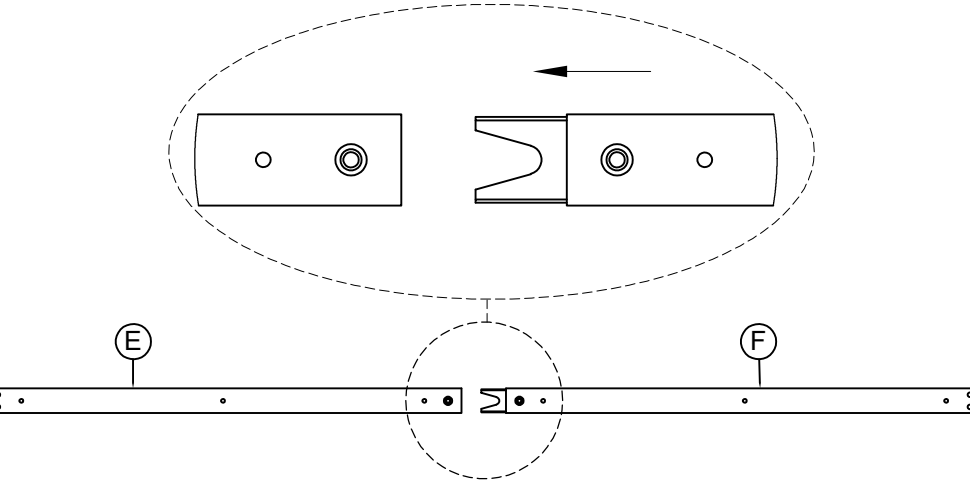


Step 6

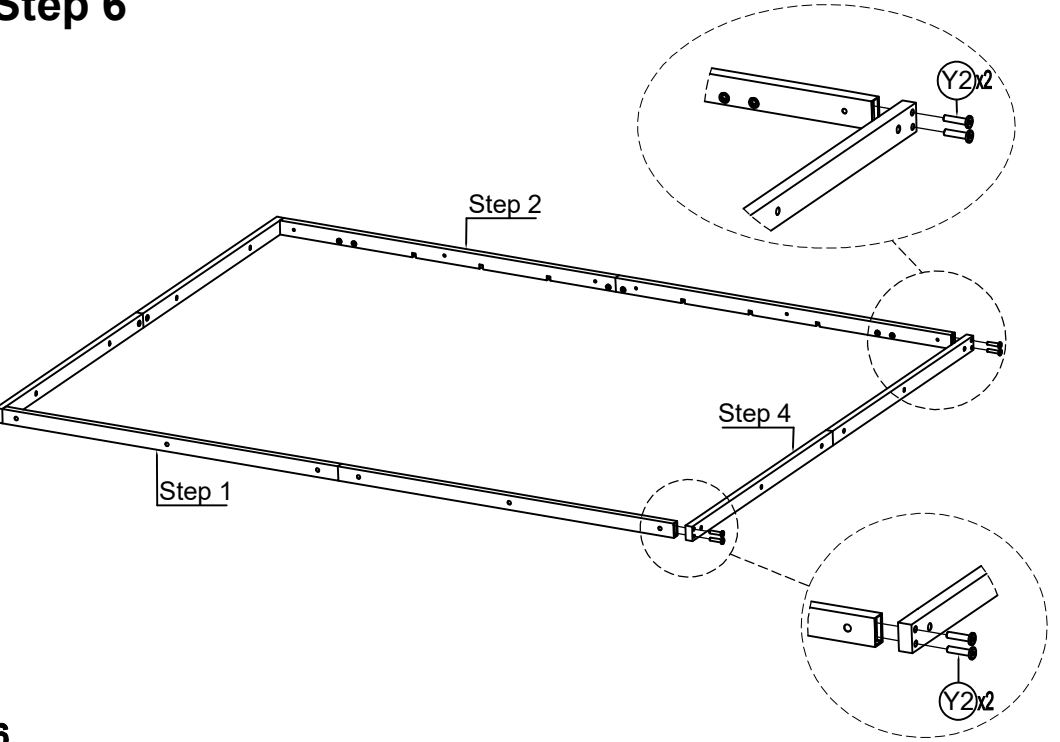


Step 7

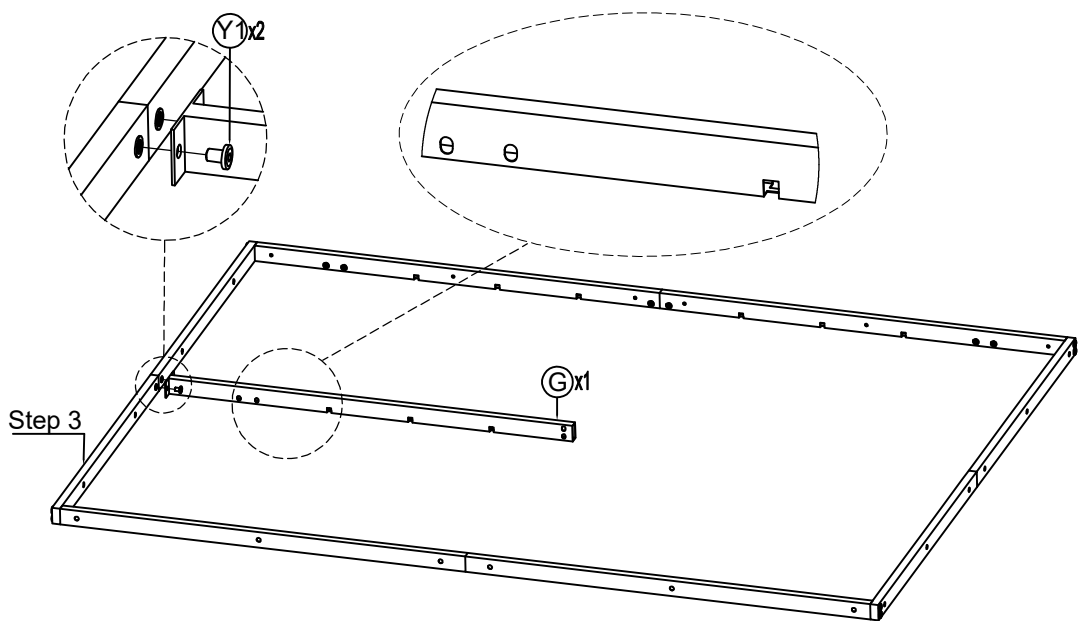


Step 9

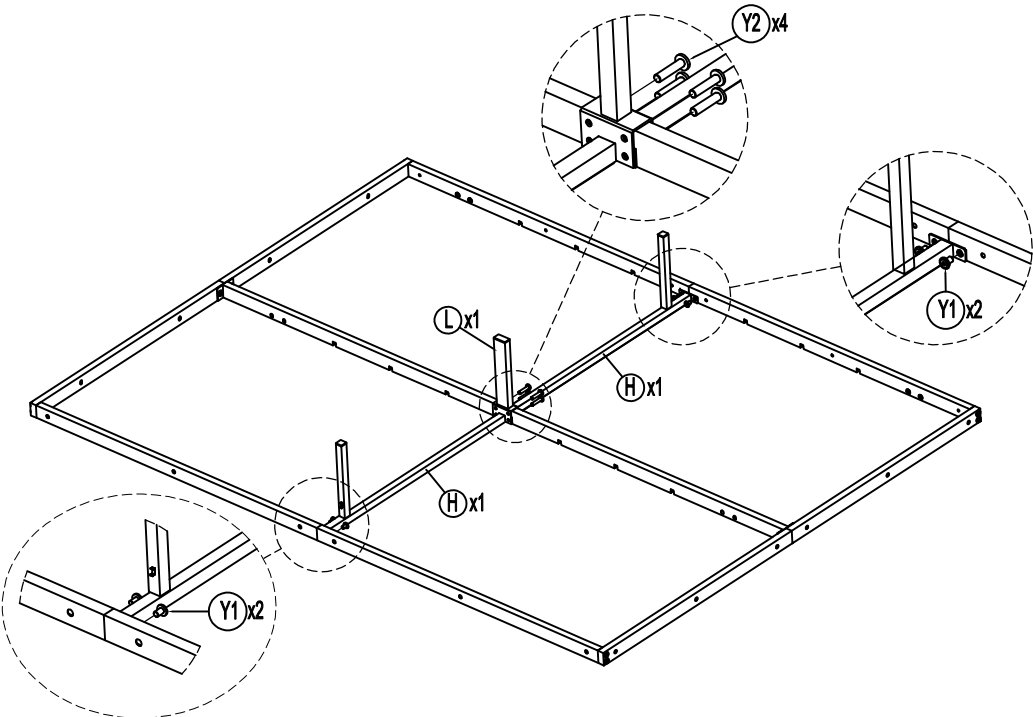


Step 8

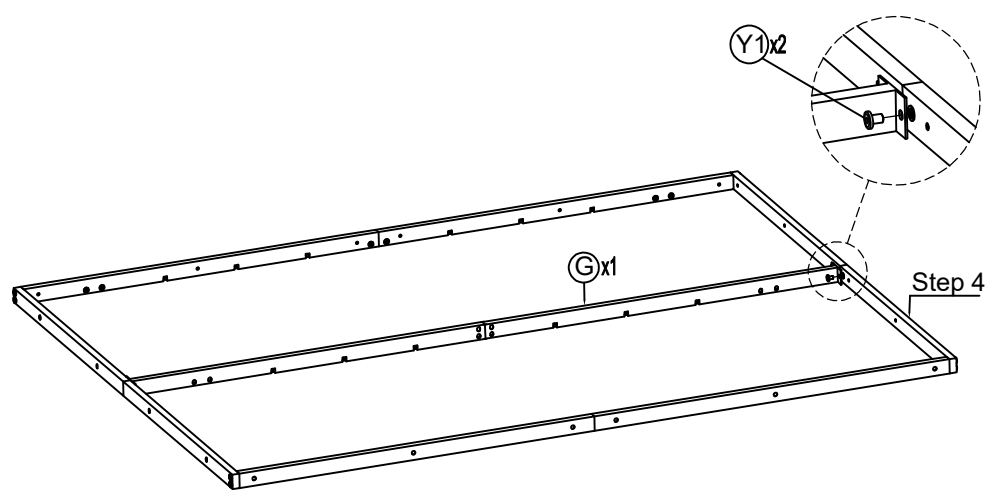


Step 10

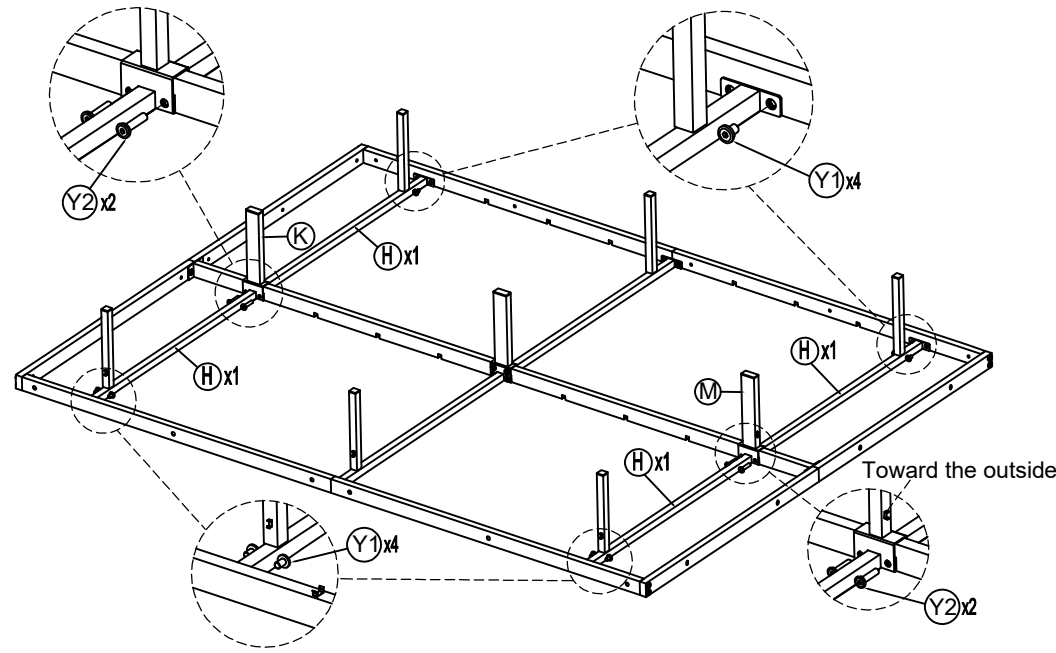


Step 11

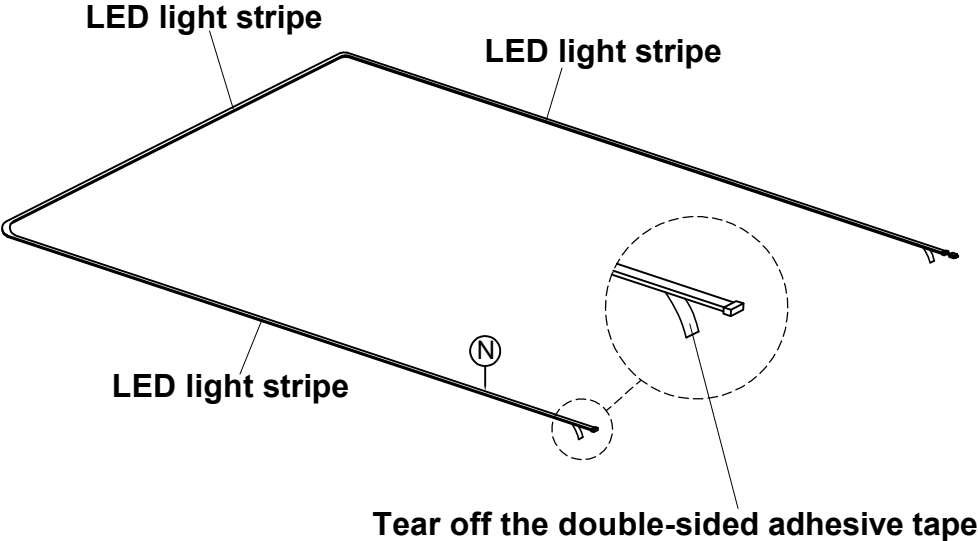


Step 13

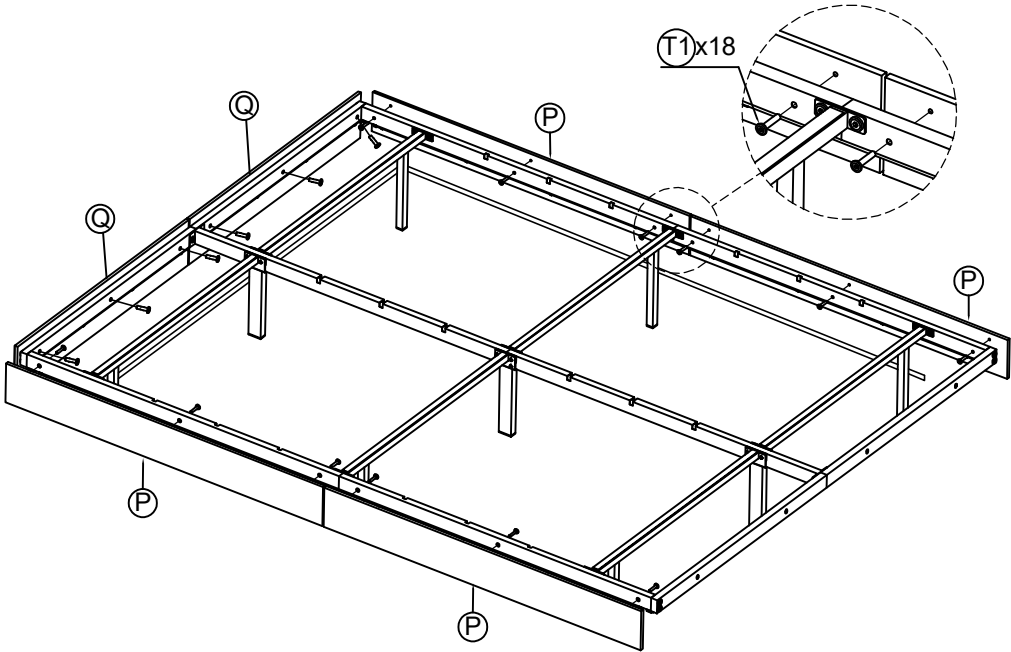


Step 12

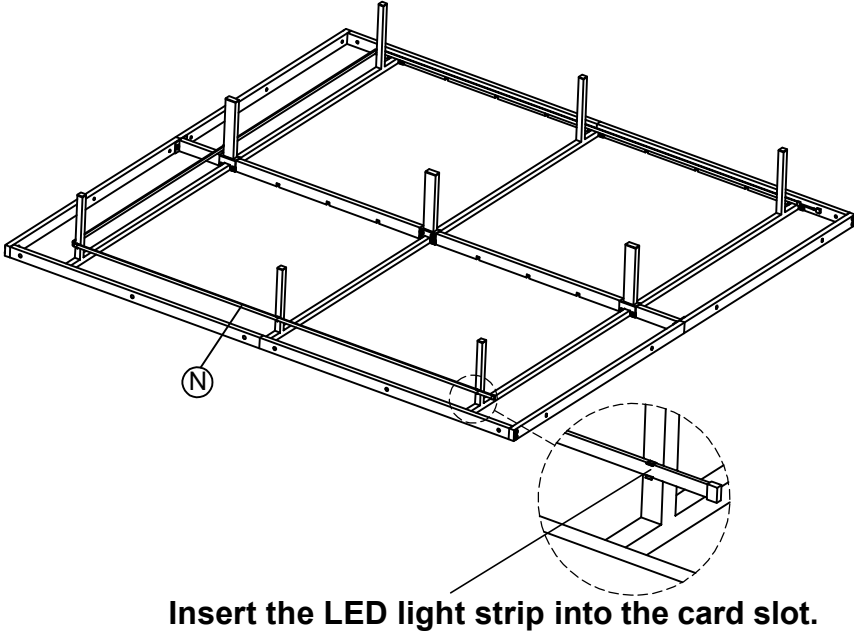

Step 14

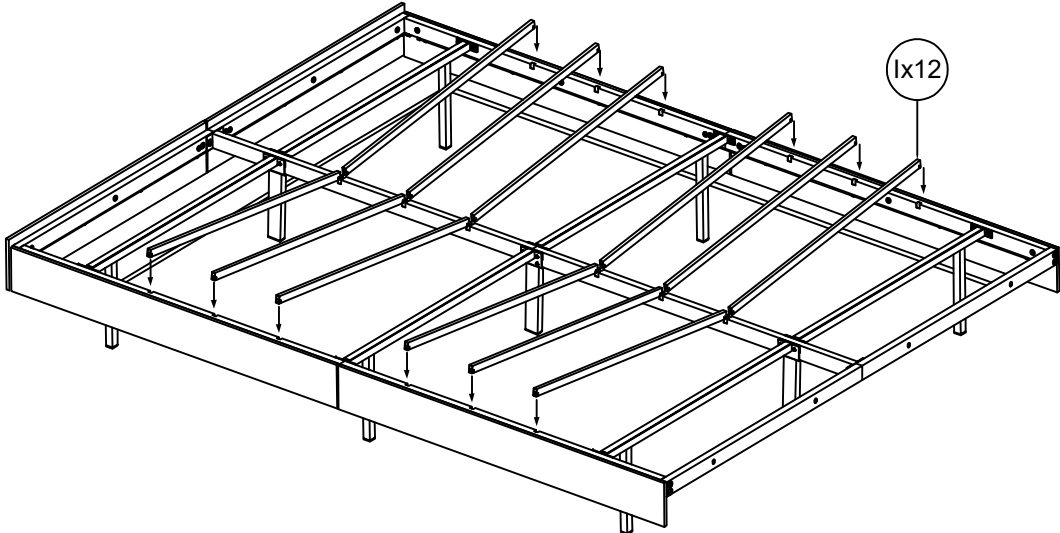

Step 15

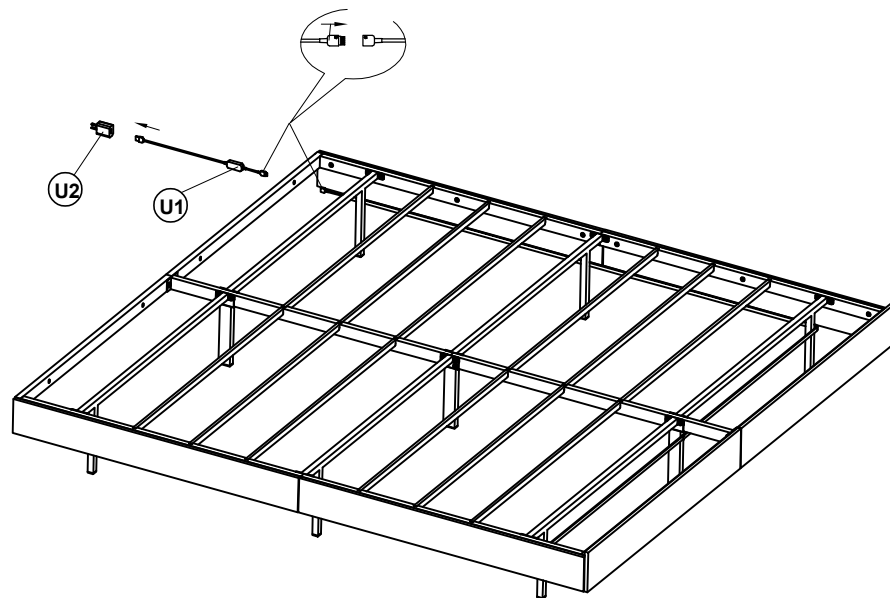

REMOTE CONTROLLER

