

ASSEMBLY INSTRUCTIONS

 
102DS 6 DRAWER DRESSER

ASSEMBLY REQUIREMENTS:

2-Person Assembly


2.5Hours Assembly Time (Approximate)

Tool Required (Not Provided)



We appreciate your business!

**THIS PRODUCT IS FOR INDOOR AND HOUSEHOLD
USE ONLY – NOT FOR COMMERCIAL USE.**

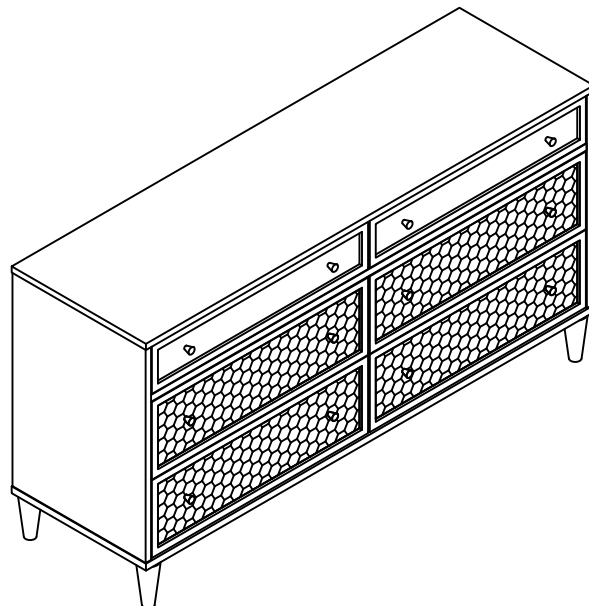

ASSEMBLY PREPARATION:

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Part List and Hardware List and ensure parts and hardware are correct before assembly. Contact customer service for missing parts.
3. Place all wooden parts on clean, flat and soft surface (e.g. carpet or rug) to prevent scratch and damage to parts.

SAFETY PRECAUTION:

1. Keep ALL HARDWARE PART OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS

TIPS FOR ASSEMBLY:

1. Allow ample room for assembly and assemble the product near where the product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Identify all the parts, hardware and quantities required for each step.
4. During assembly, do not over-tighten any fittings as this may cause damage.
5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
6. Always place the product on a flat, level surface.
7. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

CARE AND MAINTENANCE:


- Wipe clean with a soft, dry cloth; avoid the use of harsh chemicals or household cleaners as they may damage the exterior finish of the furniture.
- **Hardware may loosen over time. Periodically, check that all connections are tight; re-tighten as necessary.**
- Solid wood is impacted by heat and humidity fluctuations which may cause small joint separations or hairline cracks; place the furniture away from direct sunlight and air conditioning vents, heating vents or units to protect the furniture.

PARTS LIST




NO	PART NAME	QTY
1	TOP PANEL	1
2	LEFT PANEL	1
3	RIGHT PANEL	1
4	BOTTOM FRAME	1
5	CENTER RAIL	1
6	PARTITION	1
7	LEG	5
8	SIDE BACK PANEL	2
9	CENTER BACK PANEL	1
101	TOP LEFT DRAWER FRONT PANEL	1

NO	PART NAME	QTY
102	TOP DRAWER LEFT PANEL	2
103	TOP DRAWER BACK PANEL	2
104	DRAWER BASE PANEL	6
105	TOP DRAWER RIGHT PANEL	2
106	BOTTOM LEFT DRAWER FRONT PANEL	4
107	BOTTOM DRAWER LEFT PANEL	4
108	BOTTOM DRAWER BACK PANEL	4
109	BOTTOM DRAWER RIGHT PANEL	4
110	TOP RIGHT DRAWER FRONT PANEL	1
111	BOTTOM RIGHT DRAWER FRONT PANEL	2

PARTS ASSEMBLY OVERVIEW

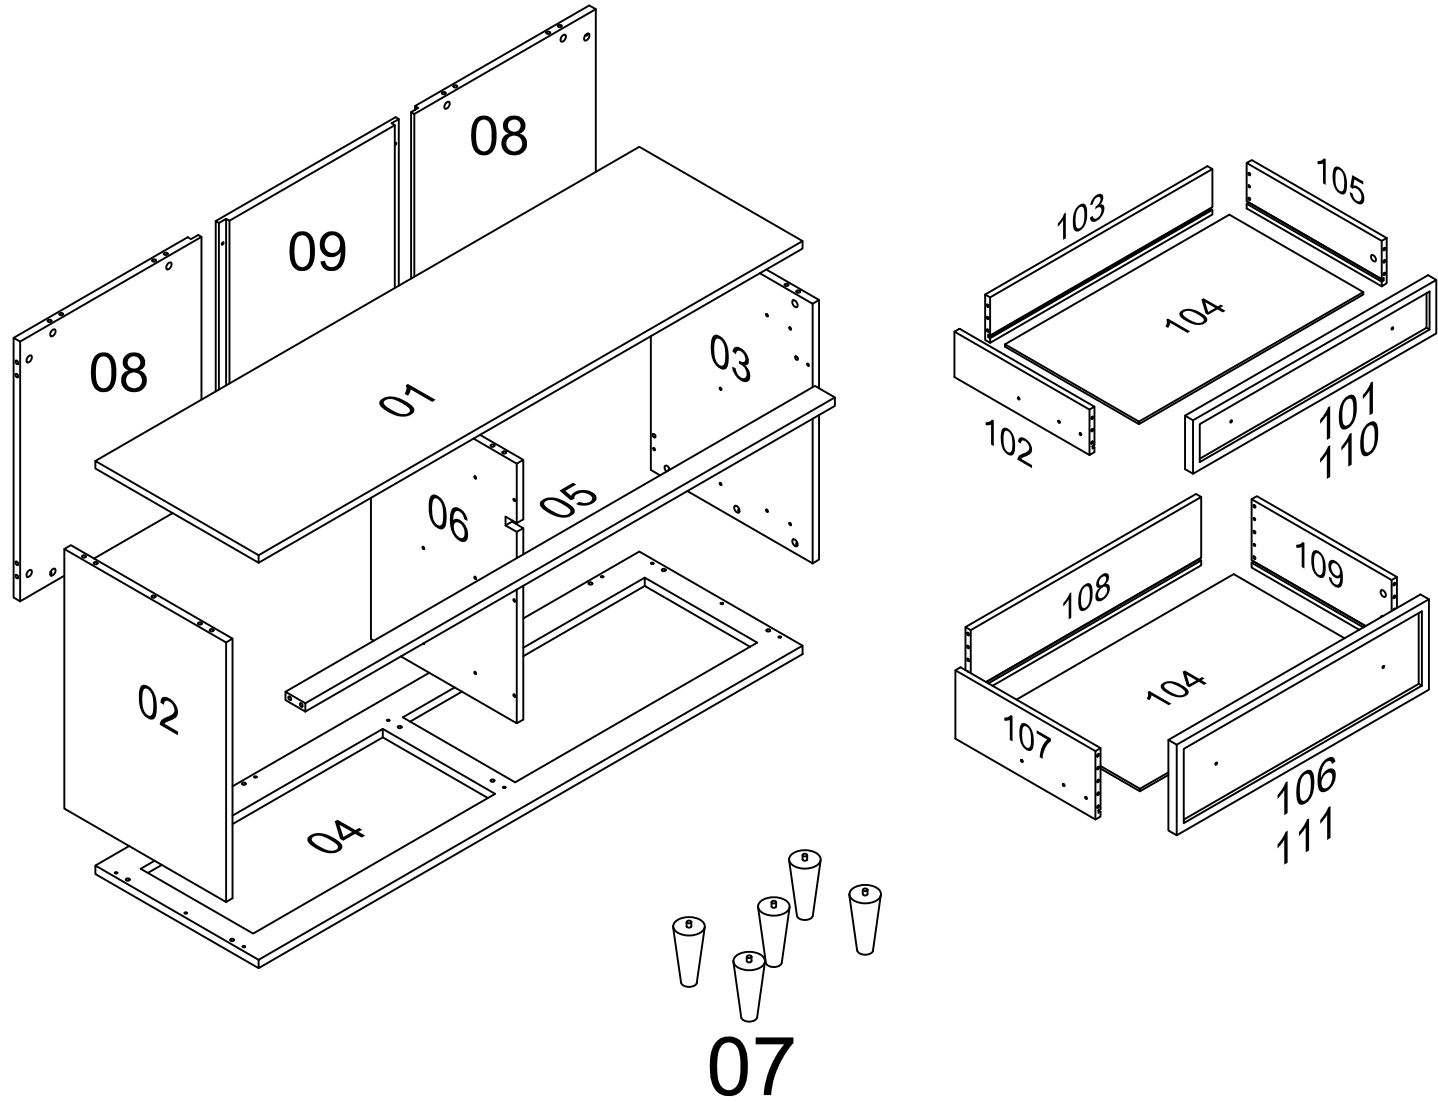


HARDWARE LIST

   NO	DESCRIPTION		QTY	EXTRA
A		CHIPBOARD SCREW M4 x 16MM	72	1
B		PANCHIPBOARD SCREW M4 x 16MM	4	1
C		WOOD DOWEL M8 x 35MM	26	1
D		WOOD DOWEL M6 x 30MM	64	1
E		CAM-LOCK 15 x 12	70	1
F		CAM-BOLT 5 x 25	70	1
G		CAM-LOCK COVER 17 x 5	70	1
H1		DRAWER SLIDE 250MM	6 SET	
H2				


**EXTRA HARDWARE FOR SPARE USE

NO	DESCRIPTION		QTY	EXTRA
I		HANDLE	12	
J		PANHEAD SCREW M4 x 22MM	12	
Z		Anti-Tipping Kit	2	

DRAWER SLIDE DISASSEMBLE STEPS:

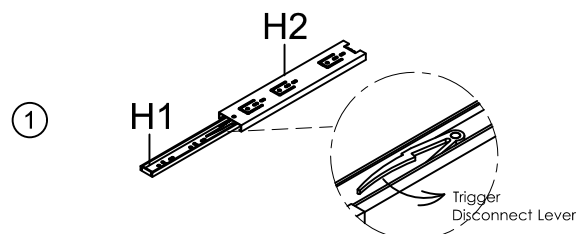

- Distinguish between Slide Track (H2) and Slide Runner (H1) of Drawer Slide.
- Slide out H1 from H2 until Trigger Disconnect Lever is visible.
- Depress the Trigger Disconnect Lever in the groove of H1 and at the same time slide out H2 completely from H1.

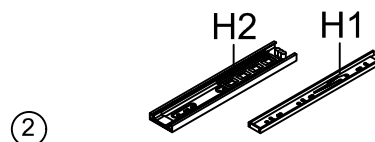

PARTS IN BOX 1

NAME: PARTITION	QTY: 1Pc	CODE: 6
NAME: LEG	QTY: 4Pcs	CODE: 7
NAME: SIDE BACK PANEL	QTY: 2Pcs	CODE: 8
NAME: CENTER BACK PANEL	QTY: 1Pc	CODE: 9
NAME: TOP DRAWER LEFT PANEL	QTY: 2Pcs	CODE: 102
NAME: TOP DRAWER RIGHT PANEL	QTY: 2Pcs	CODE: 105
NAME: BOTTOM DRAWER LEFT PANEL	QTY: 4Pcs	CODE: 107
NAME: BOTTOM DRAWER RIGHT PANEL	QTY: 4Pcs	CODE: 109
NAME: HARDWARE + AI	QTY: 1Pack	
NAME: DRAWER SLIDE	QTY: 1Pack	


PARTS IN BOX 2

NAME: TOP PANEL	QTY: 1Pc	CODE: 1
NAME: BOTTOM FRAME	QTY: 1Pc	CODE: 4
NAME: LEFT SIDE PANEL	QTY: 1Pc	CODE: 2
NAME: RIGHT SIDE PANEL	QTY: 1Pc	CODE: 3
NAME: CENTER RAIL	QTY: 1Pc	CODE: 5
NAME: TOP LEFT DRAWER FRONT PANEL	QTY: 1Pc	CODE: 101
NAME: TOP DRAWER BACK PANEL	QTY: 2Pcs	CODE: 103
NAME: DRAWER BASE PANEL	QTY: 6Pcs	CODE: 104
NAME: BOTTOM LEFT DRAWER FRONT PANEL	QTY: 4Pcs	CODE: 106
NAME: BOTTOM DRAWER BACK PANEL	QTY: 4Pcs	CODE: 108
NAME: BOTTOM DRAWER RIGHT PANEL	QTY: 4Pcs	CODE: 109
NAME: TOP RIGHT DRAWER FRONT PANEL	QTY: 1Pc	CODE: 110
NAME: BOTTOM RIGHT DRAWER FRONT PANEL	QTY: 2Pcs	CODE: 111

INSTRUCTION FOR CAM-BOLT & CAM-LOCK





CAM-BOLT

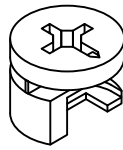


CAM-LOCK

  
Tool Required (Not Provided)




INSERTING AND TIGHTENING CAM-BOLT

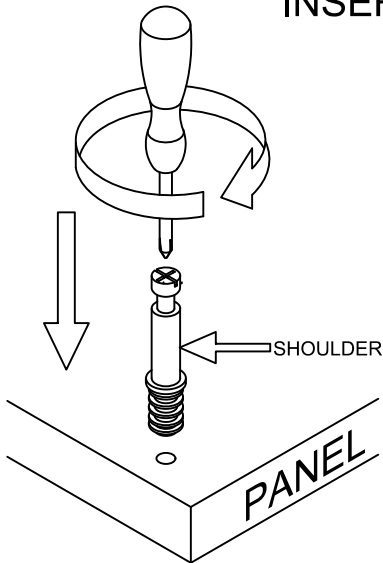

Place Cam-bolt on pre-drilled hole and screw in vertically

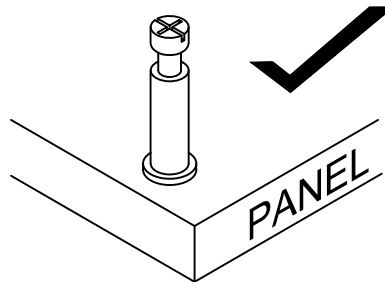


Shoulder is flushed (on the same level) with the panel

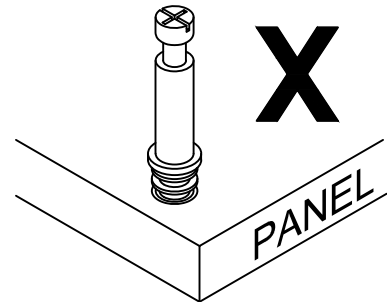

Shoulder is above the panel


Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.

INSERTING CAM-LOCK

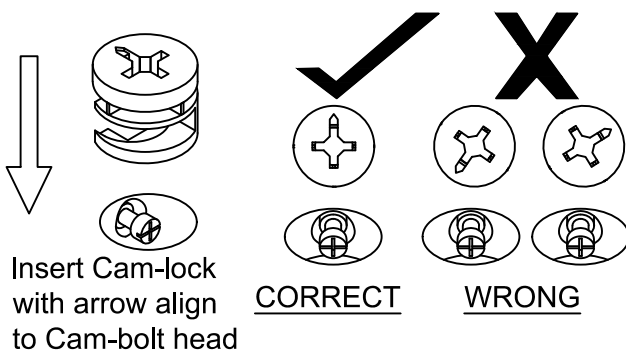


CAM-LOCK
Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted

TIGHTENING CAM-LOCK

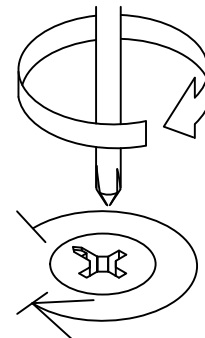


Use a Screwdriver to turn Cam-lock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.

STEP 1

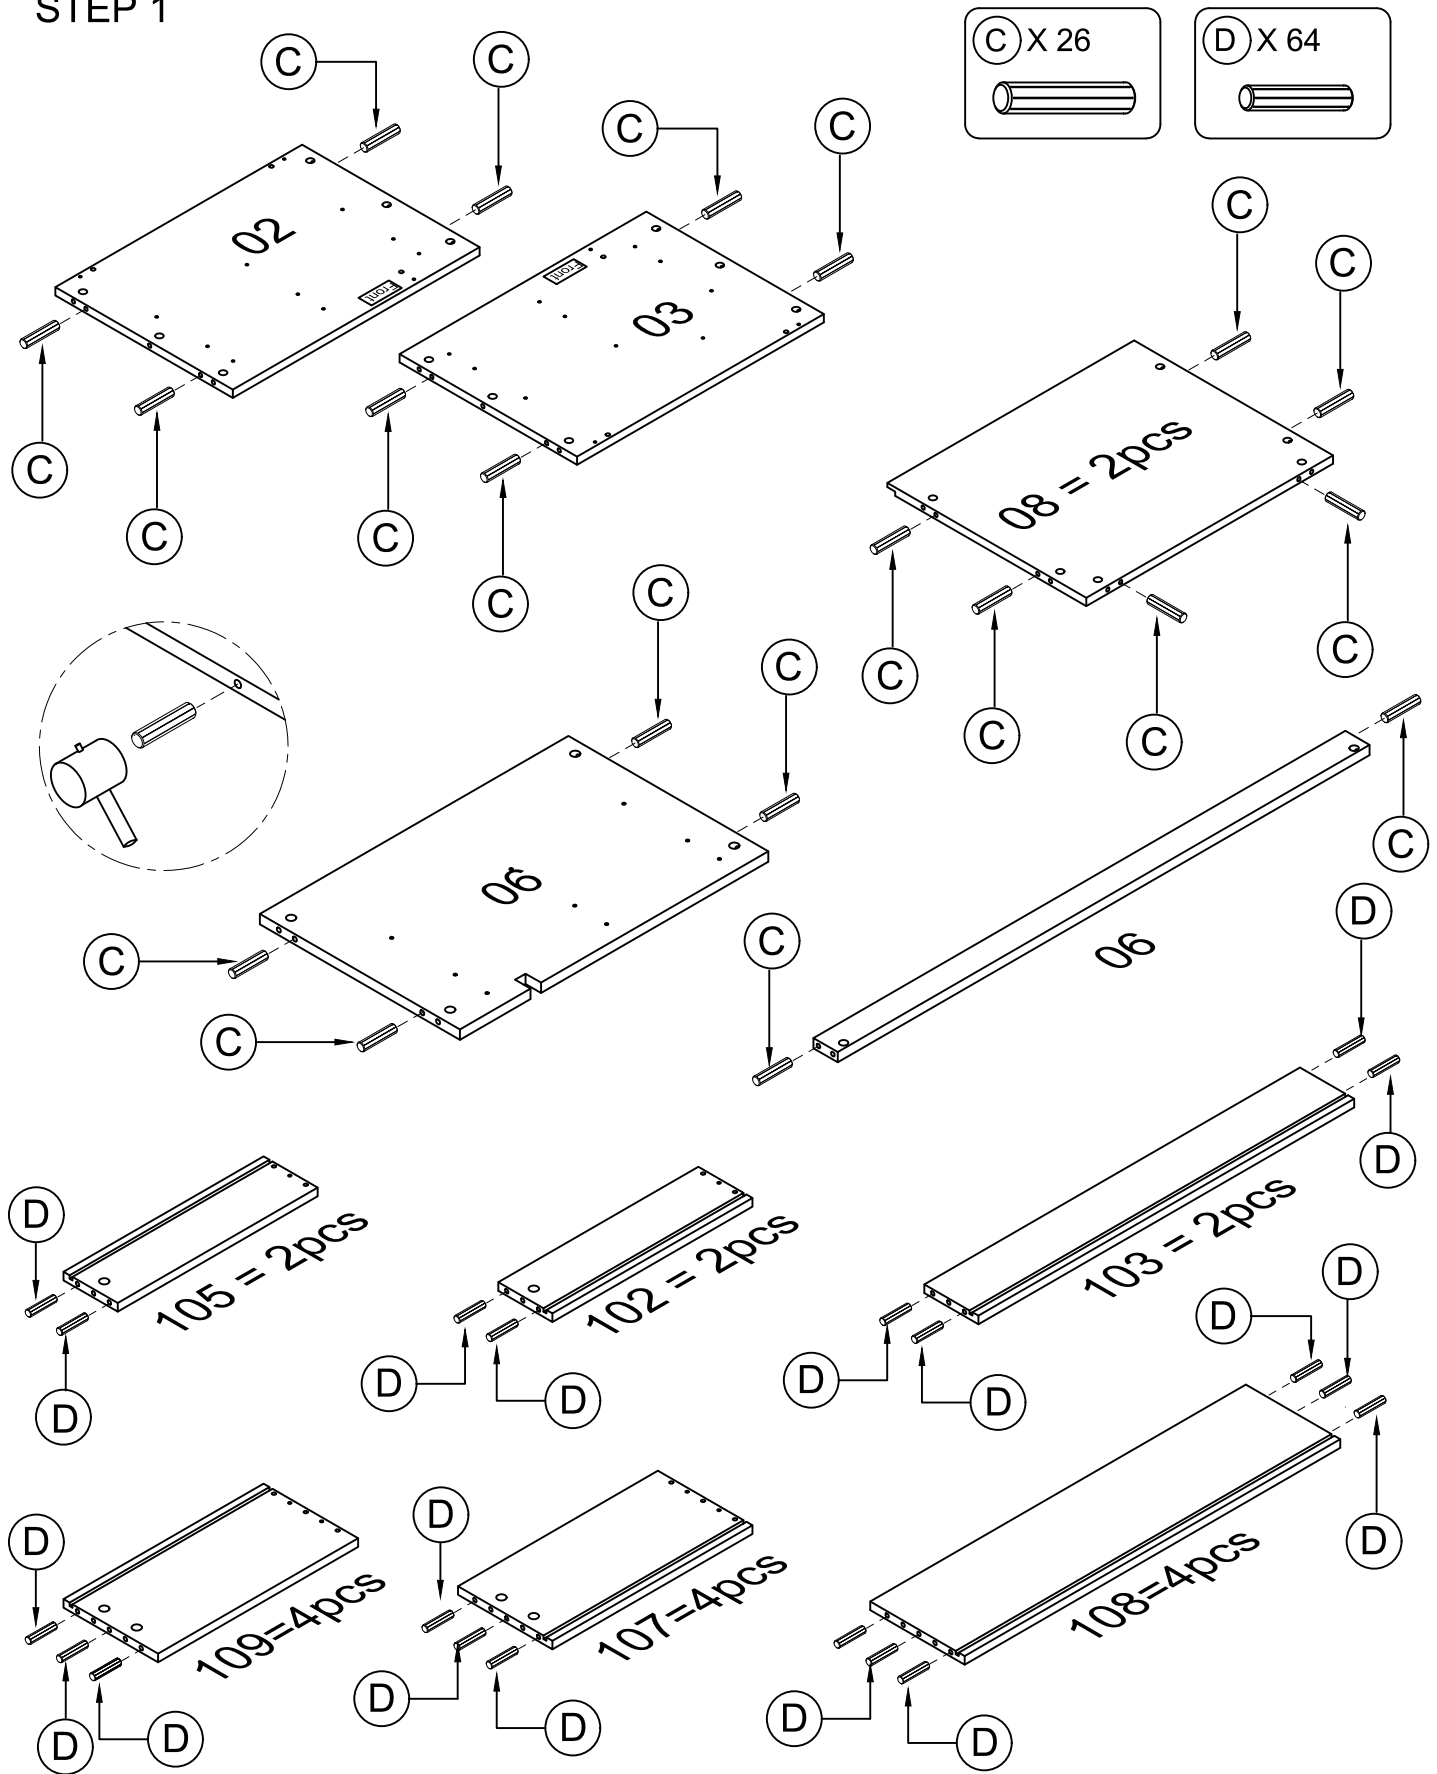

- Lay Left & Right Panel (2 & 3), Side Back Panel (8), Center Rail (5), Partition (6), Top Drawer Back Panel (103), Top Drawer Left & Right Panel (102 & 105), Bottom Drawer Back Panel (108), Bottom Drawer Left & Right Panel (107 & 109) as shown on a material that does not scratch or damage the parts.
- Identify the designated holes for Wood Dowel (C or D) on each part.
- Insert Wood Dowel (C or D) into the designated holes of the respective parts. Use a mallet to lightly tap in Wood Dowel (C or D) if necessary.

STEP 2

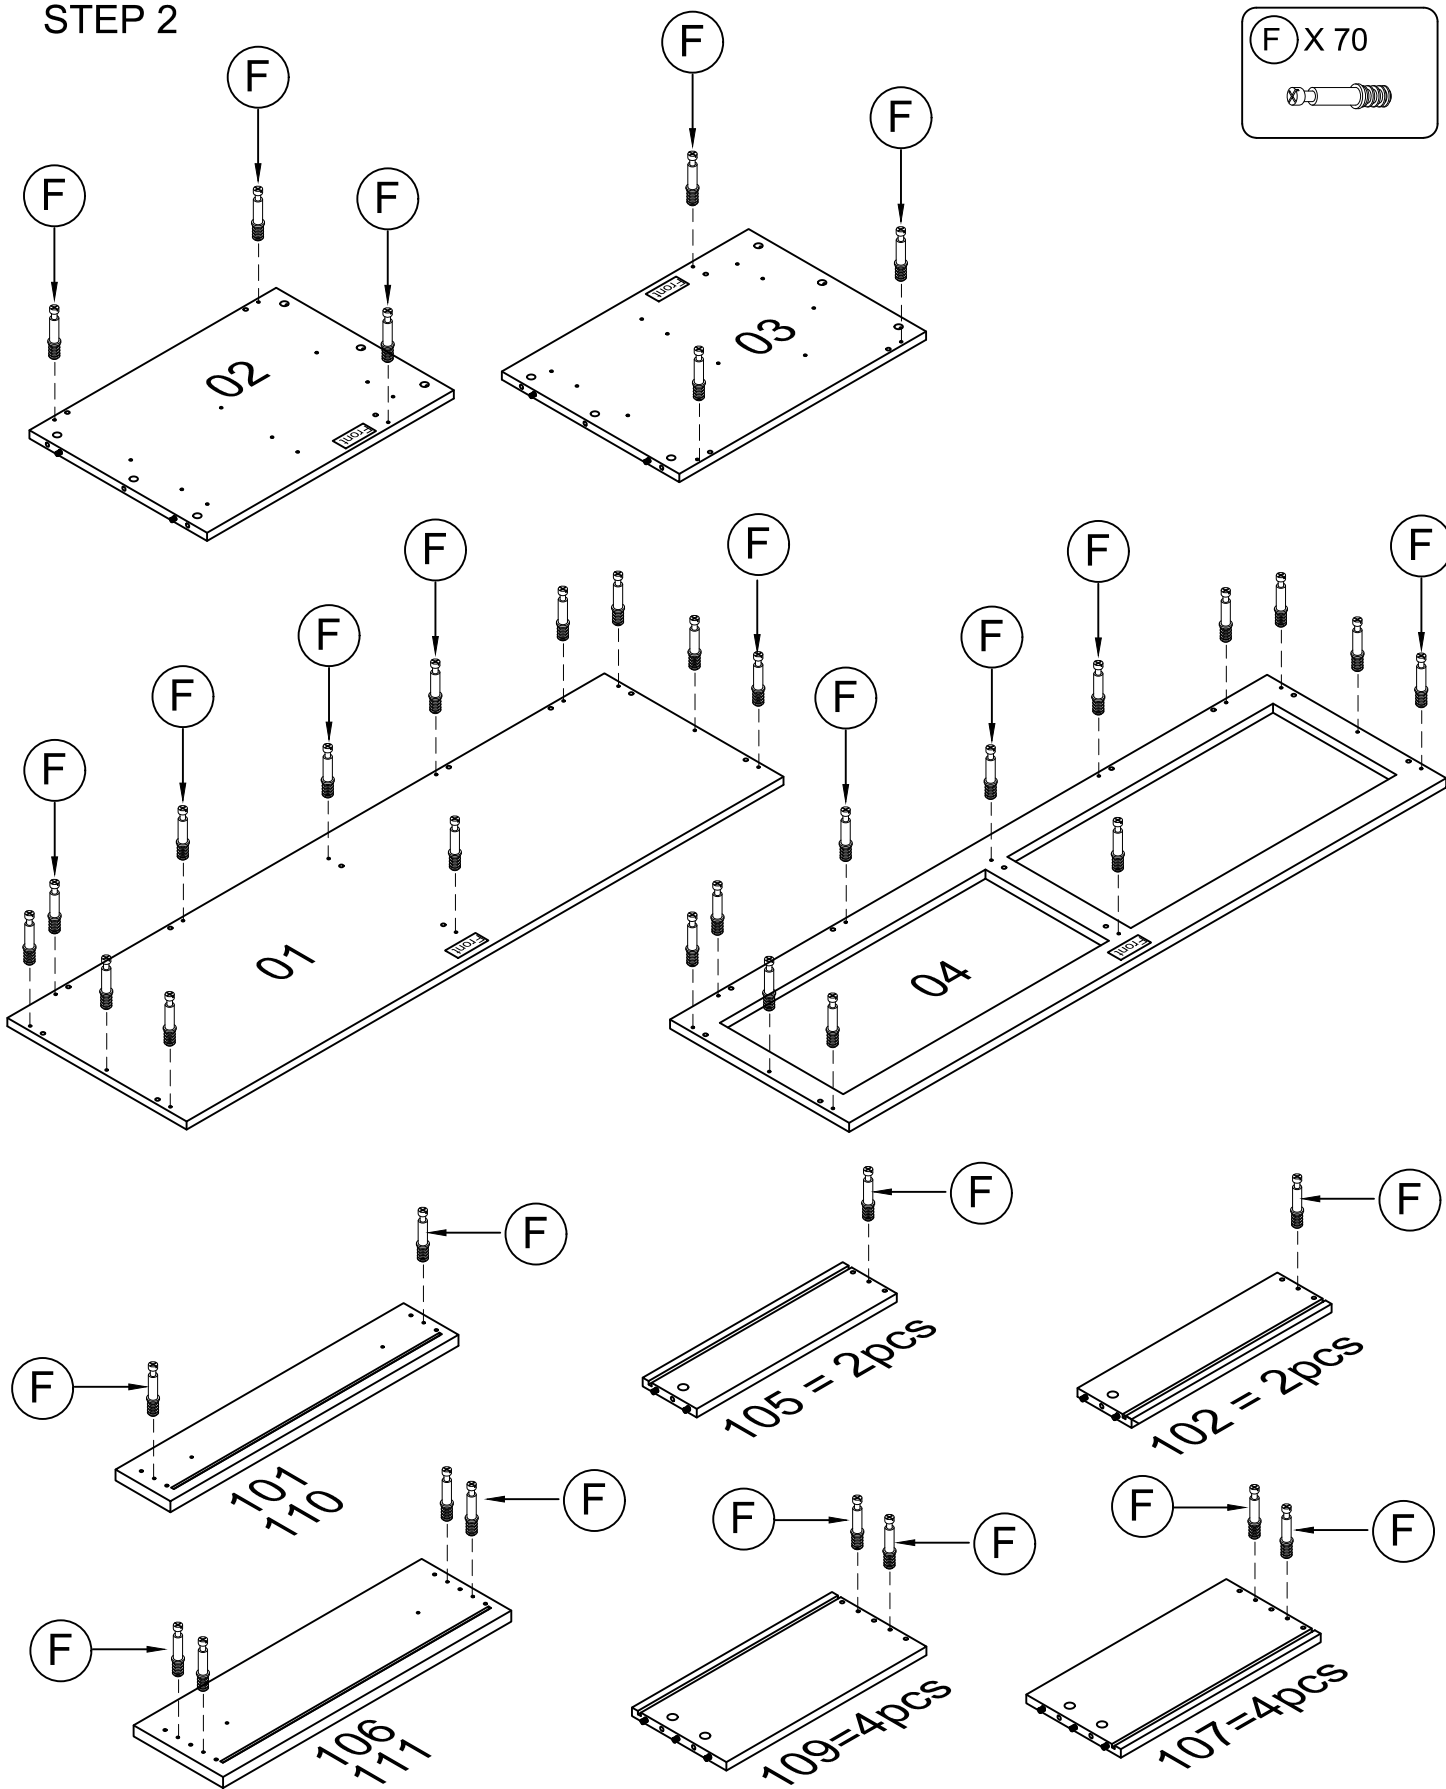

- a) Lay the parts as shown on a material that does not scratch or damage the parts.
- b) Screw in Cam-Bolt (F) into designated holes on Top Panel (1), Left & Right Panel (2 & 3), Top Drawer Front Panel (101 & 110), Bottom Drawer Front Panel (106 & 111), Top Drawer Left & Right Panel (102 & 105) and Bottom Drawer Left & Right Panel (107 & 109) .

Refer to page 5 for instructions on inserting and tightening Cam-Bolt (F).

STEP 3

(A) X 72



(H1) X 12





(H2) X 12




STEP 3A


Identify the pilot holes on Top Left & Right Drawer Panel (102 & 105) and Bottom Left & Right Drawer Panel (107 & 110) and install Slide Runner (H1) using Chipboard Screw (A) - ensure that the screws are screwed in vertically. Do not tighten the screw completely until all three screws are in place. Note: The sequence of fastening Screw (A) is from the front to the back.

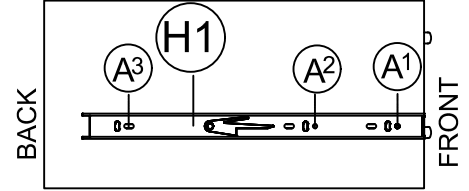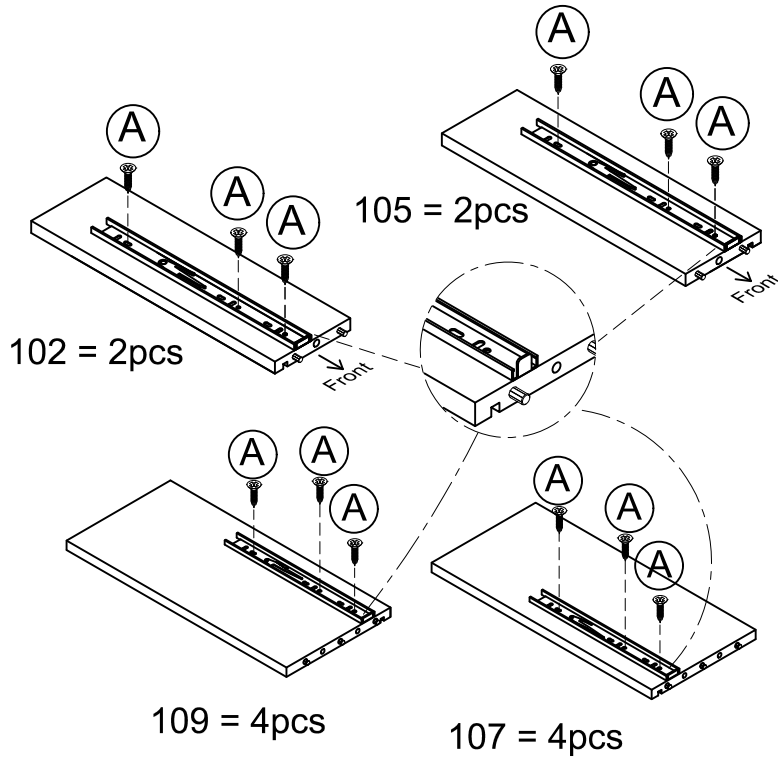

DRAWER SLIDE DISASSEMBLE STEPS:


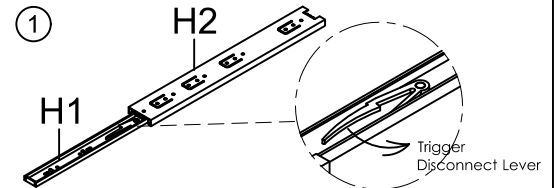


- Distinguish between Slide Track (H2) and Slide Runner (H1) of Drawer Slide.
- Slide out H1 from H2 until Trigger Disconnect Lever is visible.
- Depress the Trigger Disconnect Lever in the groove of H1 and at the same time slide out H2 completely from H1.

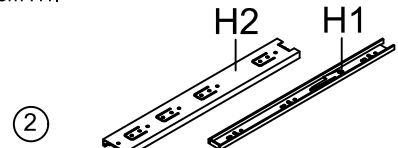


STEP 3B


Identify the pilot holes on Left & Right Panel (2 & 3) for Slide Track (H2) Use Screw (A) to fasten (H2)- ensure that the screws are screwed in vertically. Do not tighten the screw completely until all three screws are in each track.

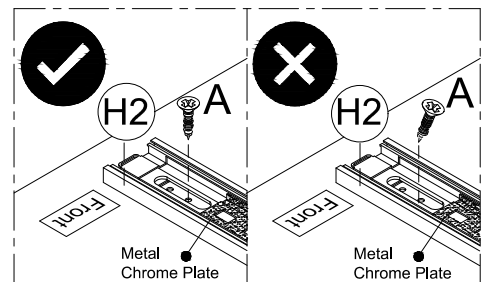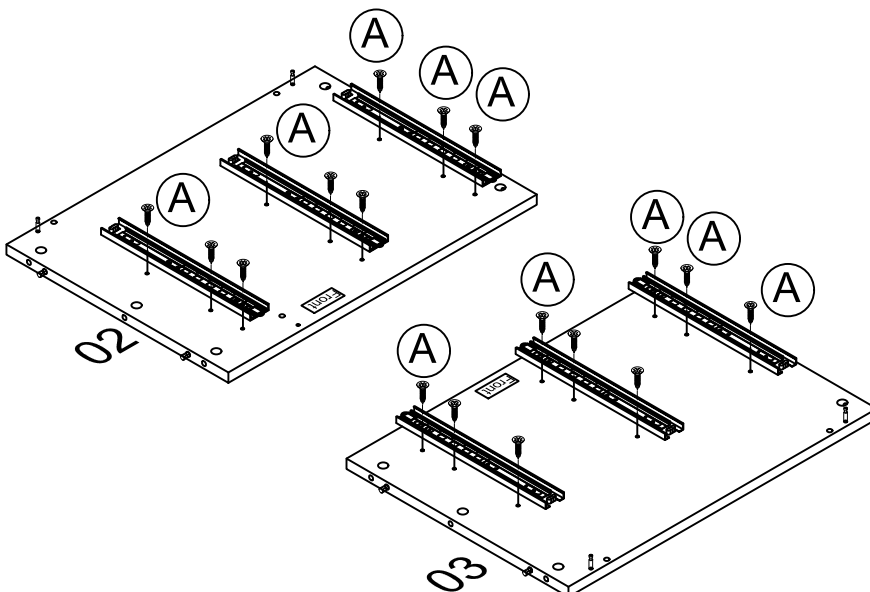

Step 1: Screw in A¹ and A³ on a view hole.

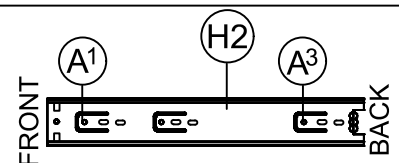


Step 2: Adjust Metal Chrome Plate, screw in A² on a view hole

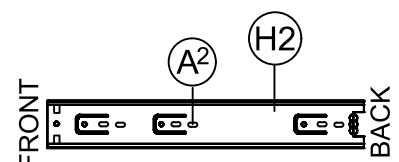

STEP 3C

Identify the pilot holes on Partition (6) for Slide Track (H2) Use Screw (A) to fasten (H2)- ensure that the screws are screwed in vertically. Do not tighten the screw completely until all three screws are in each track.

Note the sequence of using Screw (A) to fasten (H)2

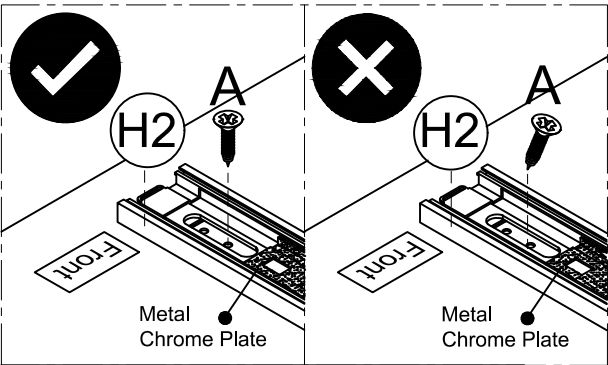


Step :1Screw in A¹ and A³ on a view hole.

A diagram of a slide track (H2) with three screws labeled A¹, H2, and A³. The track is shown from the front and back views.

Step : 2Adjust Metal Chrome Plate, screw in A² on view A hole

A diagram of a slide track (H2) with two screws labeled A² and H2. The track is shown from the front and back views.

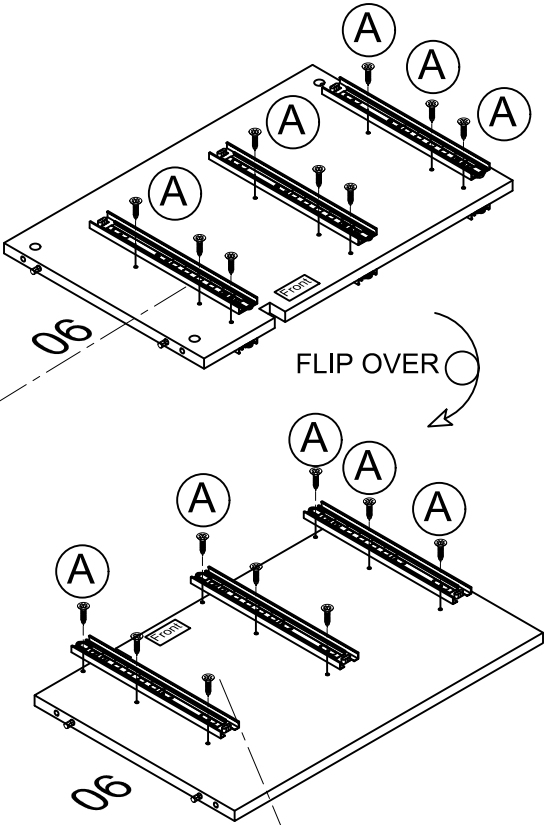

Step :1 Screw in first & third screw (A¹ & A³) through view hole.






A diagram of a slide track (H2) with three screws labeled A¹, H2, and A³. The track is shown from the front and back views.

Step :2 Adjust Metal Chrome Plate, screw in A² through view hole

A diagram of a slide track (H2) with two screws labeled A² and H2. The track is shown from the front and back views.


STEP 4

STEP 4A

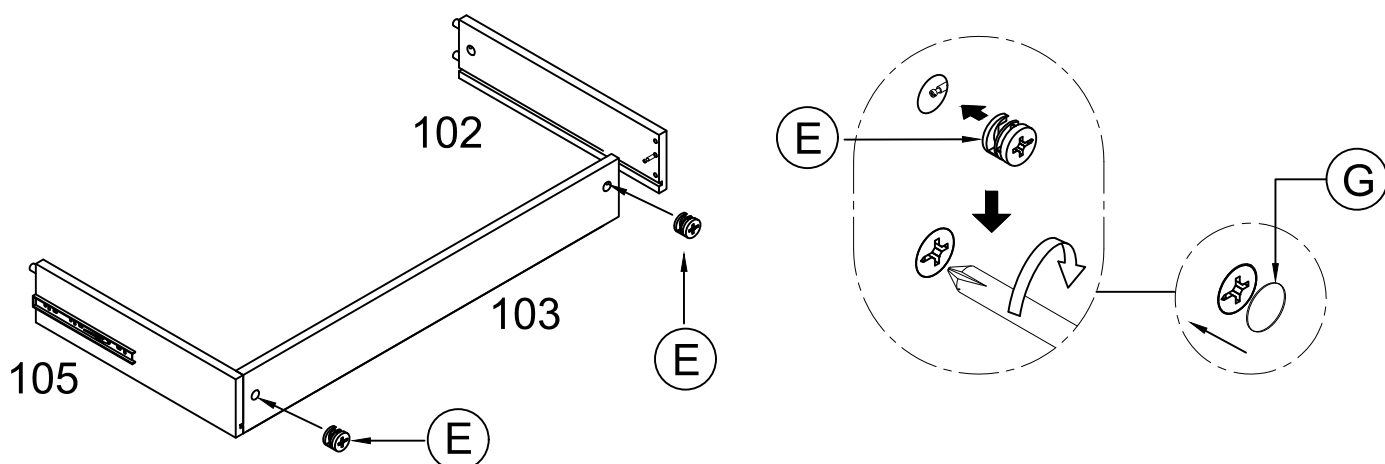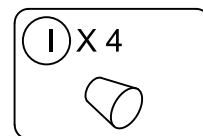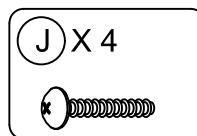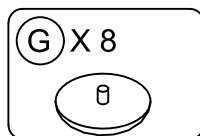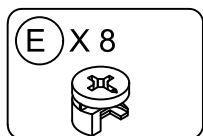


- Attach Top Drawer Left & Right Panel (102 & 105) to Top Drawer Back Panel (103) via Cam-Bolt and Wood Dowel on the respective parts.
- Insert Cam-Lock (E) into the designated hole on Top Drawer Back Panel (103) then turn clockwise to lock onto Cam-Bolt.
- Insert Cam-Lock Cover (G) to conceal Cam-Lock (E).

STEP 4B

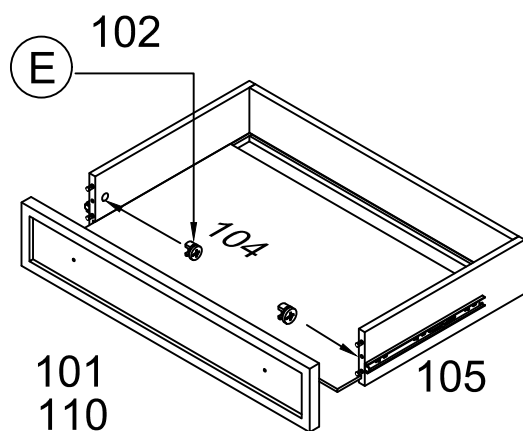

- Fit Drawer Base Panel (104) via groove on Drawer Side and Back Panel.
- Attach Top Drawer Left & Right Front Panel (101 & 110) to Top Drawer Left & Right Panel (102 & 105) via Cam-Bolt and Wood Dowel on the respective parts. Check that Drawer Base Panel (104) fits into the groove on the inside face of Top Left & Right Drawer Front Panels (101 & 110).
- Insert Cam-lock (E) into designated holes on Top Drawer Left & Right Panel (102 & 105) and turn clockwise to lock onto Cam-bolt.
- Insert Cam-lock Cover (G) to conceal cam-lock (E).


STEP 4C

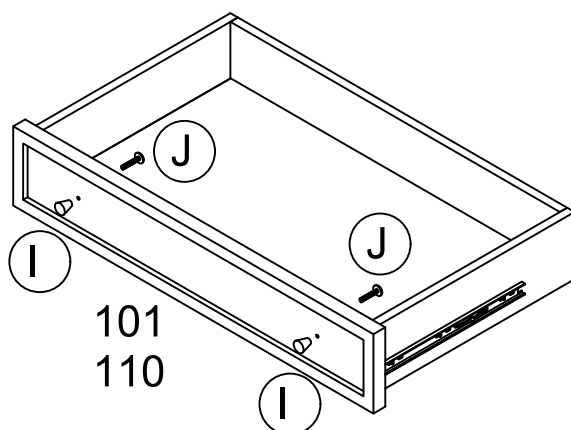

- Affix Handle (I) to Left & Right Top Drawer Front Panel (101 & 110) with Panhead Screw (J).


STEP 5

STEP 5A

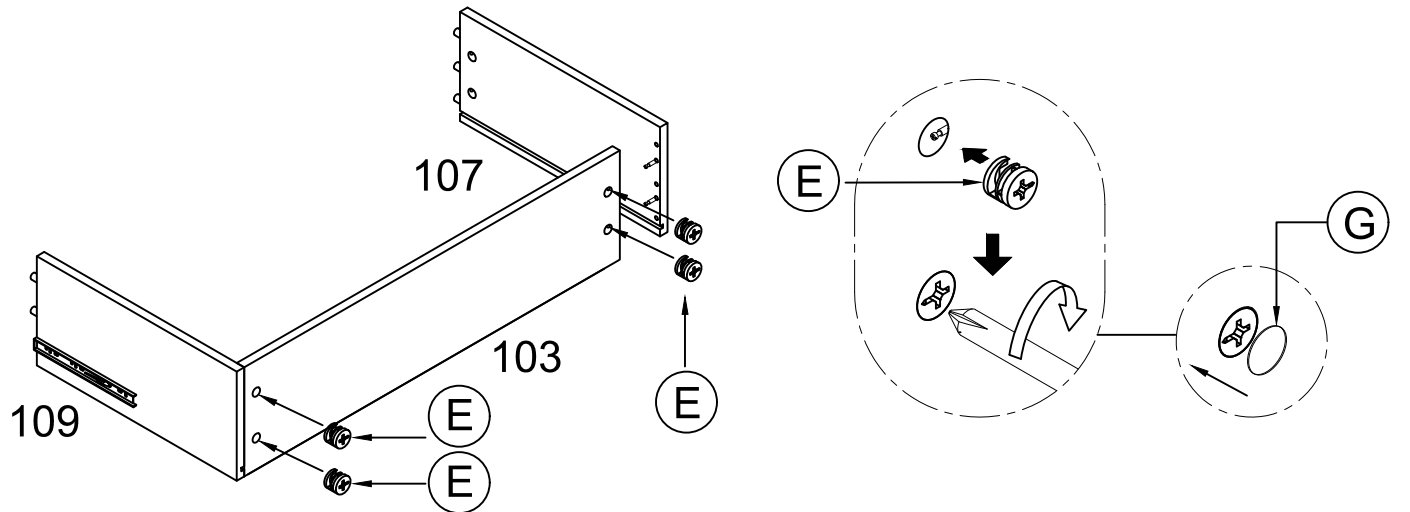


- Attach Bottom Drawer Left & Right Panel (107 & 109) to Bottom Drawer Back Panel (108) via Cam-Bolt and Wood Dowel on the respective parts.
- Insert Cam-Lock (E) into the designated hole on Bottom Drawer Back Panel (108) then turn clockwise to lock onto Cam-Bolt.
- Insert Cam-Lock Cover (G) to conceal Cam-Lock (E).

STEP 5B

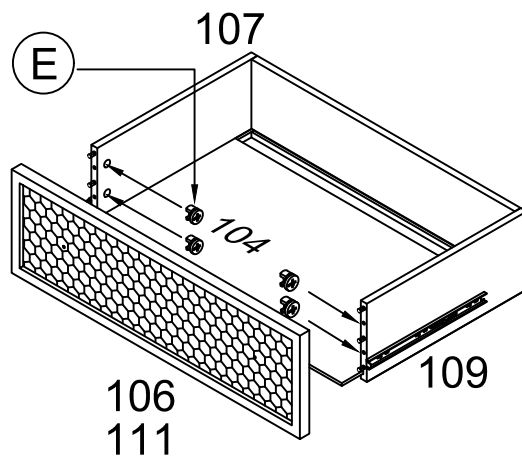


- Fit Drawer Base Panel (104) via groove on Drawer Side and Back Panel.
- Attach Bottom Left & Right Drawer Front Panel (106 & 111) to Bottom Drawer Left & Right Panel (107 & 109) via Cam-Bolt and Wood Dowel on the respective parts. Check that Drawer Base Panel (104) fits into the groove on the inside face of Bottom Left & Right Drawer Front Panels (106 & 111).
- Insert Cam-lock (E) into designated holes on Bottom Drawer Left & Right Panel (107 & 109) and turn clockwise to lock onto Cam-bolt.
- Insert Cam-lock Cover (G) to conceal cam-lock (E).

STEP 5C

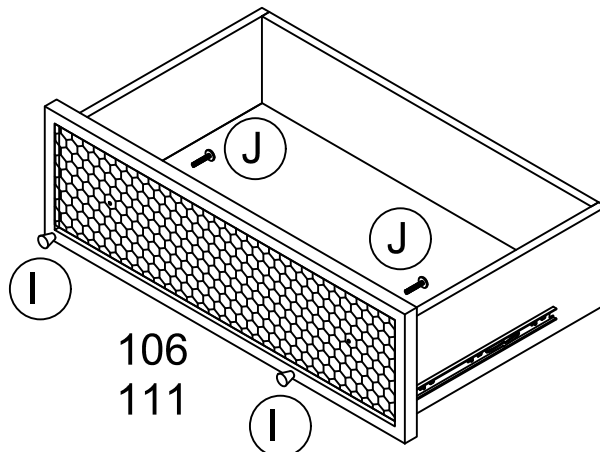

- Affix Handle (I) to Left & Right Bottom Drawer Front Panel (106 & 111) with Panhead Screw (J).

STEP 6

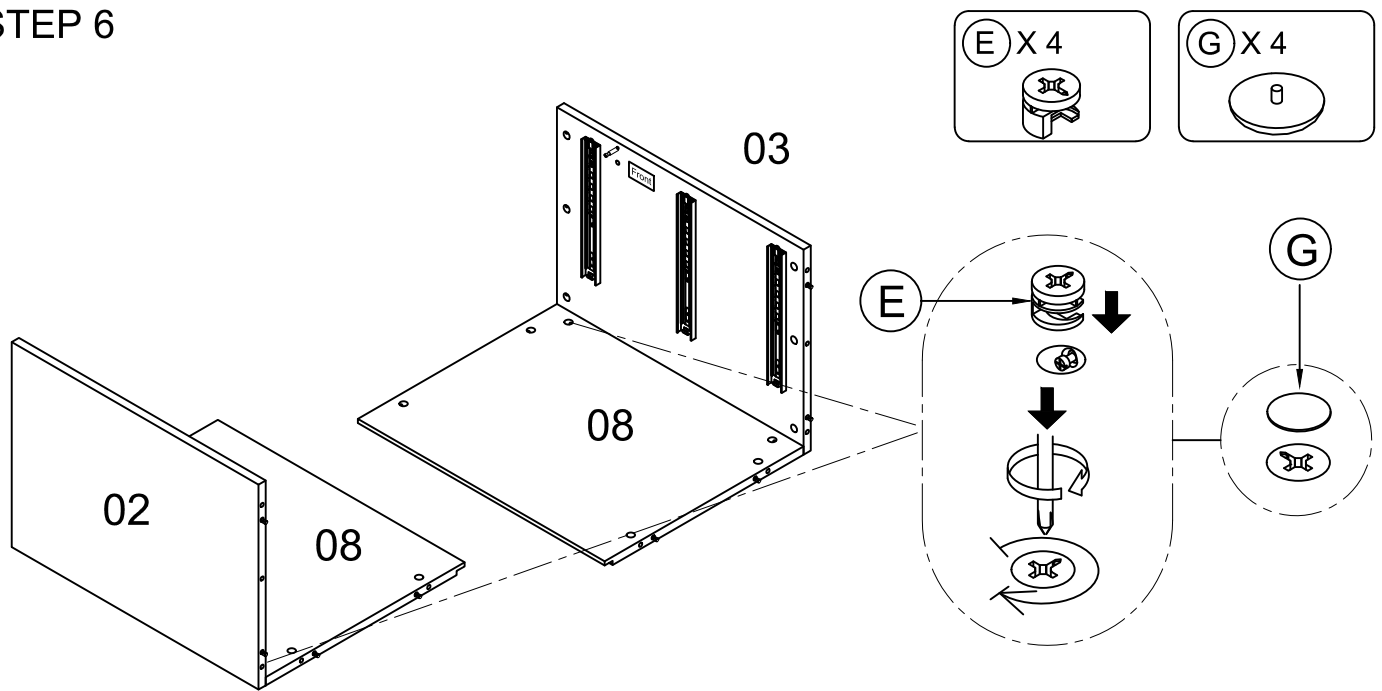


A. Attach Left & Right Panel (2 & 3) to Side Back Panel (8), via Cam-Bolt (F) and Wood Dowel (C) on respective parts.

B. Insert Cam-lock (E) into designated hole on Back Side Panel (8), then turn clockwise to lock onto Cam-Bolt (F).

C. Insert Cam-Lock Cover (G) to cover Cam-Lock (E).

STEP 7

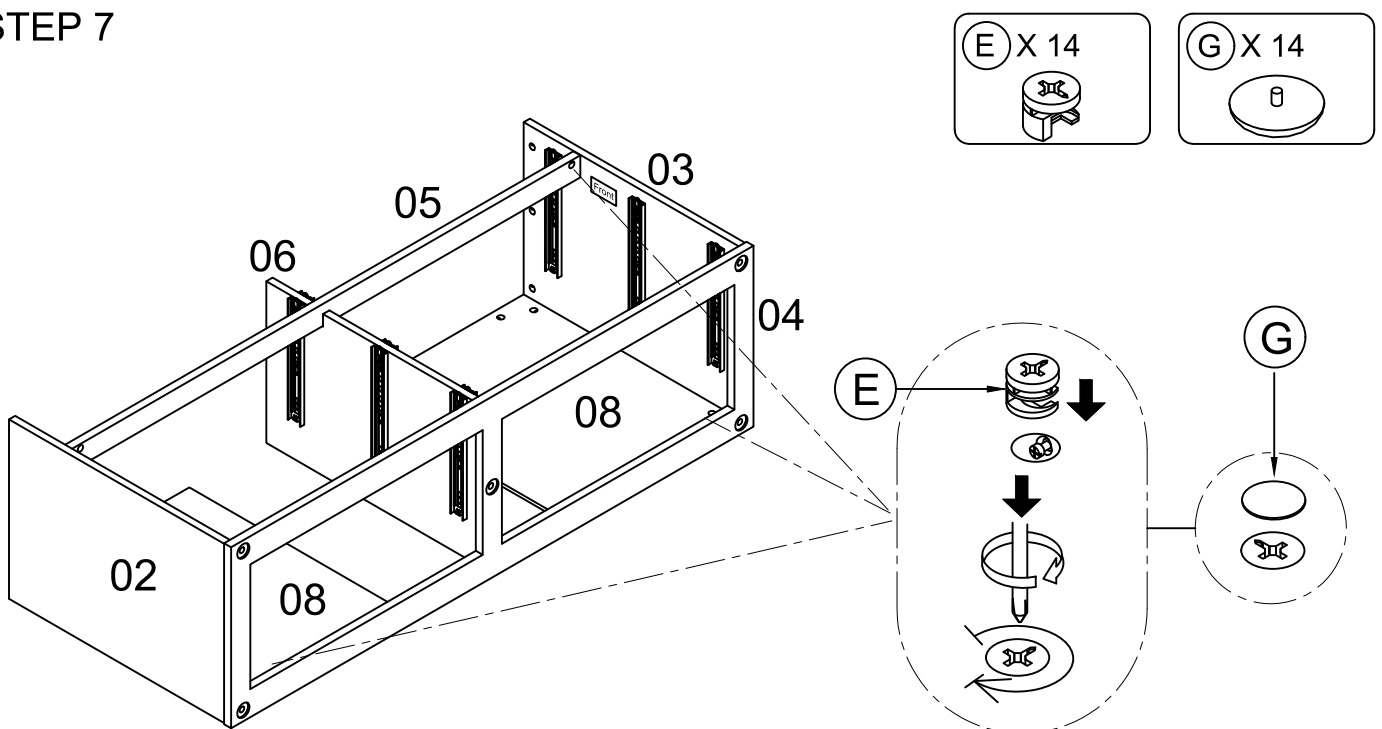


A. Attach Bottom Frame (4) to Left & Right Panel (2 & 3), Partition (6) and Center Rail (5), via Cam-Bolt (F) and Wood Dowel (C) on respective parts.

B. Insert Cam-lock (E) into designated hole on Left & Right Panel (2 & 3), Partition (6) and Center Bar (5), then turn clockwise to lock onto Cam-Bolt (F).


C. Insert Cam-Lock Cover (G) to cover Cam-Lock (E).

STEP 8

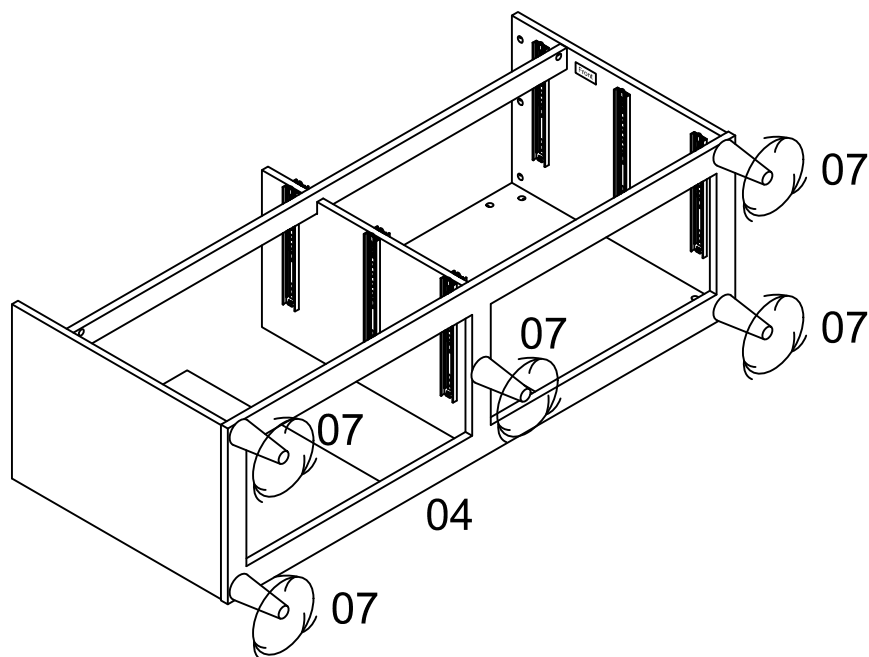



Screw-in Leg (7) to Bottom Frame (4) and tighten completely.

STEP 9

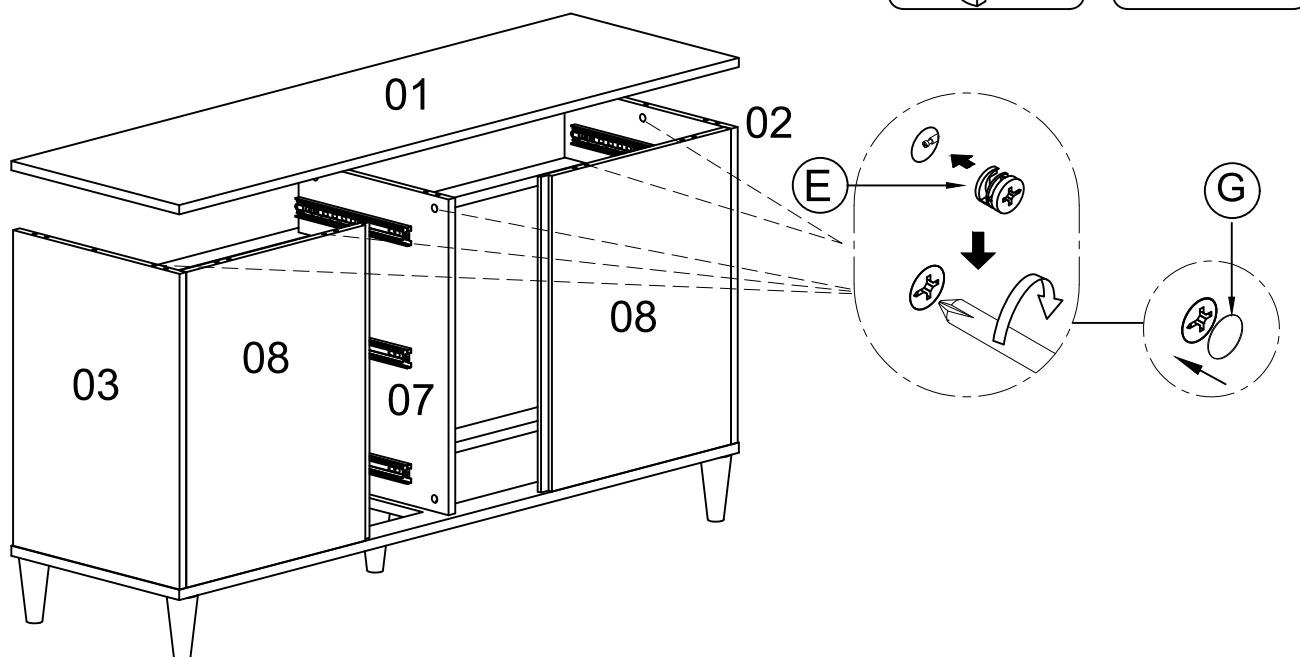

- Attach Top Panel (1) to Left & Right Panel (2 & 3), Partition (6) and Side Back Panel (8), via Cam-Bolt and Wood Dowel on respective parts.
- Insert Cam-lock (E) into designated hole on Left & Right Panel (2 & 3) and Side Back Panel (8), then turn clockwise to lock onto Cam-Bolt.
- Insert Cam-Lock Cover (G) to cover Cam-Lock (E).


STEP 10

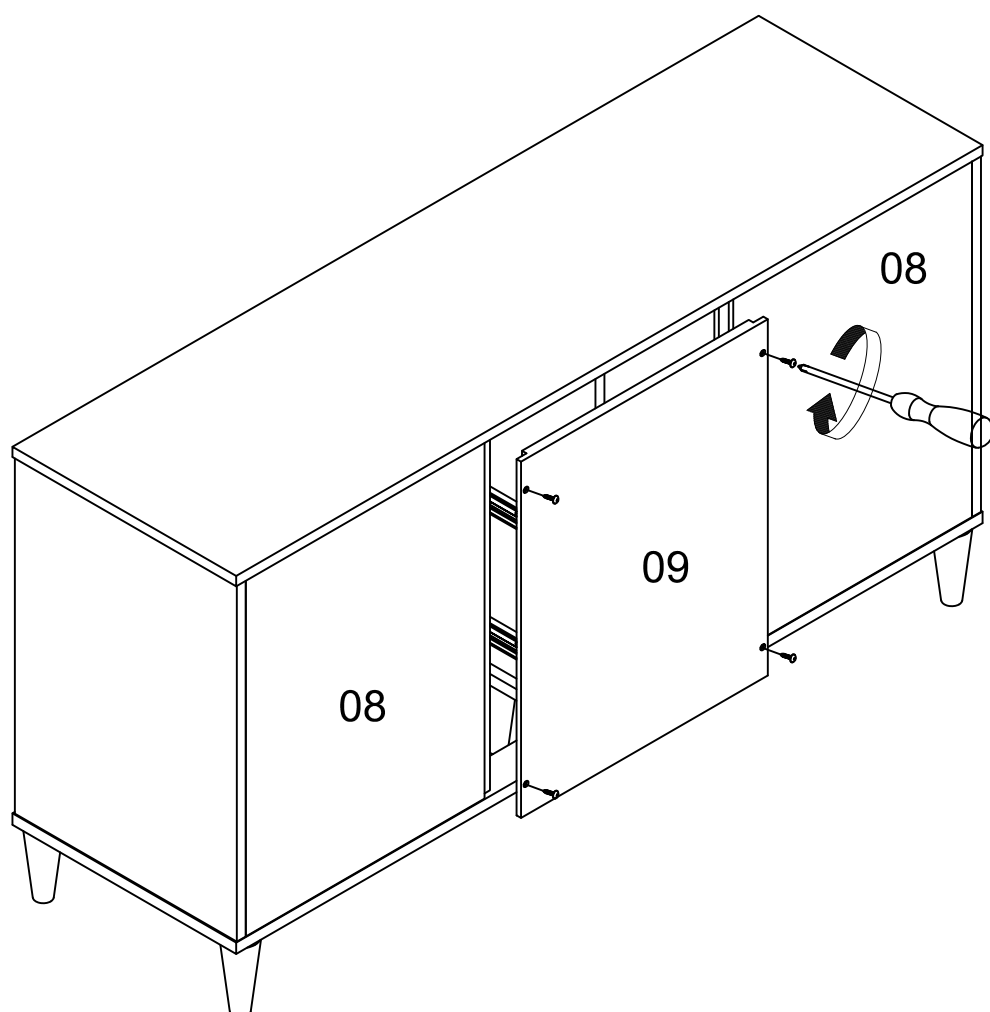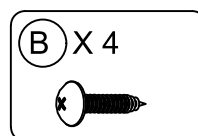

a) Attach Center Back Panel (9) squarely to Side Back Panel (8) fasten with Panhead Chipboard Screw (B).


STEP 11

STEP 11A

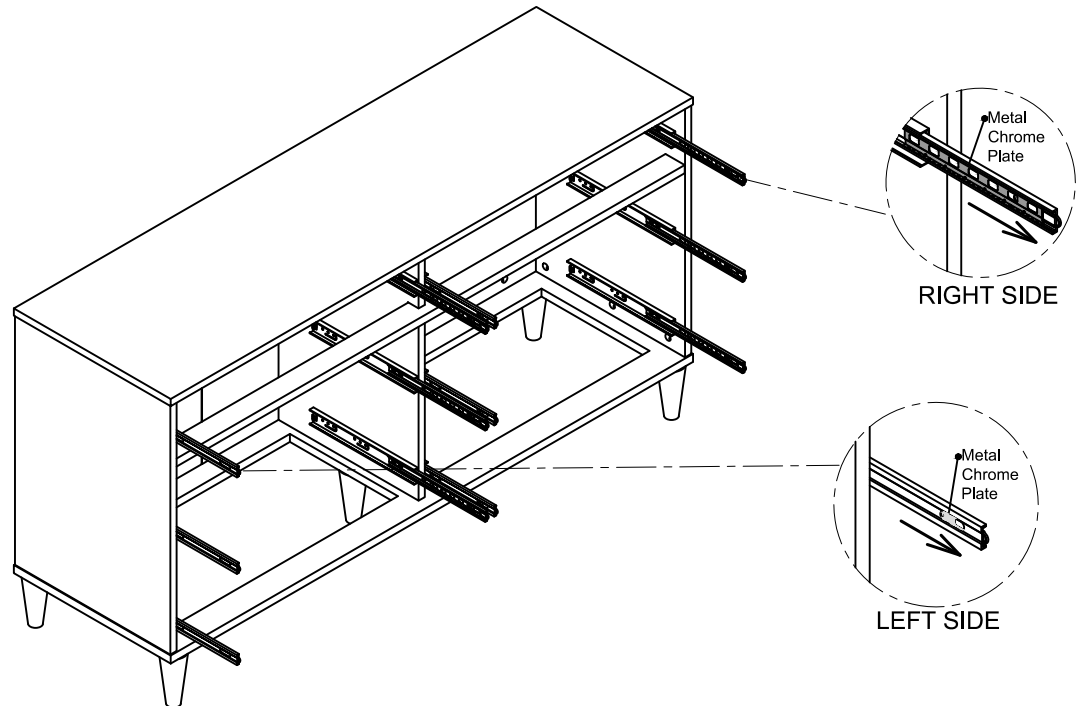

a. Slide out Metal Chrome Plate (ball bearing slider) on both sides of Slide Track (H2).

STEP 11B

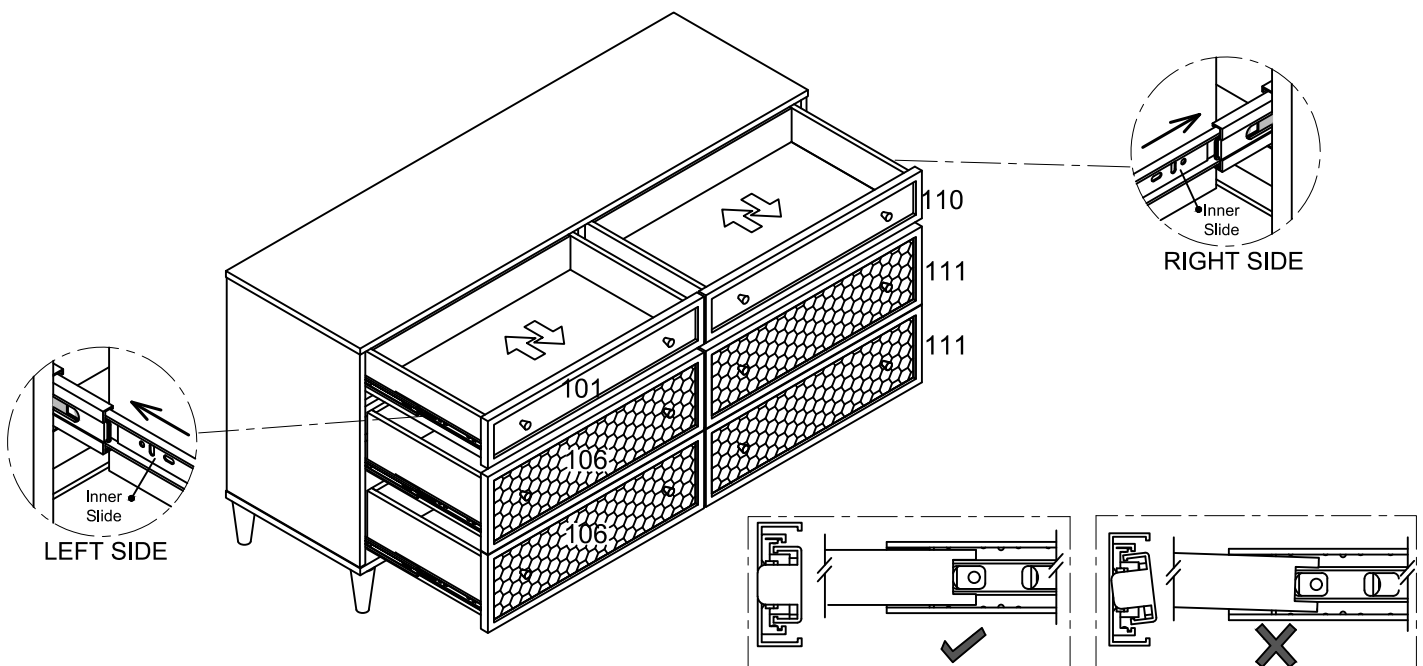


Align the back open-end of the Slide Runner (H1) on each side of the drawer to fit squarely into the groove on the open front-end of the chrome plate on Slide Track (H2) on the Side Panels.

Be sure the drawer/(H1) is not tilted or angled and push in the drawer slightly and squarely.

Push in the drawer further in gently - when the Trigger Disconnect Lever on (H1) is engaged onto (H2) there will be a slight resistance - this is normal. Pull out the drawer a little bit and gently push in the drawer again to engage the Trigger Disconnect Lever to the slide mechanism on (H2). The drawer should now slide smoothly.

If the drawer cannot be pushed in or stuck, do not force it in. Remove the drawer and repeat the steps above.

STEP 11C

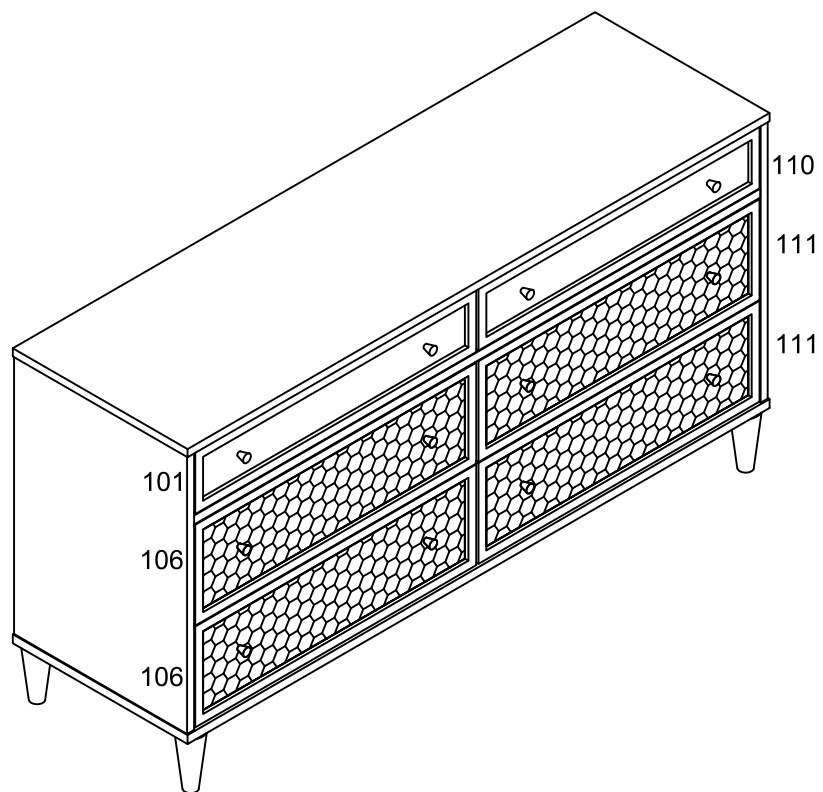

Drawers should be assembled as follows
The assembly of the Dresser is complete.

STEP 12

ANTI-TIP KIT AND INSTALLATION



WARNING




Serious or fatal injuries can occur when furniture is not secured and tipover. To prevent tipover :

- 1) Install anti-tip kit provided.
- 2) Place heavier items in lower drawers or shelves.
- 3) Unless specifically designed to accommodate, do not place TVs or heavy objects on top of this product.
- 4) Never allow children to climb or hang on this product or any part of the product including, drawers, shelves or doors.
- 5) Never open more than one drawer at a time.
- 6) Do not deactivate or remove any drawer interlock system.

Use of tip-over restraints only reduces and does not eliminate the risk of tipover.

Parts and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Bracket		2Pcs
B	SCREW M4 X 50mm		1Pc
C	SCREW M4 X 16mm		1Pc
D	Nylon Strap		1Pc

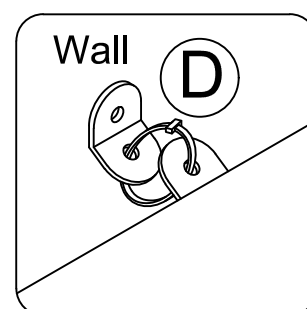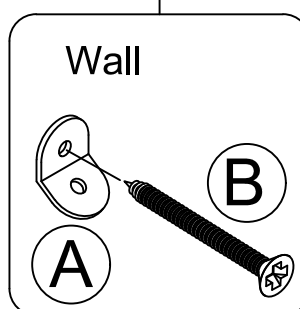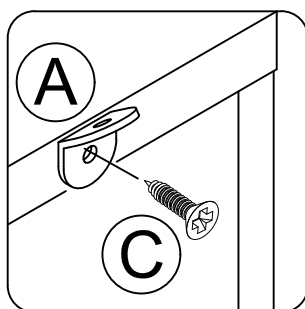

NOTE:

WALL PLUG IS NOT SUPPLIED WITH THIS PRODUCT AS DIFFERENT WALL MATERIALS REQUIRE DIFFERENT TYPES OF FIXING HARDWARE & YOU MUST USE SUITABLE FIXING HARDWARE FOR TYPE OF WALL YOU INTEND TO MOUNT THIS PRODUCT TO WALL.

Installation Steps:

1. Use Screw (C) to fasten Bracket (A) to the center of back top Side of the Top Panel.
2. Mark the location on the wall for mounting the second set of bracket (A) which need to be at the same level as Bracket (A) on the back Side of Top Panel and drill hole in the wall as per the length and diameter of WALL PLUG.
3. Insert WALL PLUG into the drilled hole and fasten (A) to the wall with Screw (B).
4. Place the furniture so the brackets on the back Side of Top panel is aligned with the bracket on the wall.
5. Lace the end of the Nylon Strap (D) through each of the bracket. Bring both ends together and slide the beaded end of the strap through the keyhole-shaped slot on the other end. Pull down on the beaded end until it snap-locked into the keyhole-shaped slot.
6. Check to make sure the strap is securely laced and locked to the brackets.

The anti-tipping installation is complete.