 
 
 

SKU HN0008

Assembly Instructions

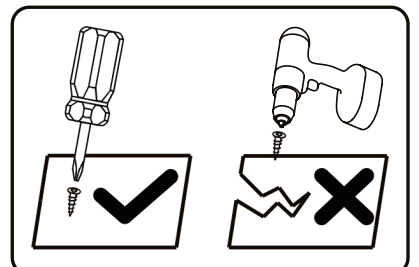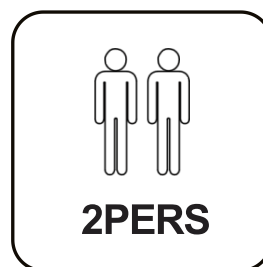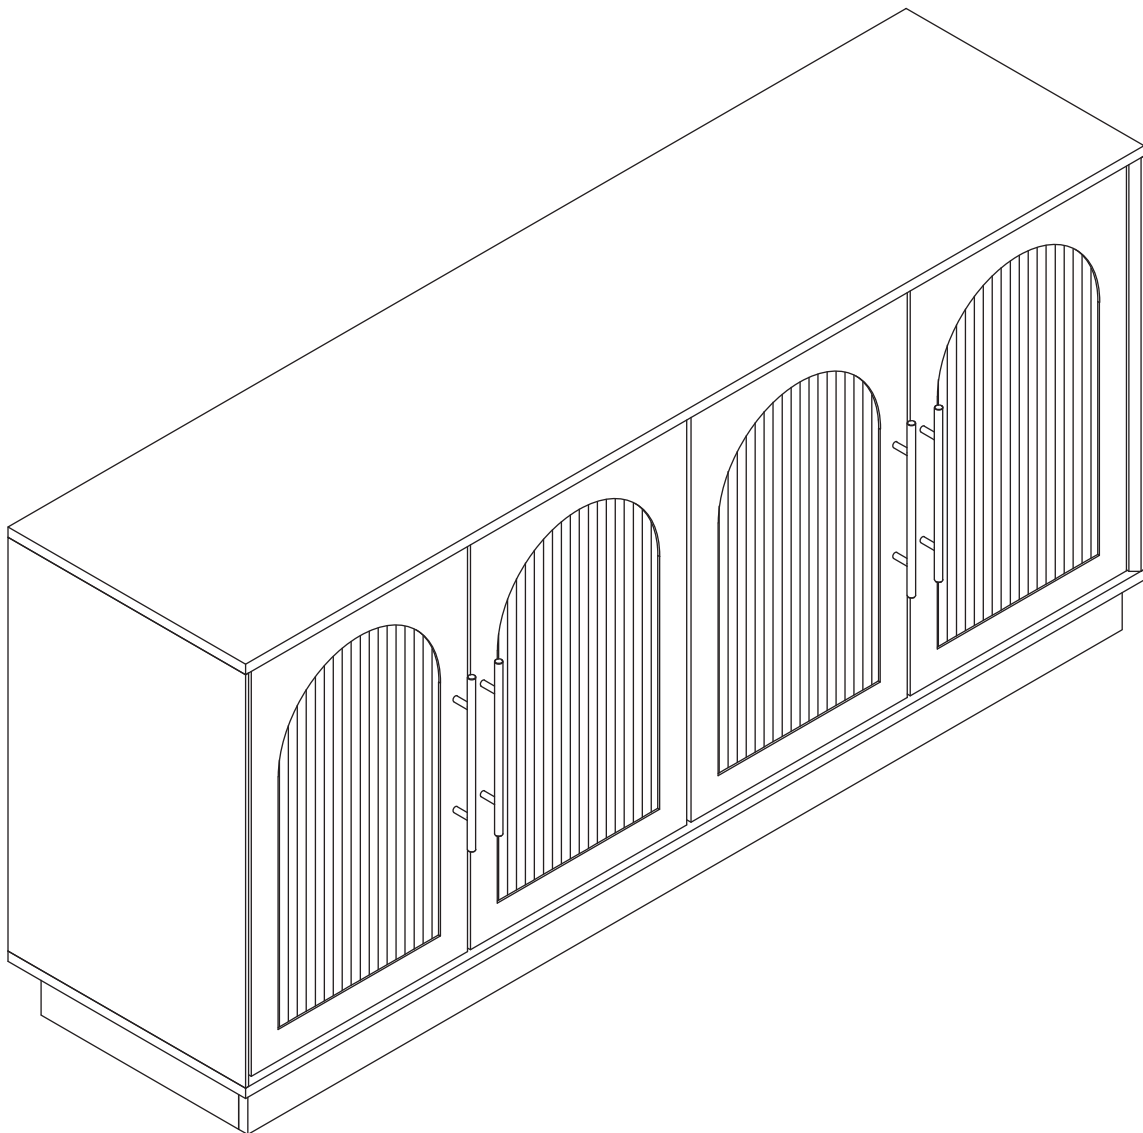

Tools Recommended

IMPORTANT NOTICE

-This product contains small components, please ensure that they are kept away from small children.

-THIS INSTRUCTIONS CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ BEFORE ASSEMBLY AND KEEP FOR FUTURE REFERENCE.

-Read each step carefully. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.

-Make sure all parts are included. Most parts are labelled or stamped on the raw edge.

-Work in spacious area, preferably on a carpet, near the place the unit will be used.

-Do not use power tools to assemble your furniture. Power tools may strip or damage the parts.

-Move your new furniture carefully, with two people lift and carry the unit to it's new location.

-Never push, drag or pull your furniture (especially on carpet)



PLEASE DO NOT RETURN PRODUCT TO US IMMEDIATELY

If a part is missing or damaged, email our customer service.
We will gladly ship your replacement parts FREE of charge.

Need Parts or Assistance? Email us : **huaining@nowmais.com**

For Prompt, reliable service, please have your assemble instruction ready



WARNING

 


Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on any drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.



*This is a permanent label.
Do not remove!*

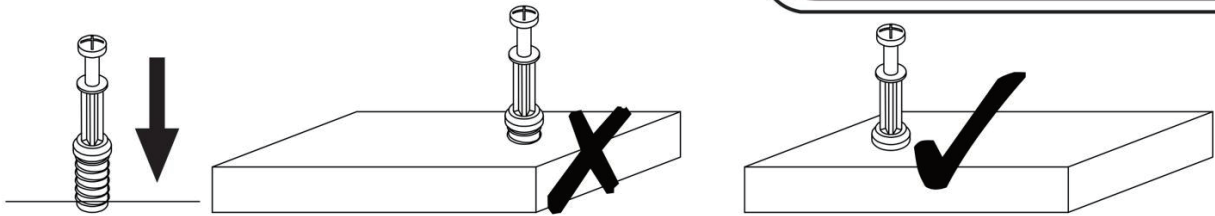


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

FR_RACCORD RAPIDE: Faites serrer le raccord rapide jusqu'à ce que l'épaule soit parfaitement encastré dans le panneau. Il ne faut ni trop serrer ni insuffisamment serrer.

ES_QUICKFIT: Apriete quickfit hasta que el hombro se descargue con el panel. NO lo sobreapriete ni lo apriete poco.

DE_QUICKFIT: Ziehen Sie den Quickfit fest, bis die Schulter mit der Platte bündig ist. Bitte nicht zu fest oder zu schwach anziehen.

 IT_MONTAGGIO RAPIDO: Stringere il montaggio rapido fino a quando la spalla è a filo con il pannello, non stringere troppo o troppo poco.

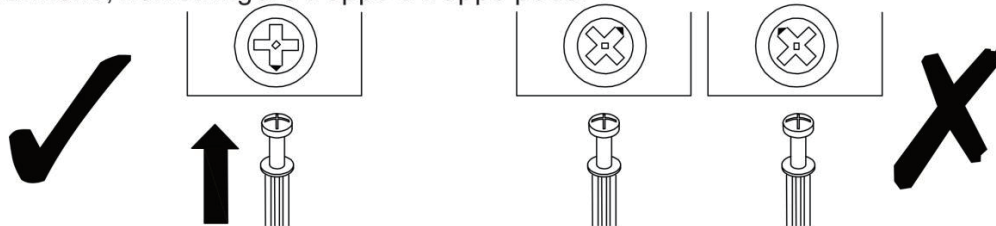


EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

FR_SERRURE BATTEUSE: Avant d'insérer la serrure batteuse, veillez à la bonne orientation avant d'insérer le raccord rapide.

ES_CIERRE DE LA CÁMARA: Cuando instale el cierre de la cámara, asegúrese de que la posición de inicio es correcta antes de que inserte el quickfit conector.

DE_CAM-LOCK: Achten Sie bei der Montage des Cam-Locks auf die richtige Ausgangsposition, bevor Sie den Quickfit einsetzen.

 IT_BLOCCAGGIO A CAMMA: Quando si monta il bloccaggio a camma, assicurarsi che la posizione iniziale sia corretta prima di inserire il montaggio rapido di collegamento.

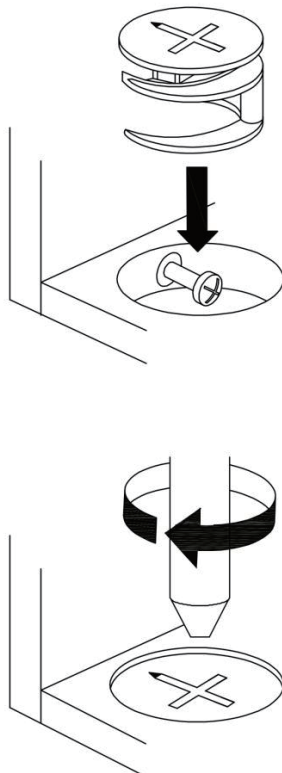

EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.

FR_Lorsque les deux panneaux sont assemblés, la tête du raccord rapide doit reposer au centre de la serrure batteuse. Il faut insérer la serrure batteuse avant le raccord rapide.

ES_El cabezal del quickfit debe estar en el centro del cierre de la cámara cuando se unan los dos paneles.

Se debe insertar el cierre de la cámara antes que el quickfit.

DE_Der Quickfit-Kopf sollte sich in der Mitte des Cam-Locks befinden, wenn die beiden Platten zusammengefügt sind.

Der Cam-Lock sollte vor dem Quickfit eingesetzt werden.

IT_La testa del montaggio rapido deve trovarsi al centro del bloccaggio a camma quando i due pannelli sono uniti.

Il Bloccaggio a Camma deve essere inserito prima del montaggio rapido.

 
 
 
 
 
 
 
 
 
 
 
 
EN_Turn cam lock clockwise to tighten.


FR_Faites tourner la serrure batteuse dans le sens des aiguilles d'une montre pour la resserrer.











ES_Gire el cierre de la cámara en sentido horario para apretarlo.


DE_Drehen Sie den Cam-Lock im Uhrzeigersinn, um ihn festzuziehen.

IT_Ruotare il bloccaggio a camma in senso orario per stringere.

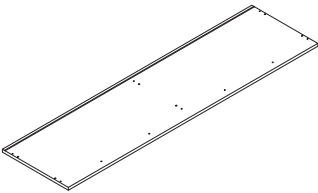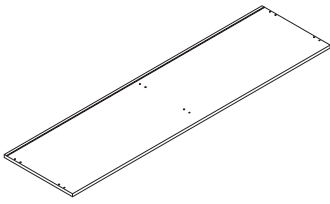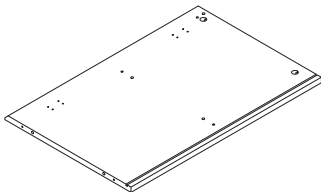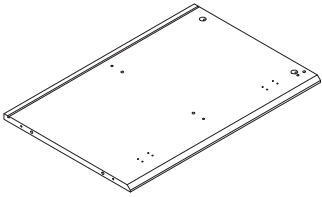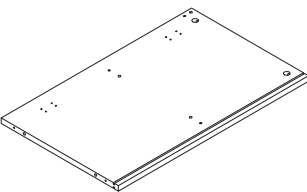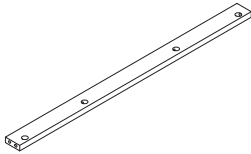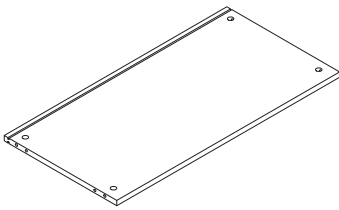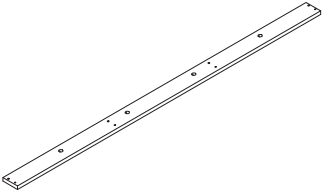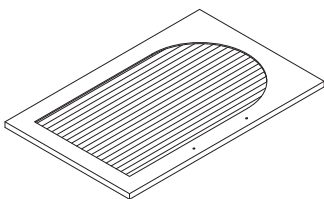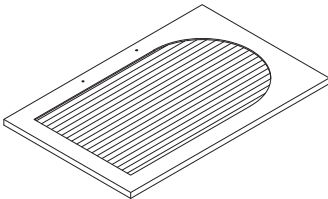
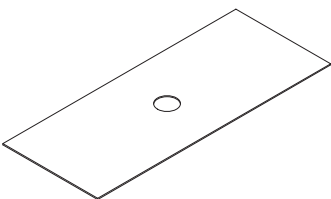
1 x1 	2 x1 	3 x1 	PARTS 4 x1 
5 x1 	6 x2 	7 x2 	8 x2 
9 x2 	10 x2 	11 x2 	12 x4 

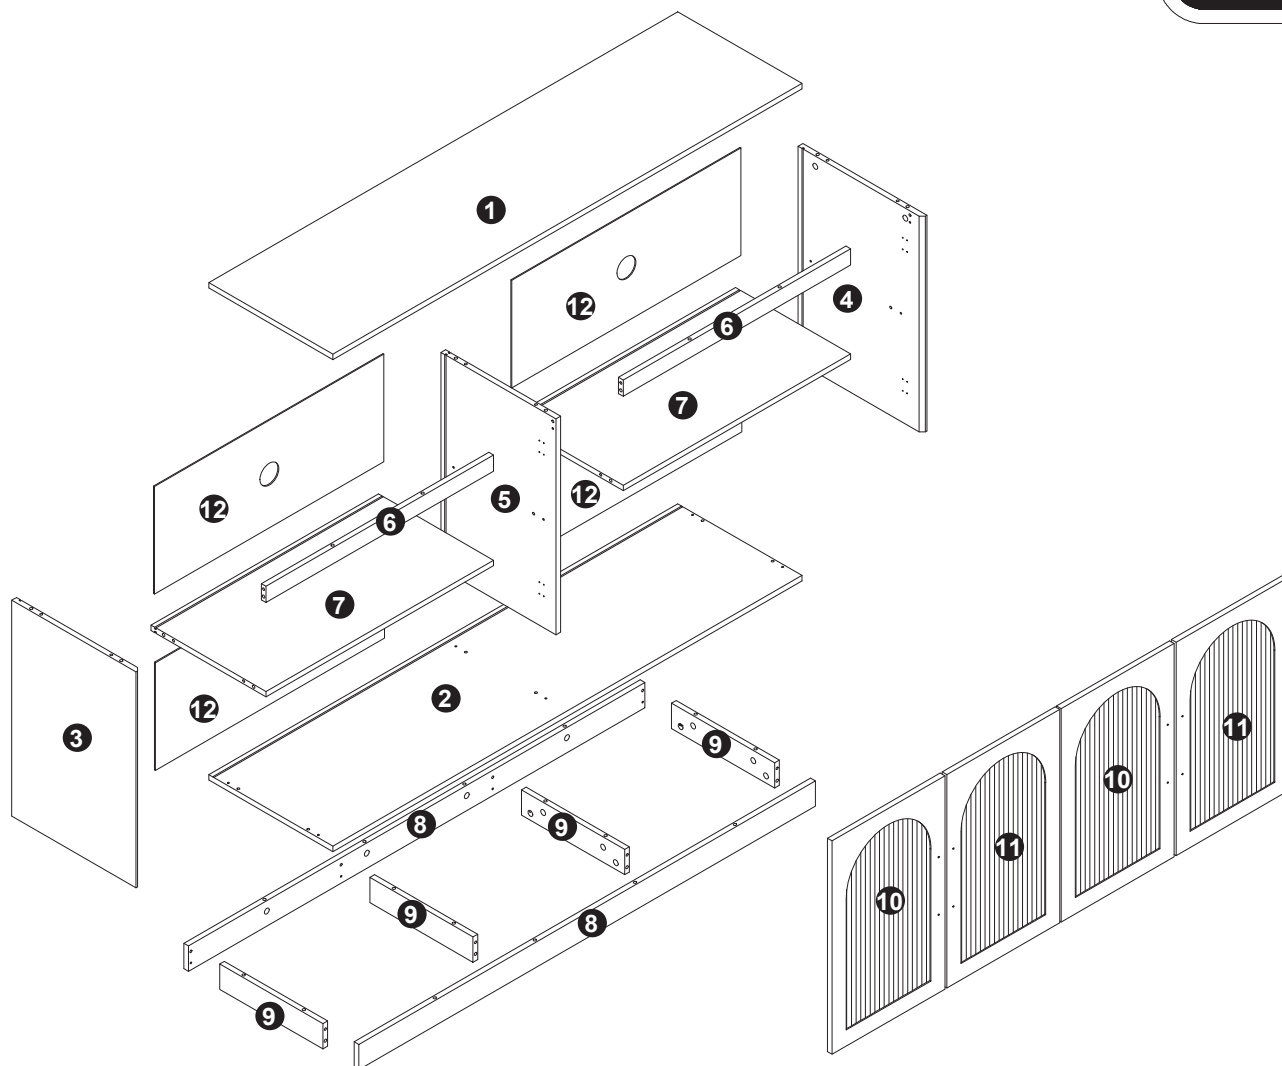 

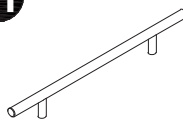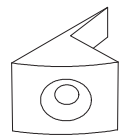          
A  M6*35 46+3PCS	B  Ø15*9 46+3PCS	C  M4*40 8PCS	D  Ø6*30 15+1PCS	E  M3*14 18+1PCS
F  4PCS	G  M3.5*14 48+3PCS	H  4PCS	I  M4*25 8PCS	J  Ø6*50 3PCS
K  16+1PCS	L  Ø6*30 2PCS	M  4PCS	N  2PCS	O  4PCS

 A



 
 
6PCS

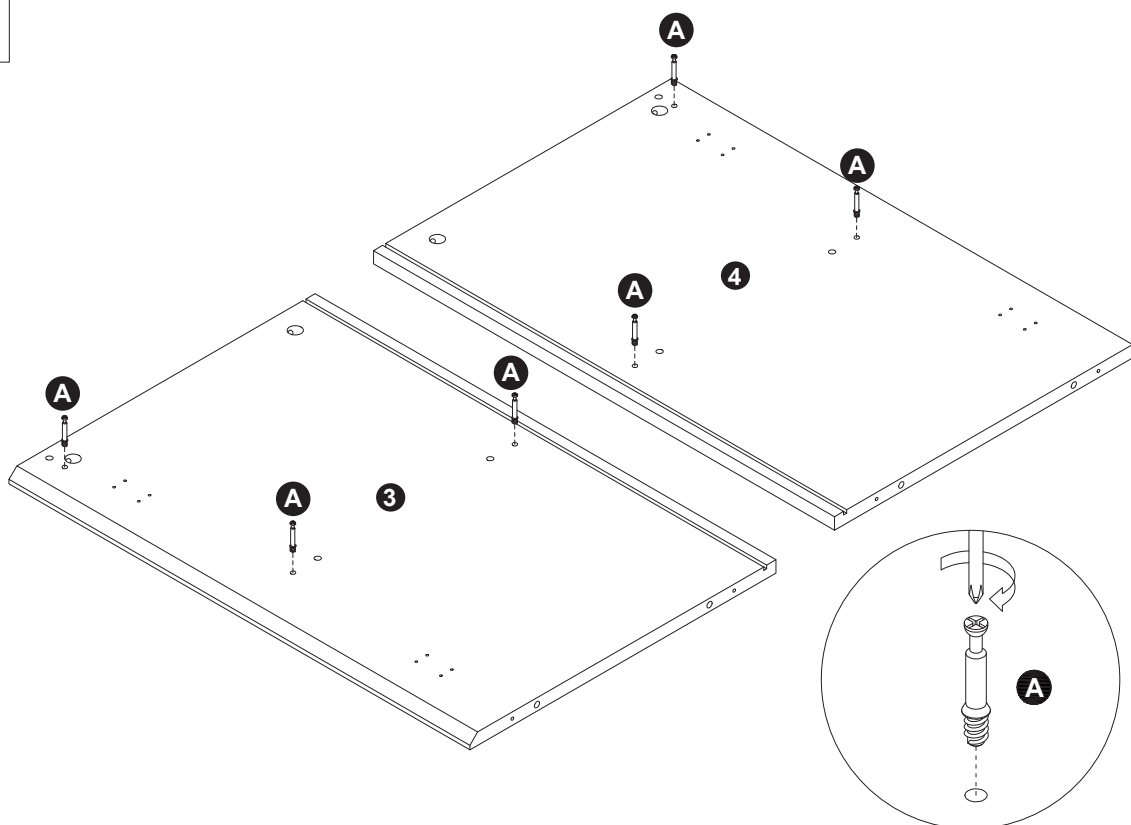01**A**

 6PCS

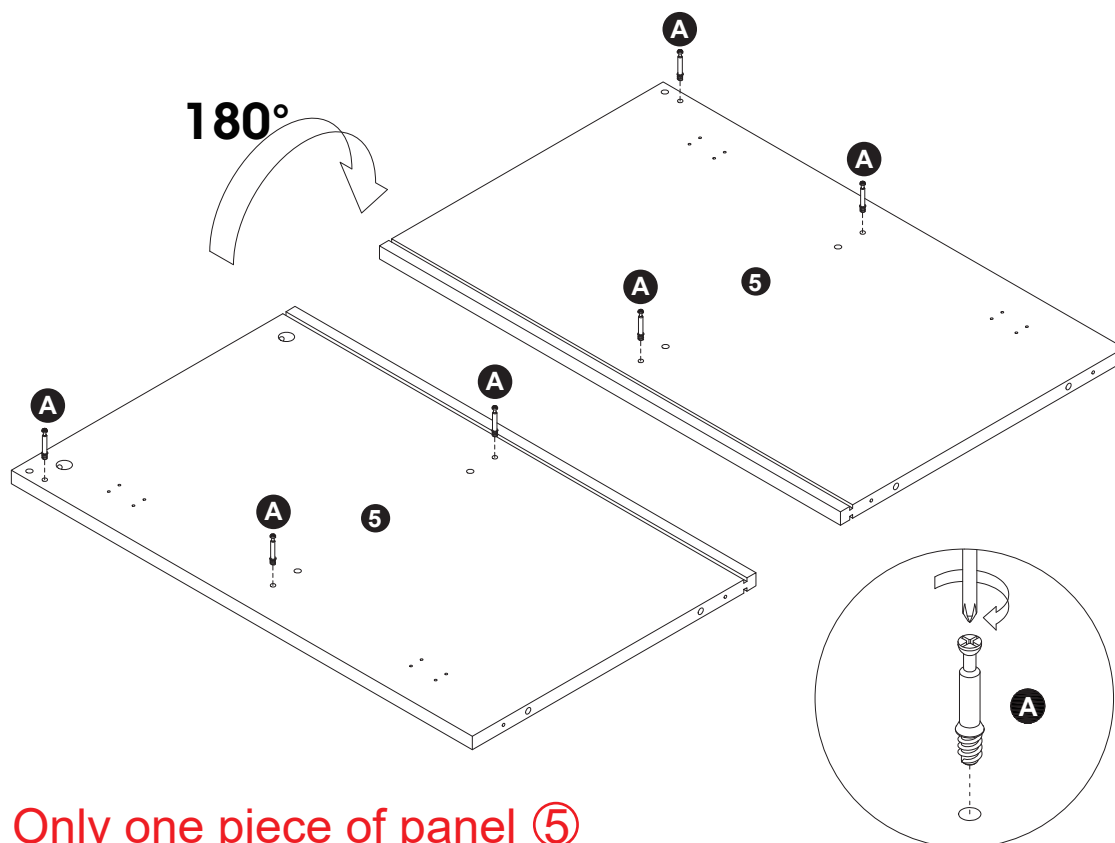
02

    Note: Only one piece of panel ⑤

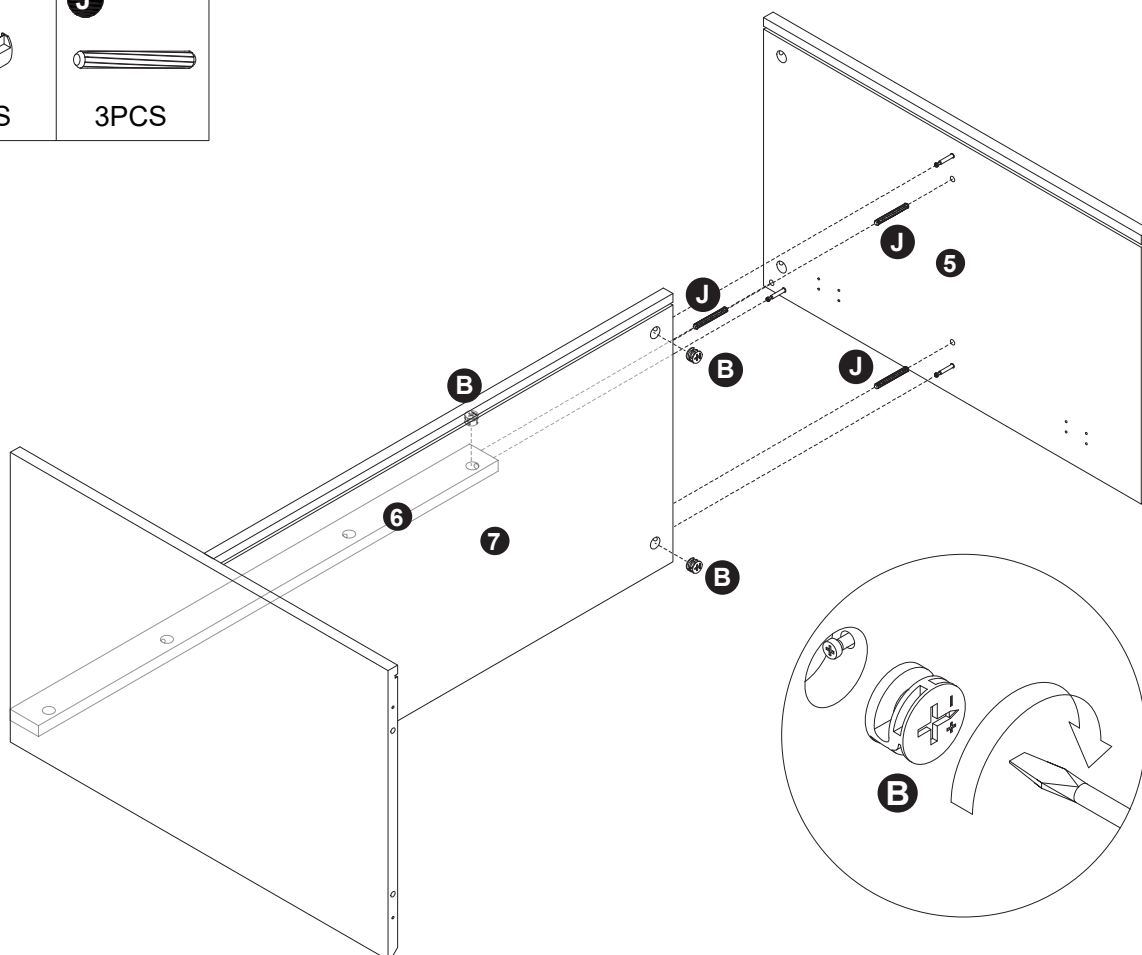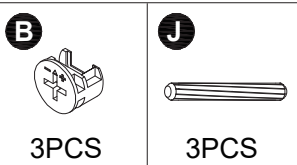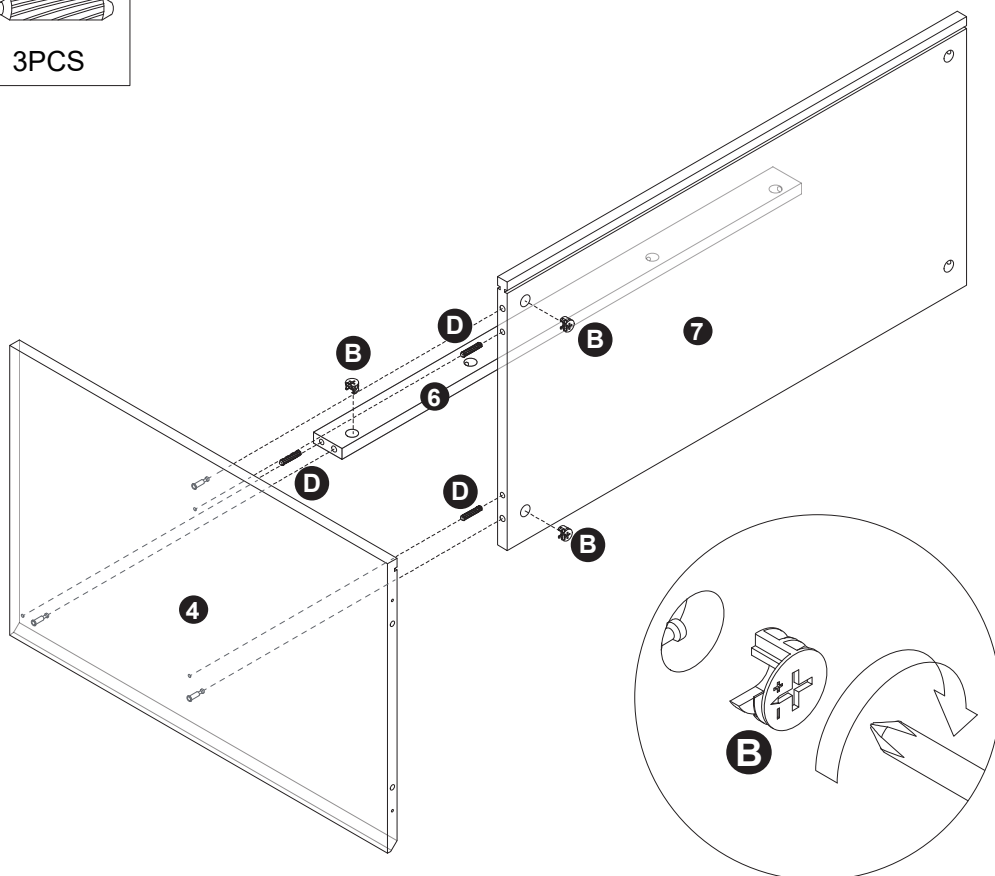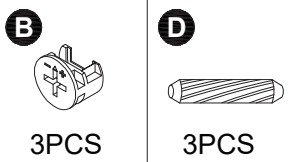

B
3PCS

 
05

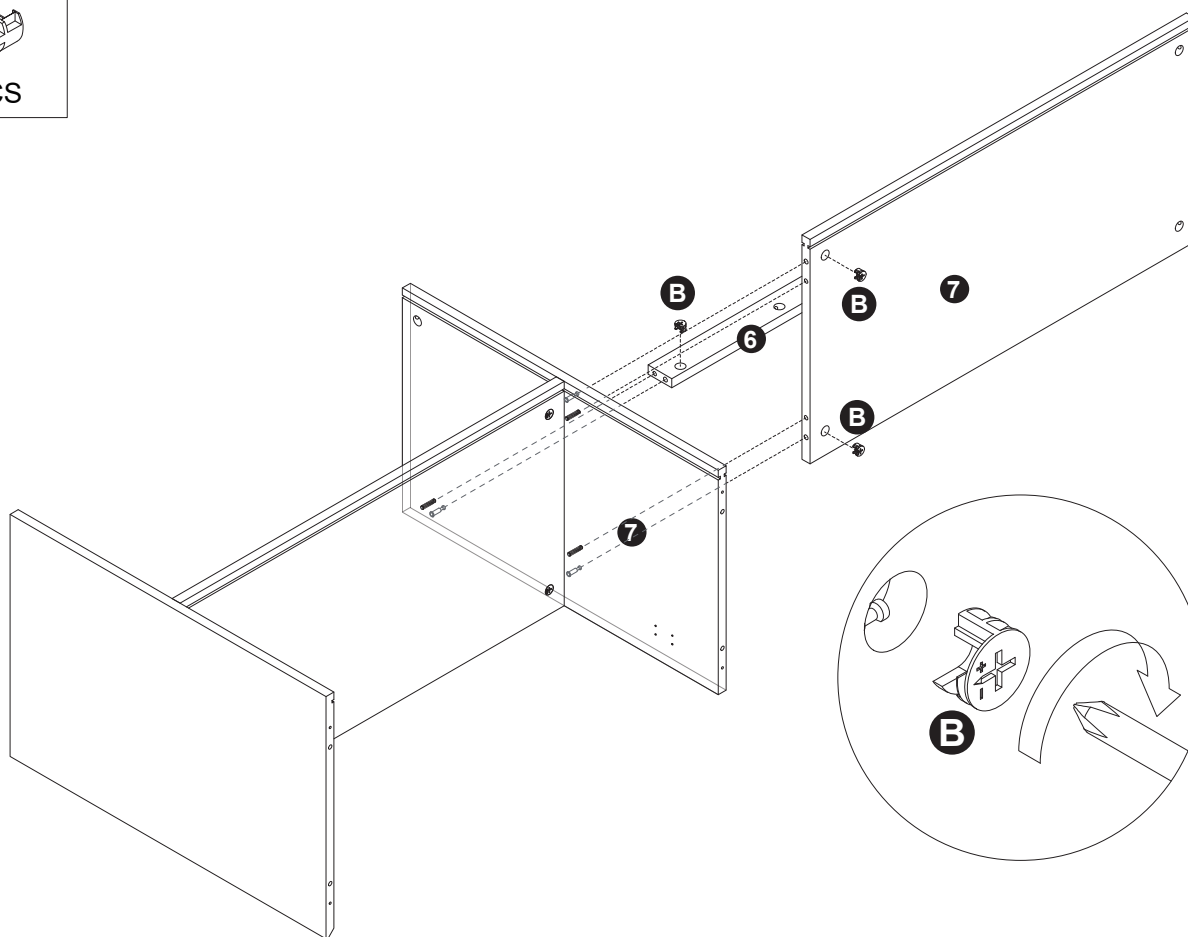

B
3PCS

D
3PCS

 
06

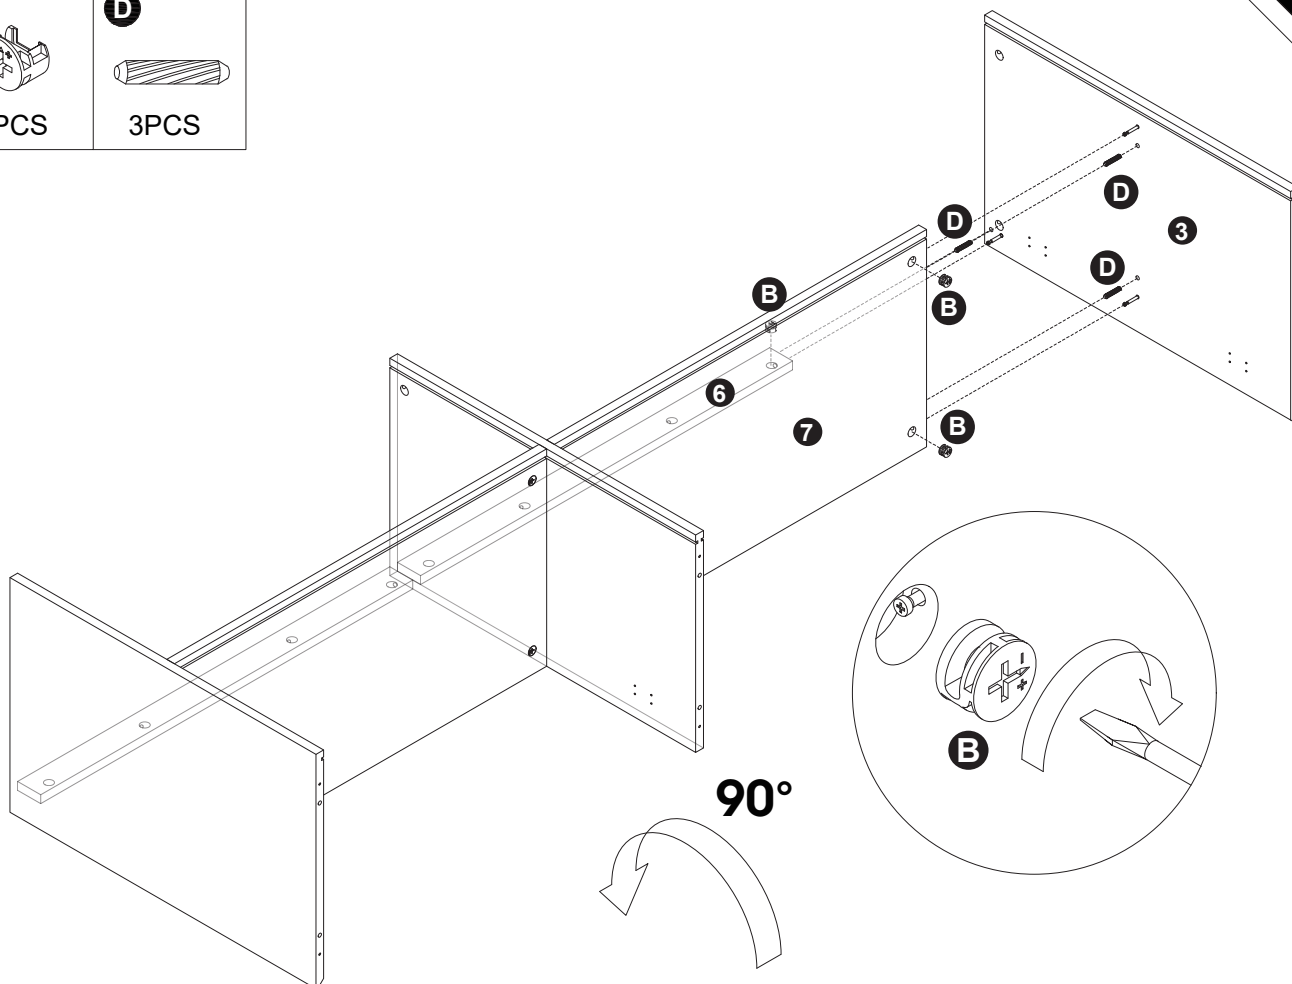


D



 
6PCS

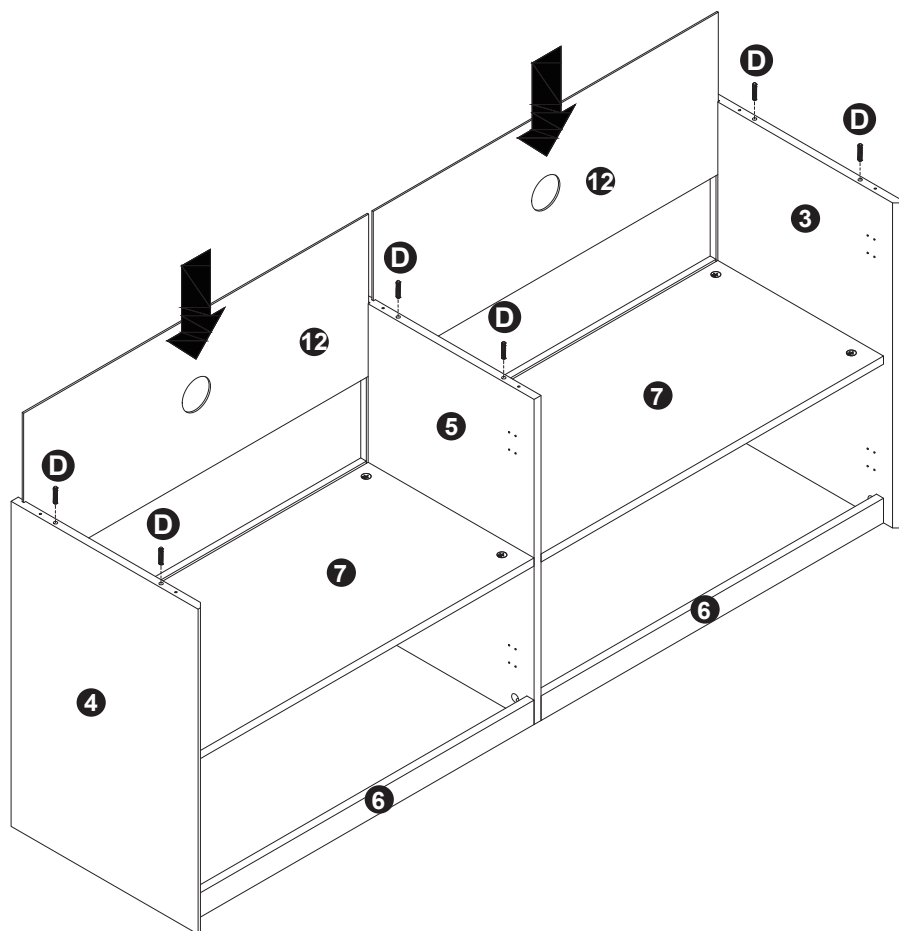


A


 


24PCS

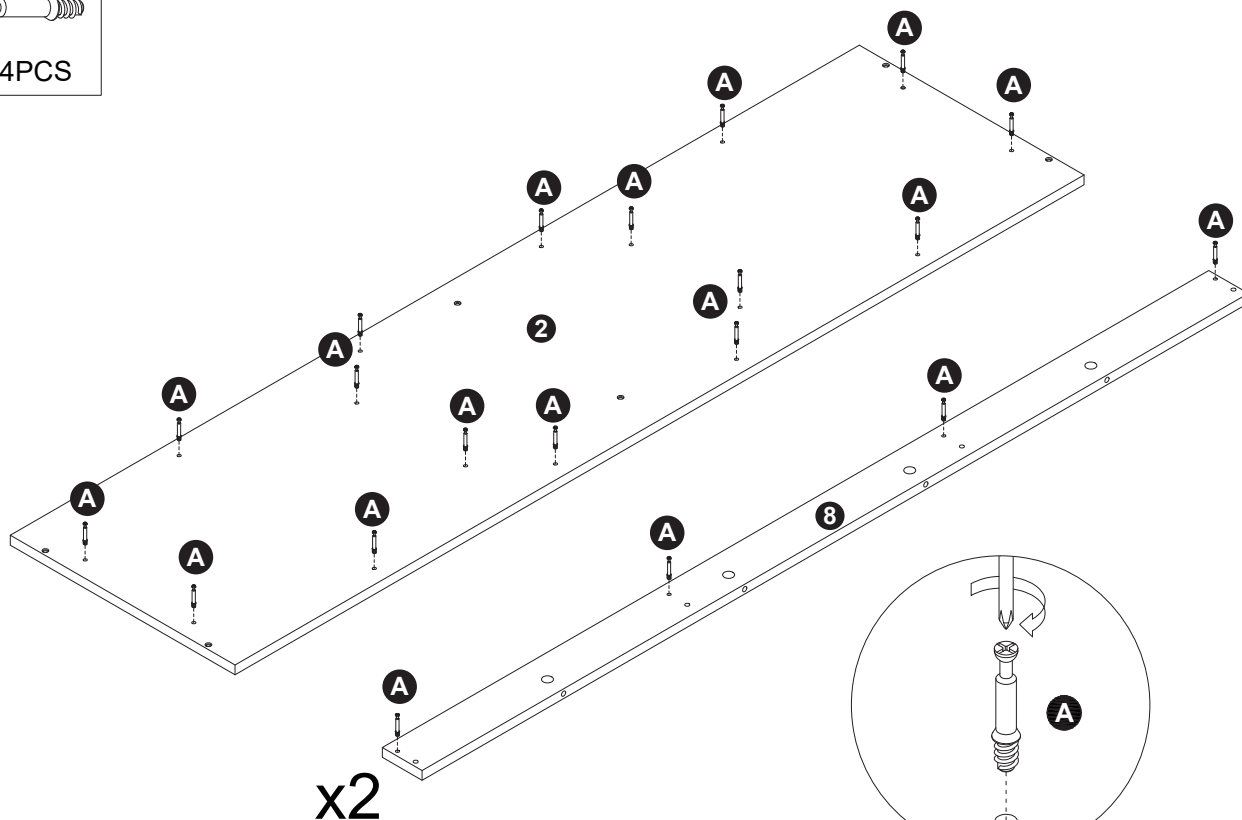 

 C

  6PCS

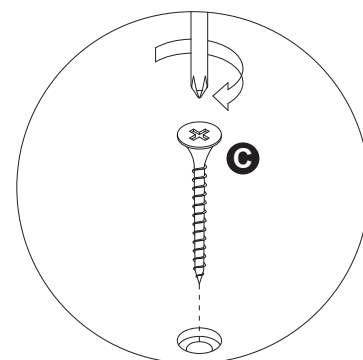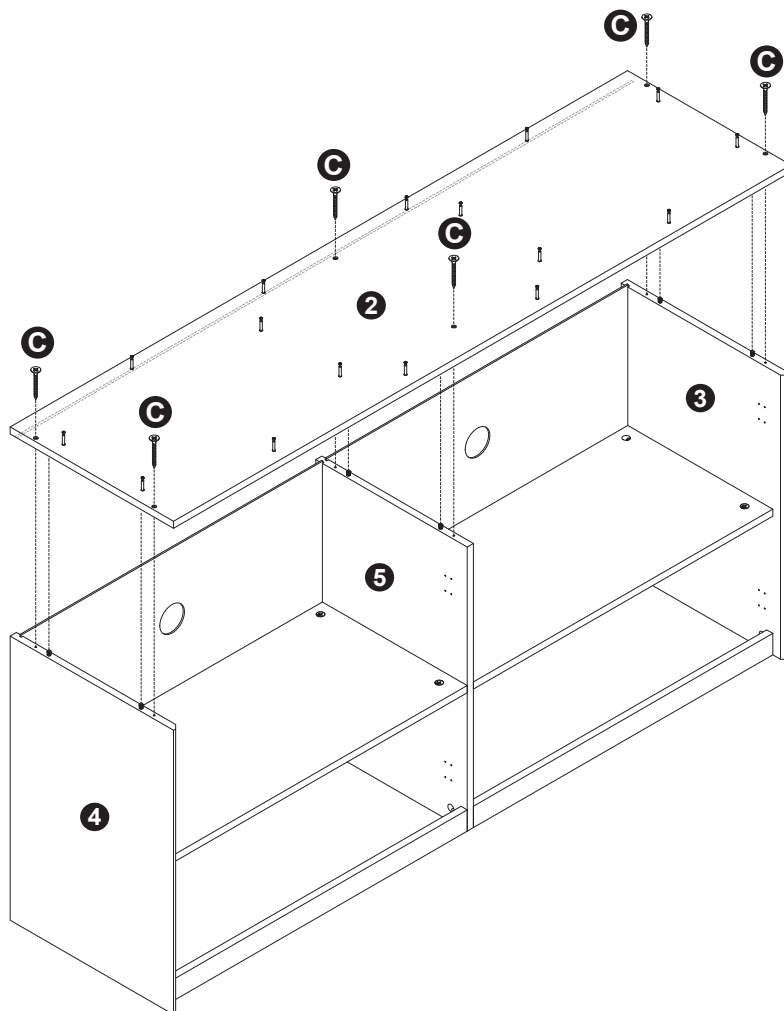09



 
 
B

 
8PCS

D

8PCS



10

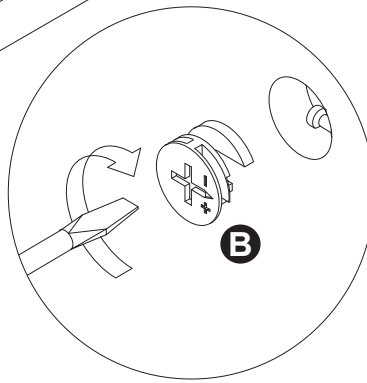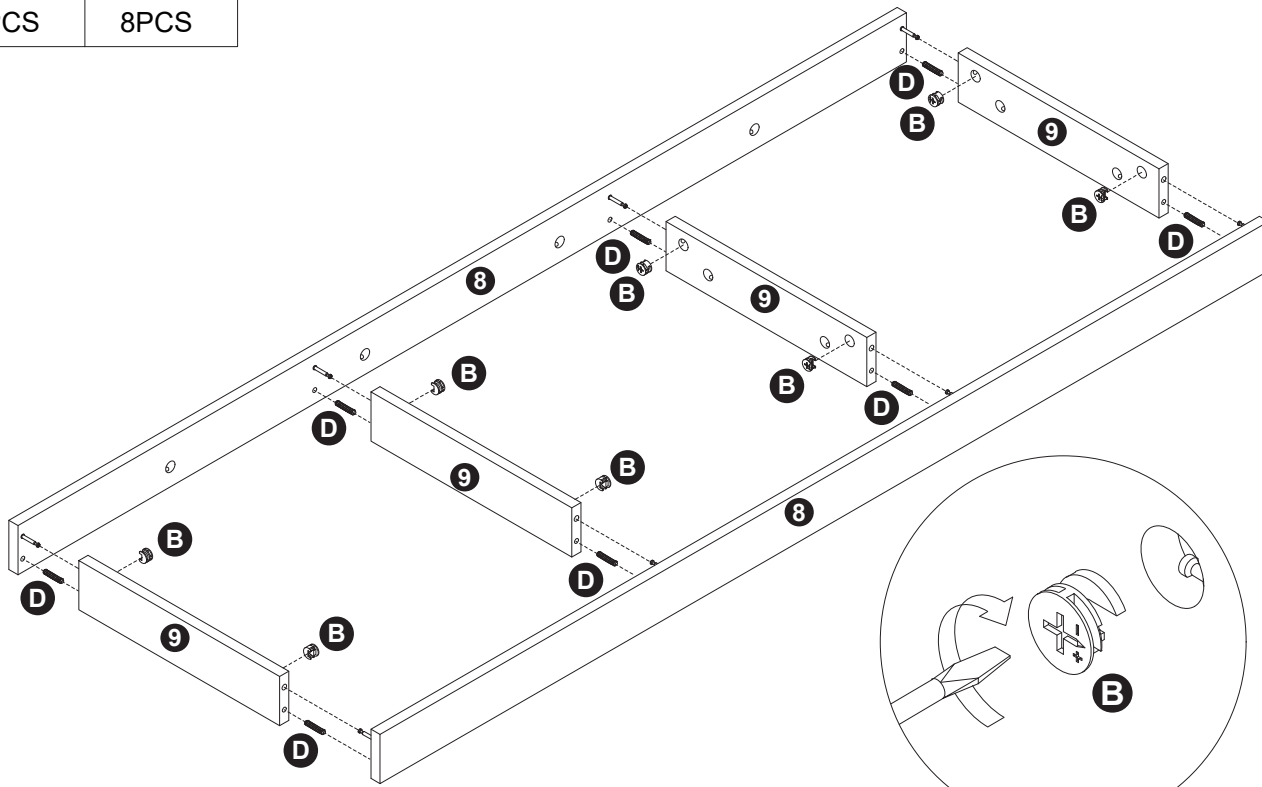




16PCS

  11

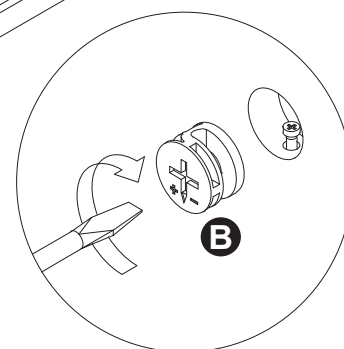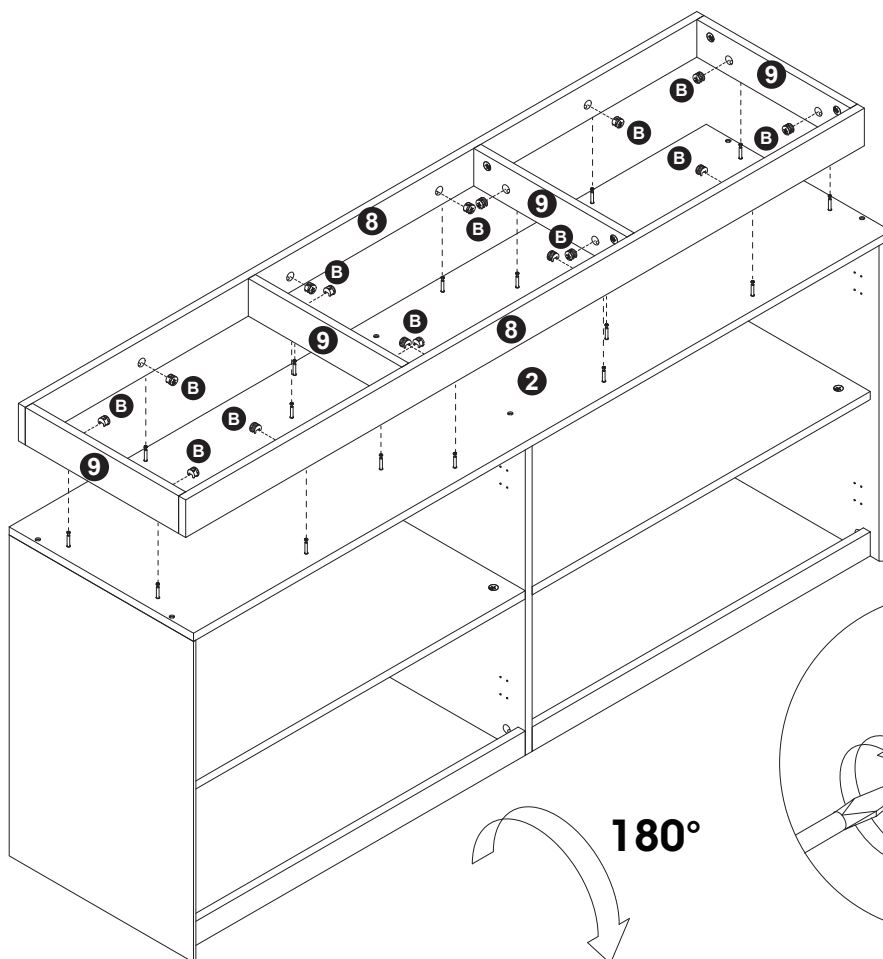




D

 



6PCS

    12

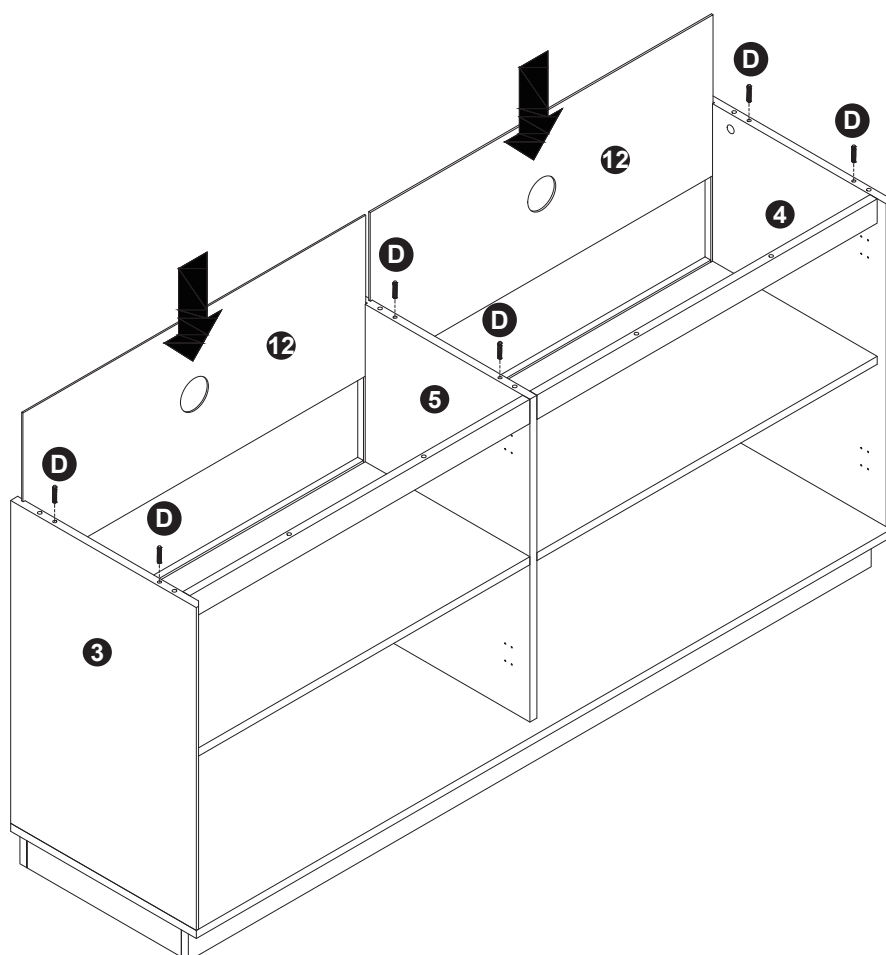




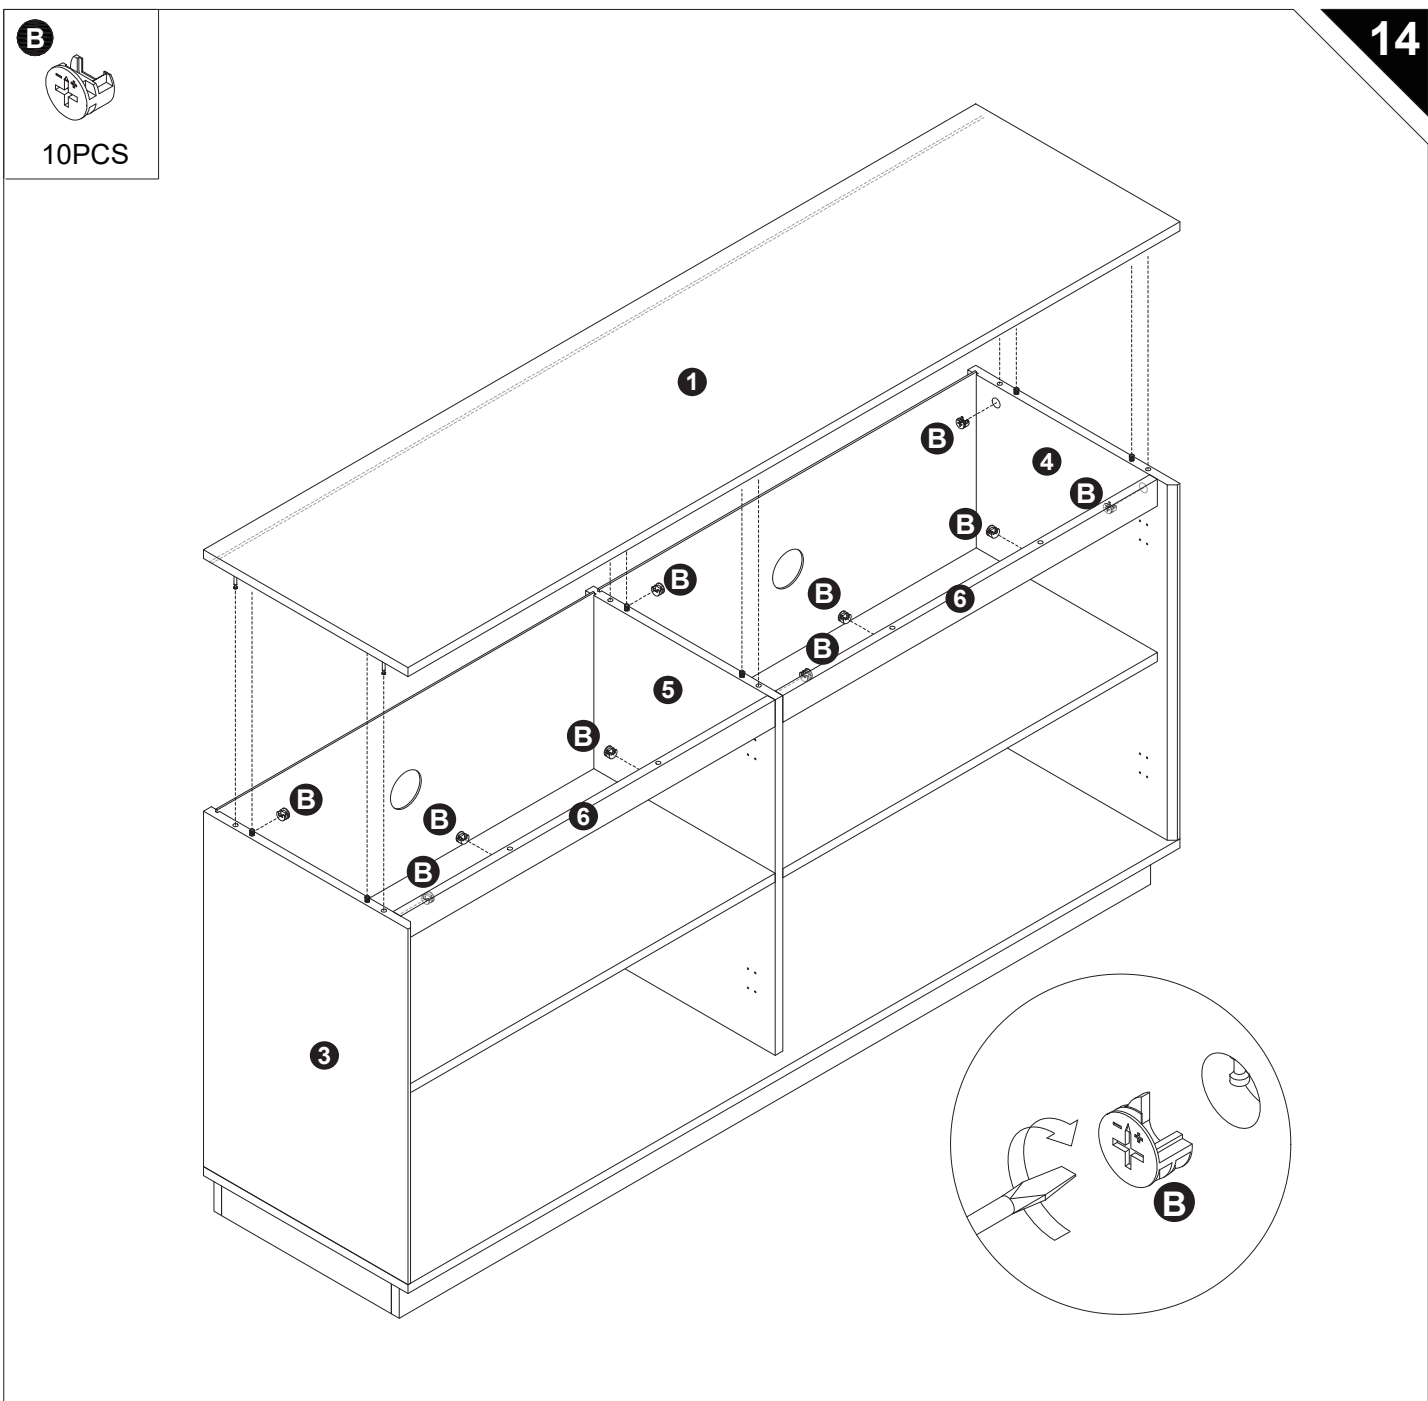
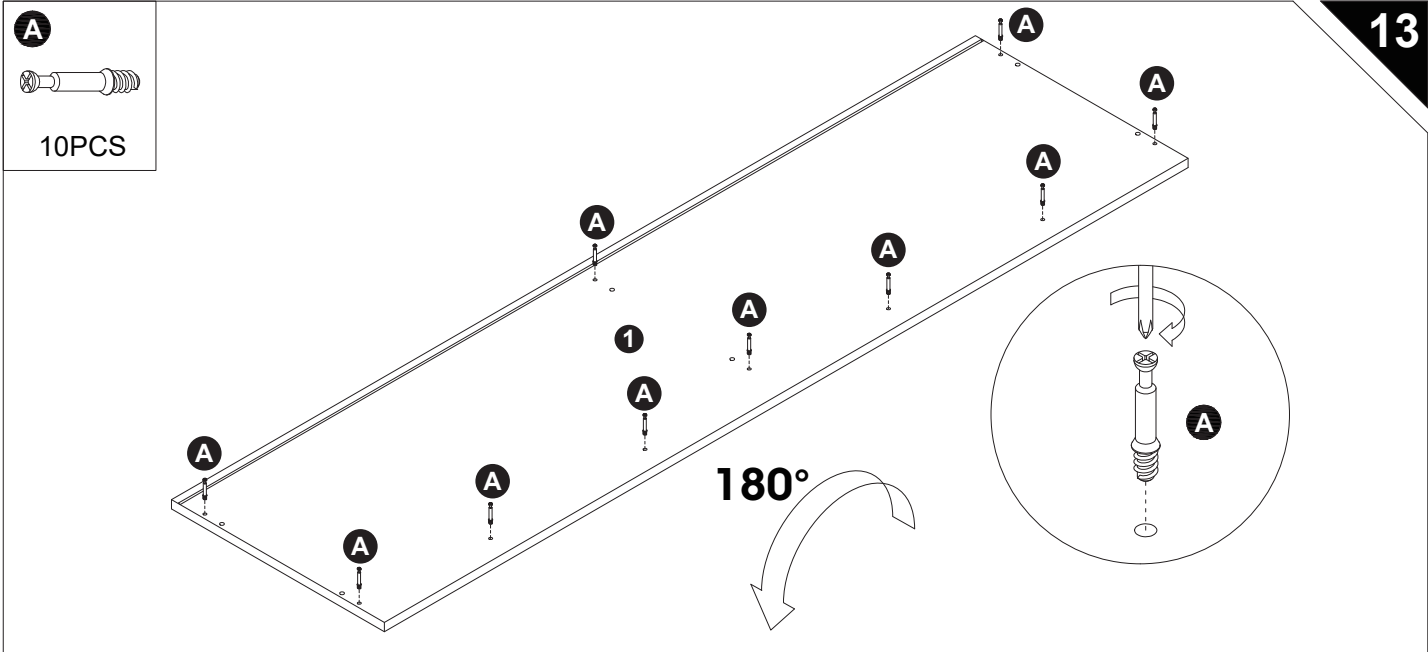







F  4PCS	O  4PCS	G  16PCS	I  8PCS	H  4PCS
--	---	--	---	---

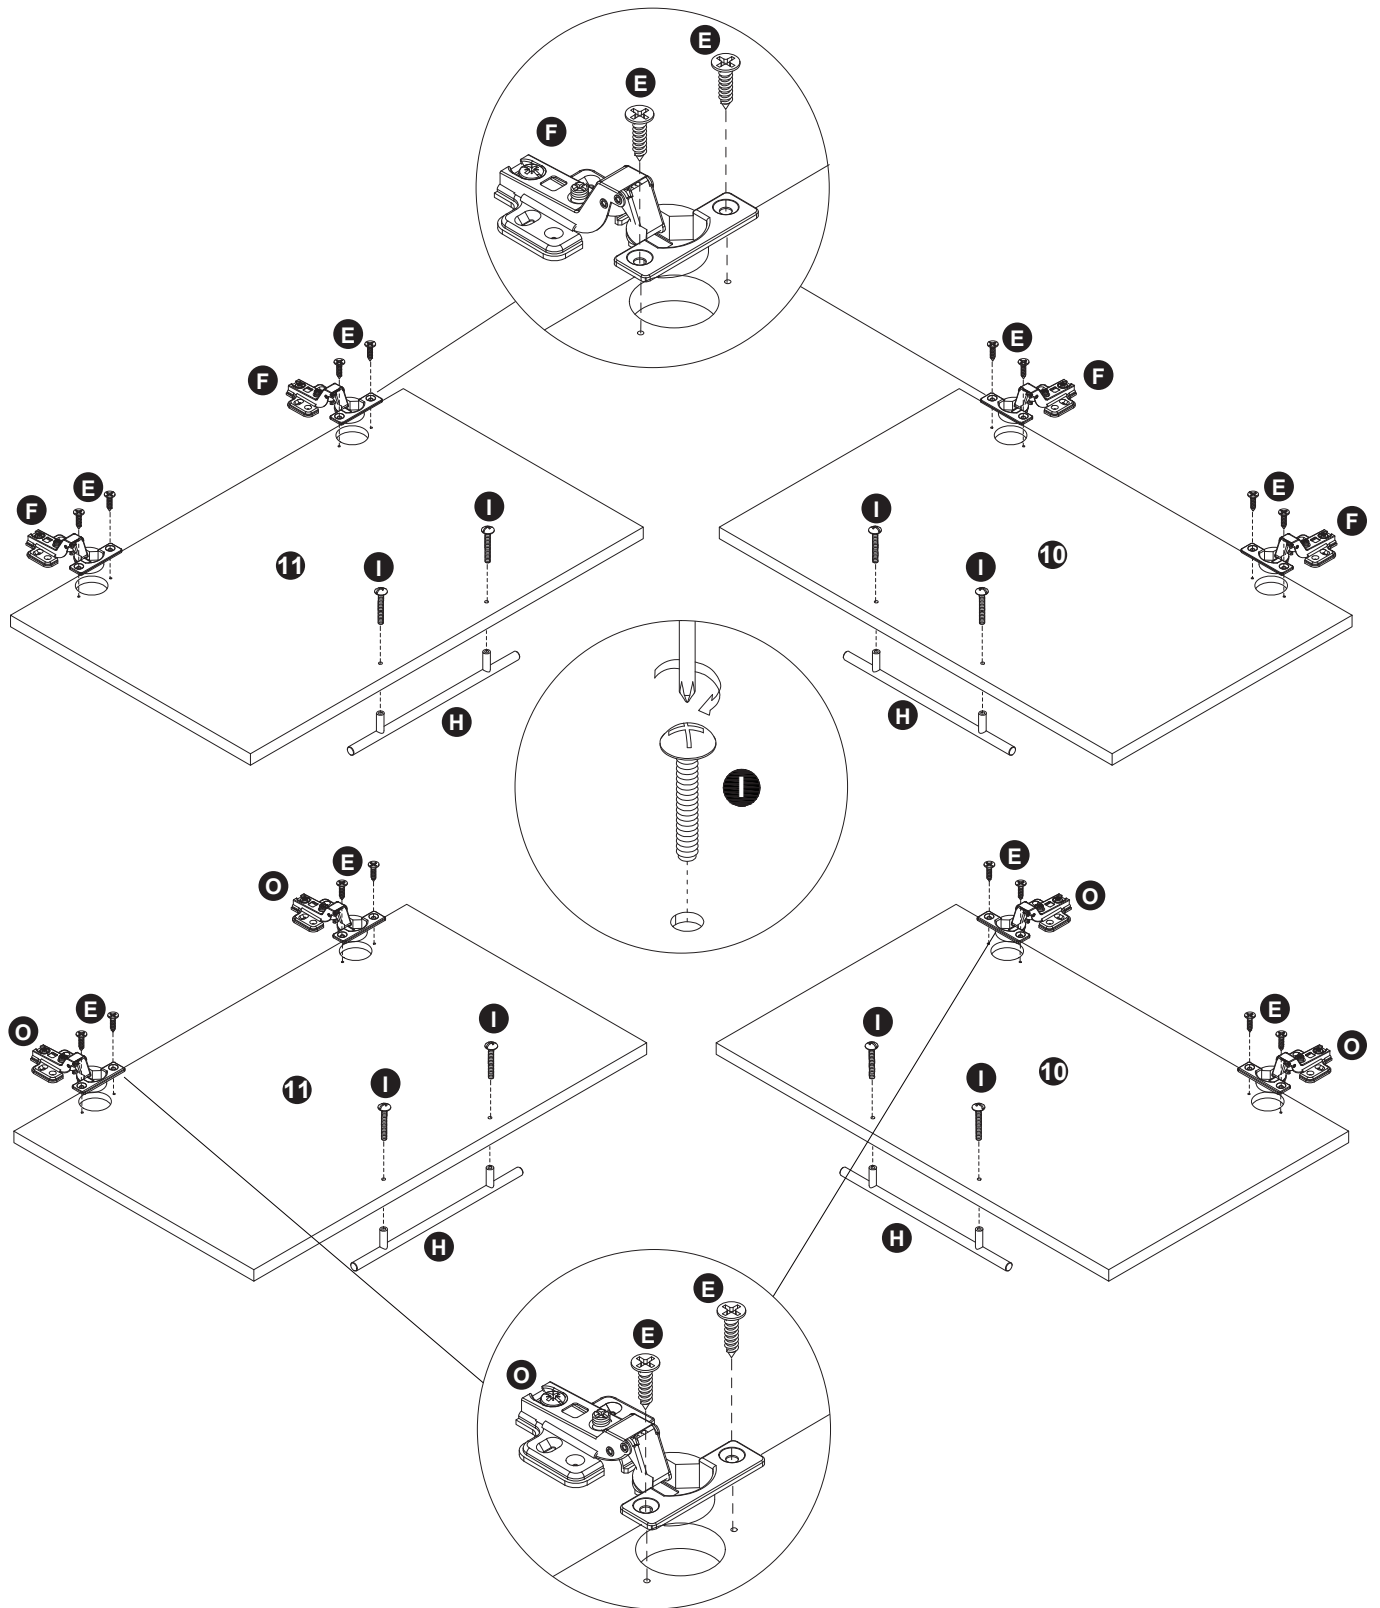 






G

     32PCS

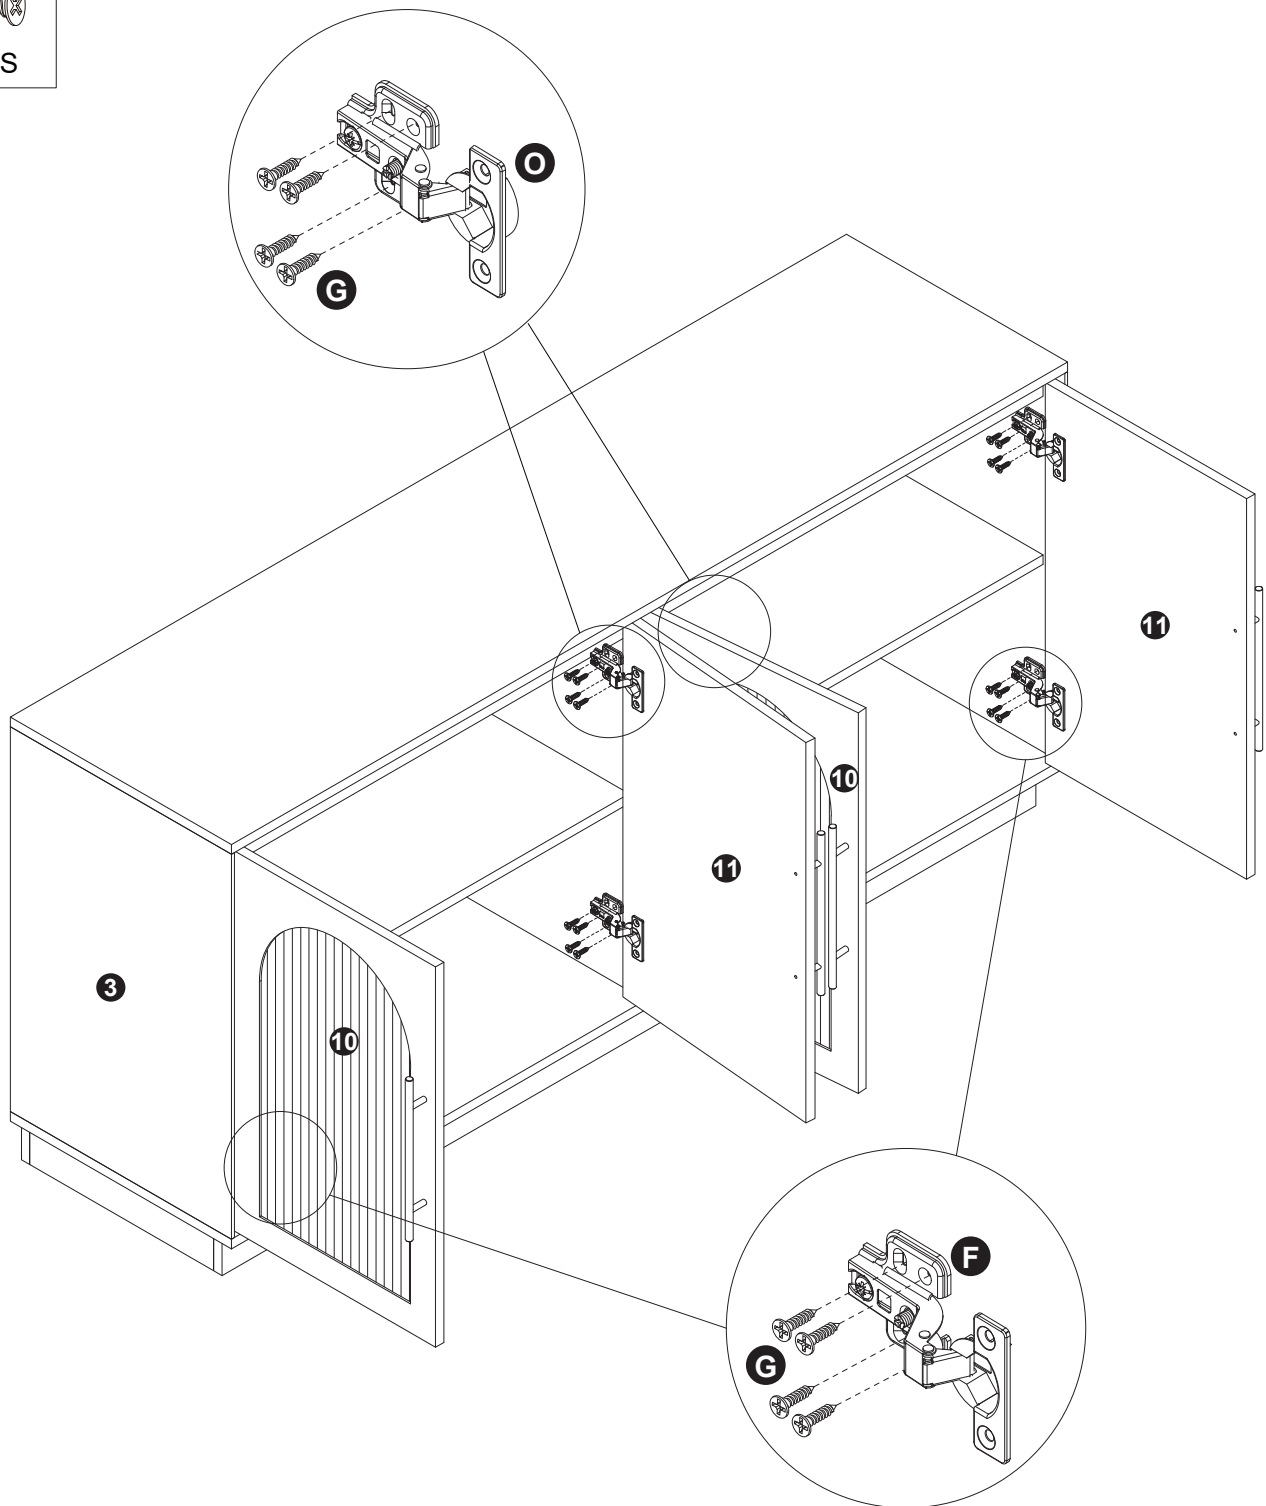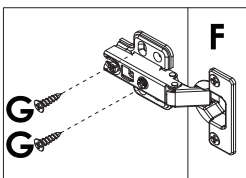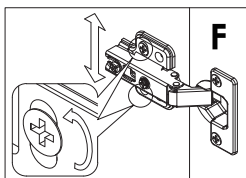
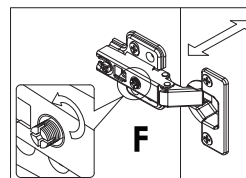
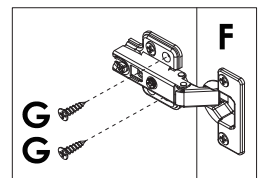
**step1****step2****step3****step4**

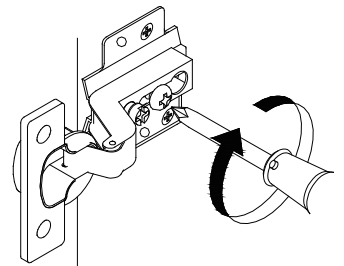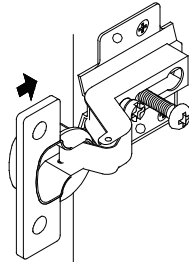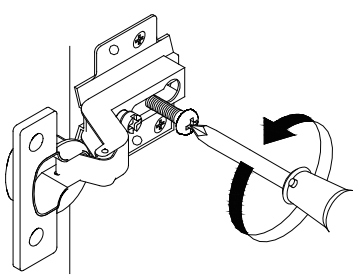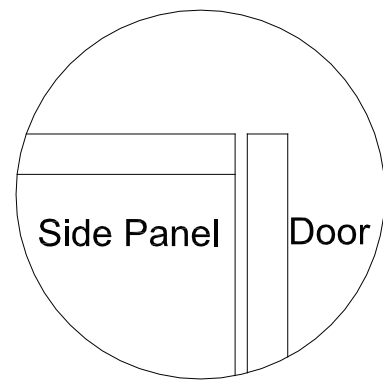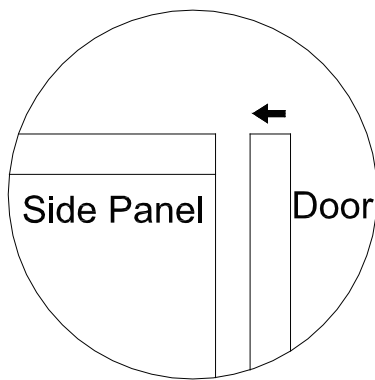     

   
 
 
If there is gap between the side panel and the door, loosen the screw at the back of the hinge as shown, then move the hinge in or out until the desired gap is achieved, and then re-tighten the back screw.

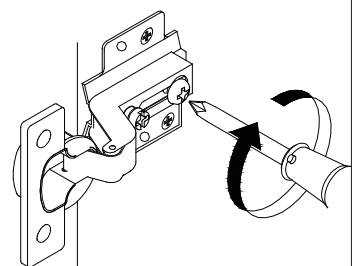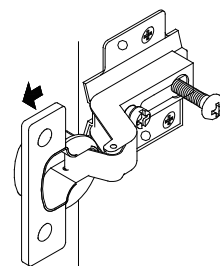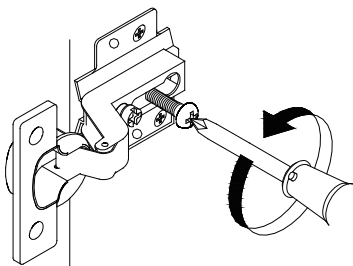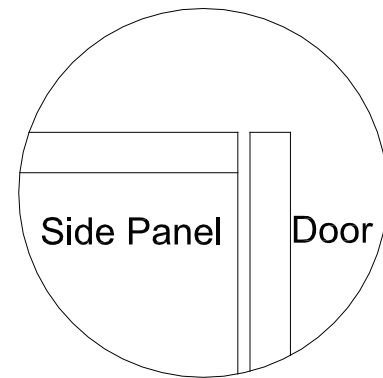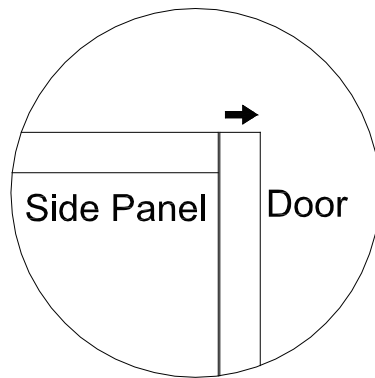

   If there is gap between the side panel and the door, loosen the screw at the back of the hinge as shown, then move the hinge in or out until the desired gap is achieved, and then re-tighten the back screw as shown.





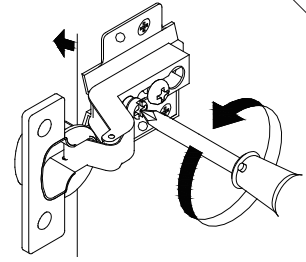
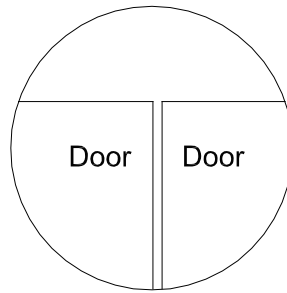
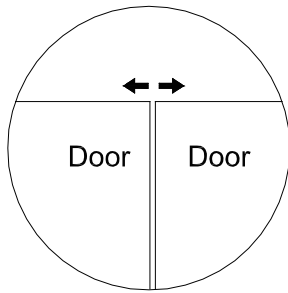


   If the gap is too tight between the two doors, loosen the screw at the front of the hinge as shown to make the adjustment and then re-tighten the screw.

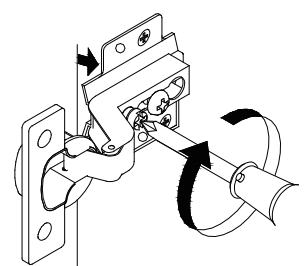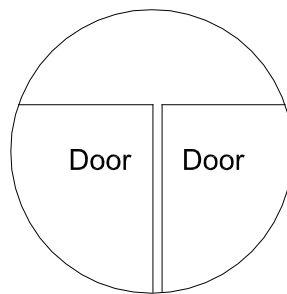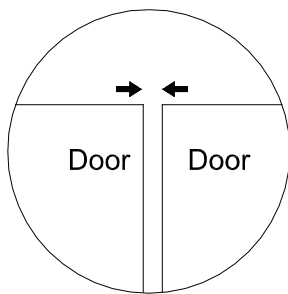

If the gap is too tight between the two doors, loosen the screw at the front of the hinge as shown to make the adjustment and then re-tighten the screw.


G		16 pcs
	3.5x14mm	

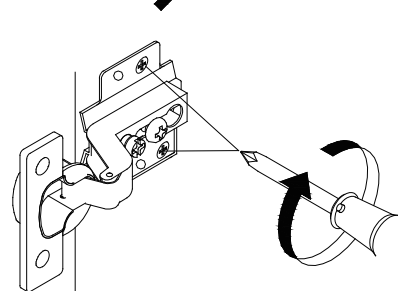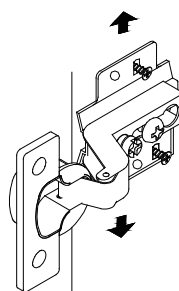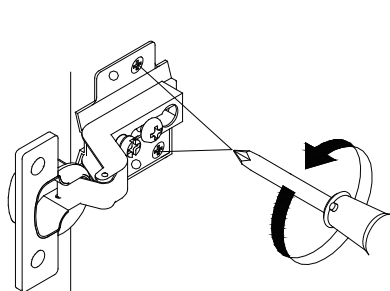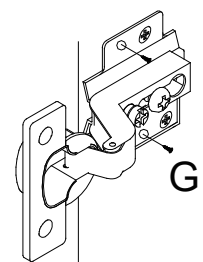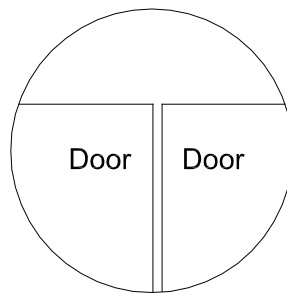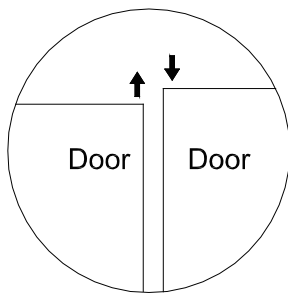       

- If the doors are not leveled with each other, loosen the screws (installed on STEP 14) at the Panel Wing of the hinge, then adjust the hinge up or down until the desired level or when both doors are leveled, and then re-tighten the screws.
- When all the desired positions are in place, use the remaining Sixteen Screw (G) to fasten the Wing Panel using the front two screw holes on Panel Wing.


The assembly of the Cabinet is complete.

K  16PCS	E  18PCS	M  2PCS
--	--	---




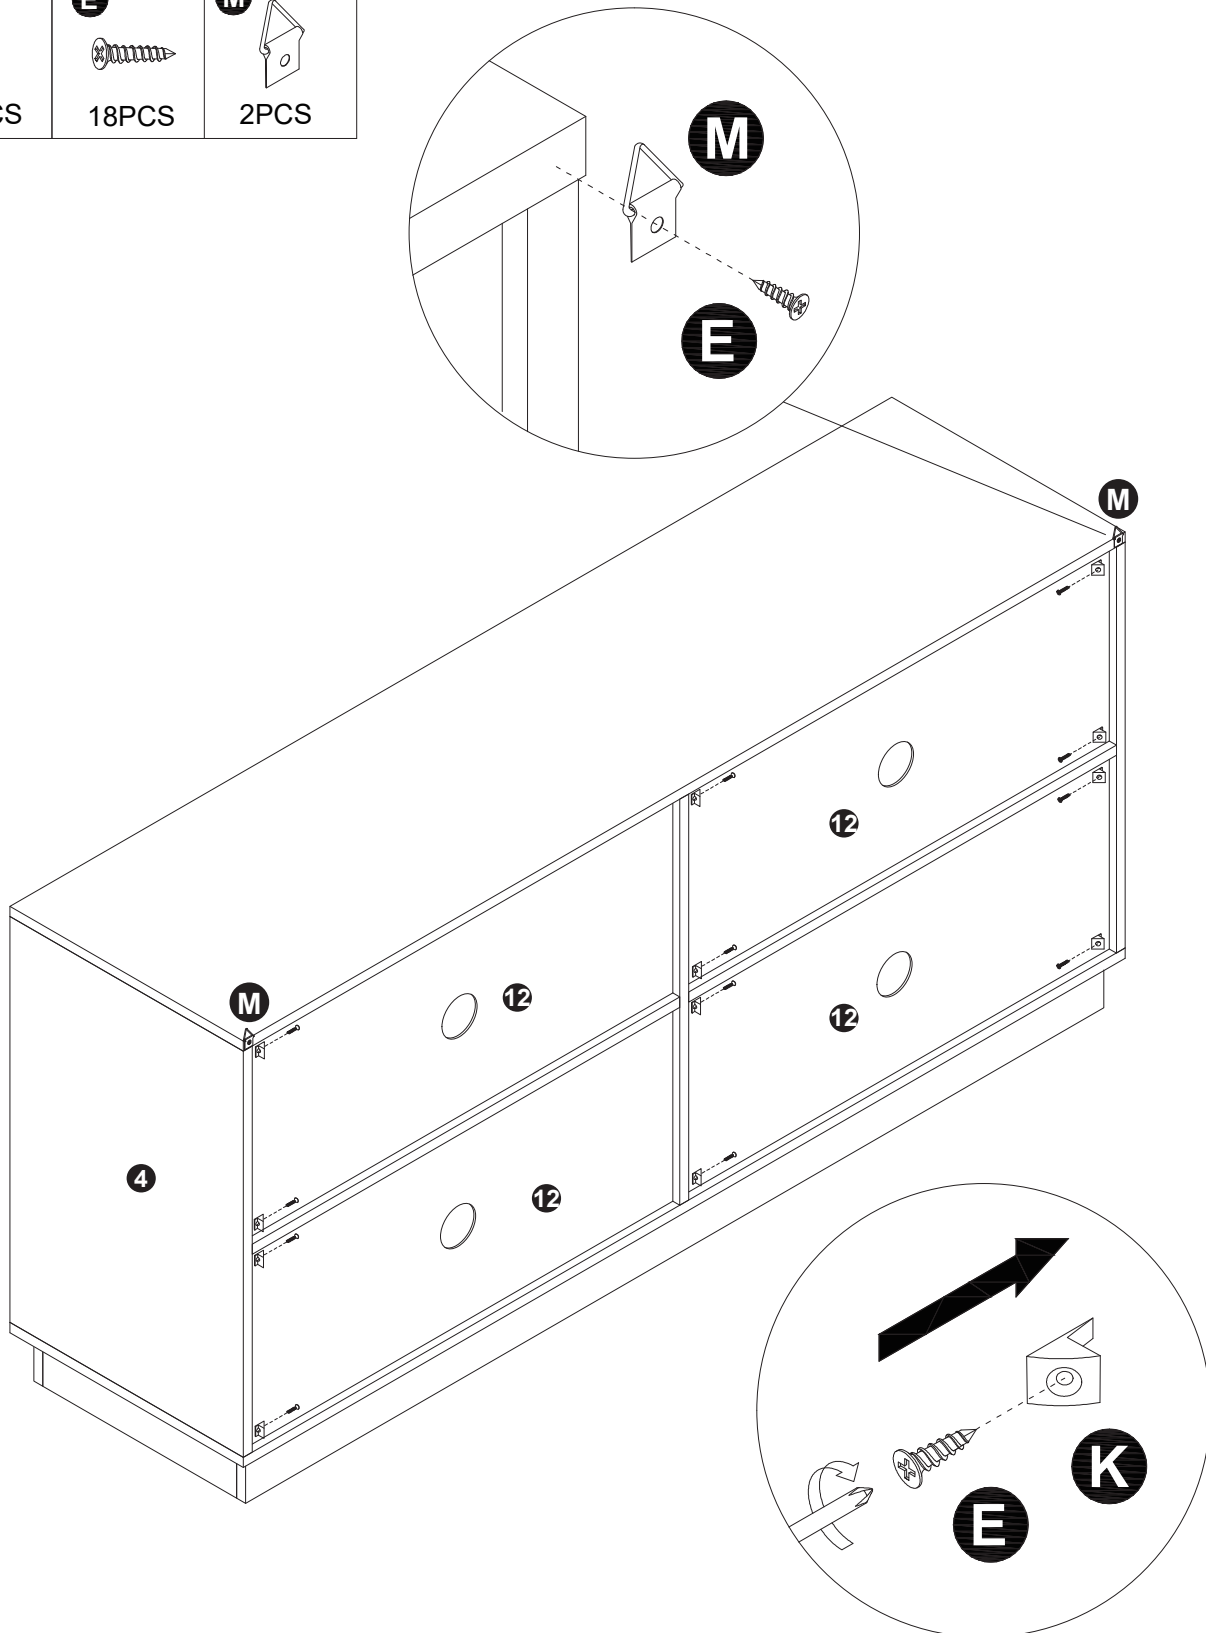 


NOTICE:

 To prevent the cabinet from wobbling, please refer to the manual to secure accessories E and K to the back panel of the product.

C  2PCS	L  2PCS	M  2PCS
---	---	---

    WALL

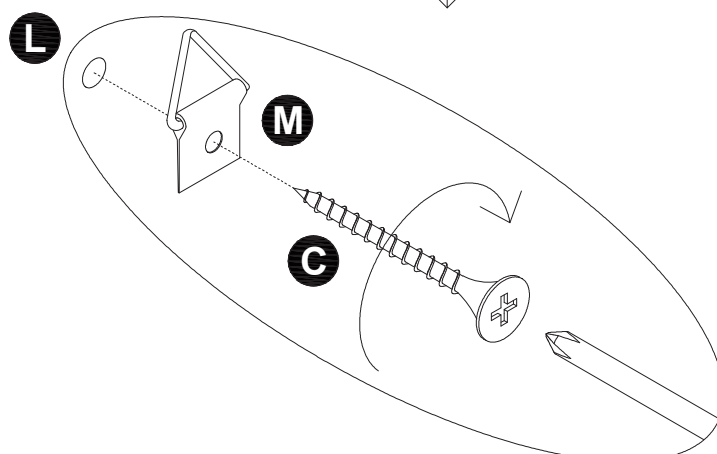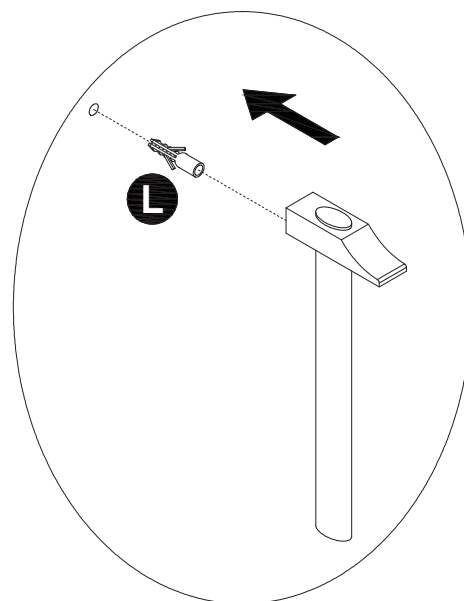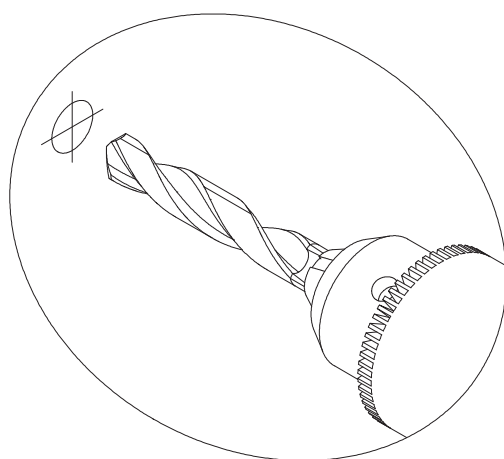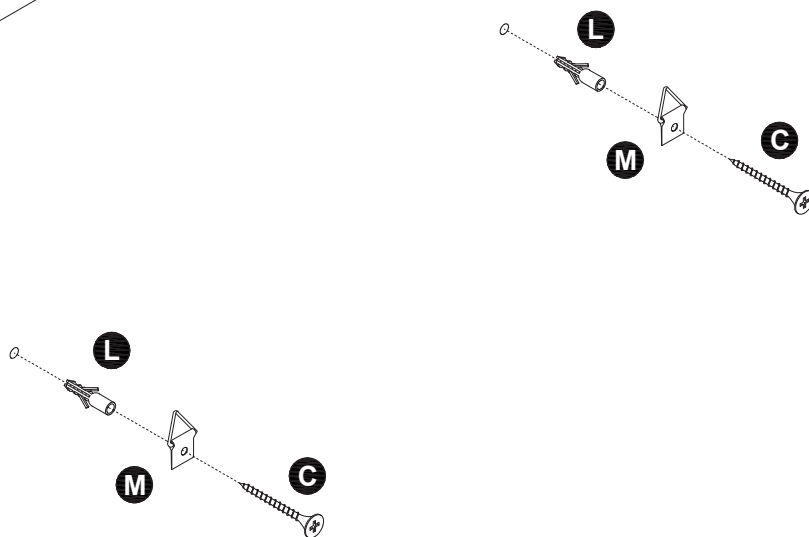

N



2PCS

WALL

N

N

