



Wakeman 2 in 1 Tent LED Camping Ceiling Fan

Installing Batteries:



1. Turn the handle counter clockwise
2. Push in on the battery compartment release tab
3. Insert 2 "D" Batteries (Not included) as indicated inside the battery compartment
4. Close the battery compartment and replace the handle. Turn clockwise.

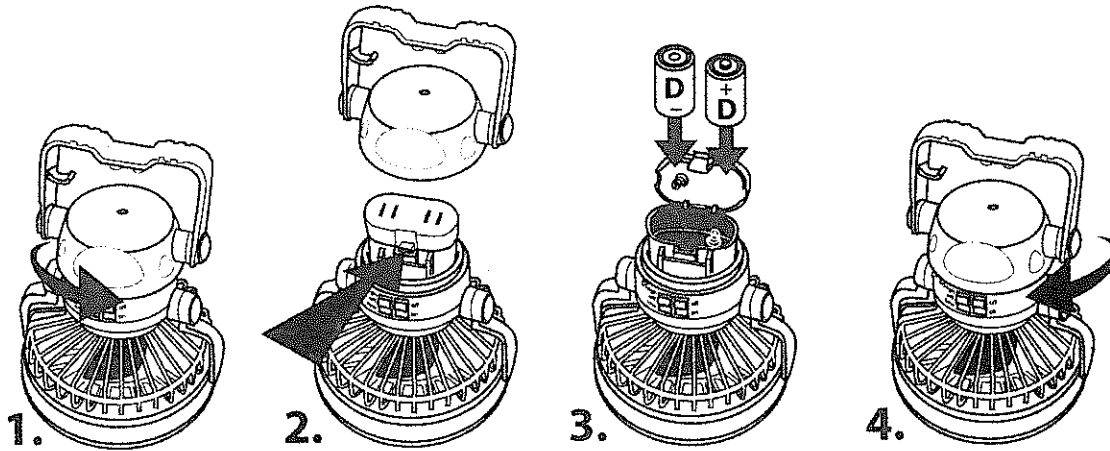


Hi or Low fan settings

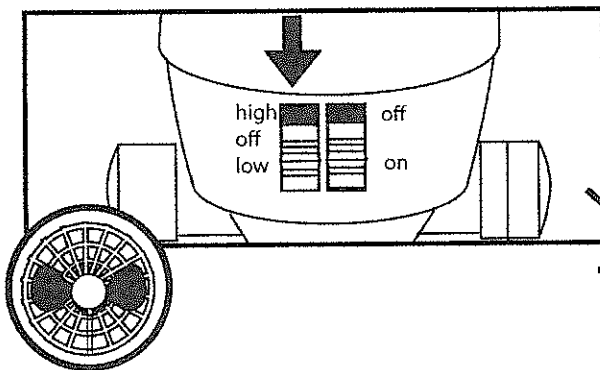

Easy On/Off light switch

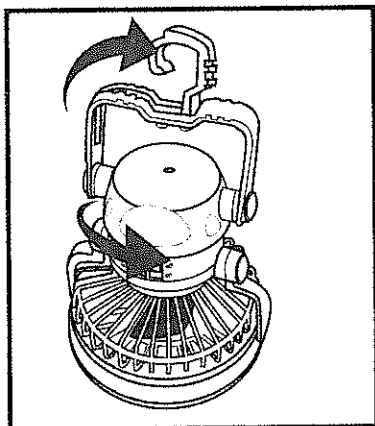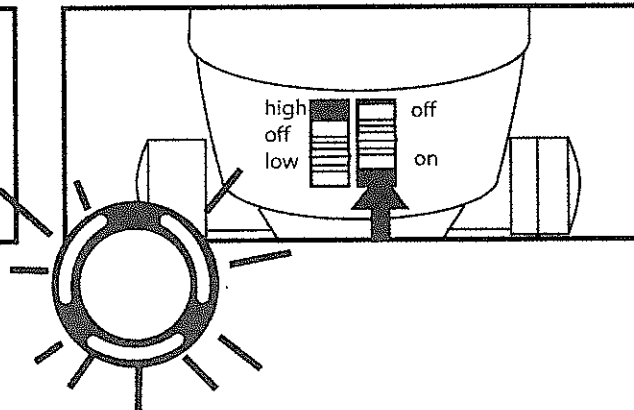

Hinged hook for hanging

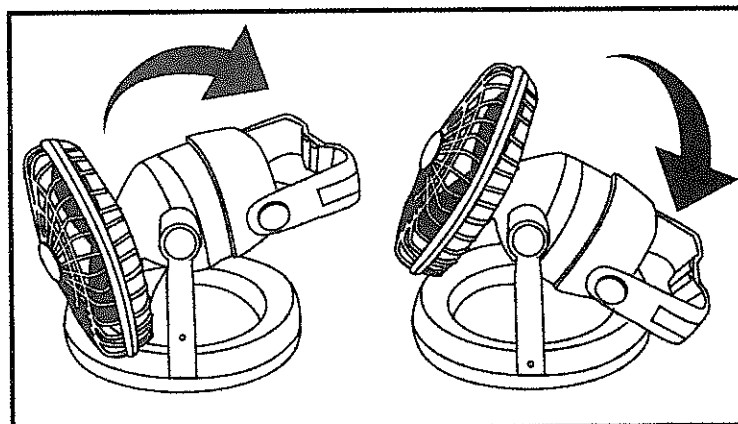

Adjustable fan head

Made in China