


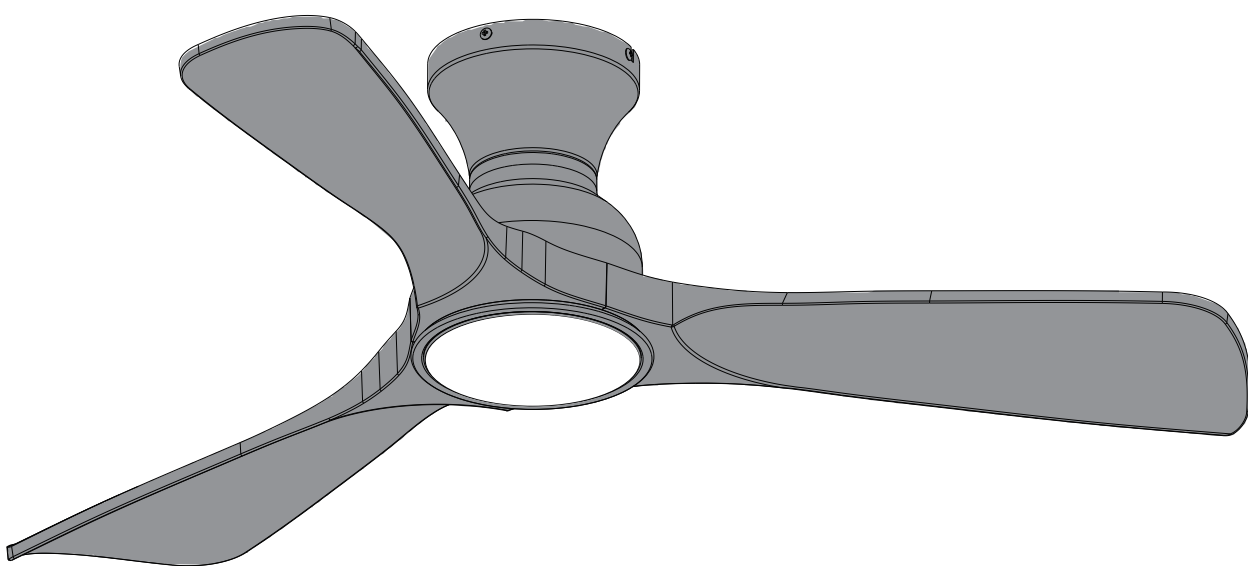

Ceiling Fan


Installation Instruction



SAFETY INFORMATION

Please read all safety information and instructions before installing the ceiling fan and save this manual for future reference.

SAFETY INFORMATION	01
PRE-INSTALLATION	02
INSTALLATION INSTRUCTION	04
OPERATION INSTRUCTION	07
TROUBLESHOOTING	08

 


SAFETY INFORMATION



WARNING

- Before connecting the power supply, make sure that the power supply used matches the specifications of the ceiling fan.
- All wiring must comply with national and local electrical codes ANSI/NFPA70. If you are not familiar with wiring, please use a qualified electrician.
- To reduce the risk of fire or electric shock, turn off the power to the fuse box or circuit breaker before installing the fan.
- To reduce the risk of personal injury, attach the fan directly to the building's support structure and ensure that it can accept at least 35 pounds (15.9 kg).
- Make sure that the installation location allows the fan blades to rotate without obstacles.

Installation Location

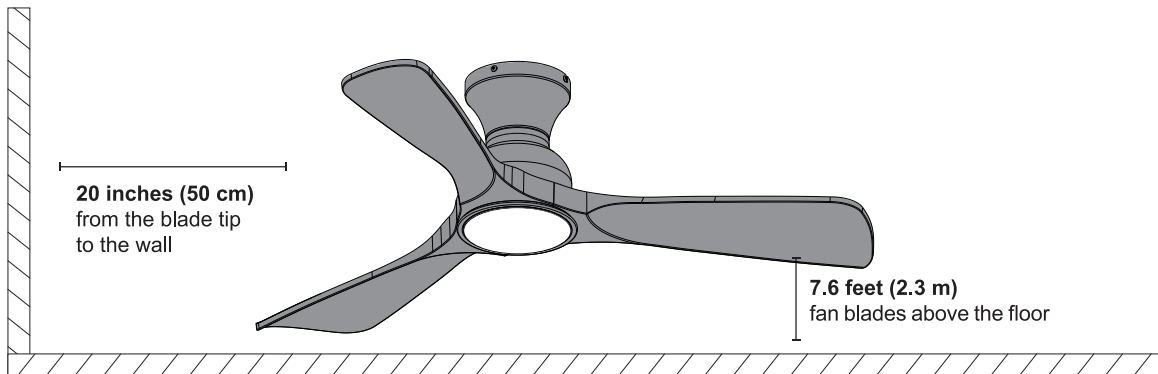

WARNING


- Do not operate this fan with a variable (Rheostat) wall controller or dimmer switch.
- Doing so could result in damage to the ceiling fan's remote control unit.

PRE-INSTALLATION


Tools Required (Not Included)



Power Drill

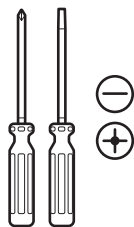


Screwdriver

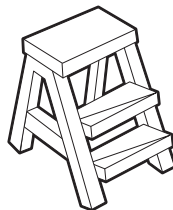


Step Ladder



Wire Stripper

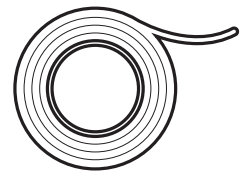

Electrical Tape

 

Parts List



Mounting bracket &
Canopy X 1



Light Kit X 1



Motor X 1



Fan Blade X 3



Blade Screw X 6




Blade screw gasket X 3



Self-tapping Screw X 4



Expansion Bolt X 2

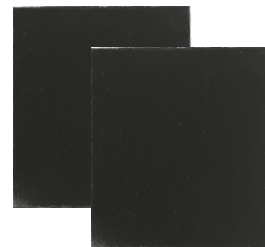


Balance Kit X 2




Wire Caps Screw Terminals X 3



Remote Control X 1

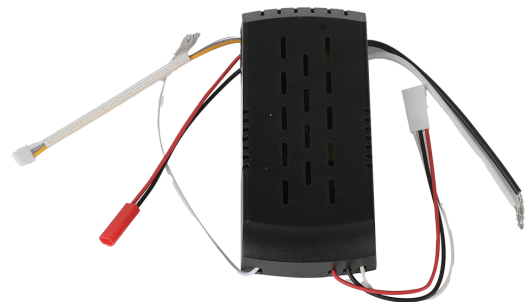

Receiver X 1

 

INSTALLATION INSTRUCTION

Step 1 : Ceiling Canopy Installation.



- ❶ Remove the screws on the ceiling canopy and take out the Mounting bracket.



- ❷ Remove the 3 big-head screws on the motor.



- ❸ Pass the motor wires through the central hole of the ceiling canopy, and fasten the ceiling canopy to the motor with the 3 big-head screws just removed.

Step 2: Fan Blade Installation



- ❶ Place the fan blade on top of the motor, align the holes and tighten the screws



 
- ❷ Install the three fan blades.




- ❸ Loosen the three screws on the light kit mounting plate.

Note:

- The fan blade needs to be aligned with the "center" position of the screw hole group.
- Do not lock the screws when installing the blades and then tighten all the screws after all the fan blades are installed.



Step 3: Installation of LED Board

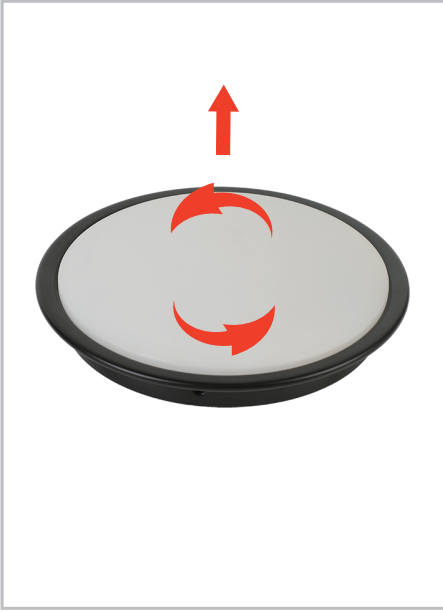

③ Remove the shade of light kit.




④ Connect the motor line and the lamp panel line



⑤ Thread the motor line through the LED board, then align the LED board with the triangular cover on the motor and put it on.

Step 4: Wiring Instruction

⚠ Shut off the power to the fuse box or circuit breaker before wiring.

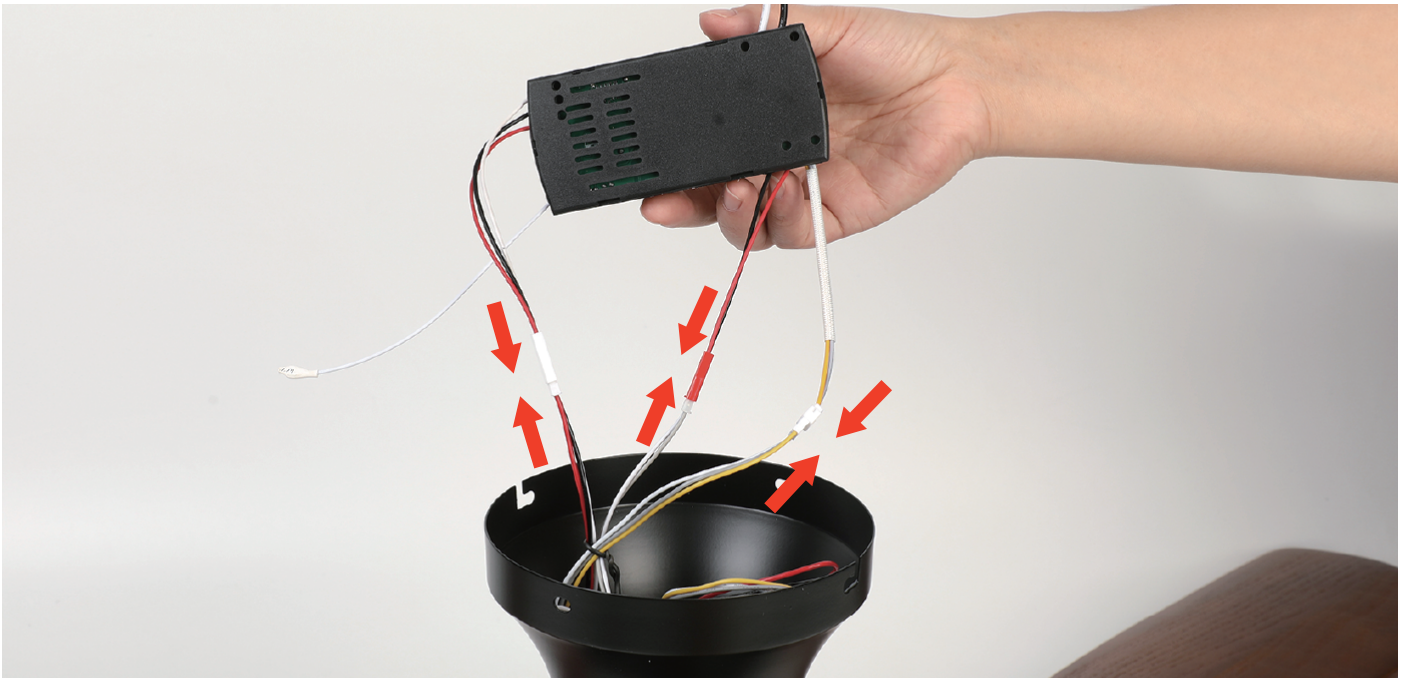

① The receiver is connected to the motor power cord and the ceiling power cord respectively.

Note:

Connect wires color to color, plug to plug.



 
Live Wire





Neutral Wire




Ground Wire




Step 5: Mounting Bracket Installation

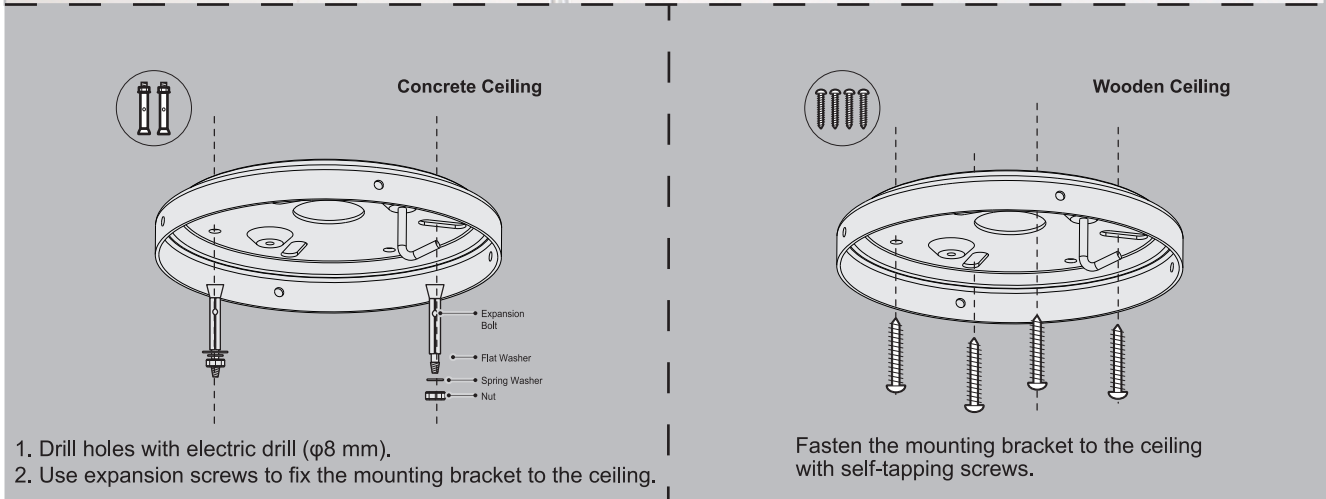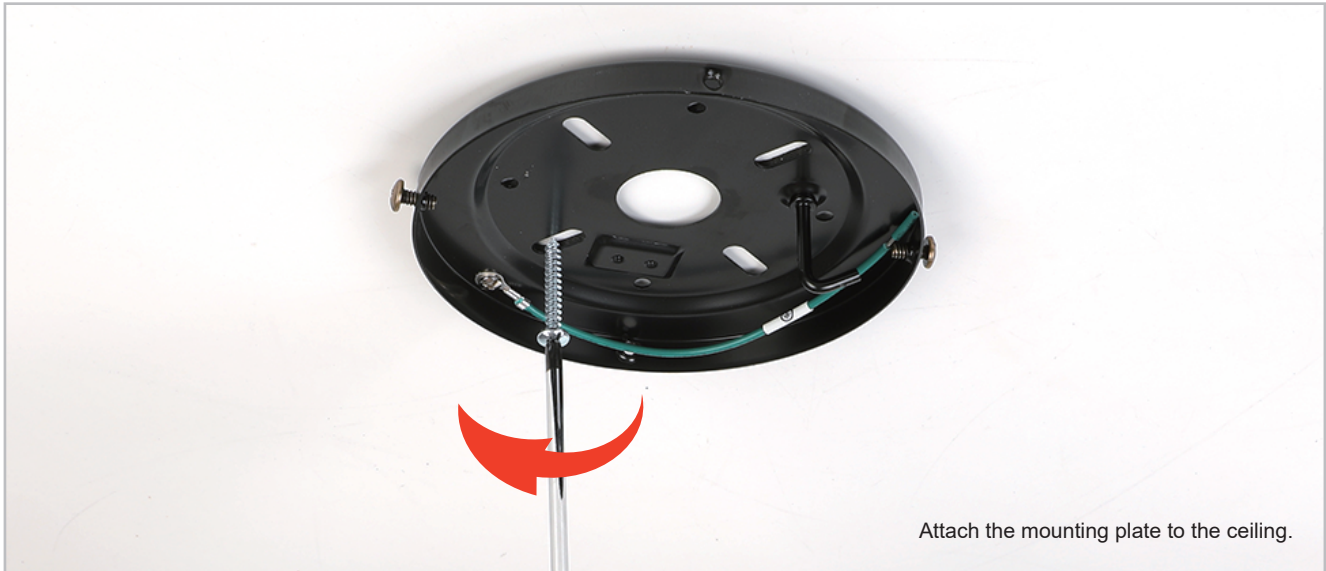

Step 6: Install the Lampshade

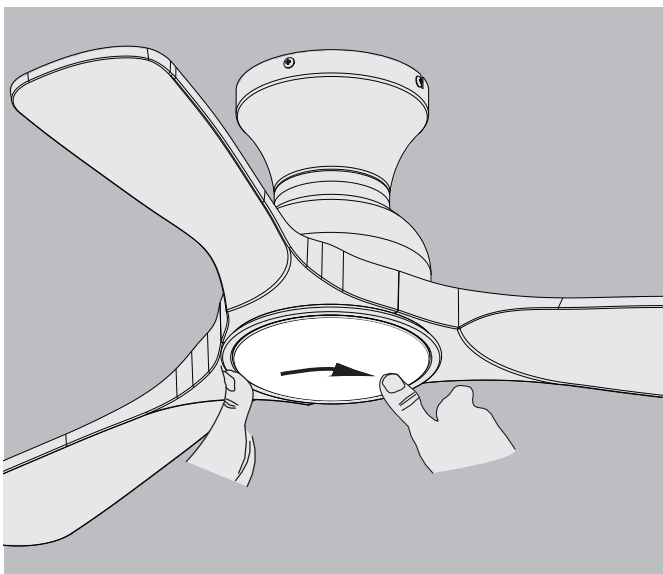


 Hang the assembled luminaire unit on the hook of the mounting plate, connect the neutral wire, live wire and ground wire, then tighten the 4 mounting plate screws on the side.




OPERATION INSTRUCTION


Control Method

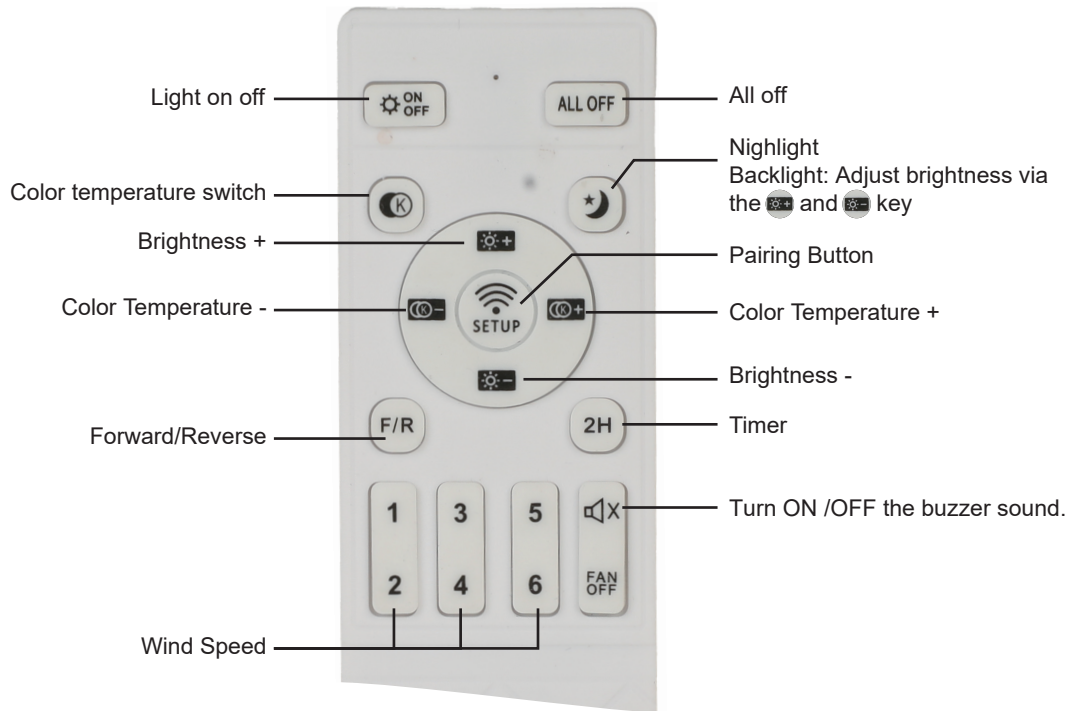

Reversible Function

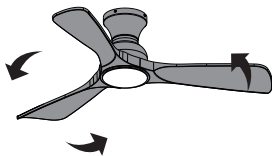

Summer (Forward):
A downward airflow creates a cooling effect.

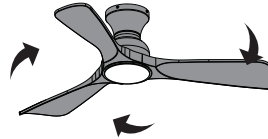


Winter (Reverse):
An upward airflow increases the indoor temperature.

PS: If you want to change the fan's rotation direction, please press the button while the fan is running.

If remote control no function, please match code as below:

When the lamp is powered on, quickly press the [SETUP] key within 5 seconds. The light flash, means the code matching is successful.

 Otherwise, turn off the main power supply of the lamp and then reoperate this step until the light flashe and the code matching is successful.



Troubleshooting

Warning: For your own safety turn off power at fuse box or circuit breaker before troubleshooting your fan.

TROUBLE	Probable Cause	Suggested Remedy
FAN AND LIGHT DO NOT WORK BUT WIRES CONNECTED WELL	The AC power from wall controller or dimmer switch.	Do not operate this fan with a variable (Rheostat)wall controller or dimmer switch. Choose the switch as this introduction showed.
FAN WILL NOT START	1.Fuse or circuit breaker blown. 2.Loose power line connections to the fan, or loose switch wire connections in the switch housing. 3.Reversing switch in neutral position. 4. Dead battery in remote control.	1.Check main and branch circuit fuses or circuit breakers. 2.Check line wire connections to fan and switch wire connections in the switch housings. CAUTION: Make sure main power is turned off ! 3.Make sure reversing switch position is all the way to one side. 4.Replace with new battery.
FAN SOUNDS NOISY	1.Loose screws in motor housing. 2.Wire connectors inside housing rattling. 3.Motor noise caused by solid state variable speed control.	1.Check to make sure all screws in motor housing are snug (do not overtighten). 2. Check to make sure wire connectors in switch housing are not rattling against each other or against the interior wall of the switch housing. CAUTION: Make sure main power is turned off ! 3.Some fan motors are sensitive to signals from solid-state variable speed controls. Solid-state controls are not recommended, choose an alternative control method.
FAN WOBBLER EXCESSIVELY	1.Set screw in downrod support is loose. 2.Set screw in downrod/hanger ball assembly is loose. 3.The groove hanger ball not lined up with the tab. 4.Hanger bracket and/or ceiling outlet box is not securely fastened.	1.Tighten both set screws securely in downrod support. 2.Tighten the set screw in the downrod/hanger ball assembly. 3.Re-hanging the hanger ball secure the tab into the groove. 4.Tighten the hanger bracket screws to the outlet box, and secure outlet box.