

Hot Dog Grill Instruction Manual



Please read all
instructions carefully and
retain for future
reference.

Introduction

This Hot Dog Grill will enable you to cook up to four stadium style hot dogs in buns for all your family at home. Keep the kids happy with a quick and fun after school snack!

Getting Started

- Remove the appliance from the box.
- Remove any packaging from the product.
- Place the packaging inside the box and either store or dispose of safely.

In the Box

- Hot Dog Sausage Grill & Roll Warmer.
- Drip Tray.
- Warming Tray.
- 1 Instruction Manual.


Features

- 5 Heated Sausage Rollers.
- Roller On/Off Switch.
- Drip Tray.
- Warming Tray.
- Roll Warmer.
- 30 Minute Timer.

Safety Instructions

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Unsupervised young children and cognitively challenged individuals should never operate this appliance.
- Children should be supervised to ensure they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by a qualified engineer in order to avoid a hazard.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- The door and outer surface may get hot when the appliance is operating. Do not touch hot surfaces.
- Do not use the appliance outdoors.
- Do not use this appliance near or below combustible materials such as curtains.
- Ensure there is sufficient ventilation around the appliance to allow the escape of heat and steam.
- Do not immerse the appliance in water or any other liquids.
- This appliance contains no user serviceable parts. All repairs should be carried out by a qualified engineer. Improper repairs may place the user at risk of harm.
- Do not operate the appliance after a malfunction or if it has been dropped or damaged in any way.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- The appliance must be unplugged from the power supply after use and whilst any maintenance such as cleaning is carried out.
- The appliance must be used on a stable, heat-resistant surface.
- Do not use the appliance for any other purpose that for which it is designed.
- Ensure the supply cord is kept away from heat or sharp edges that could cause damage.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.

Description of Parts

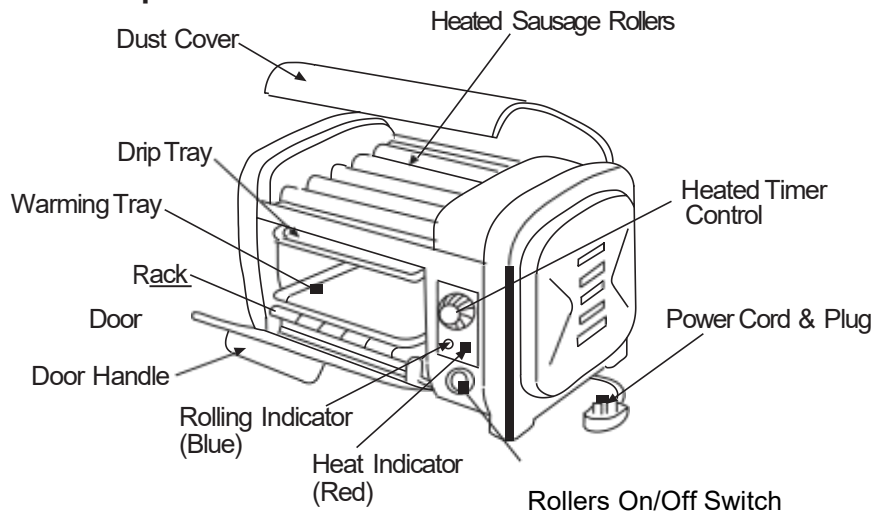

Instructions for Use

If using the appliance for the first time:

- Ensure it is not connected to the mains supply and, if necessary remove any packaging.
- Wipe down the exterior, interior and sausage rollers with a soft, damp, lint free cloth.
- Wash the internal drip and warming trays in a mild household detergent.
- Ensure sufficient ventilation.
- Defrost frozen sausages if necessary before cooking. Place the desired number of sausages onto the sausage rollers (maximum 4 regular sized sausages or hot dogs), keep the dust cover open.
- Open the front door and slide the drip tray into the guides below the rollers.
- Place the desired number of buns (maximum 4 regular sized rolls) onto the warming tray or directly onto the rack inside the warmer then close the door.
- Switch on the rollers On/Off switch and rotate the timer to the required cooking time, the blue roller and red heat indicators will illuminate.
- Note: When heating for the first time, a slight odor may be emitted. This is normal and will soon pass.
- The red heat indicator will turn On and Off alternately during use to show the temperature is being maintained.
- Cooking time for sausages/hot dogs is approximately 10-15 minutes though this will vary according to the type of sausages/hot dogs and rolls being cooked.
- Check the sausages/hot dogs are cooked thoroughly before serving, if not cooked, advance the timer for further cooking.

- At the end of the cooking time, the timer bell will ring and cooking will cease.
- Switch off the sausage rollers using the On/Off switch.
- To serve, use oven gloves and tongs to remove the sausages/hot dogs and rolls from the Hot Dog Grill.

Do's & Don'ts

- Do not immerse the Hot Dog Grill in water or any other liquids.
- Ensure all food is cooked thoroughly before serving.
- Ensure the appliance is unplugged from the mains power supply before cleaning.
- Do not clean the appliance, warming tray or drip tray with harsh abrasives or cleaners.
- Do not touch the rollers during or immediately after cooking - allow to cool first.

Cleaning & Maintenance

- Always disconnect the appliance from the mains power supply and allow to cool sufficiently before cleaning.
- Clean with a soft, damp, lint free cloth.
- Do not use harsh abrasives or cleaners.
- Wash the drip trays in a mild, household detergent.

Customer Service

Contact us through our website: www.TeamCustomerService.com

If you have any question about assembly, use or possible missing part, please contact us and we will be glad to assist you.