 


PORCH SWING

Assembly Manual

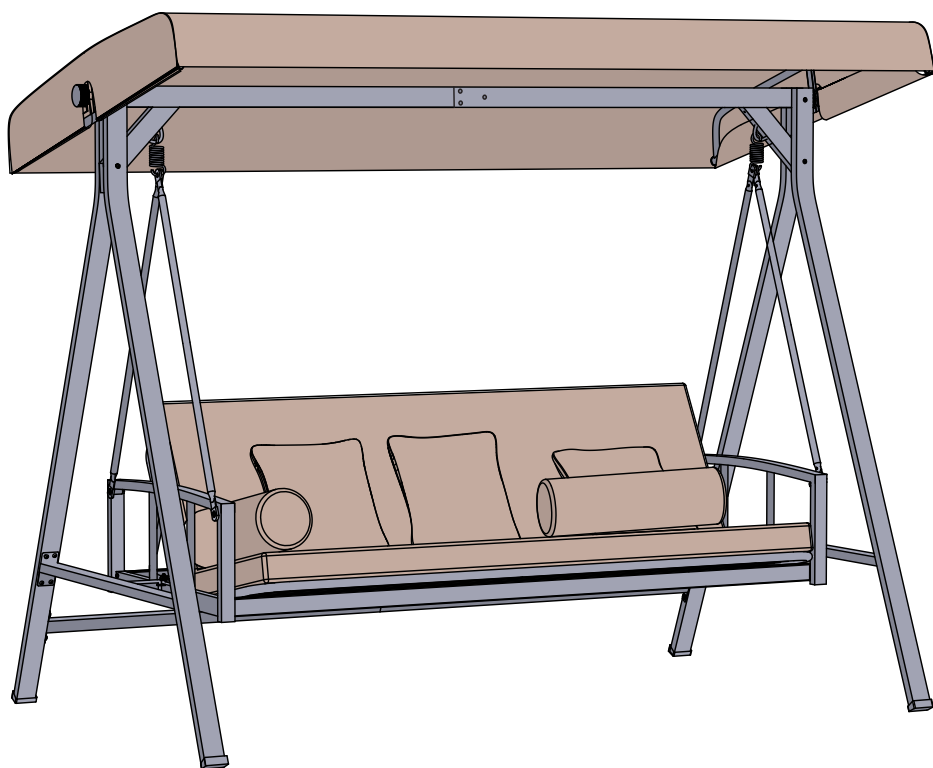

Different language instructions

If you want instructions in Spanish, French, German, please contact customer service.

 
Wenn Sie Anweisungen auf Spanisch, Französisch oder Deutsch wünschen, wenden Sie sich bitte an den Kundendienst.

Si desea instrucciones en español, francés o alemán, comuníquese con el servicio de atención al cliente de

.

Si vous voulez des instructions en français, espagnol et allemand, veuillez contacter le service à la clientèle de

.

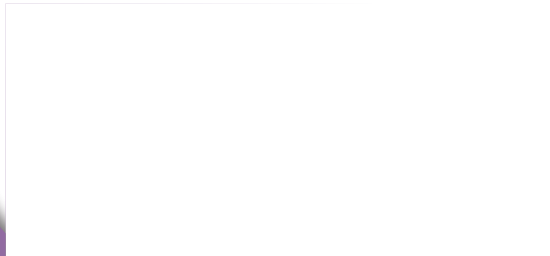

Warnings and Cautions

Please retain this instruction for future usage and read carefully before assembly.

Make sure you have all the parts & hardware as the item list shows.

2 adults or more are recommended to install your swing.

Do not discard any of the packaging until you have checked that you have all the parts and pack of fittings.

Check all bolts for tightness before use, and periodically check and tighten bolts to ensure your swing works properly.

Some parts might have sharp edges/corners. Please follow basic safety precautions to reduce the risk of hurts.

*It is essential to place the swing on level ground and not less than **6 feet** from any obstruction such as fences, garages, the house, overhanging branches, laundry lines or electrical wires.*

 
CHOKE HAZARD

THIS ITEM CONTAINS SMALL PARTS WHICH CAN BE SWALLOWED BY CHILDREN.








PLEASE KEEP IT AWAY FROM CHILDREN UNDER 3 YEARS OLD and PETS DURING INSTALLATION.




Please pat lightly after receiving the cushion and place 2-3 days to make it fluffy.

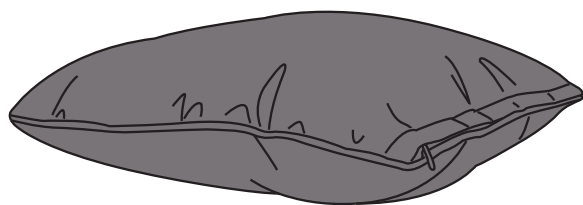


CHECK LIST

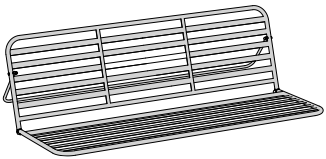       - A** × 2 
- B** × 1 
- C** × 1 
- D1** × 1  **D2** × 1 
- E1** × 1 
- E2** × 1 
- F1** × 1  **F2** × 1 
- G** × 1 
- G1** × 1 
- H** × 1  **I** × 2 
- J** × 1  **K** × 1 
- L** × 2 

 N × 8
(M8×50)



P × 4
(M8×100)

 

R × 18
(M8)



T × 10
(M8)



U × 10
(M8)



 
V × 2



X1 × 1



Y × 1

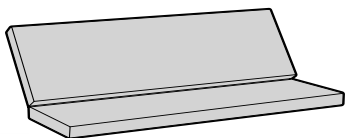


E3 × 1
(M6×35)



AA × 2



 CC × 2




EE × 2



(M6)



 O × 2
(M8×50)



O × 25
(M6×15)



S × 30
(M6)



T1 × 5
(M6)



U1 × 5
(M6)



 
W × 4




X2 × 1



Z × 4
(M8×45)



D3 × 3
(M6×40)

 


X3 × 1
(M6×25)




BB × 1



 
DD × 3





(M8)

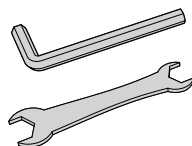 

Swing Assembly

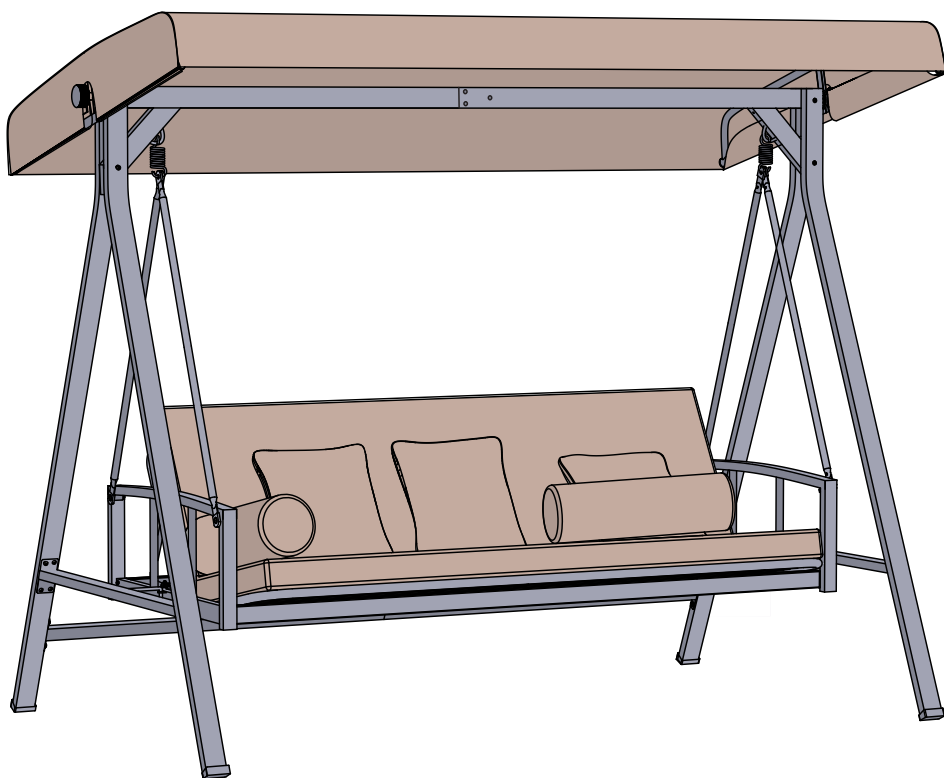 

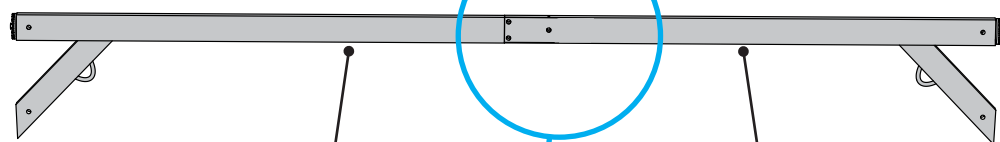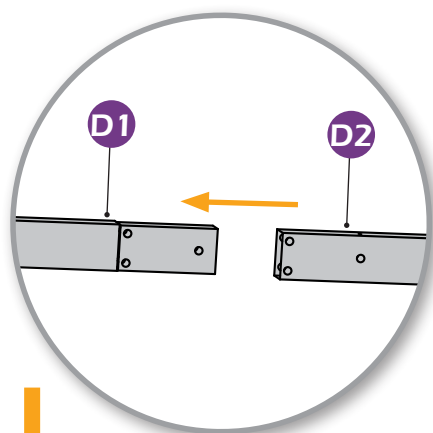  

D1

D2

U1

 
S

Q



T1

D3


STEP 1

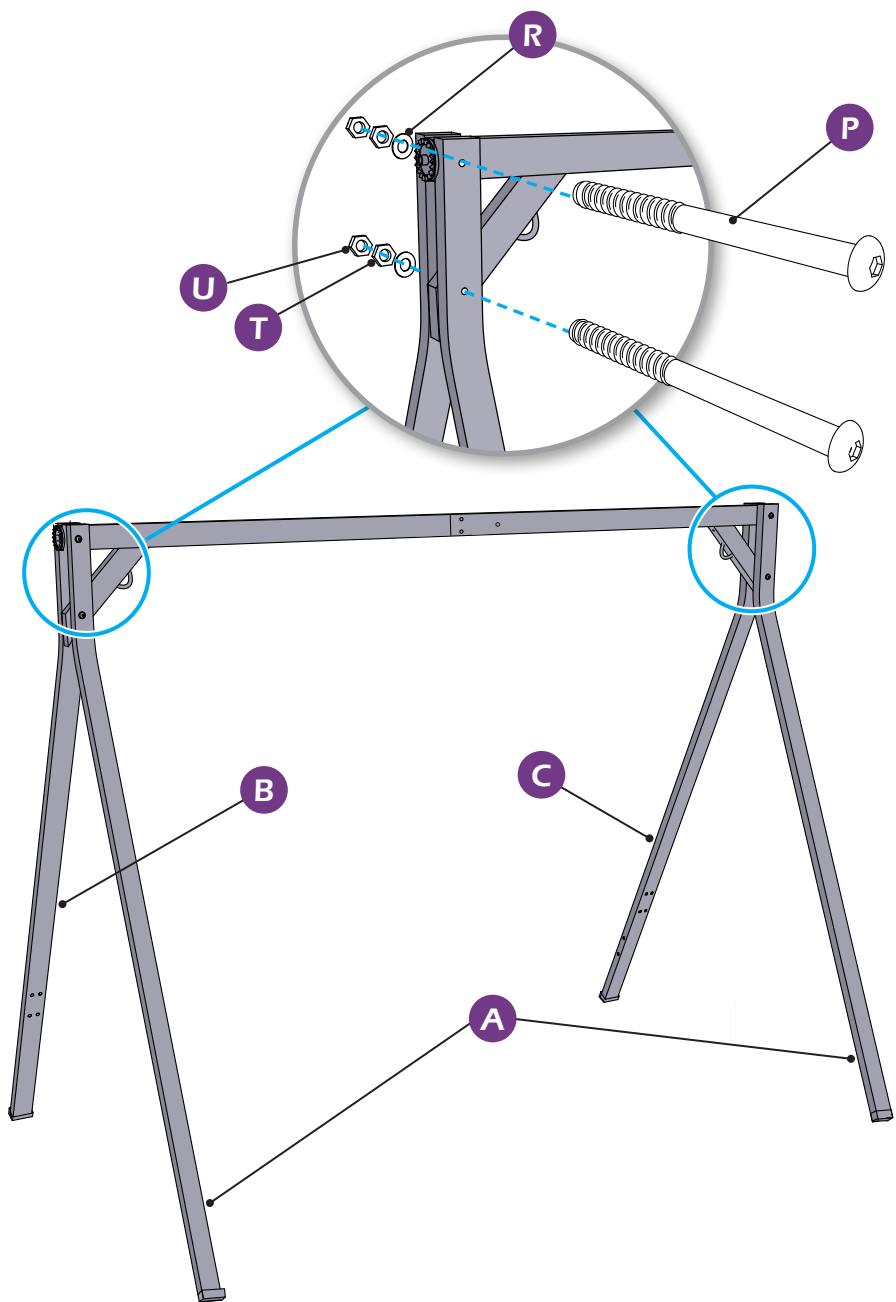

  
STEP 1

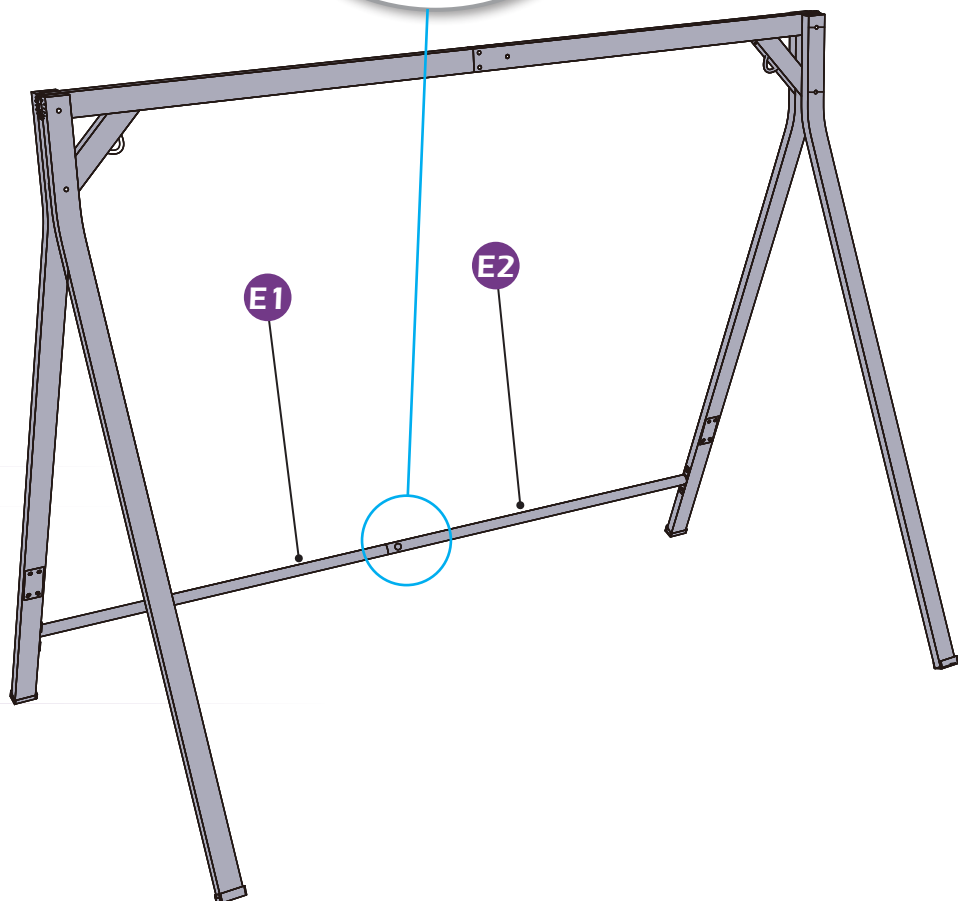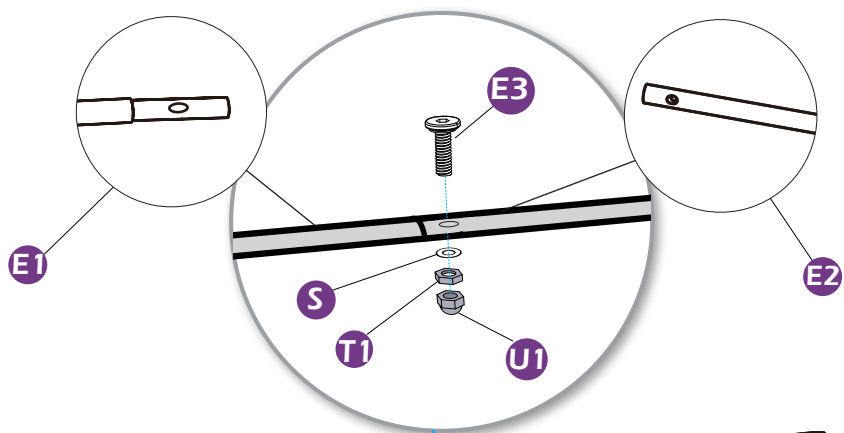

 
STEP 2

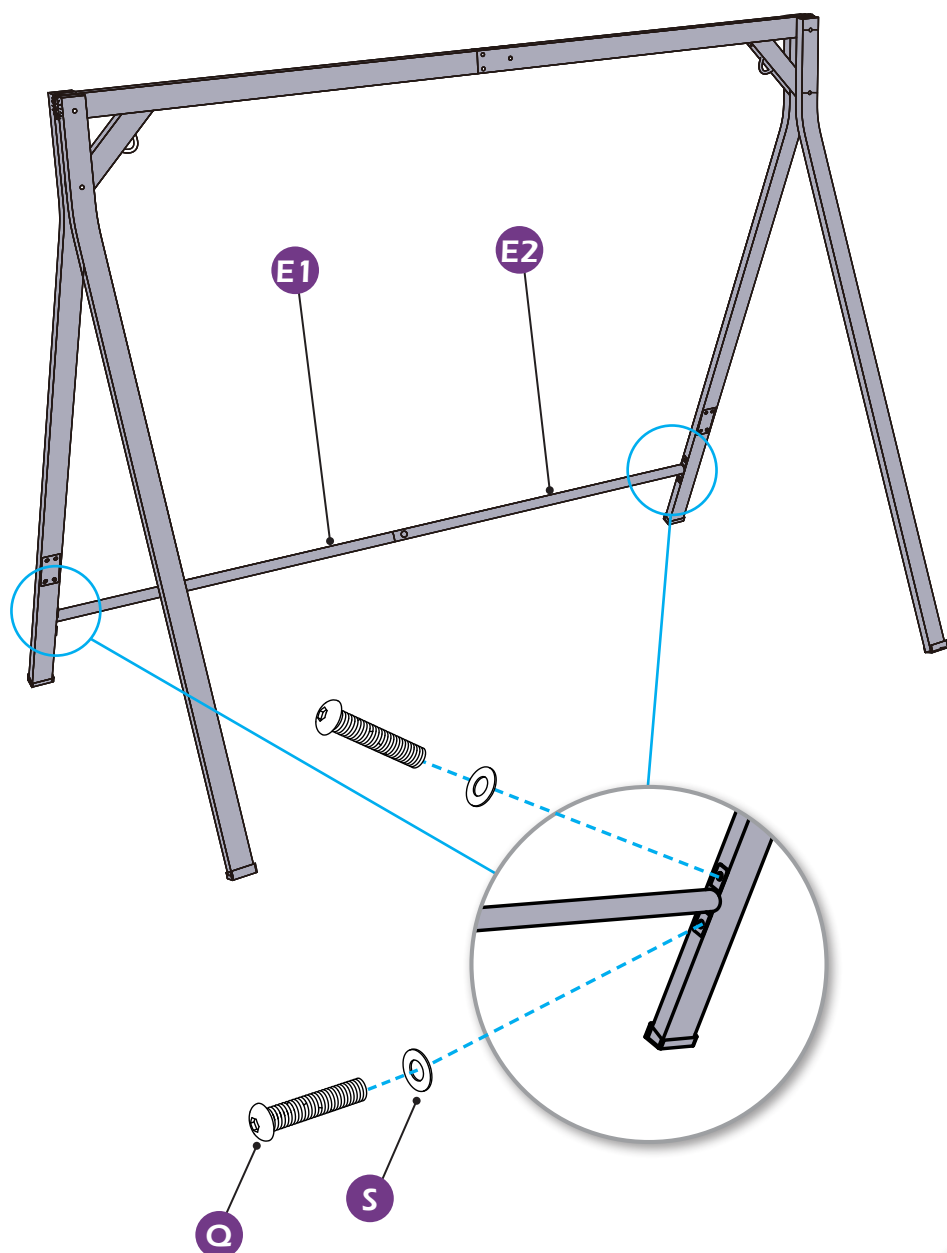

 
STEP 2

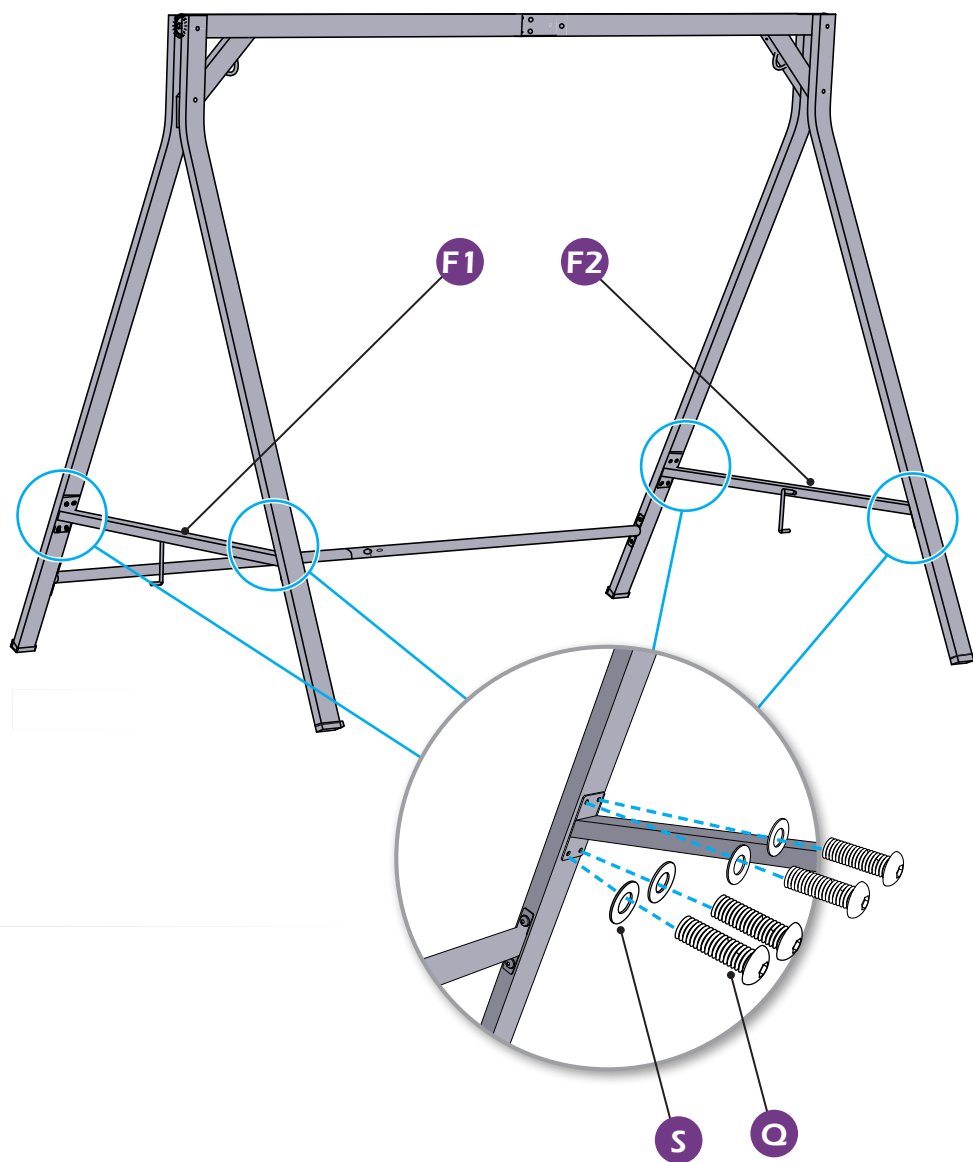

 
STEP 3

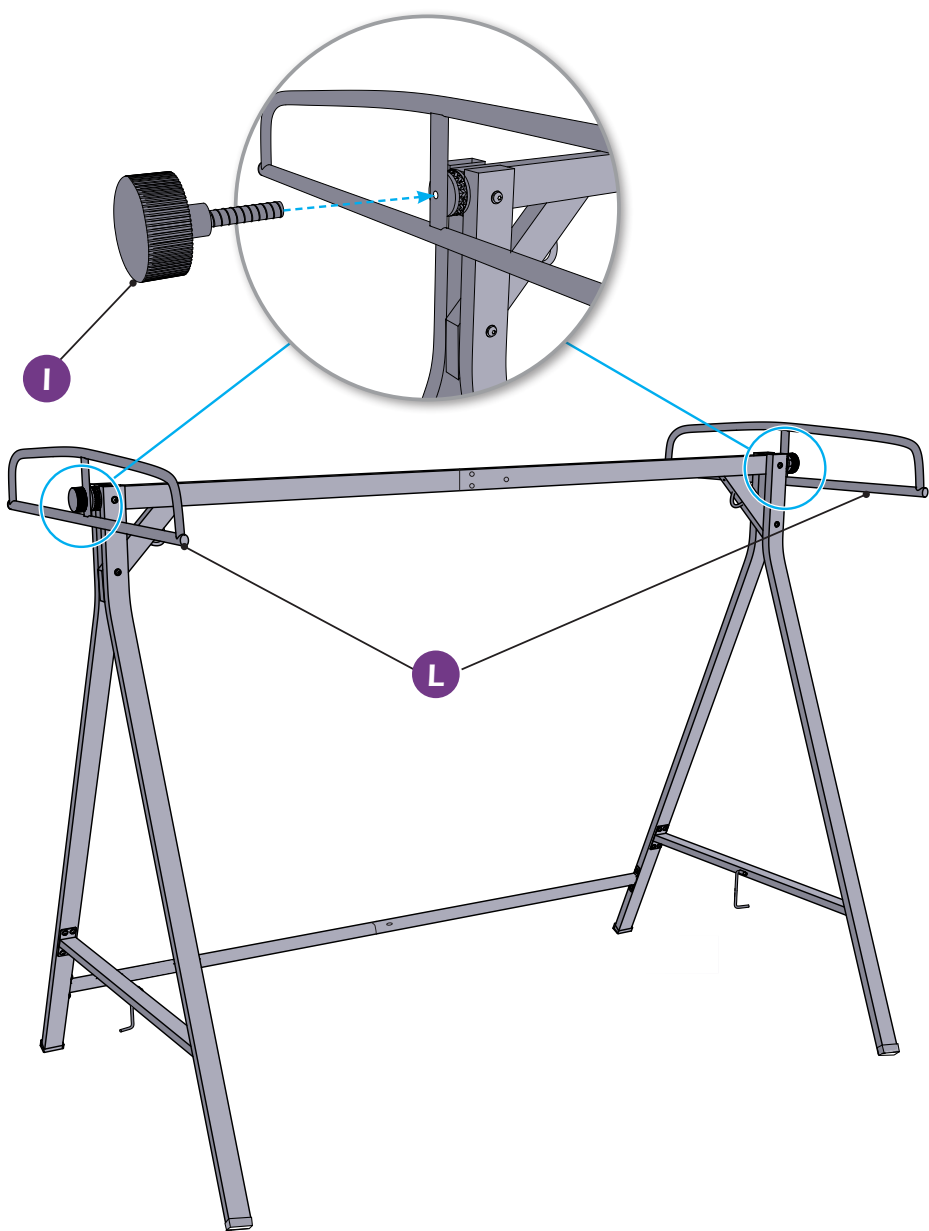

 
STEP 4

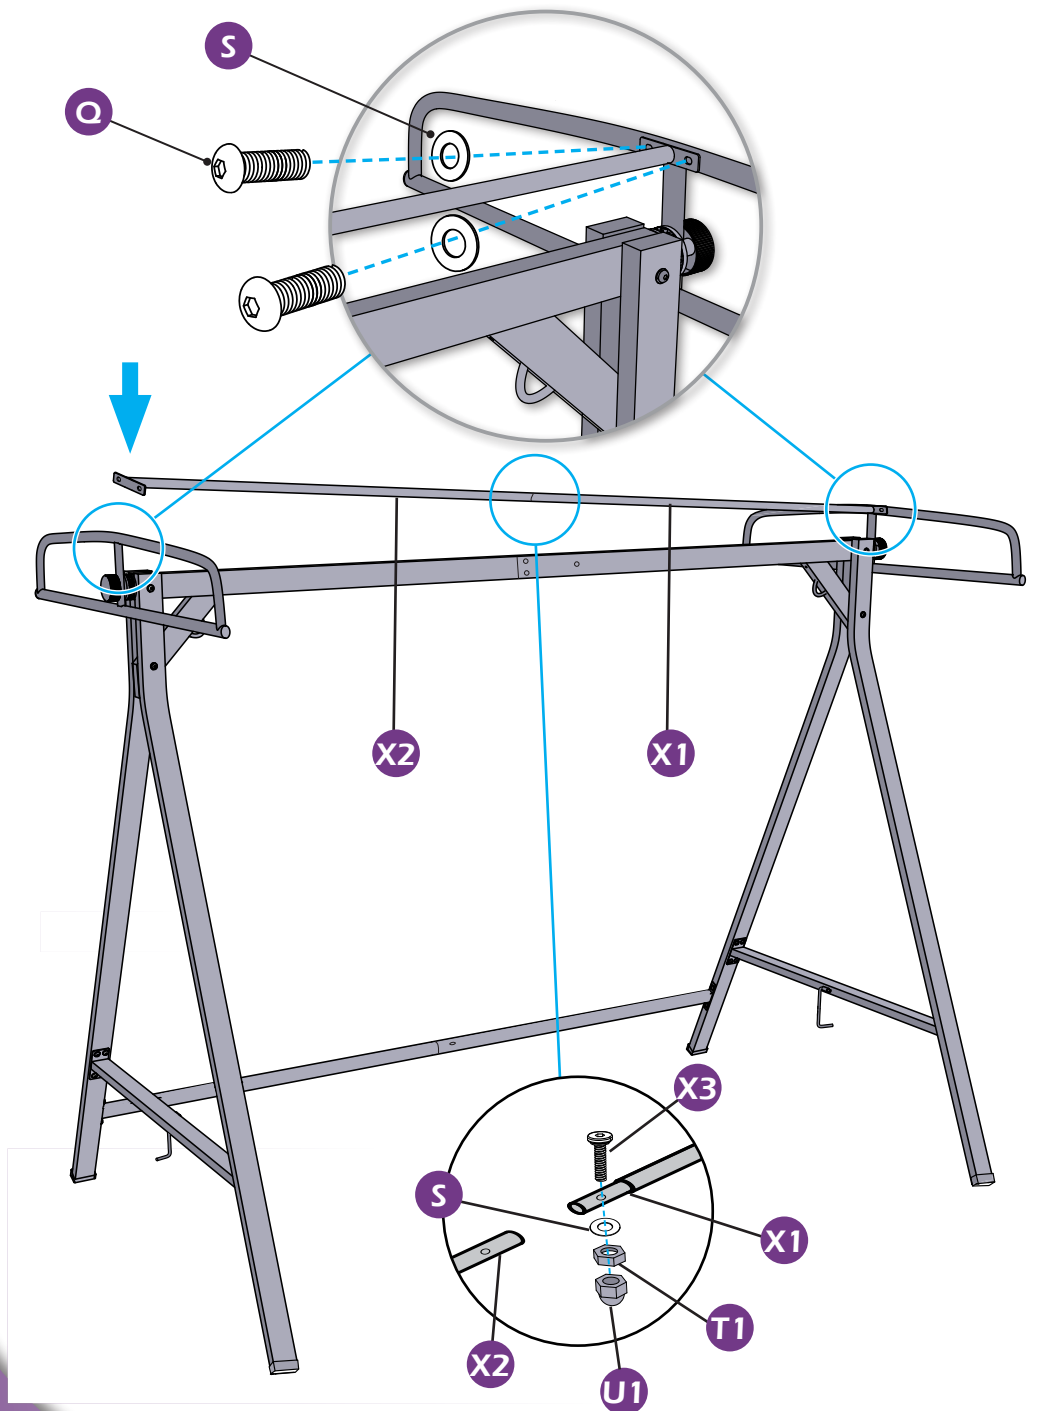

 STEP 5

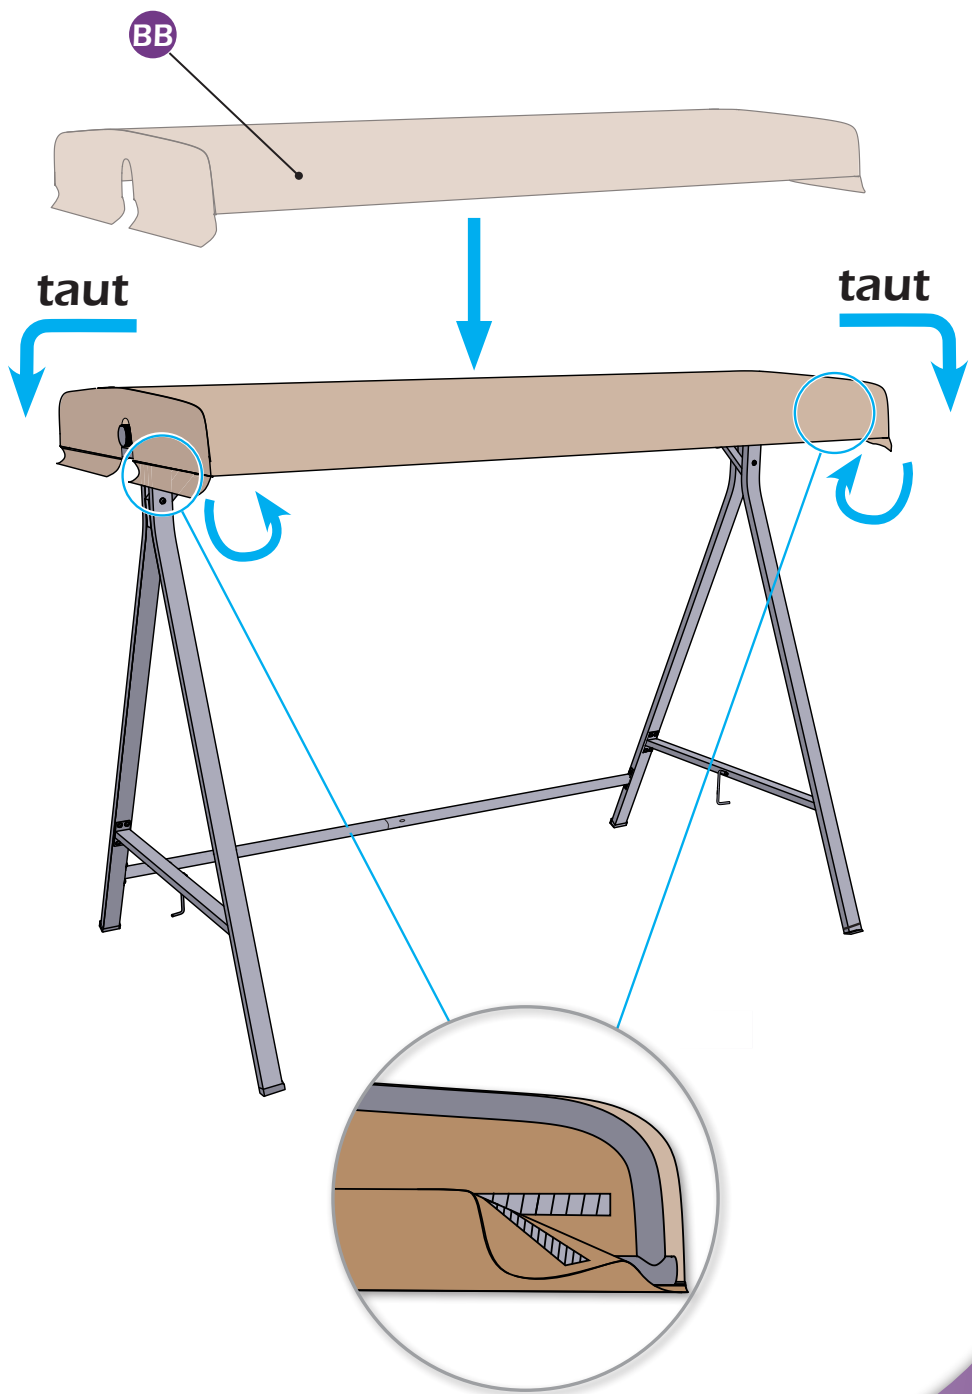


 STEP 6

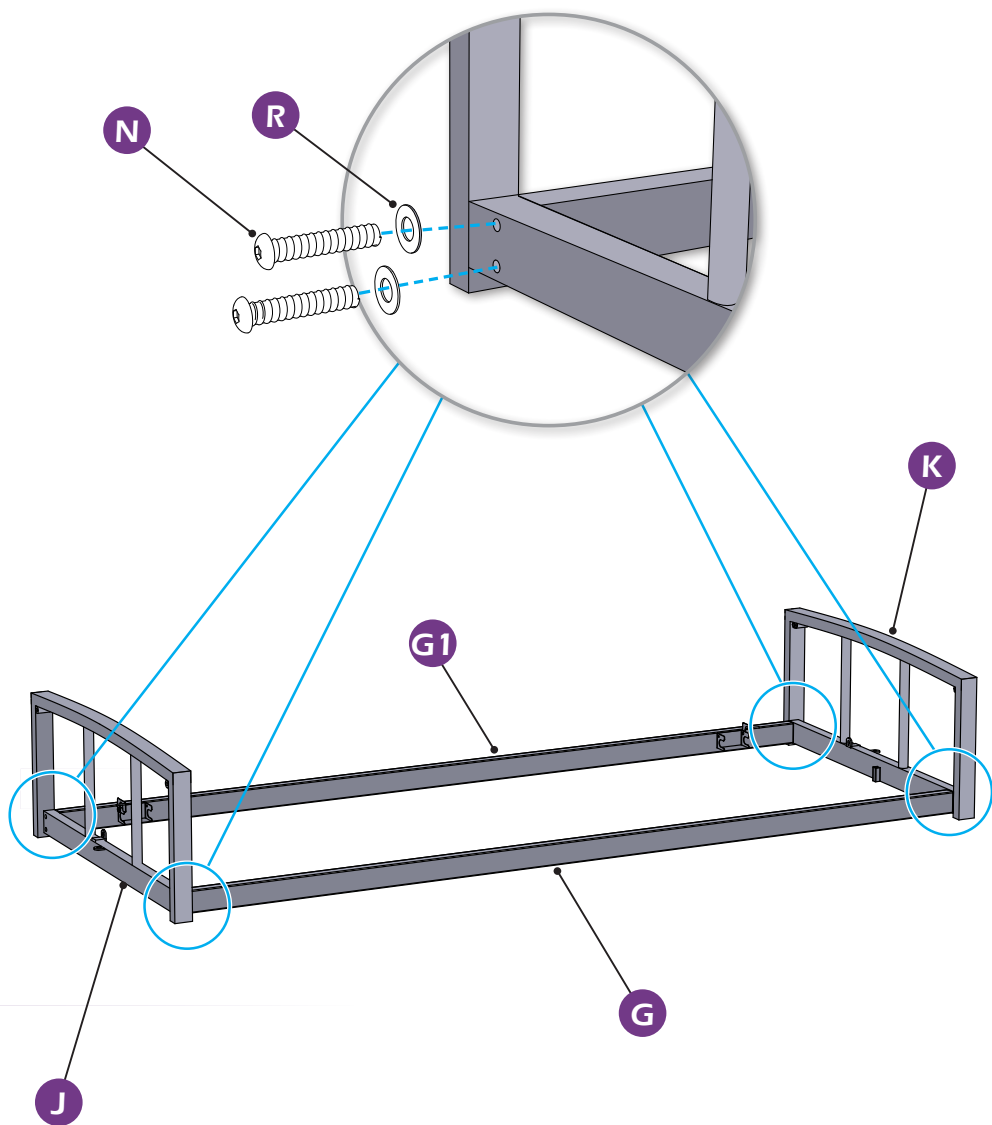


STEP 7

 
Lock the back of the chair as pictures indicate.

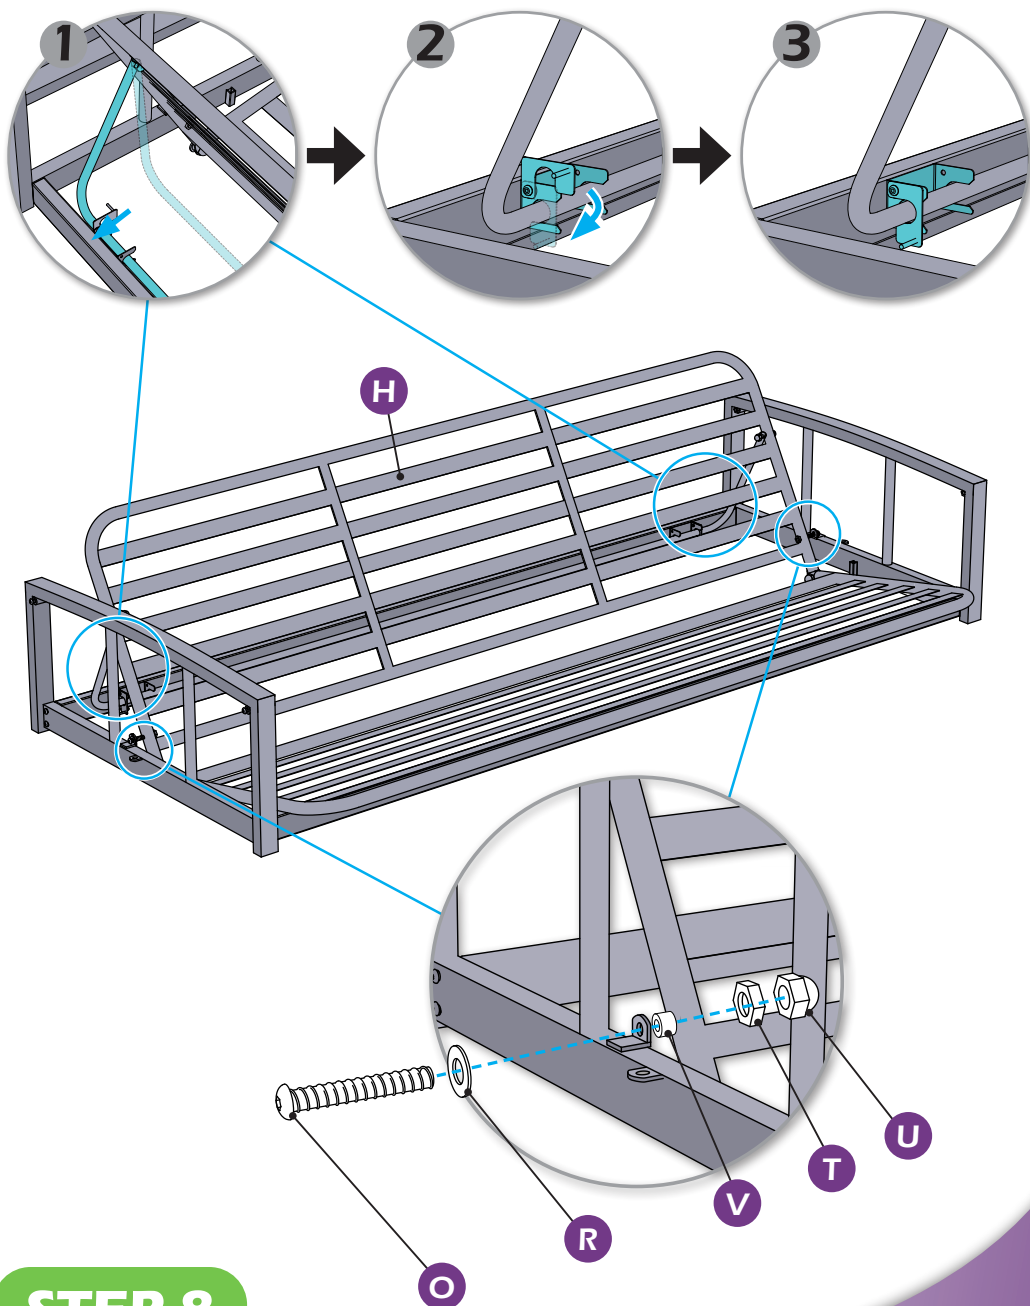

 
STEP 8

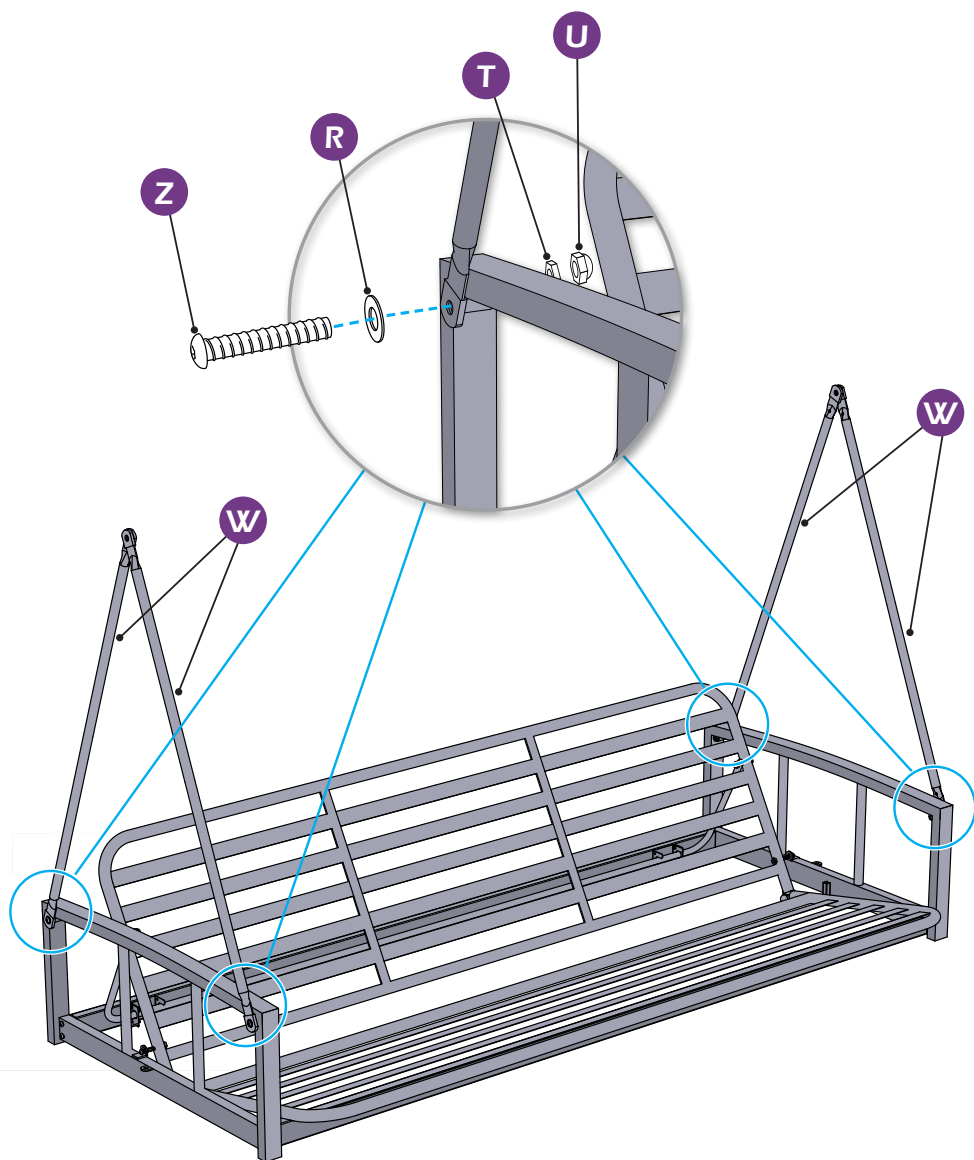

 
STEP 9

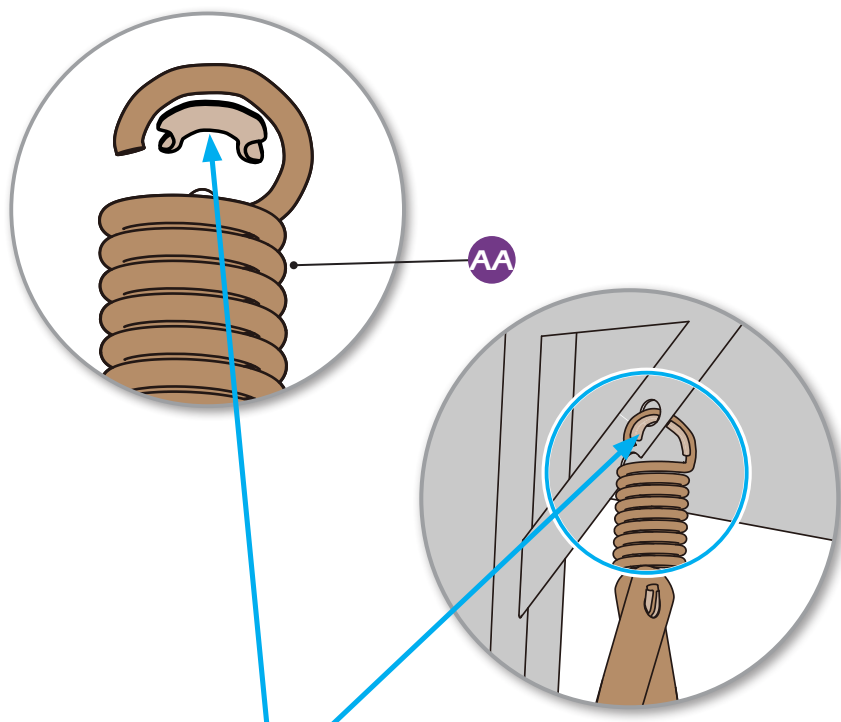


 Please don't remove the additional material for reducing noise.

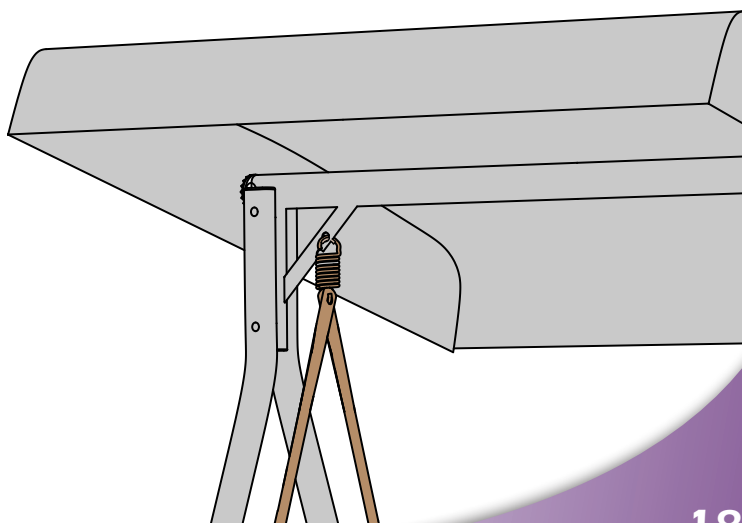


  STEP 10

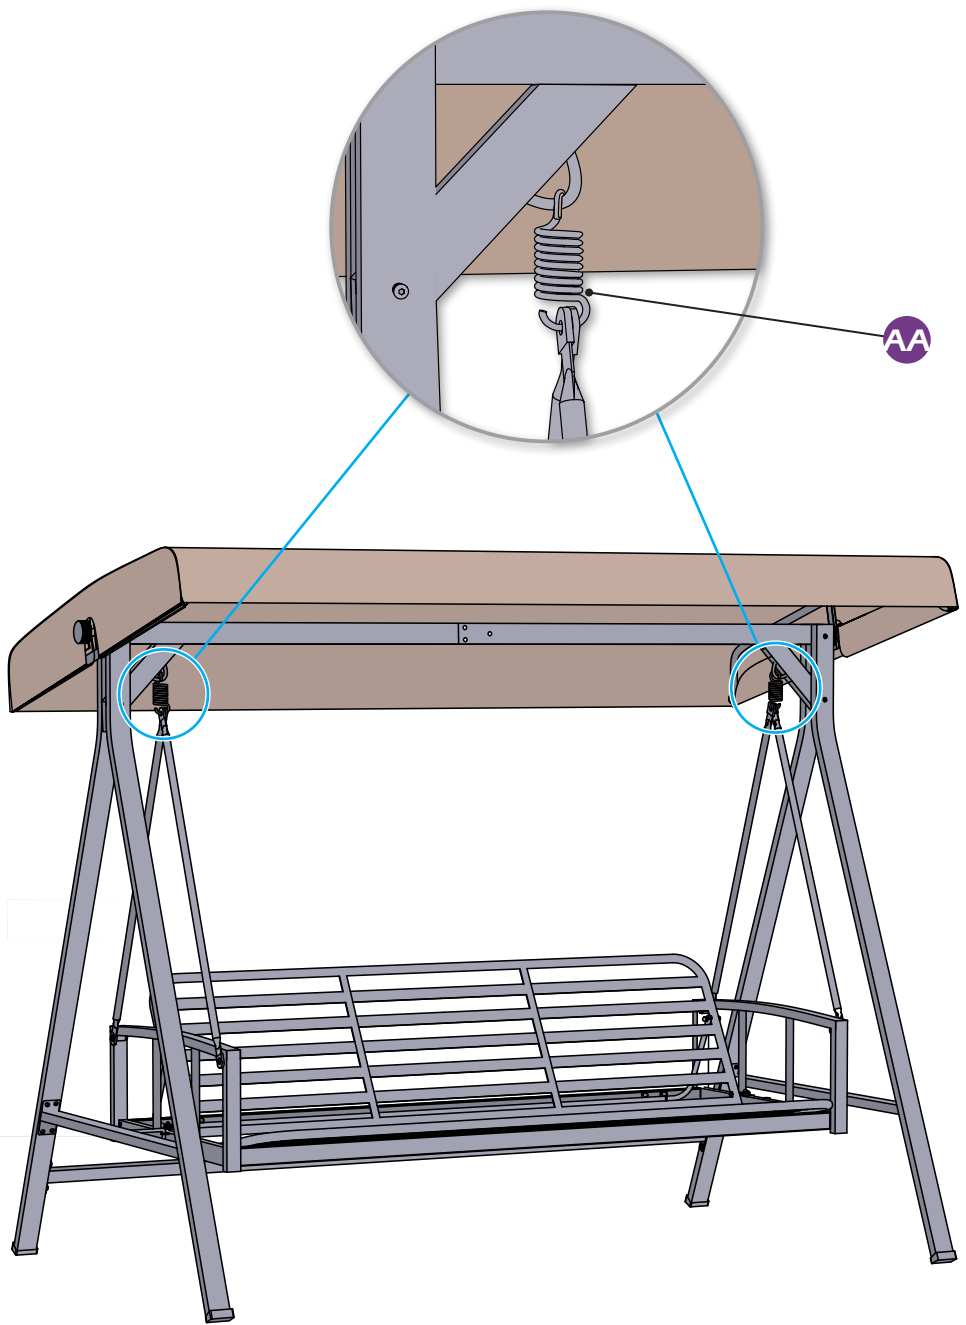




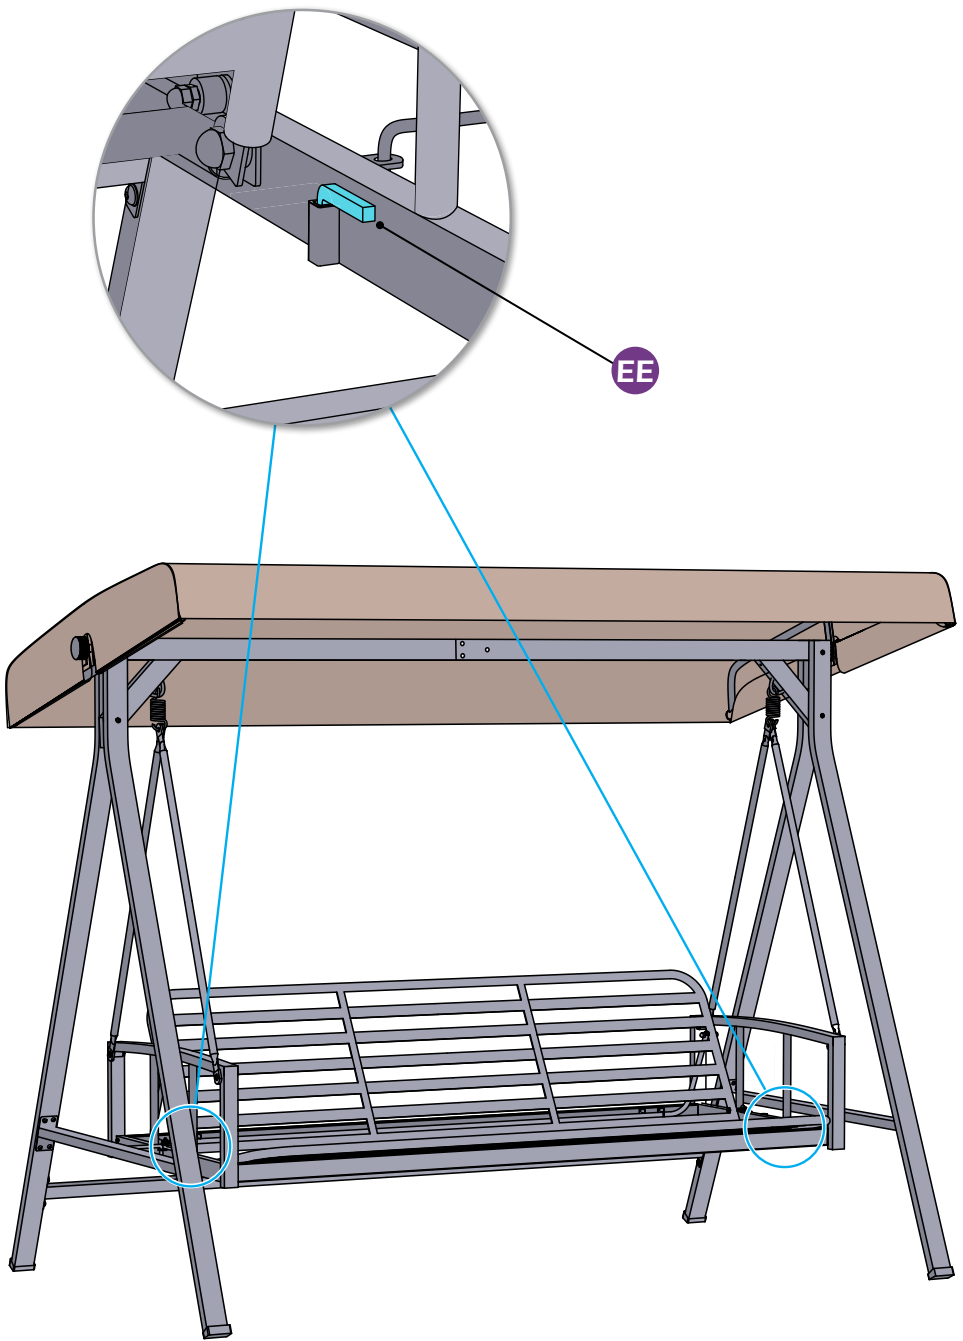


 STEP 11



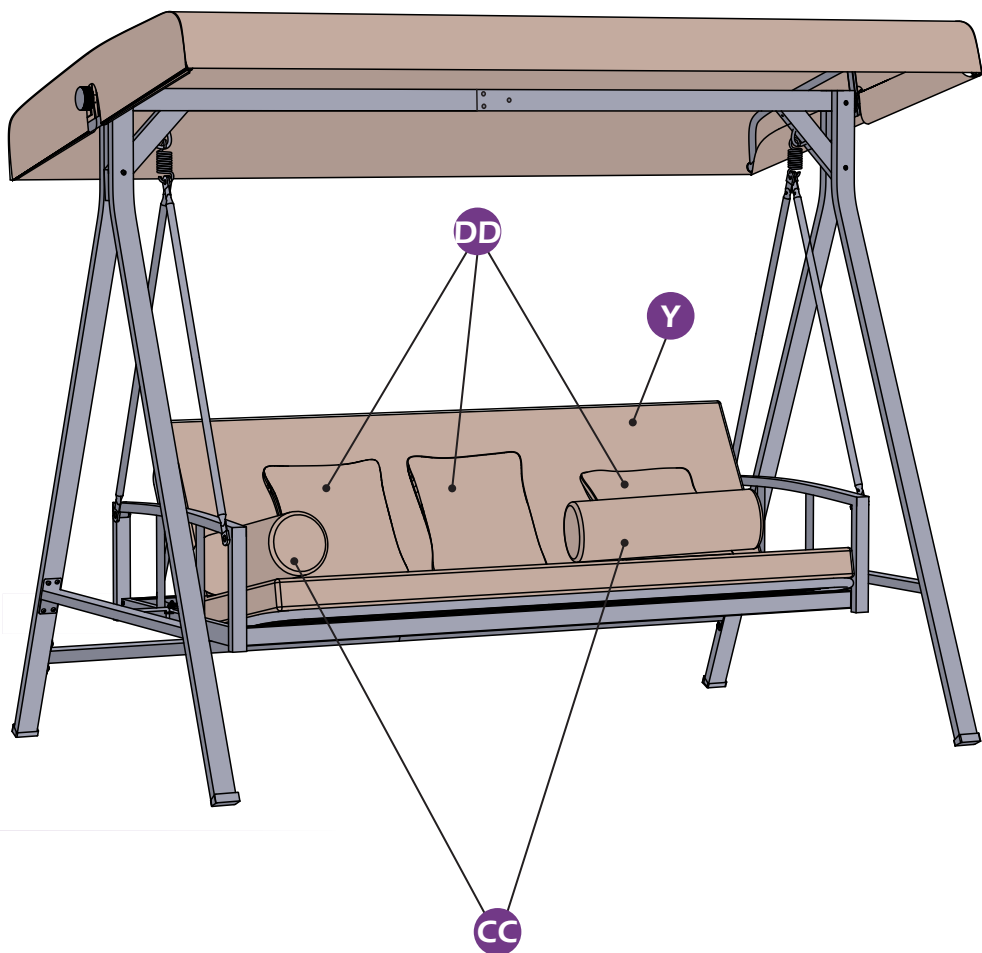



STEP 12

    Operation

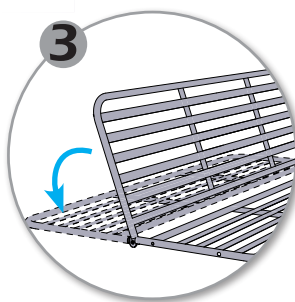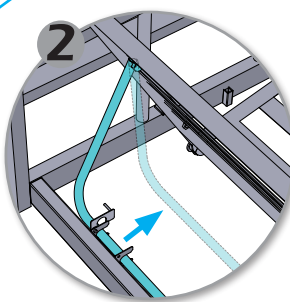
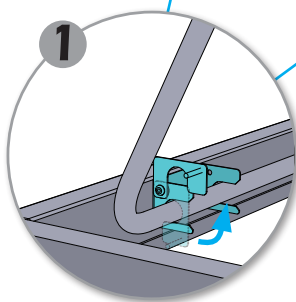
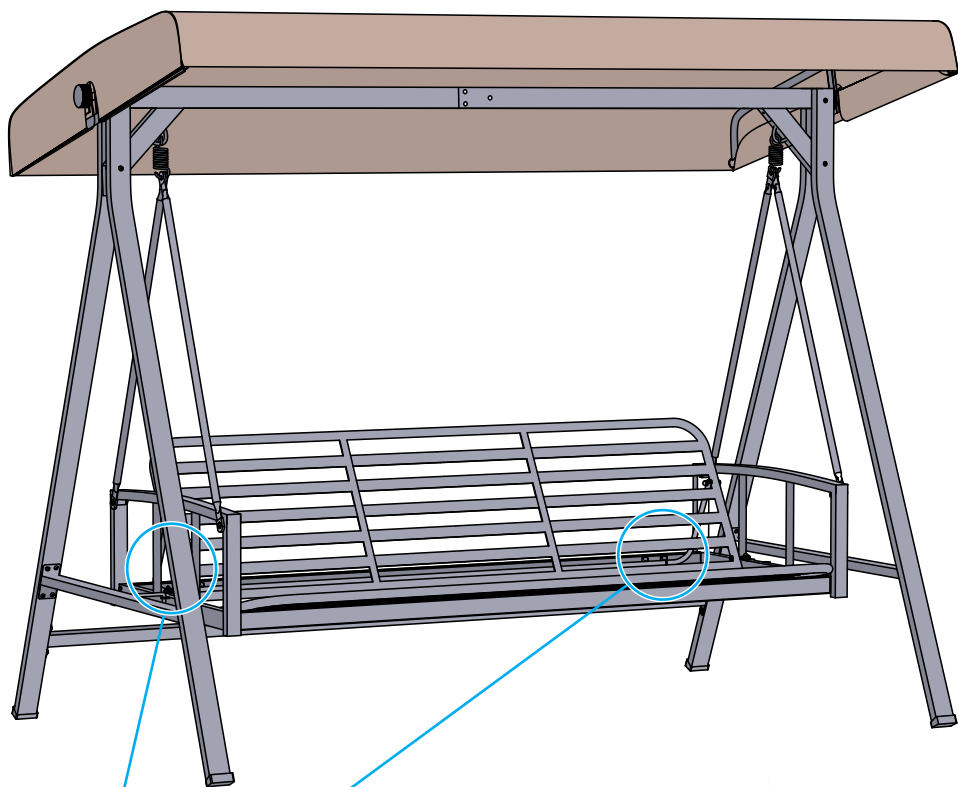


    STEP 13

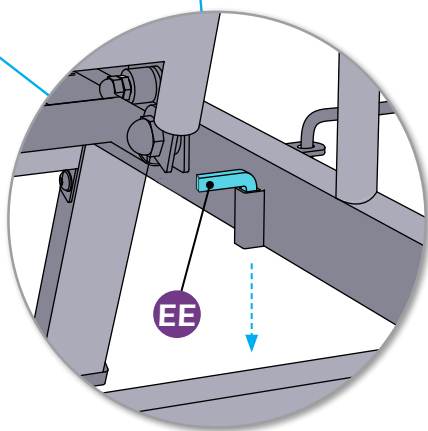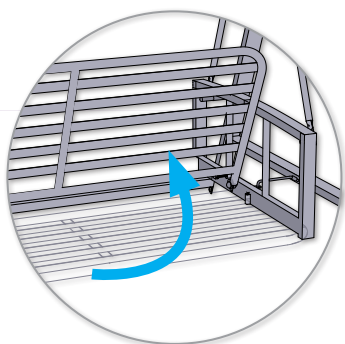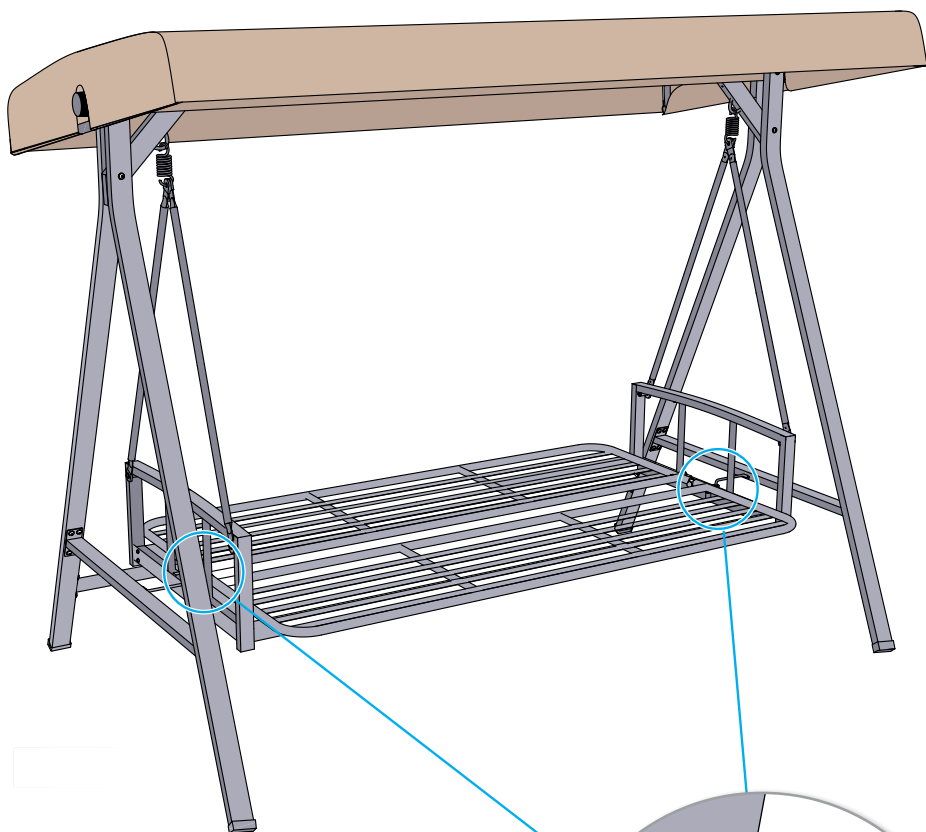

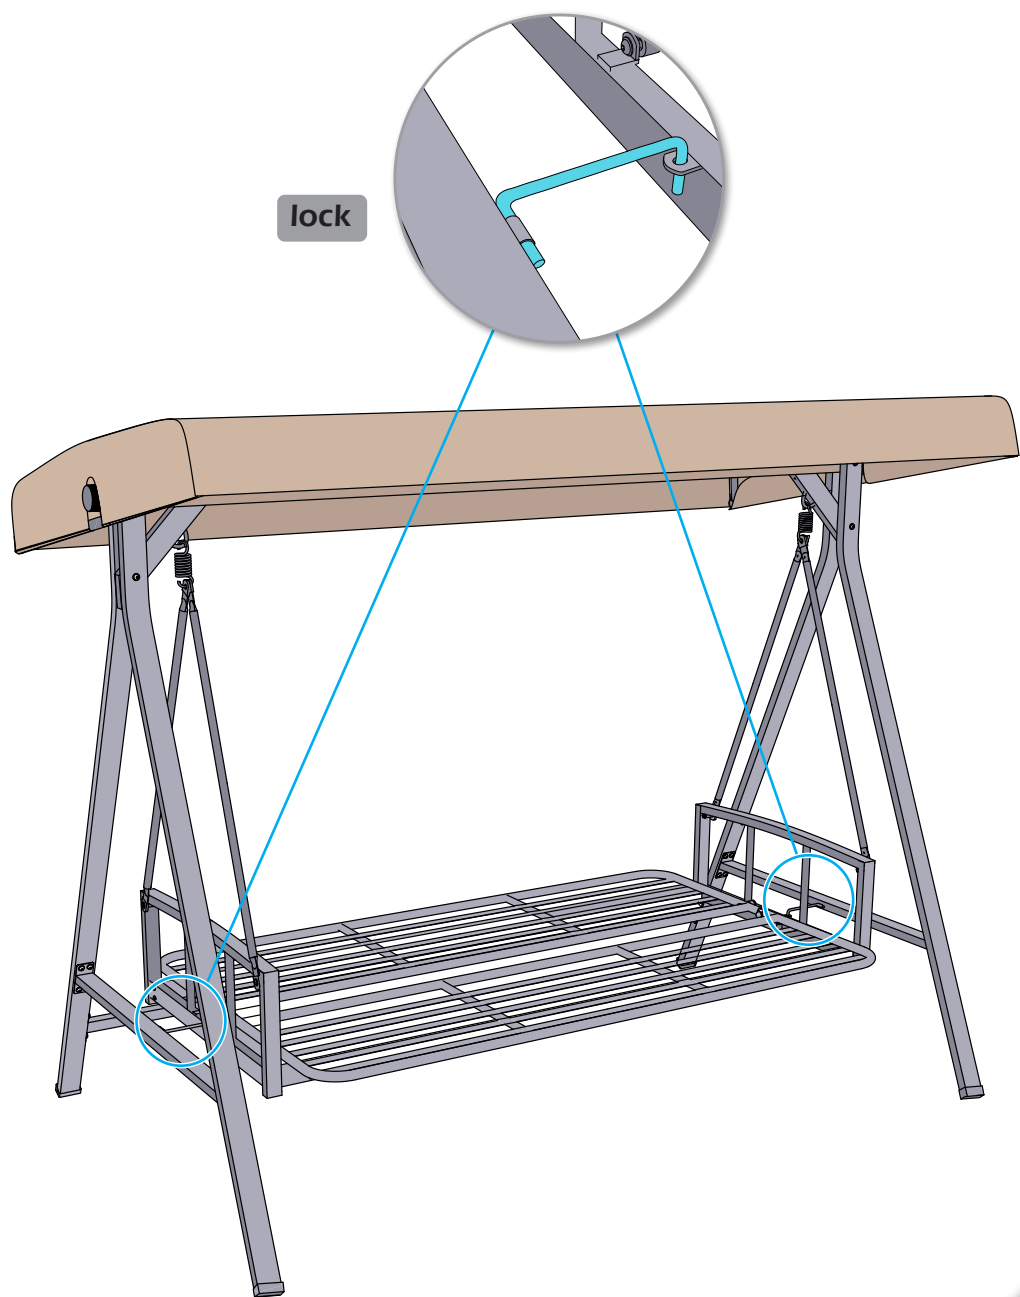

   STEP 14

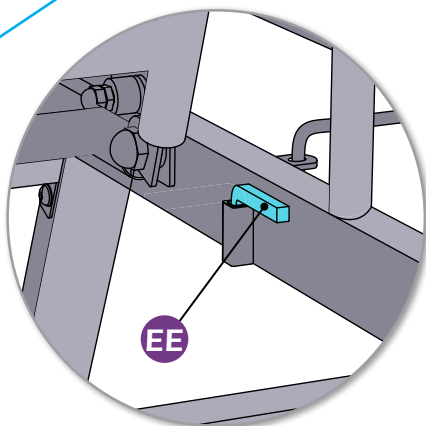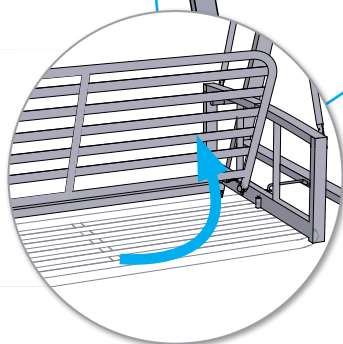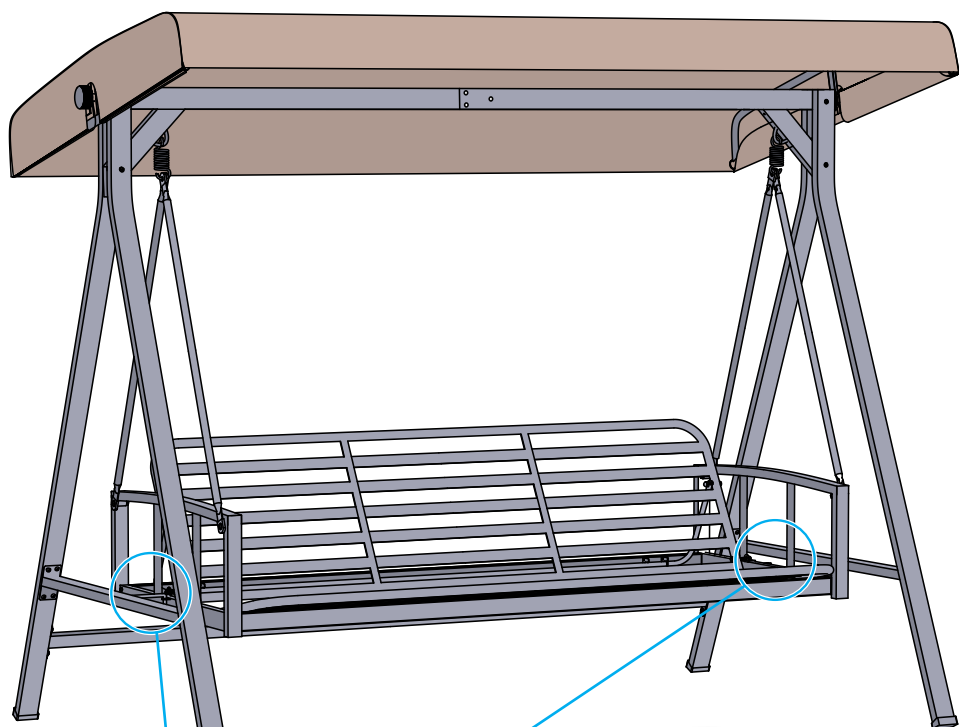

Ensure Part **EE** on the picture indicated position **before** you want to switch the swing to chair.

STEP 15

Care and Cleaning

Wash frame parts and fabric with mild soap and water, rinse thoroughly.

Dry frame completely and allow the fabric to drip dry.

Warranty

Frames

Frames constructions are warranted to be free from defects in material and workmanship for 1 year from the item purchased. Damage to frame from negligence won't be covered by this warranty.

Cushions & Canopy

Cushions & canopy are warranted to be free from defects in material and workmanship for 1 year from the item purchased. Damage from exposure to chemicals (including but not only oil, spills, fluids) won't be covered by this warranty.

Bolts & Nuts

Bolts and nuts are warranted to be free from defects in material and workmanship for 1 year from the item purchased. Damage from exposure to chemicals (including not only oils, spills, fluids) won't be covered by this warranty.

Warranty Limitation

This warranty is for the original purchase order only. (Order number required). This warranty is non-transferable. is responsible for the free replacement part including shipping charges for the 1 year warranty.

Warranty Exclusion

Failure caused by inappropriate use; Failure caused by neglect of reasonable and necessary care; Acts of nature (including but not limited to wind, hurricanes, tornadoes and storms) are not covered by this warranty. reserves the right to explain warranty exclusions. When the replacement item is applied, the 1 year warranty automatically expires. Please feel free to contact us to apply for the warranty.

100