

## **ASSEMBLY INSTRUCTION**


## **ROUND SIDE TABLE**

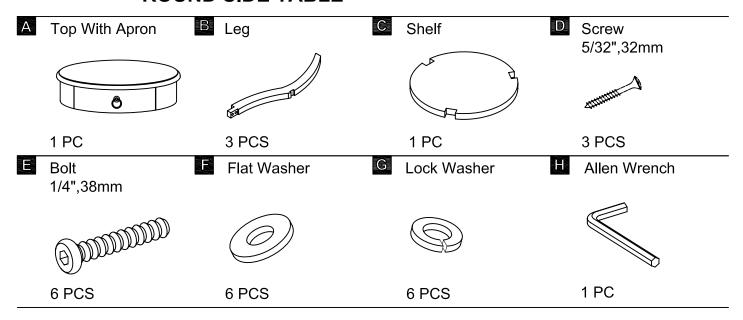

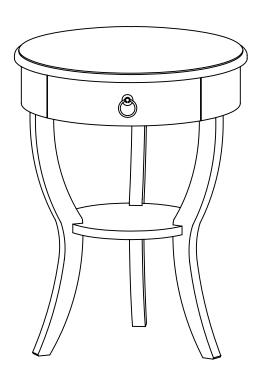


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

Attached Leg (B) to the Shelf (C). Use Screw (D), on holes of Shelf (C).

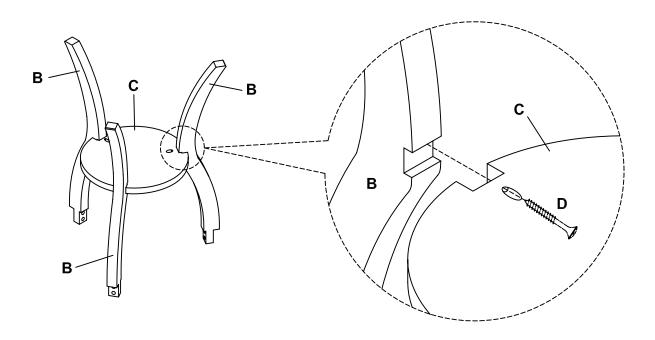

Attached Leg (B) to the Top with Apron (A). Use Bolt (E), Lock Washer (G) and Flat Washer (F), on holes of Top with Apron Wood (A). Turn the Allen Wrench (H) in Bolt (E).

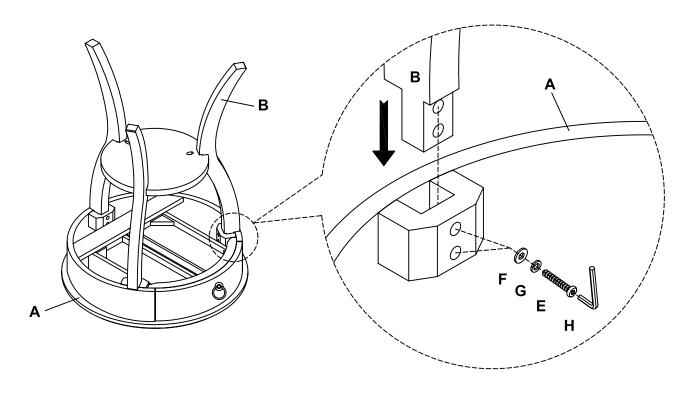

## Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surface with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.