

3.5 CU. FT. REFRIGERATOR

User Manual

Returning Policy :

If the item needs to be returned, please contact our Customer Service Team. We will provide a prepaid returning label.

NOTE: We are not responsible for any costs incurred if the buyer returns the item themselves.

Please keep this instruction for future reference

Please read the following instructions carefully before using your refrigerator.

- Don't put hot food inside the refrigerator.
- Wrap all food items with a plastic protection film to avoid dehydration and loose food flavor.
- Close immediately the refrigerator door after each usage.
- If you don't use the refrigerator for a long period of time, disconnect the unit, clean the inside parts, put the refrigerator in a dry area and leave the doors lightly open.

I. GENERAL

the refrigerator is extensively used in places such as hotels, offices, houses and student dormitories. It is mostly suitable for refrigerating and conserving foods such as fruits and beverages. It enjoys the advantages of small size, light weight, high efficiency and low energy consumption.

II. UNPACKING REPACKING AND MOVING

1. Unpacking

Just cut off the packing band, and then pull the carton up.

2 Repacking

Remember to put the original foamed pads in place.

3 Moving

Be sure refrigerator trays in upright positions during moving it.

Don't tilt for more than 45 degree from upright position. Never upset it.


Don't apply for ceonany external part such as pipe, condenser, door and it shendl left or moving refrigerator must be well packed and secured in long distance transportation to avoid damage from impacting or great shocking.

III: INSTALLTION

PROTECTION FROM HEAT AND MOISTURE

Do not install your refrigerator in any location where heavy moisture is present or if the location is not properly insulated. This refrigerator is not designed to operate in temperature setting below 55° F. When the ambient temperature is too low, the compressor stops working. Open the heat compensation button on the diagram and let the refrigerator run normally.

Location for the refrigerator should be on a hard surface and away from direct sunlight and heat source, e.g., radiators, baseboard heaters, cooking appliances, etc.

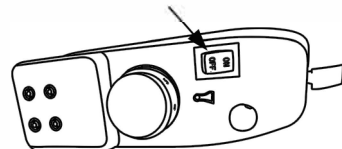

DOOR ALIGNMENT

1. Remove the top hinge cover.
2. Loosen the top hinge screws using a Phillips head screwdriver.
3. Adjust the door or put a spacer in between and then tighten the screws.



IV: OPERATION

1. Before the refrigerator is plugged in, check the following:

-There must not be any damage on all electric cords.

-Each screw must be well fixed

-Wall outlet must be properly connected

Be sure that everything is in normal condition and the refrigerator can be plugged in.

2 When operation for the first time

When operating for the first time. before loading food in, run the refrigerator without any load until it auto stops at the desired temperature, usually it takes 2 or 3 hours. Then set the thermostat to the required setting and place foods in.

3 Temperature control

Refrigerator temperature can be adjusted by turning the knob of the thermostat. The Closer to "7" position the knob is set, the lower the temperature becomes. A medium setting is the most suitable for general operation. Set the thermostat "7" position only when ice cubes are needed or frozen foods are stored in the freezing compartment.

Refrigerator's temperature will vary depending on the quantity of foods stored and the frequency of the door opening. In order to maintain good cooling efficiency and save energy, we recommend you not to store too much foods and not to open the door too frequently.

CAUTION: When the thermostat has been turned clockwise to "7" position, don't attempt to turn it moreover, otherwise it will be damaged.

4. Ice cubes making

After filling the ice tray with drinkable water till about 80% of its volume, put it into the freezing compartment and then set the thermostat at "7", it takes about 3 hours to make ice cubes.

V. DEFROSTING

Defrost the freezing compartment whenever the layer of frost on the evaporator reaches 3-4 mm. When defrosting remove out all foods and ice cube trays. Put the drip tray in place to collect melted water to start defrosting, set the thermostat at "0" positions and keep the door open. After the frost or ice has melted, discard the melted water and dry up the interior of the refrigerator. The refrigerator can then be restarted by a turning its thermostat to the desired setting.

CAUTION: never use any sharp or metallic instruments (e.g. knives) to remove frost or ice from the evaporator as this will damage the evaporator, a punctured evaporator will cause serious problems.

VI. CLEANING AND MAINTENANCE

1. To clear the refrigerator, disconnect power supply and removed foods, shelves, tray sets. Use a solution mixed with 2 spoons of baking soda per litre of warm water to clean the interior. Then wipe clean with fresh water.

Never use acids, chemical thinner, gasoline, benzene or the like for cleaning any part of the refrigerator. Never use boiling water and benzene to clean plastic parts because they may deform or damage the plastic parts.

2 Too much food stored or large container in the refrigerator will affect cold air circulation, so some free space must be left. It is recommended that about 70% of storage volume is loaded.

Don't store volatile and/or explosive materials such as oil, gasoline, liquefied petroleum gas, adhesives, etc. in the refrigerator. Otherwise, there will be a danger of fire or explosion caused by electric sparks.

VII. SAFETY INSTRUCTIONS

Before plugging your refrigerator in, check that the electric supplying your house must comply with the rating (voltage, frequency) of the refrigerator, the rating plate is usually on the back of the refrigerator.

The refrigerator should always be plugged in in a well-ventilated area to prevent overload, which could cause a possible fire hazard from overheating wires. Don't splash water on the refrigerator as this will cause electrical leakage or failures. If the power cord becomes damaged, ask a technician to replace it immediately.

Our corporations will be not responsible for any accident caused by improper operation.

Note: specifications subject to change without notice

Warning:

Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

The refrigerant and insulation blowing gas used in the appliance require special disposal procedures. At disposal, please consult with service agent or similarly qualified person.

Do not use mechanical devices or the means to accelerate the defrosting process other than those recommended by the manufacturer. Don't damage the refrigerant circuit.

This appliance is not intended for use by persons (including children) with reduced physical, supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

CUSTOMER SERVICE

IMPORTANT

DO NOT RETURN THIS PRODUCT

If you have a problem with this product, please contact us

DATED PROOF OF PURCHASE, MODEL # AND SERIAL # REQUIRED FOR WARRANTY SERVICE

TROUBLESHOOTING

Troubleshoot your problem by using the chart below. If the refrigerator still does not work properly, contact eleappliance-service@outlook.com. Customers must never troubleshoot internal components.

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Refrigerator does not work	<ul style="list-style-type: none">A. Refrigerator is not switched onB. Unit is not plugged in or is looseC. A household fuse has blown or circuit breaker has trippedD. Wall power socket is defective	<ul style="list-style-type: none">A. Turn on the temperature control dial. It may be in the OFF, "0" positionB. Plug in the refrigeratorC. Replace the household fuse or reset circuit breakerD. To be corrected by a qualified electrician
The food is too cold	<ul style="list-style-type: none">A. Temperature is not properly adjusted	<ul style="list-style-type: none">A. Set the temperature control dial to a warmer setting
The food is too warm	<ul style="list-style-type: none">A. Temperature is not properly adjustedB. Door was open for an extended periodC. A large quantity of warm food was placed in the refrigerator within the last 24 hoursD. The refrigerator is near a heat source	<ul style="list-style-type: none">A. Set the temperature control dial to a cooler settingB. Open the door only as long as necessary. Check door gasket for proper sealC. Set the temperature control dial to a colder setting temporarilyD. Please look in the "Protection From Heat and Moisture" section

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Heavy build-up of frost, possibly also on the door seal NOTE: This is normal during high humidity periods. Frequent door openings will also cause heavy frost buildup	A. Door seal is not air-tight (possibly after reversing the door)	A. Carefully warm the leaking sections of the door gasket with a hair dryer (on a cool setting). At the same time, shape the warmed door seal by hand such that it sits correctly
Popping or cracking sounds	A. When compressor comes on	A. This is a normal sound of coolant flowing through condenser coils
Refrigerator door does not shut properly	A. The refrigerator door is not properly aligned B. Possible blockage from food containers, shelves, bins, etc.	A. Re-align the refrigerator door. Refer to the "Door Alignment" section B. Ensure nothing is blocking the door
Refrigerator has an odor	A. Foods not properly sealed B. Interior needs cleaning	A. Removed any contaminated foods

LIMITED WARRANTY

All questions about this product should be directed to contact
eleappliance-service@outlook.com

We warrant to the original purchaser that the product will be free from defects in material, parts and workmanship for the period designated for this product. The quality guarantee commences the day the product is purchased and covers up to a period of 3 months..

- Exclusions : This quality guarantee does not apply to the below:
1. If the appearance or exterior of the product has been damaged or defaced, altered or modified in design or construction.
 2. If the product original serial number has been altered or removed or cannot be readily determined.
 3. If there is damaged due to power line surge, user damage to the AC power cord or connection to improper voltage source.
 4. If damage is due to general misuse, accidents or acts of God.
 5. If repair attempts are done by unauthorized service agents, use of parts other than genuine parts or parts obtained from persons other than authorized service companies.
 6. On units that have been transferred from the original owner.

WE SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE DURATION OF THE QUALITY GUARANTEE.

Some states do not allow the exclusion or limitations of incidental or consequential damages, or limitations on how long the warranty lasts. In these cases the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Obtaining Service : To obtain service, product literature, supplies or accessories please contact
eleappliance-service@outlook.com

Please make sure to provide the date of purchase, model number and a brief description of the problem. Our customer service representative will contact you or send detailed return instructions.

We do not warrant that the appliance will work properly in all environmental conditions, and makes no warranty and representation, either implied or expressed, with respect to the quality, performance, merchantability, or fitness for a particular purpose other than the purpose identified within this user's manual. We has made every effort to ensure that this user's manual is accurate and disclaims liability for any inaccuracies or omissions that may have occurred. Information in this user's manual is subject to change without notice and does not represent a commitment on the part .

7. On products that have been purchased as refurbished, like new, second-hand, in a "As-Is" or "Final Sale" terms.
8. To products used in a commercial or rental setting.
9. To products used in settings other than ordinary household use or used other than in accordance with the provided instructions.
10. To damages for service calls for improper installations.
11. To glass parts and other accessory items that are included with the unit.
12. Transportation and shipping costs associated with the replacement of the unit.
13. Food loss for loss due to product failure or delay in service, repair or replacement.
14. Service calls to instruct you how to use your product.
15. Service calls to repair or replace the house fuse, reset the circuit breaker or correct the wiring in the house.

Reserves the right to make improvements to this user's manual and/or to the products described in this user's manual at any time without notice. If you find information in this manual that is incorrect, misleading, or incomplete, please contact us .

