 


Dining room cabinet

ASSEMBLY, CARE & USE INSTRUCTIONS

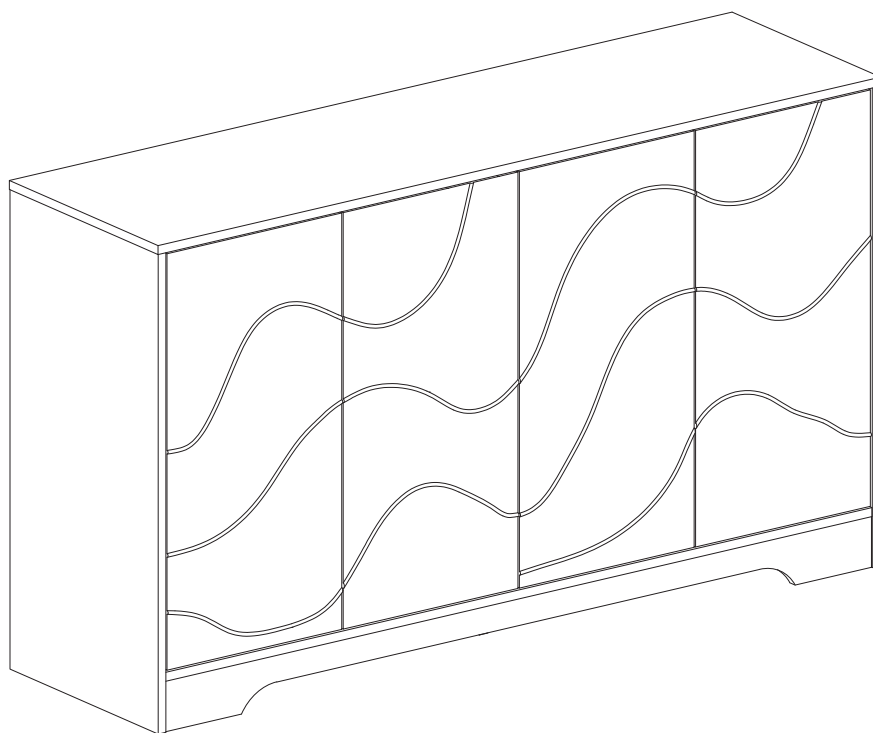

 
THANK YOU

We appreciate the trust to purchase our Dining room cabinet. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing us!




Estimated time for assembly:

60 mins





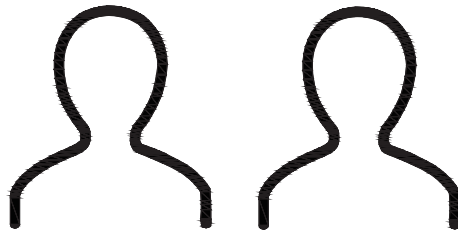



2 Personer

 PACKAGE CONTENTS

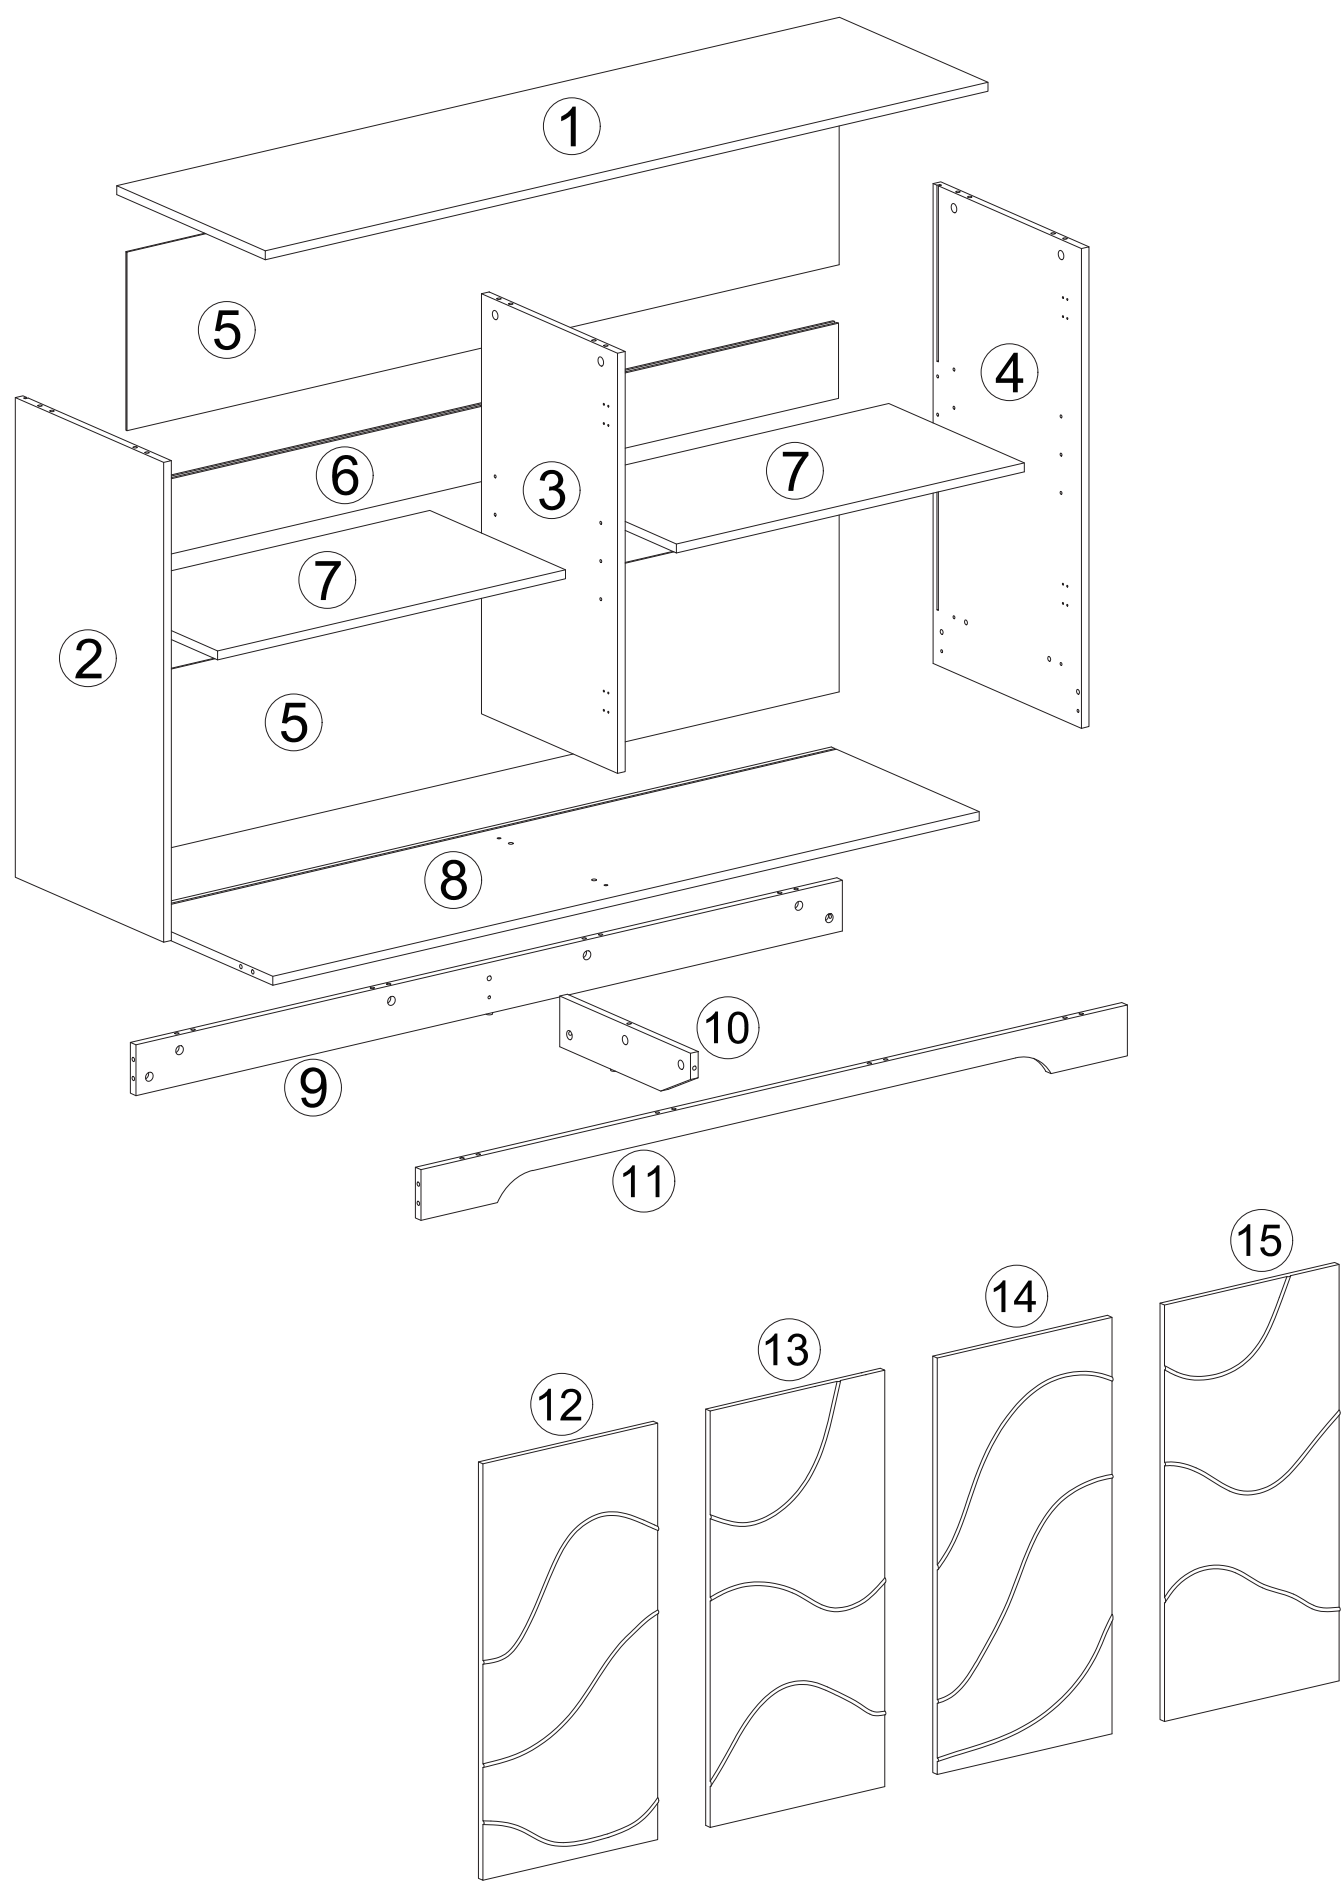


Hardware List

     A		ø8x30mm	Wood dowel	25+2 PCS
B		ø6x33.5mm	Cam bolt	29+2 PCS
C		ø15x9.5mm	Cam lock	29+2 PCS
D		ø20mm	Sticker	29+2 PCS
E		ø5x48mm	Screw	4 PCS
F		ø5x18mm	Shelf support pin	8+1 PCS
G		ø3.5x12mm	Screw	8+2 PCS
H		15x15x10mm	Back buckle	12 PCS
I		ø3x16mm	Flat-head screw	12 PCS
J		190x20mm	Anti-slip strip	2 PCS
K		ø8x40mm	Plastic expansion	2 PCS
L		ø4x38mm	Screw	2 PCS
M		ø4x14mm	Screw	2PCS
N		ø35mm	Hinge	4 PCS
O		ø35mm	Hinge	4 PCS
P		ø4x14mm	Screw	48+2 PCS
R			Push to open piece	4 PCS



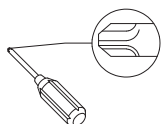 


Philips head screwdriver required for assembly
(not included)




 
Step 1

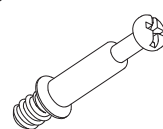




B x11

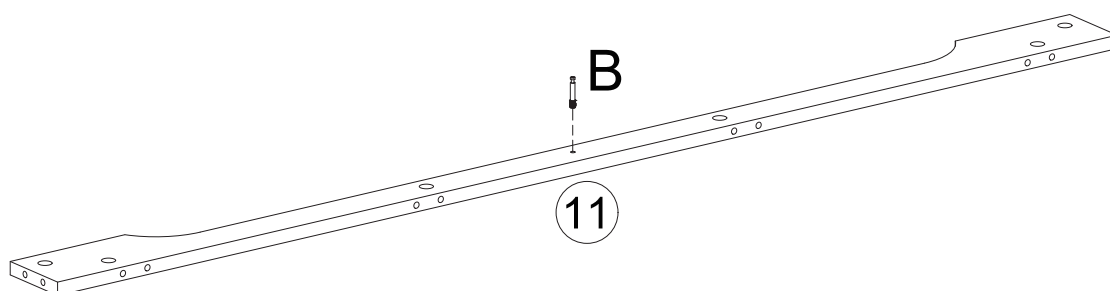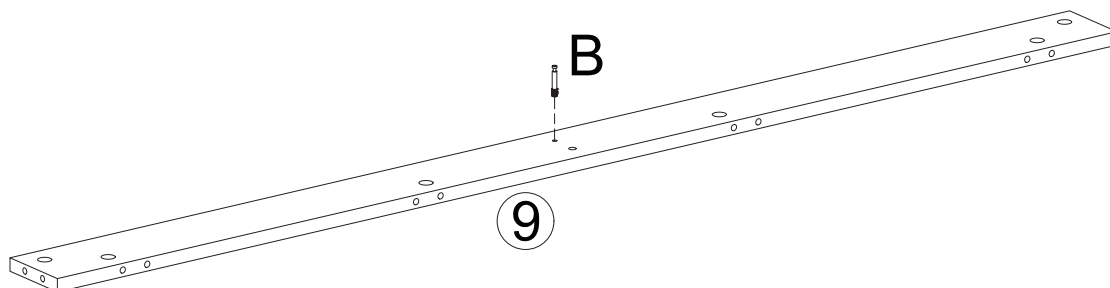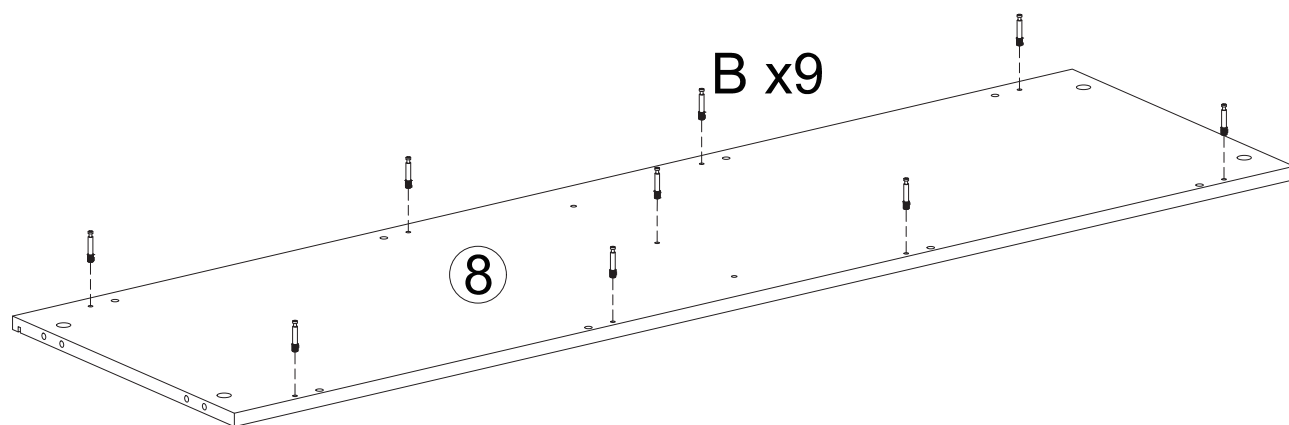   

  
 
 
Step 2

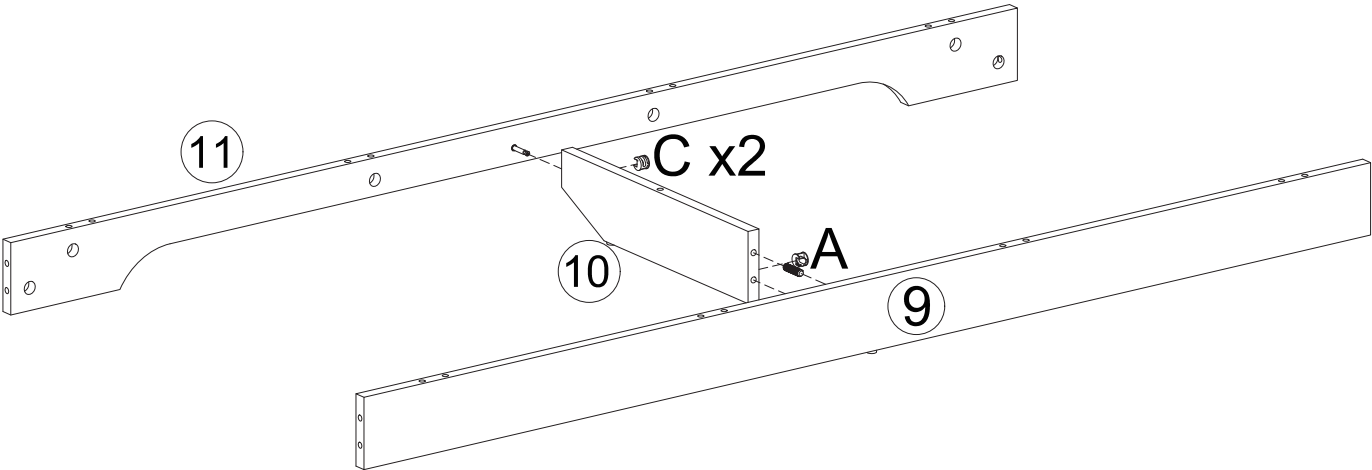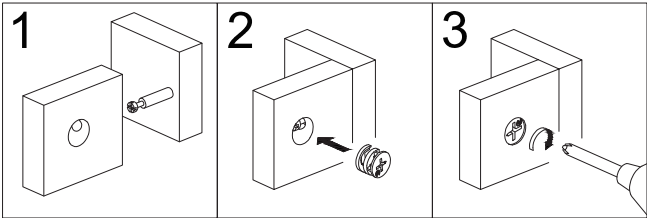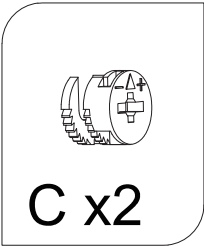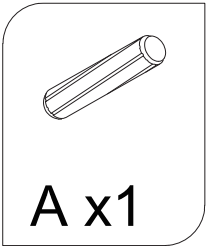

 
 
 
Step 3

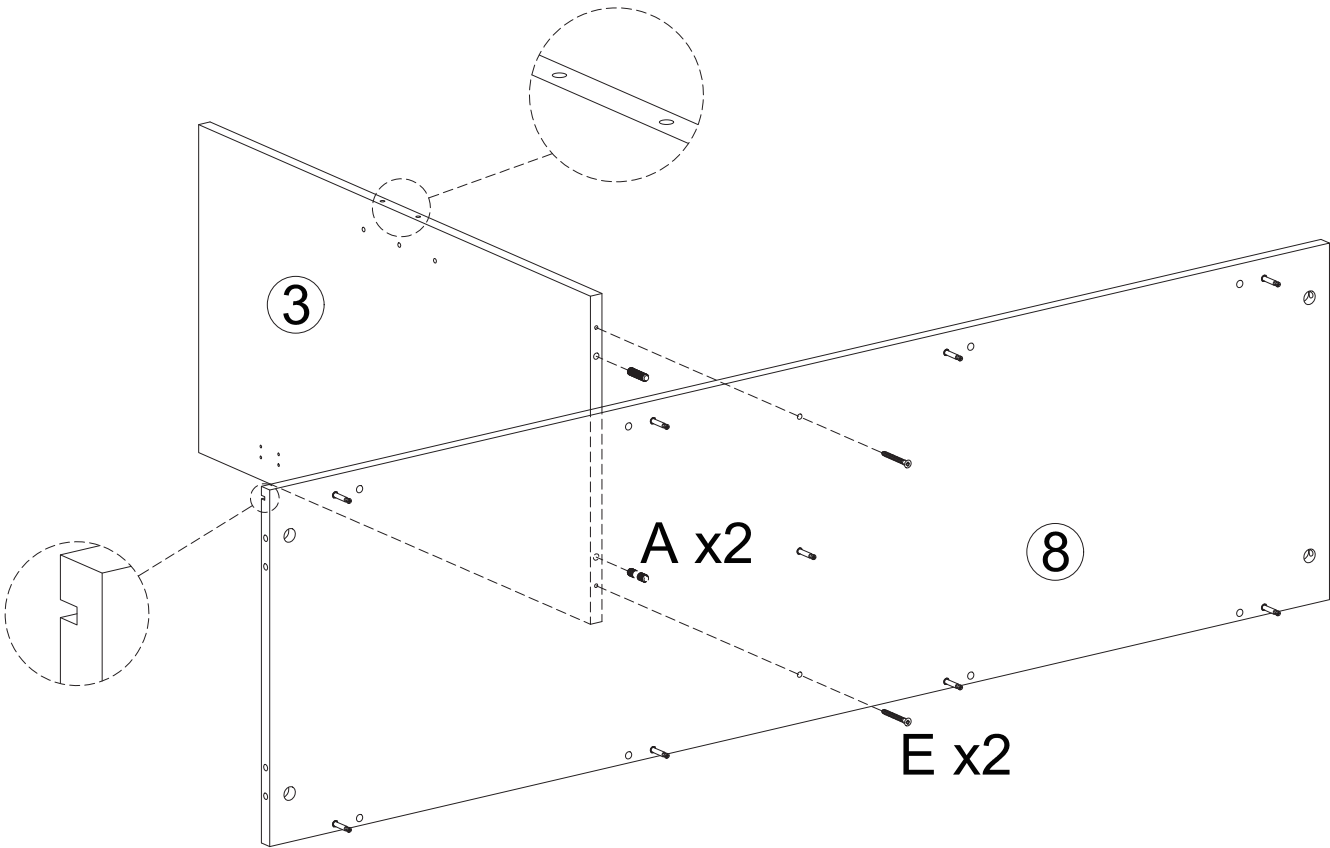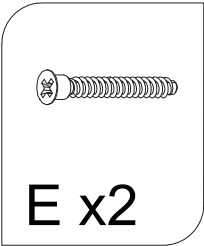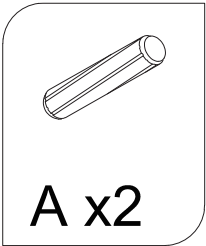



 
 
 
Step 4

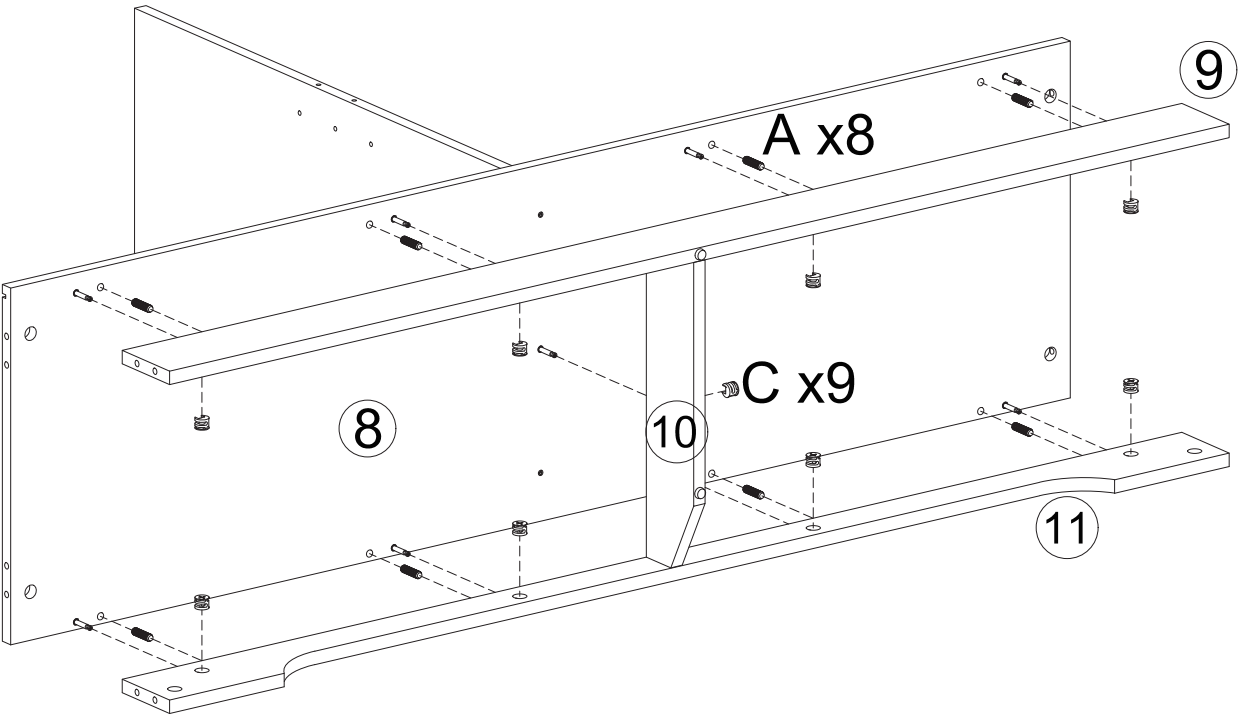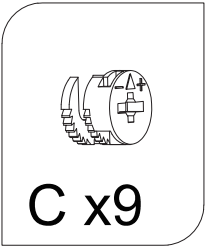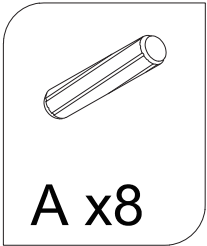


 
 
 
Step 5

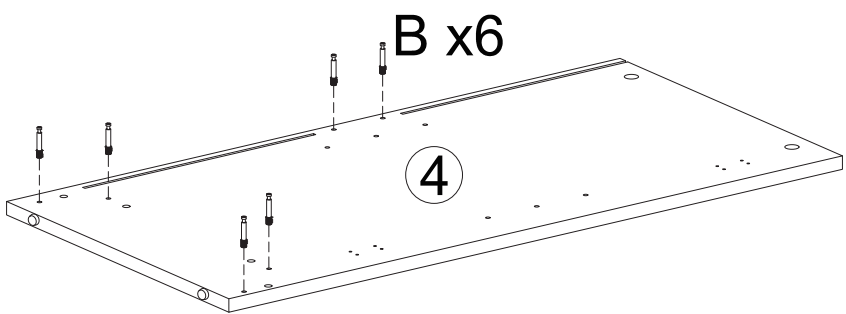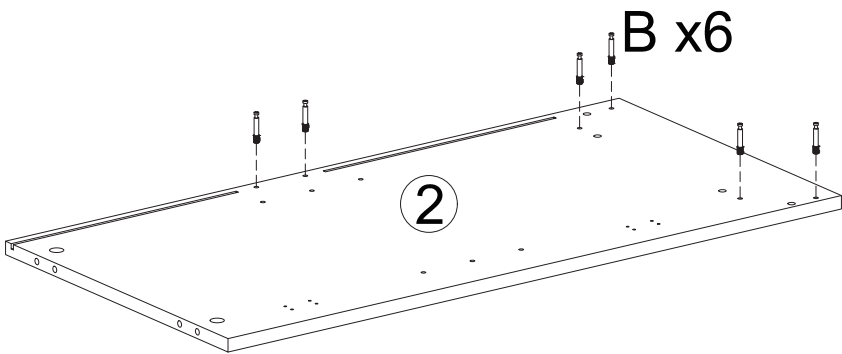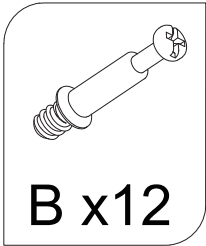


 
 
 
 
 
Step 6

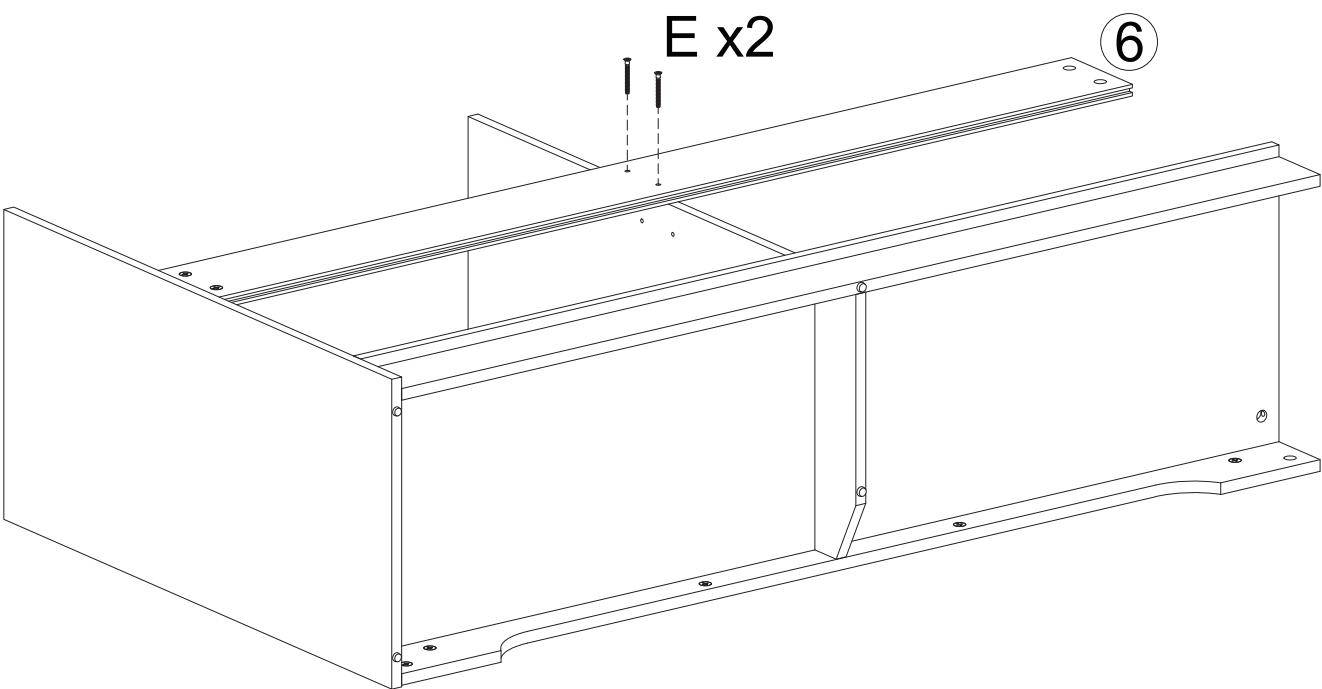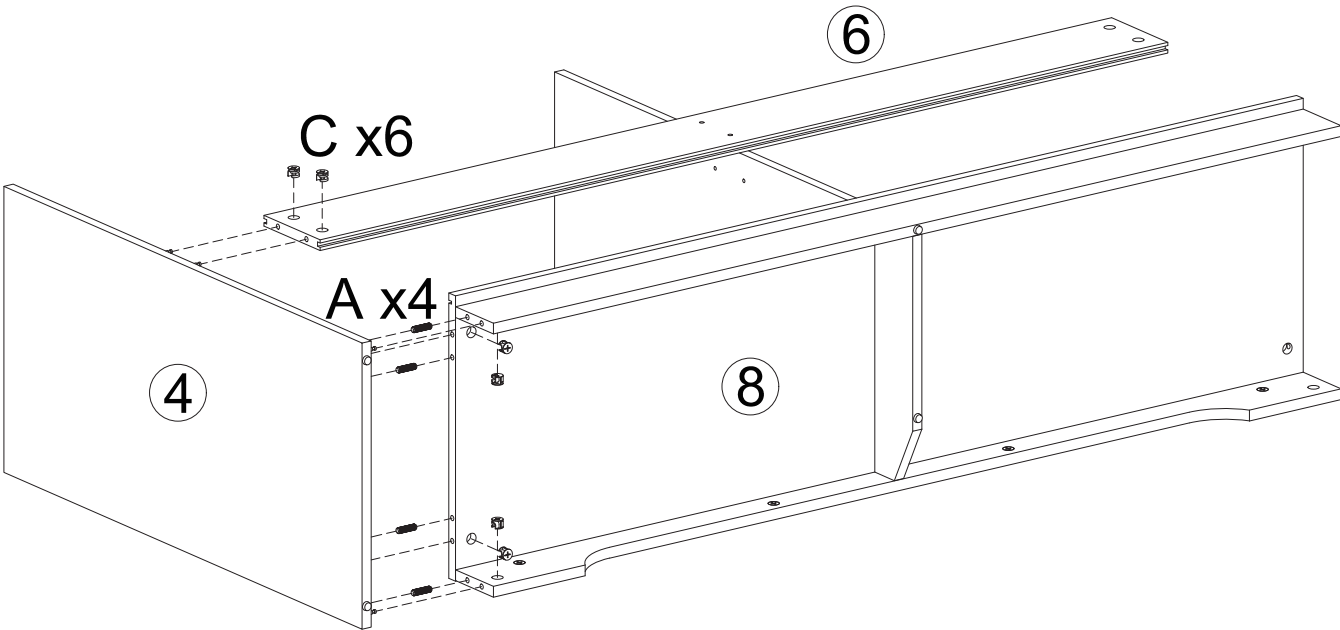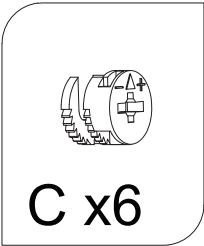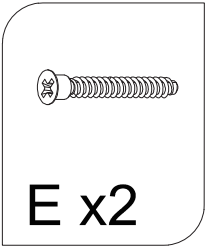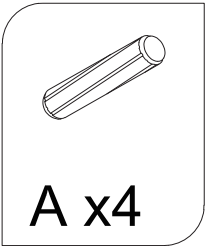

   
 
Step 7

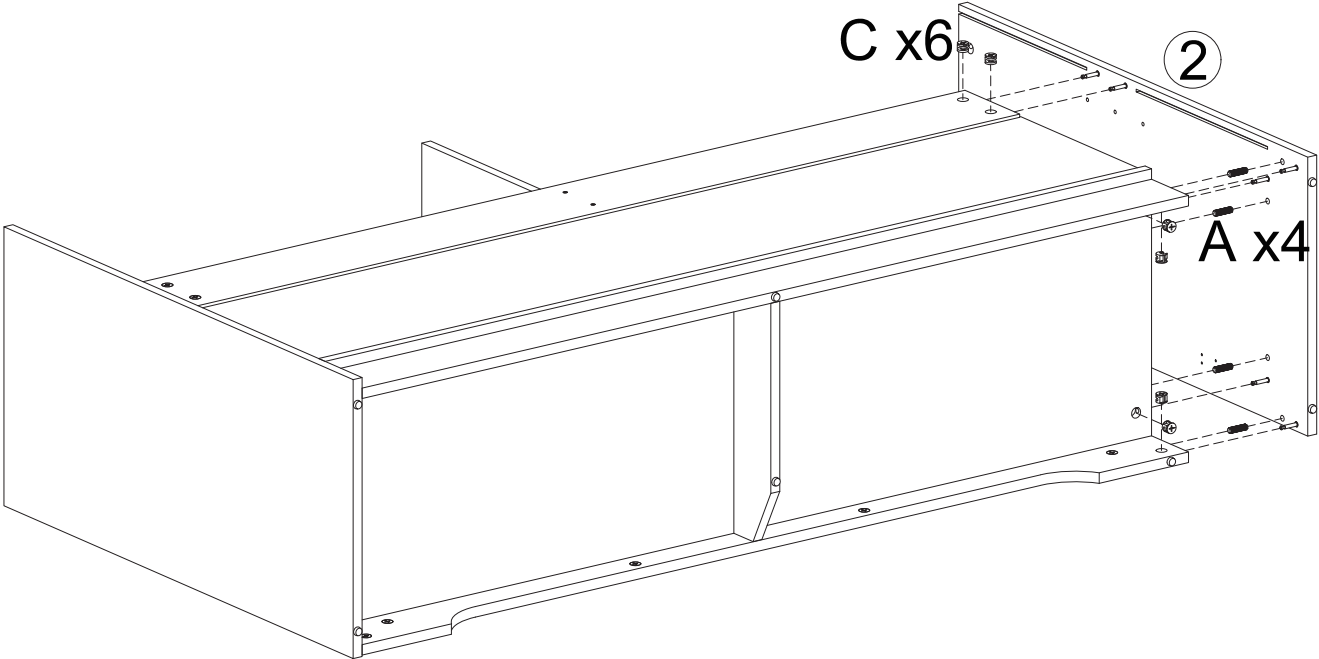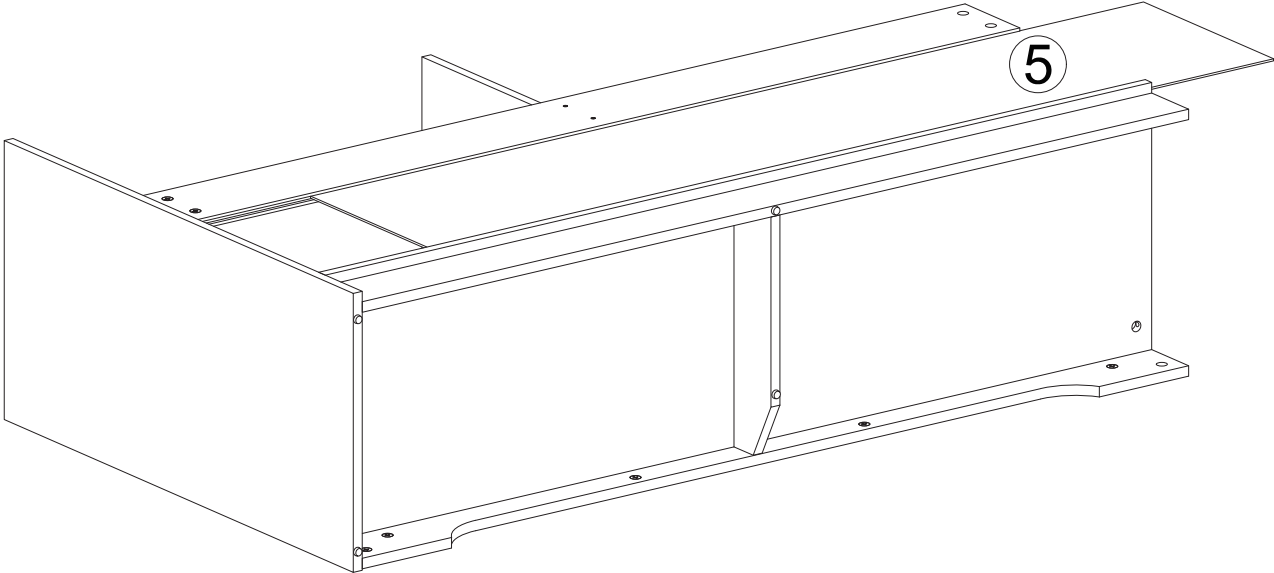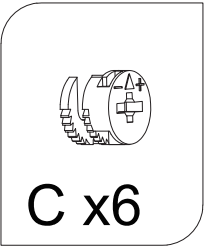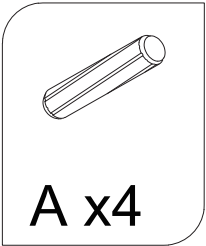


 
 
 
 
 
 
Step 8

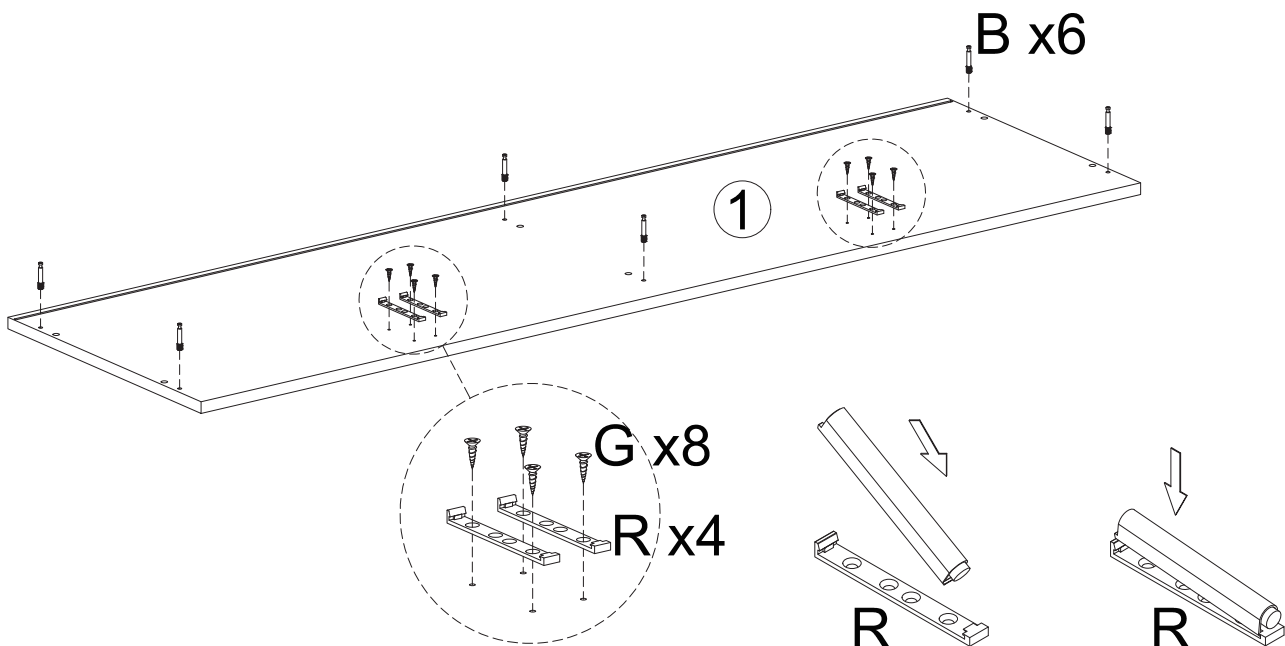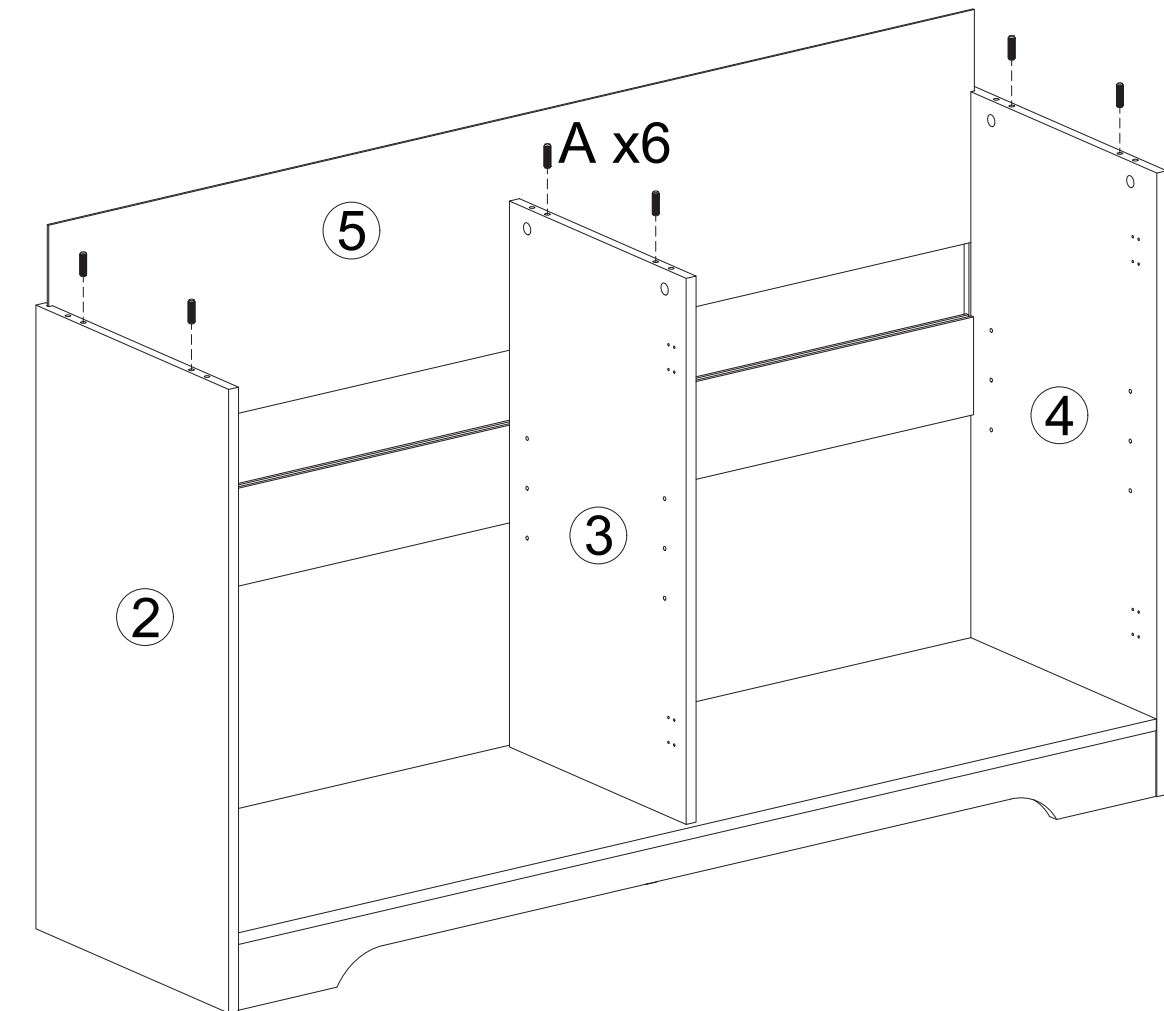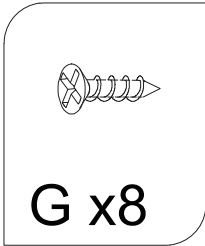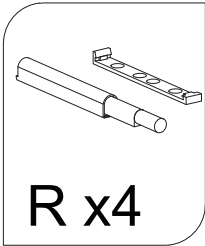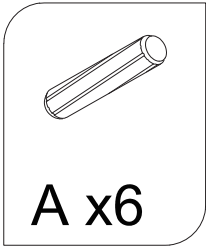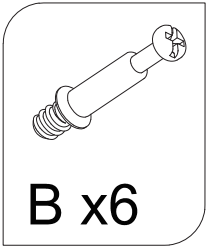



 
 
Step 9

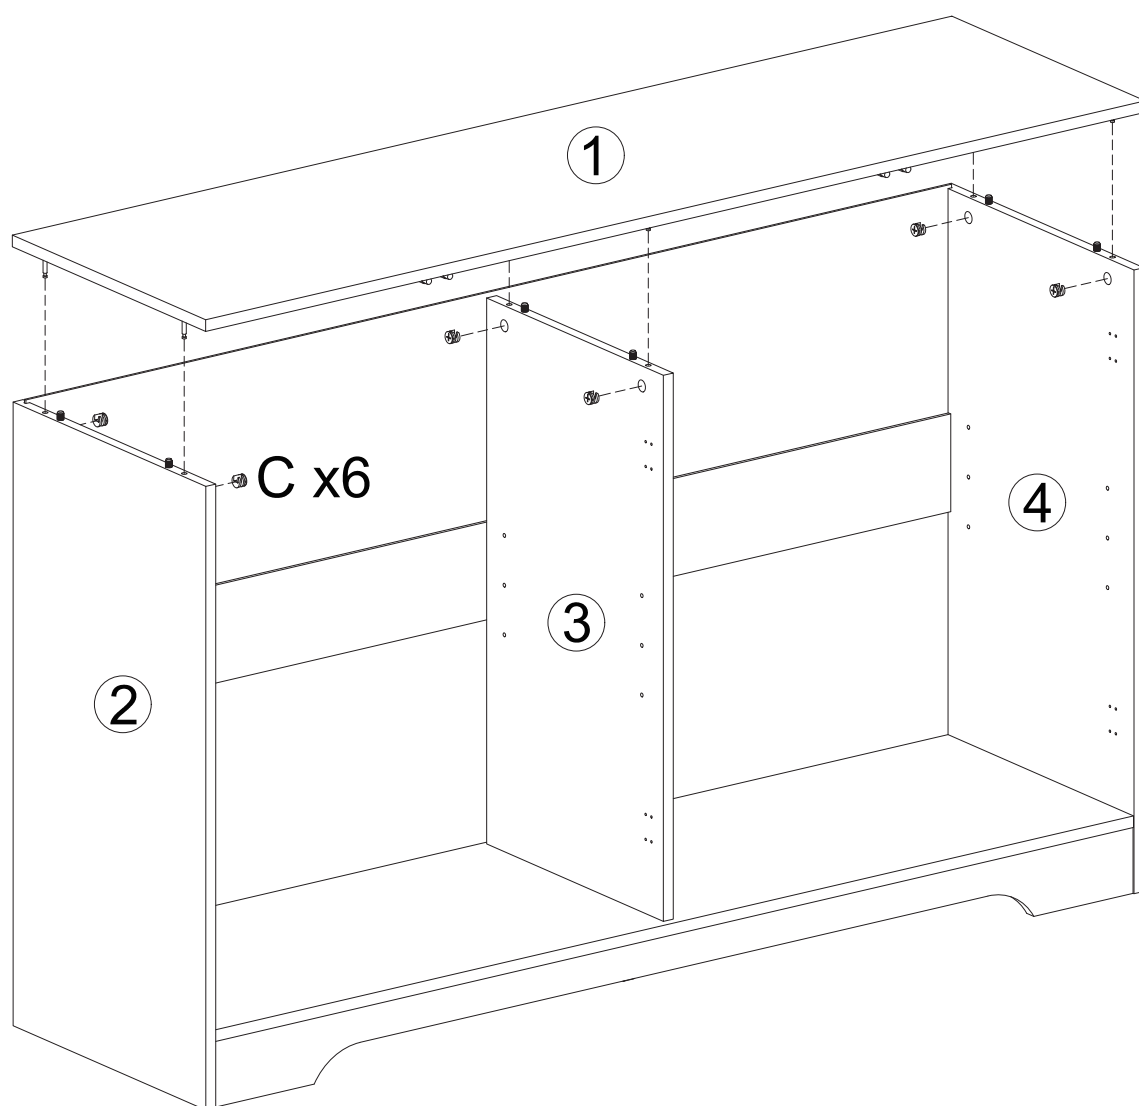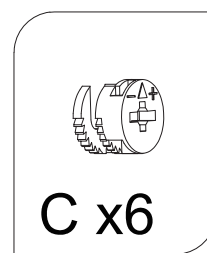

   
 
 
 
 
Step 10

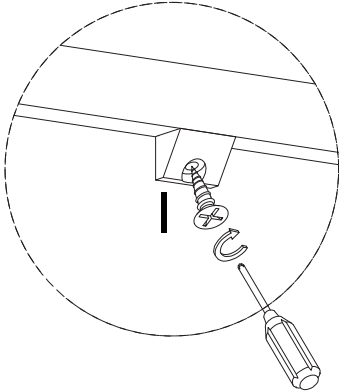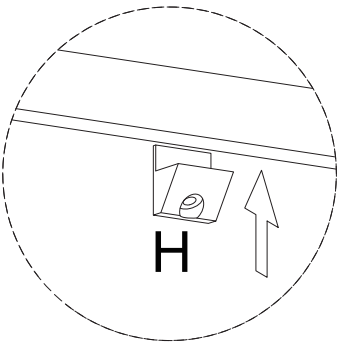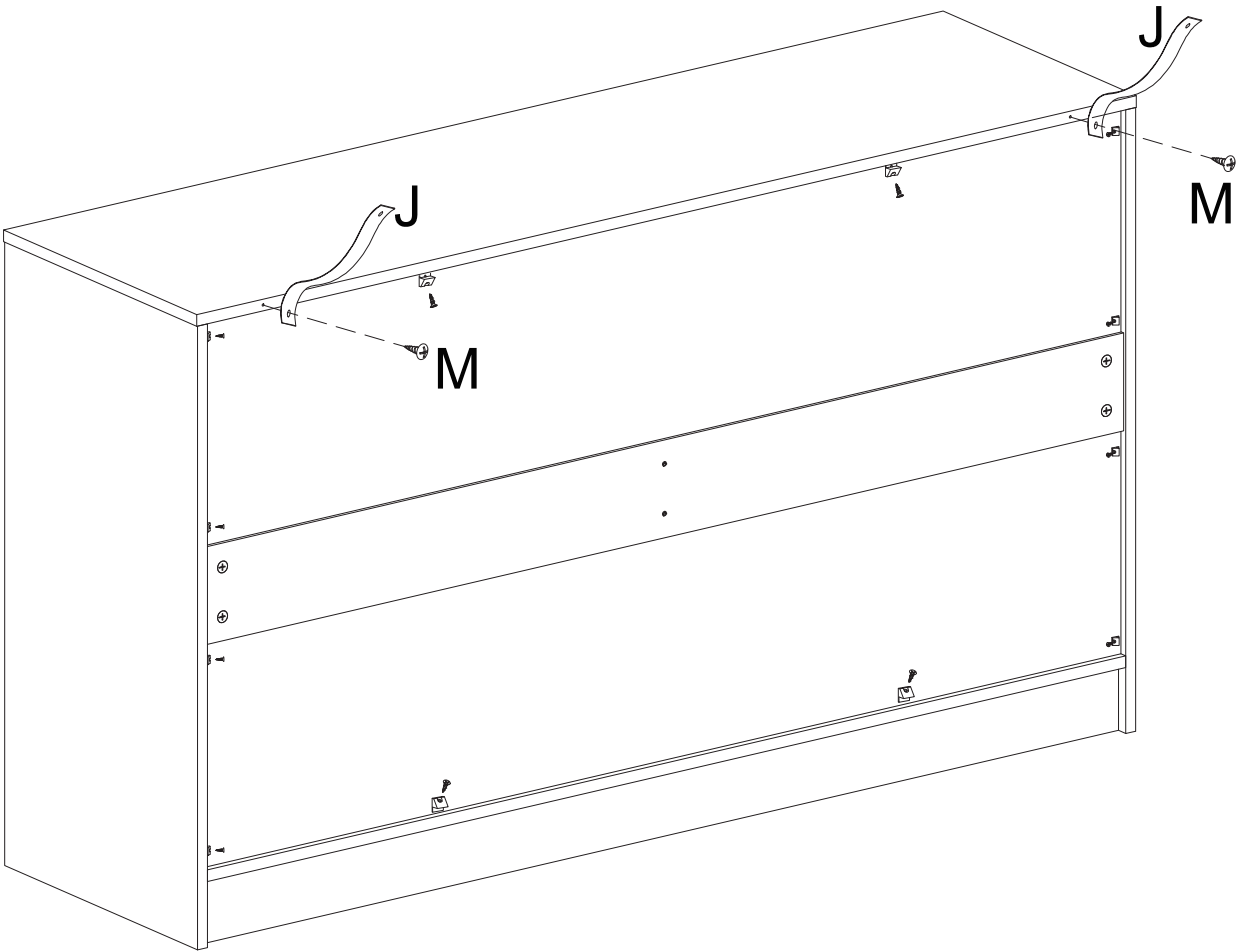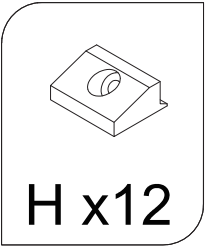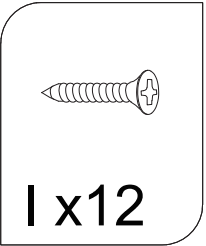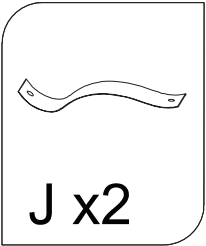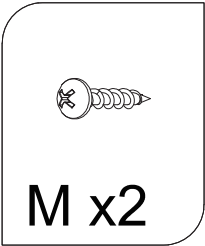

    Step 11

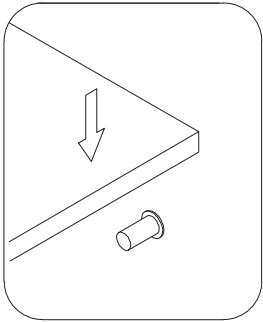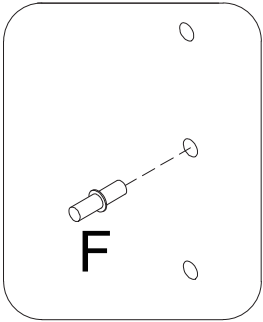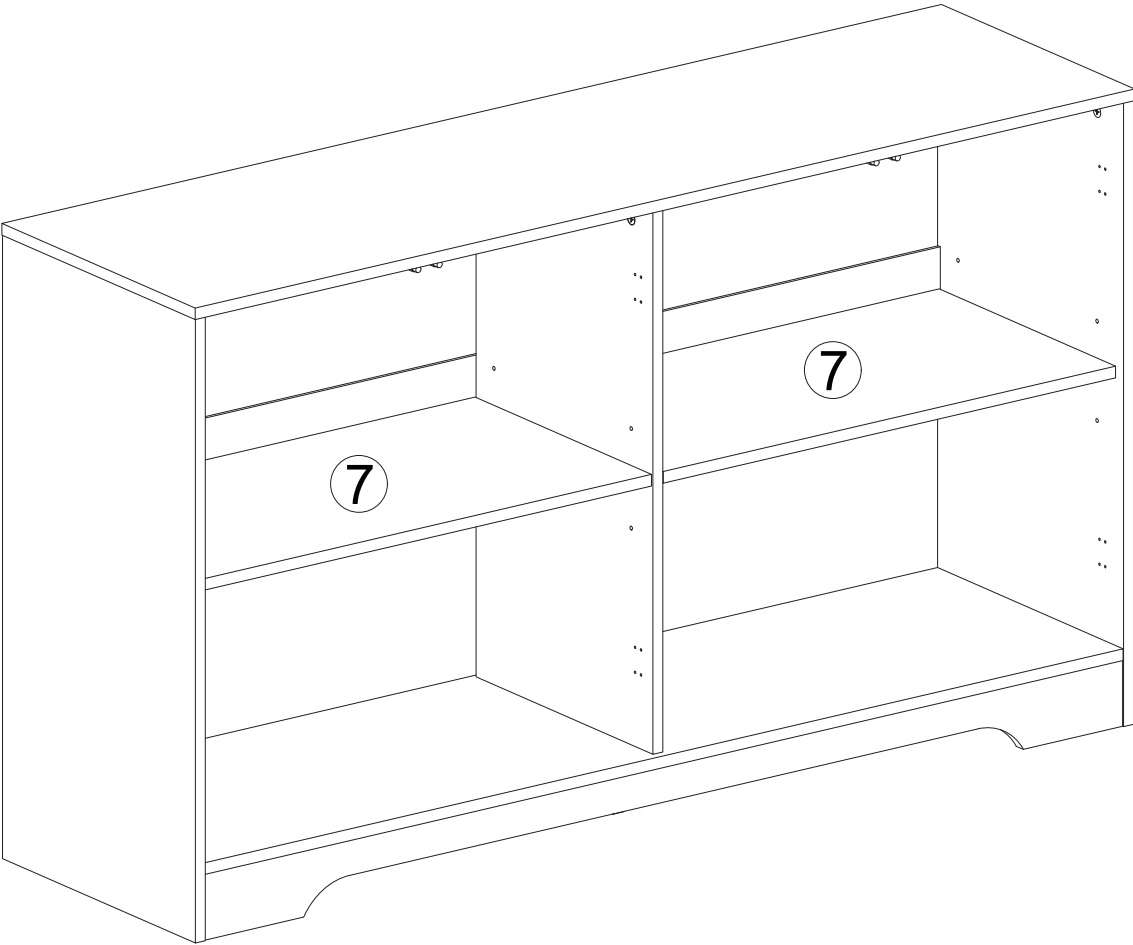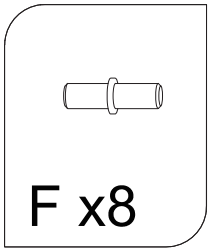

    
 
Step 12

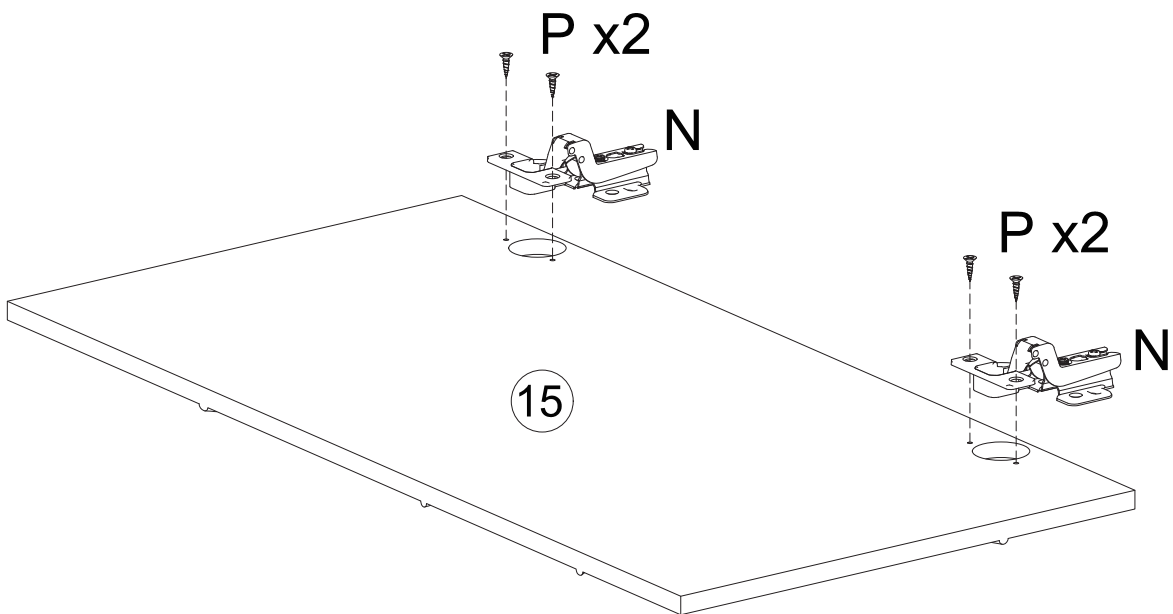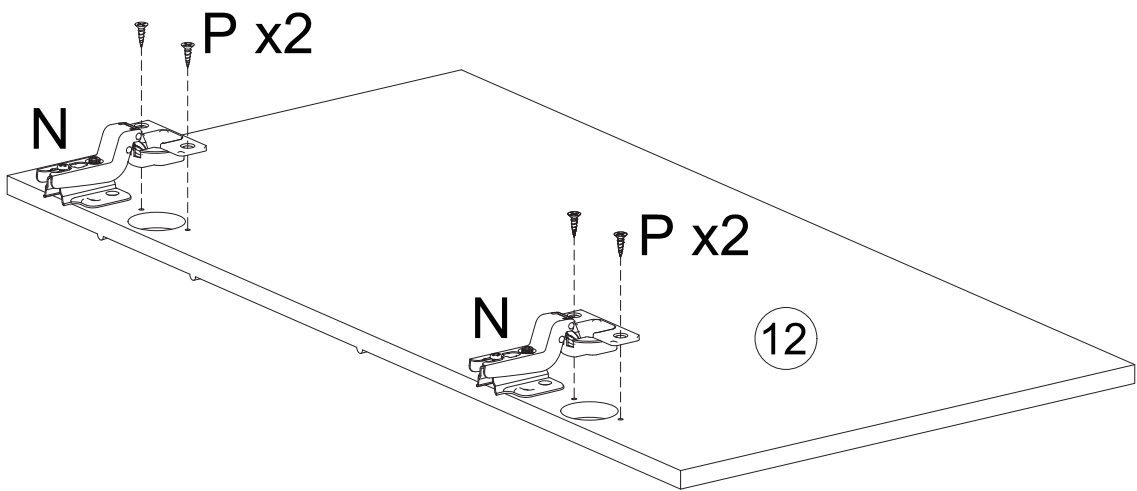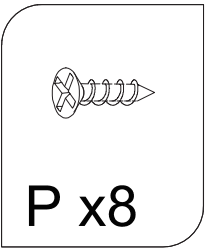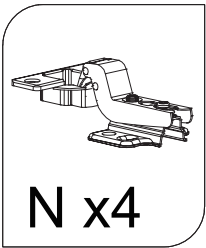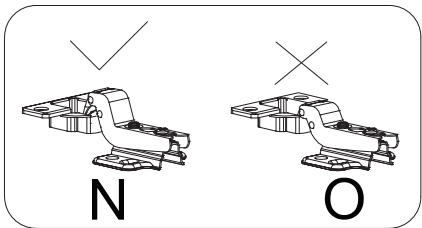

Step 13



 
 
P x8

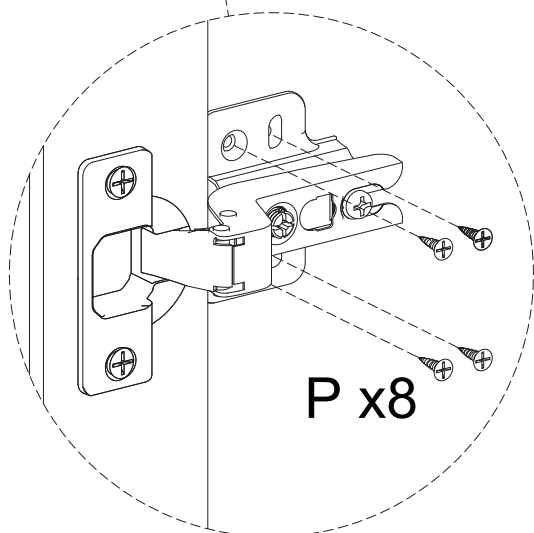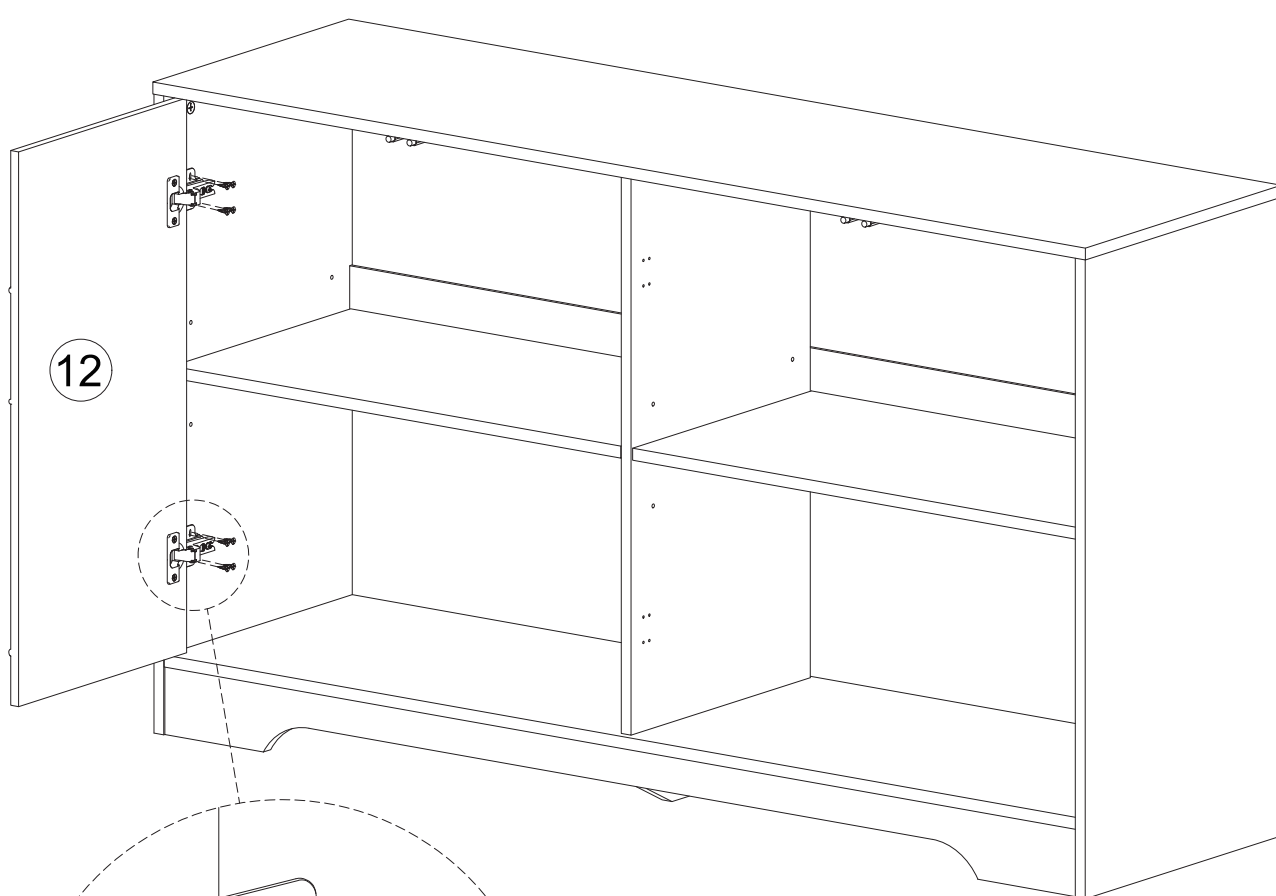






Step 14



  P x8

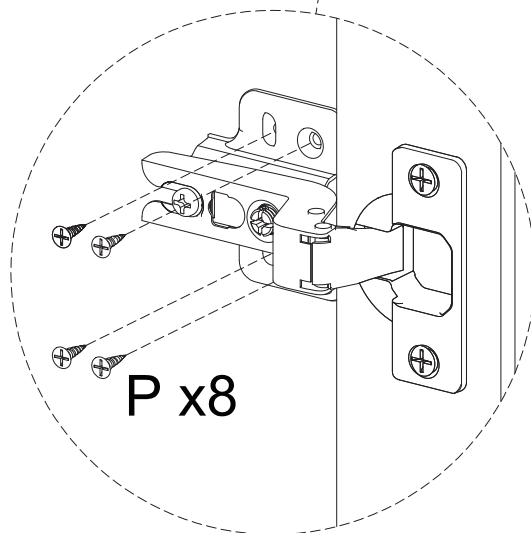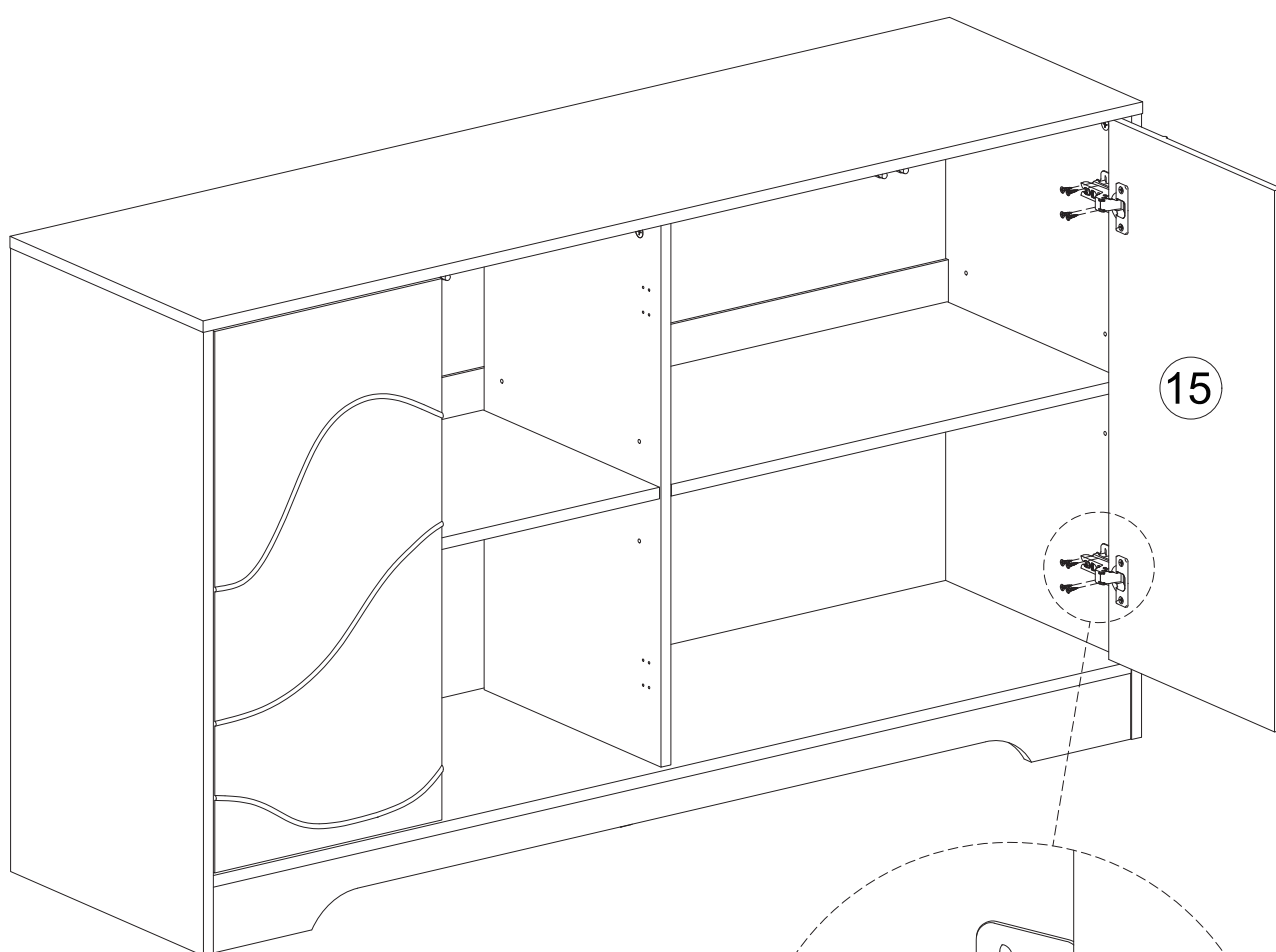

    
 
Step 15

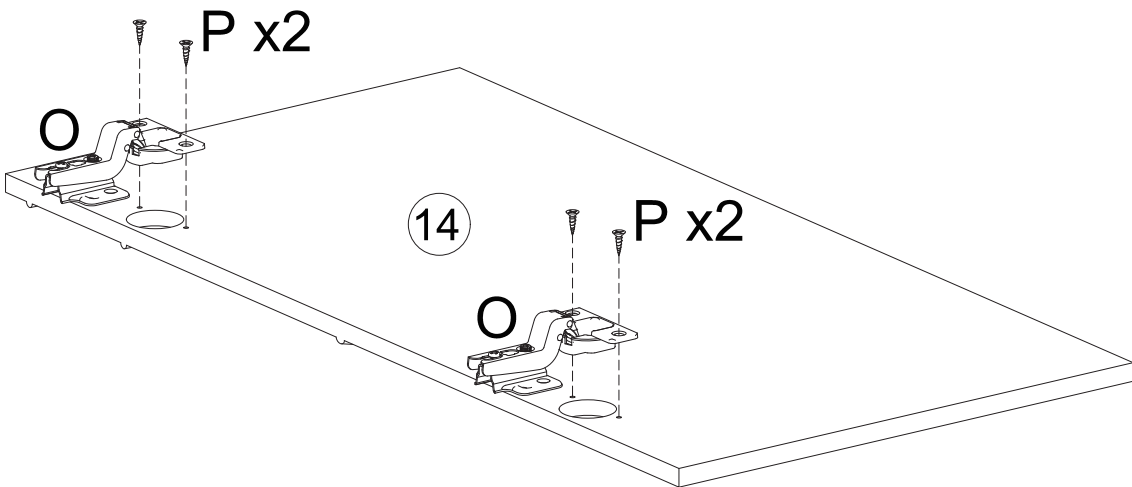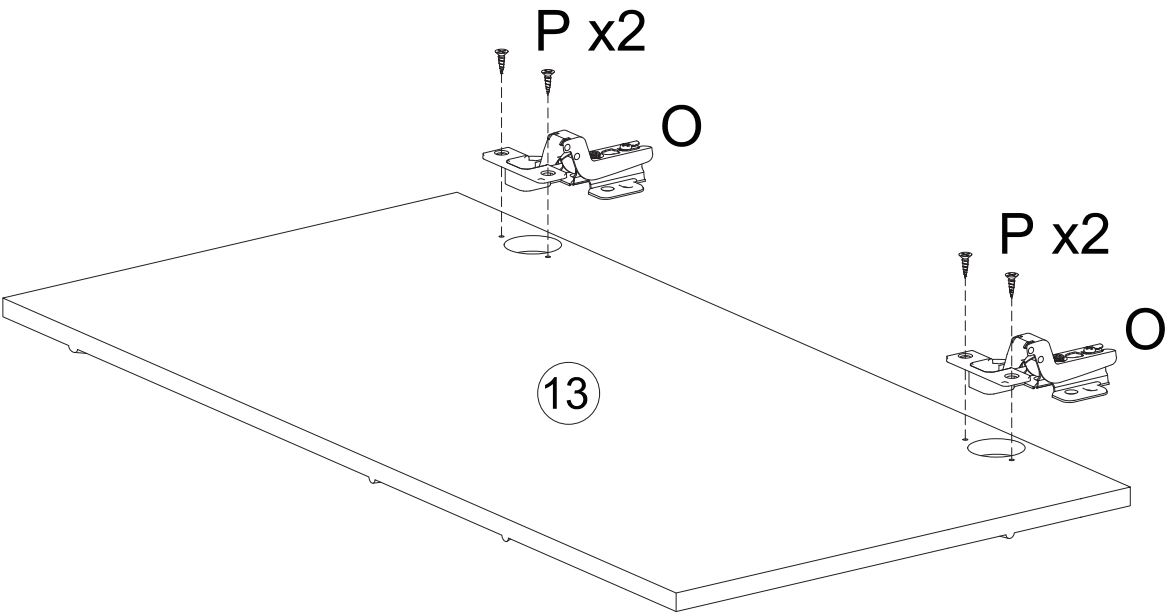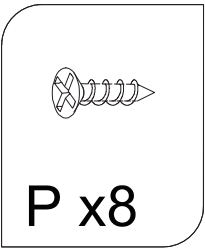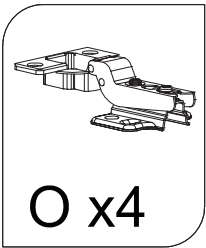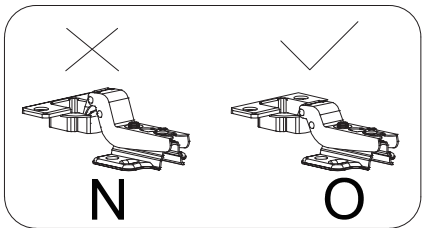

Step 16



 
 
P x8

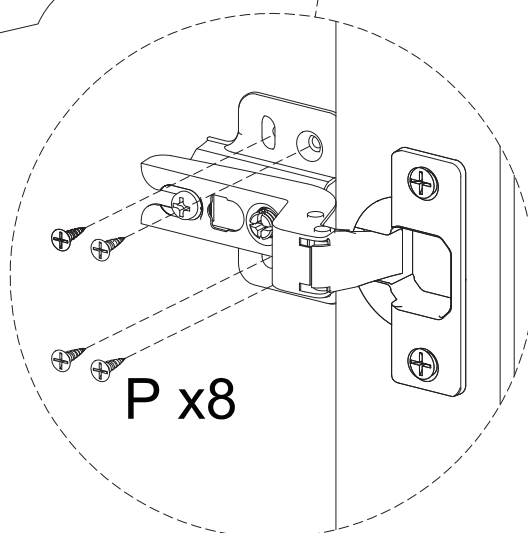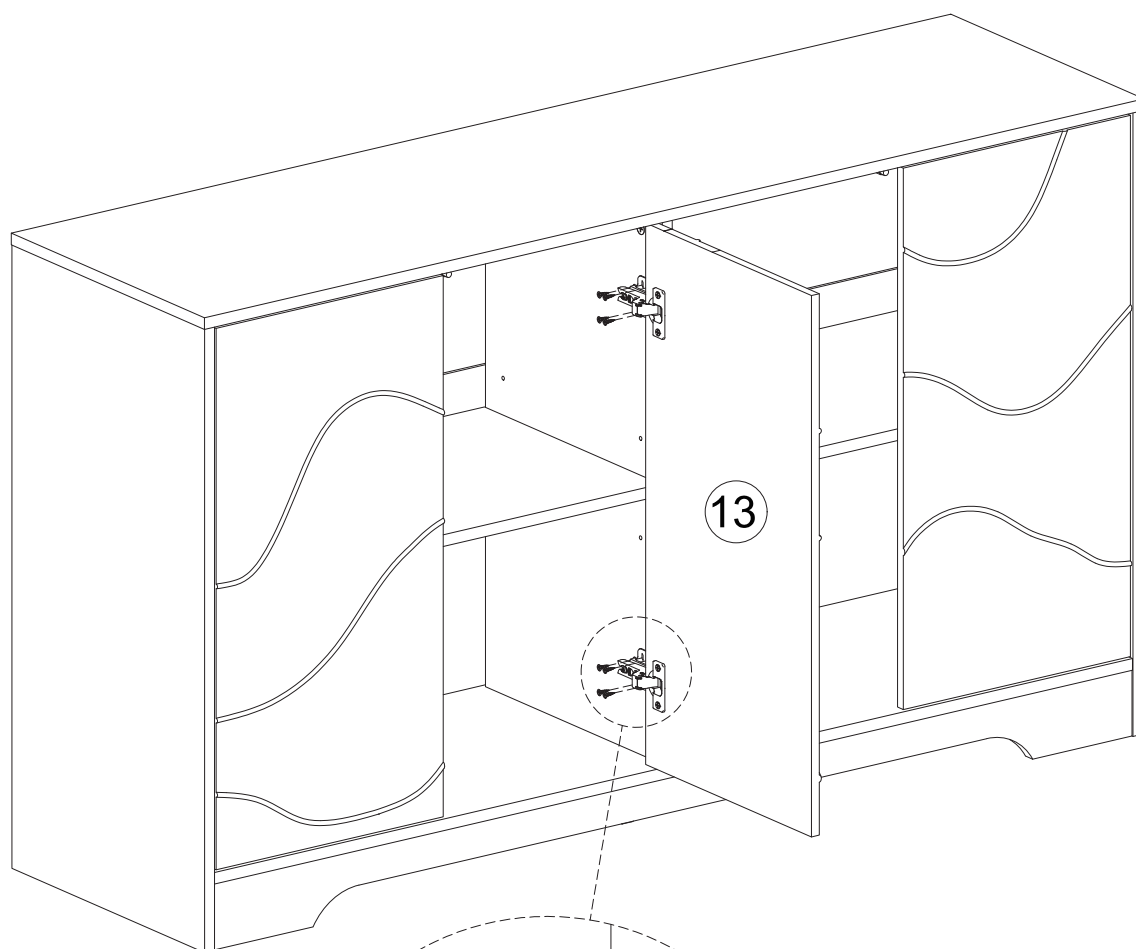




Step 17



  P x8

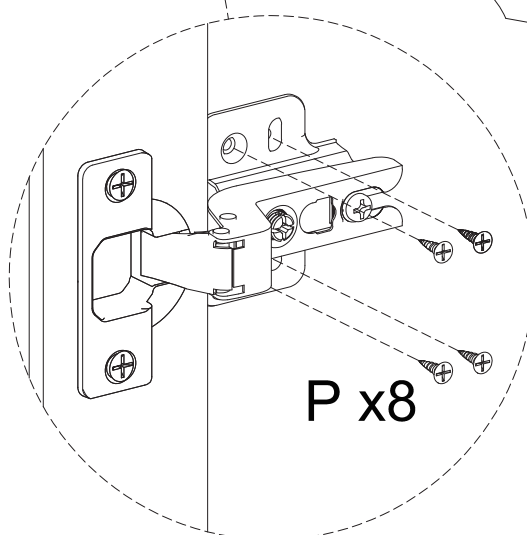
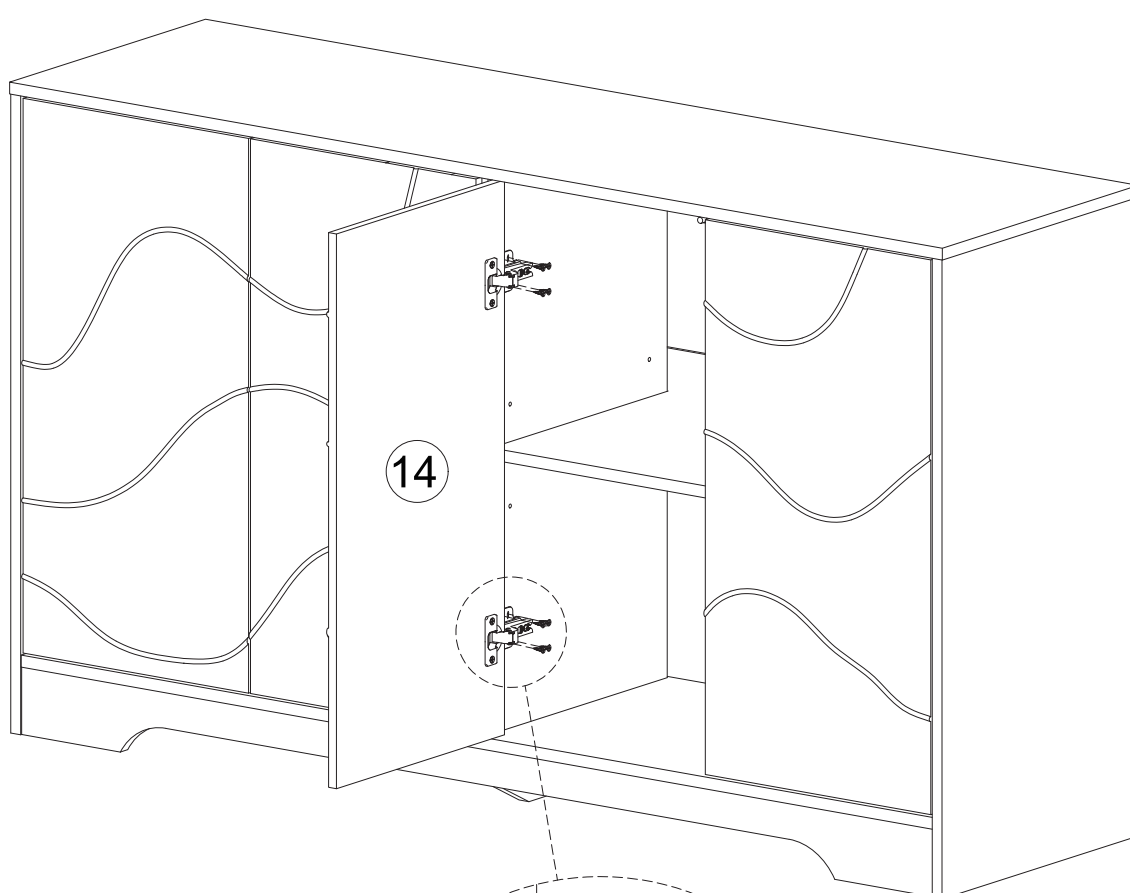


   Step 18

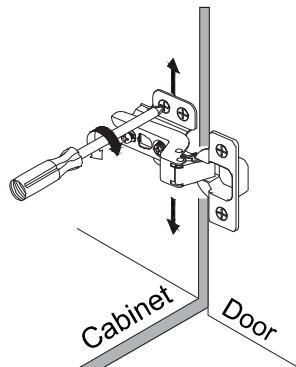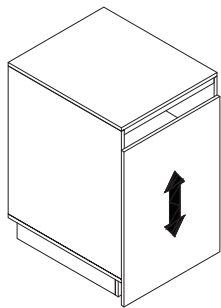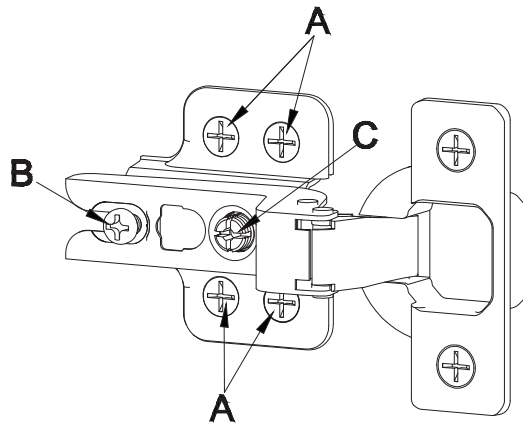



To adjust the vertical height.

  Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

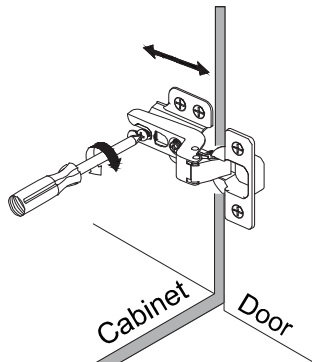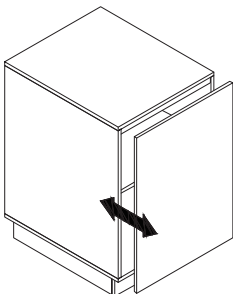

To adjust depth.



 
 
Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

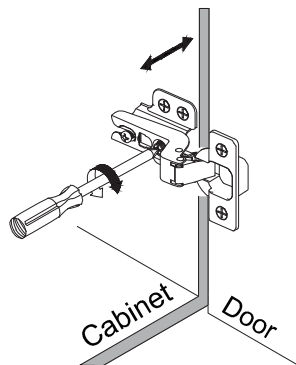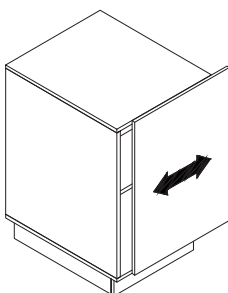

To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.

    Step 19

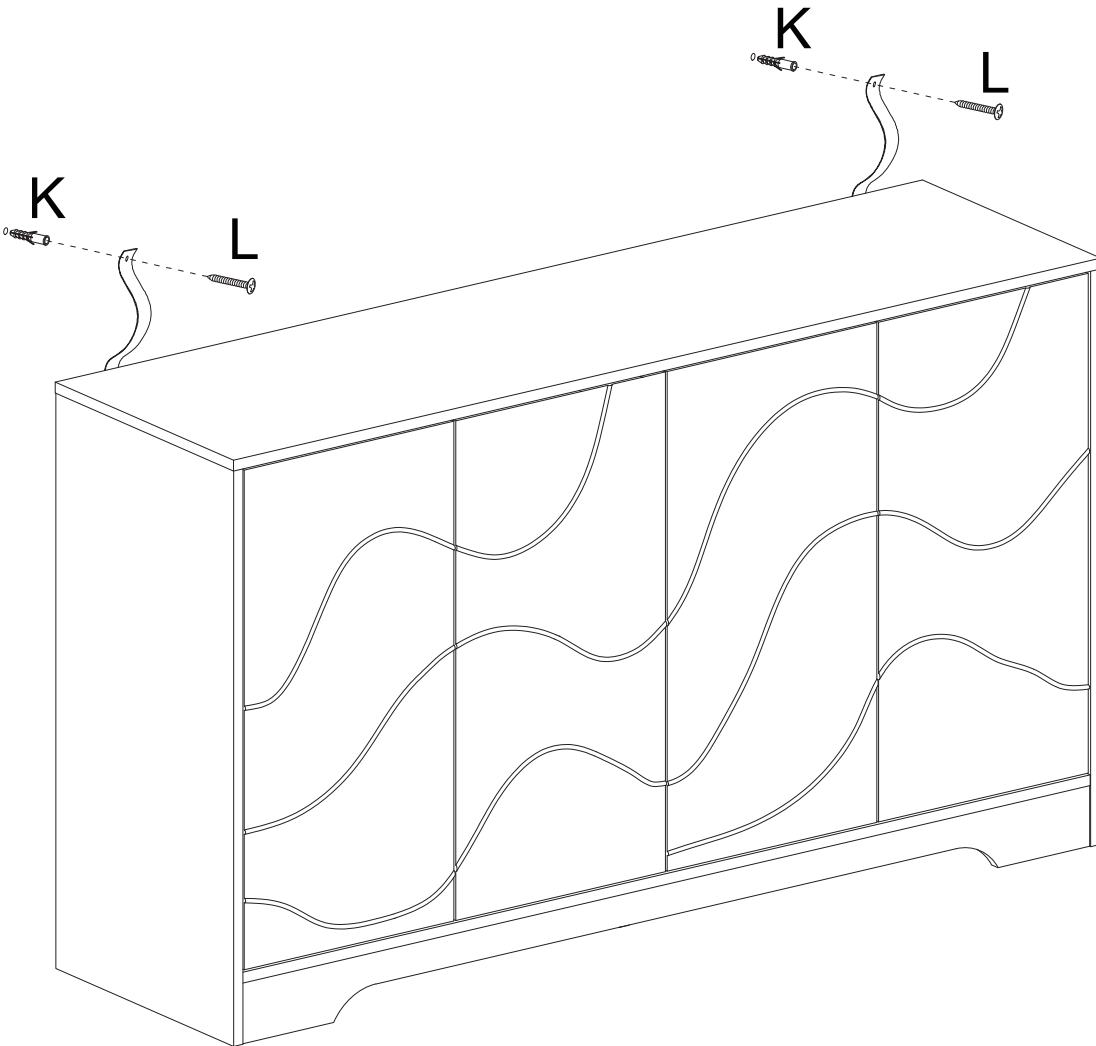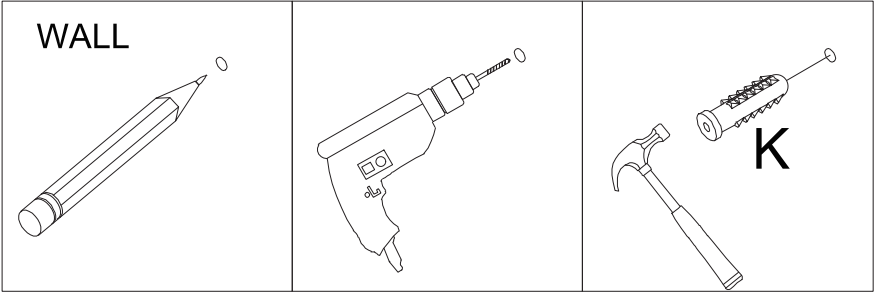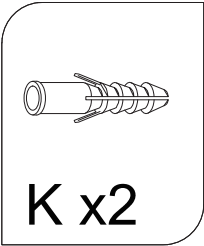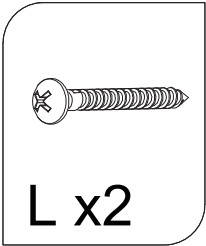

Step 20

