

4 Drawer Storage Chest with Charging Station

ASSEMBLY INSTRUCTIONS

Before You Begin: A power drill, Phillips screwdriver, and rubber mallet required for assembly (Not Included).

Please identify all component parts and hardware pieces required before you begin. Carefully remove all of the components from the packaging and set aside for assembly. Assemble on a soft surface to prevent scratching during assembly.

Caution:

Tighten all components securely before use. Failure to do so may result in personal injury. DO NOT use any sharp objects to open plastic wrapped components as damage to product or components may result.

Warning:

CHOKING HAZARD - Small Parts. Adult Assembly Required.

DO NOT ALLOW CHILDREN TO CLIMB ON FURNITURE

Serious or fatal injuries can occur from furniture tipping over. You must install Tipping Restraint Hardware (where included) to help prevent the unit from tipping and causing accidental injury, instability, death or damage. The tipping restraint is intended only as a safety measure, it is not a substitute for proper adult supervision.

To help prevent furniture from tipping over it must be permanently attached to the wall. Anti-Tip Safety Wall Straps suitable for the unit weight and wall materials (if not included) should be purchased and installed.



Congratulations!

You just purchased a piece of happiness. We believe you can transform your spaces into the most inspired places with furnishings that are the perfect combination of form, function and style. As original innovators of online furniture retail, we offer the best selection of popular, contemporary styles at cool, comfortable prices. And, with decades of proven shipping and packaging expertise, our Extended Quality Checklist ensures a rewarding, hassle-free experience time and time again. It's just what you need to bring your vision to life.



Share it on social

& Tell a friend! #Spaces2Places



Write an online product review where purchased



Let us help! Contact our customer support.



We pride ourselves on providing an excellent customer experience starting right here with your package and instructions. Everything you need should be right where you need it, so you can get to enjoying your new item ASAP. But despite our best efforts, sometimes "slips happen."

EVERY GROUP PRODUCT



Quality & Durability Tested



Packaged with Care



Shipped from our U.S. Facility



Designed for Easy Assembly




PARTS


① Side Frames	A B	1
② Wooden Top		1
③ Frames		2
4 Frame		1
⑤ Floor Gildes	4	4
6 Screw	M6X25mm	4
⑦ Screw	<u> </u>	4
8 Drawer Flooring	$A \longrightarrow B$	4
Socket		1


① Screw	<u> </u>	4
① Wall Mount Kit		2
① Wrench	5	1
(1) Hex Wrench		1
① Drawer	A	2
16 Backboard	0	1
17 Handles		4


STEP 1

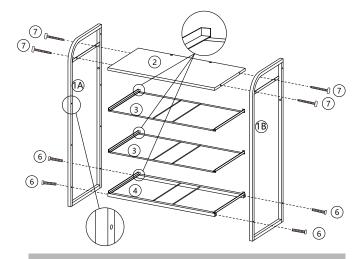


 
STEP 2 STEP 3



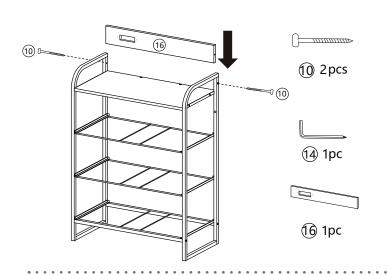

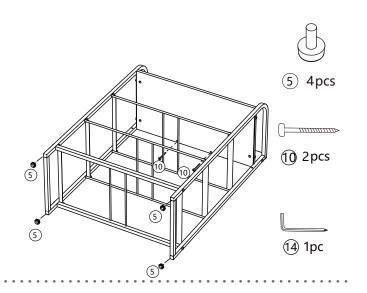


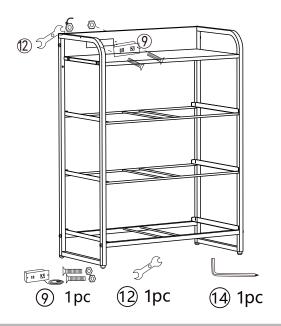

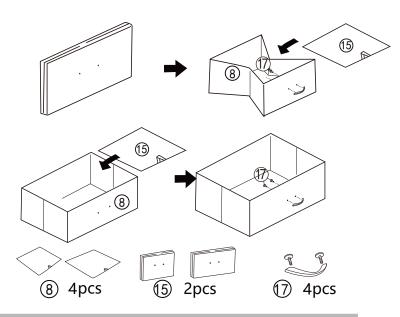


STEP 6

STEP 7

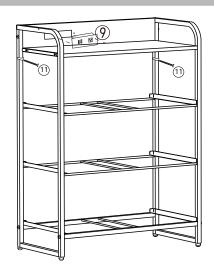

Unwind the power cord and place the dresser in the desired location near an outlet. Wrap the Anti-Tip Straps around the frame on the left and right sides and ensure the metal grommets are overlapping. Mark the wall where the wall anchors will be inserted. Drill the pilot holes then gently tap the wall anchors into position with a rubber mallet.

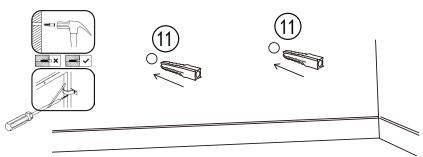


STEP 8

Place the dresser back into position, ensuring you have access to the power cord, then align the grommet holes with the wall anchors. Insert the wall mount screws through the grommets and into the wall anchors then tighten. Once attached to the wall, insert the drawers and plug the power cord into the wall outlet.



Top max loading 40 lbs Drawer max loading 5 lbs

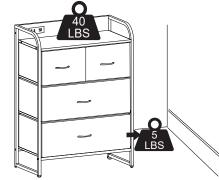

Quality and Safety Guidelines:

- · Please follow the static and dynamic weight capacity limits provided on this item.
- Please use this item on a stable, level surface only. All legs, feet should contact the flooring surface when in use. Do not use this item if any instability is detected.
- Please install and use anti-tipping devices/wall anchor kits as instructed by the assembly instructions. Serious or fatal crushing injuries can occur from tipping furniture. The wall anchor kit is not a substitute for proper supervision. Use of the tip over restraints may only reduce, but not eliminate the risk of tip over.
- Never push, pull or drag this product.
- Do not climb, hang, stand or sit on this item. Do not climb, pull or hang on drawers. Do not use
 this item as a TV stand. Do not place heavy objects on top of this product. Never open more
 than one drawer at a time.
- Keep fingers away from all edges of the drawers when opening and closing the drawers to avoid pinching.
- Use only approved USB cords and devices.
- Place heaviest items in the lowest drawers.
- The item is intended to be used indoors.
- Please inspect this product regularly to make sure there are no damaged or worn parts. Also
 inspect to make sure all hardware is tightened correctly and securely.
- If any parts are damaged or worn, please stop using the product. Repair this product with manufacturer supplied parts only.
- For product longevity, product safety and product integrity, protect from wet and humid weather or other wet, humid or moist conditions and store indoors in a dry location.