

HD

HAUTE DECOR

7.5' Pre-lit Slim Grand Bank Fir
600 ct. Color Changing 8-Function LED Lights
Item # DCCT7506



IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

PARTS LIST

- 1 EA. TREE STAND (WITH 3 SCREWS)
- 1 EA. TREE SECTION A (BOTTOM)
- 1 EA. TREE SECTION B (MIDDLE)
- 1 EA. TREE SECTION C (TOP)

ASSEMBLY

CAREFULLY REMOVE THE CONTENTS FROM THE CARTON AND KEEP THE CARTON FOR FUTURE STORAGE. BE SURE TO UNTANGLE ANY WIRES THAT MAY BE TANGLED WITH OTHER ITEMS. PLEASE DO NOT FORCIBLY REMOVE ANY CONTENTS.

Step 1: Locate the **TREE STAND**. Rotate the legs until the three (3) holes on the inner and outer walls of the hub align, and the stand forms an “X” shape (see **Fig. 1**). There are three (3) screws with the stand. Insert the screws into the holes, but do not turn all the way in. Leave space inside the hub for the tree pole to slide down.



Fig. 1

Place the stand where you are going to set up the tree. **THIS PRODUCT IS SUITABLE FOR INDOOR USE ONLY.** **▲IMPORTANT: DO NOT PLACE THE TREE WHERE IT IS LIKELY TO WOBBLE DUE TO UNEVEN FLOORS OR THICK CARPETING. PLACE THE TREE ON A LEVEL SURFACE.**

Step 2: Find **TREE SECTION A**, tagged with the letter “A”. Remove the green cap (see **Fig. 2**) that is covering the bottom of the pole. It is a protective cover only and can be kept for storage if desired. Insert **TREE SECTION A** into the **TREE STAND**. Do not force the pole. It will slide down to its correct position. Make sure the pole is seated firmly in the stand. Turn all three screws evenly until they touch the pole. If Tree Section A is not sitting straight, then simply loosen the screws, adjust the tree pole, and retighten the screws.



Fig. 2

Remove any packing material and allow the branches to fall into place. The branches are connected to the tree pole by metal hinges (see **Fig. 3**). **NOTE: SOME BRANCHES MAY CATCH ON ONE ANOTHER. IF THAT OCCURS, SLOWLY PRESS DOWN ON EACH BRANCH UNTIL IT FALLS INTO PLACE.**



Fig. 3

Step 3: Locate **TREE SECTION B**, tagged with the letter “B”. Insert **TREE SECTION B** into **TREE SECTION A**. Check the section is seated securely and allow the branches to fall into place.

NOTE: THE TOP, INNER PART OF THE POLE TO **TREE SECTION B** HAS A GREEN POLE ADAPTER INSIDE. THIS POLE ADAPTER IS NOT TO BE REMOVED. **TREE SECTION C** HAS A GREEN STEM COMING OFF THE BOTTOM OF ITS POLE THAT FITS SNUGGLY INTO THIS ADAPTER AND GIVES STABILITY TO YOUR TREETOP.

Step 4: Locate **TREE SECTION C**, tagged with the letter “C”. Insert **TREE SECTION C** into **TREE SECTION B**. Make sure the section is seated securely. The branches are not hinged to the pole in this section, so you will need to pull the branches down slightly by hand. It is recommended to shape the Top Section “C” before placing it on the tree. For further information, see the section on **SHAPING**.

Step 5: Connect the light set plug(s) from each tree section into the section below securely. To find the connections easier, the light sets have a male/female plug with a numbered label. For the connection from Section A to B, there will be a label with the number one ①. For the connection from Section B to C, there will be a label with the number two ②. Further secure the plug connection by screwing the outer cover into place.

▲IMPORTANT: DO NOT REMOVE THE NUMBERED LABELS ① ON YOUR LIGHT SETS. THEY WILL HELP YOU TO EASILY FIND THE PLUGS AND CONNECT THE FOLLOWING YEAR.

Step 6: In **TREE SECTION A**, there is a power adapter that is to be guided down through the tree section to the floor. Insert it into a grounded 120V wall outlet in your home or into a U.L. approved power strip (not included).

FIRST USE: YOUR TREE IS SET TO A DEMO MODE TO SHOWCASE ALL THE AVAILABLE FUNCTIONS. TO EXIT THE MODE, HOLD THE FOOT PEDAL (SEE FIG. 4) DOWN FOR 5 SECONDS. A LIGHT WILL ALSO FLASH INSIDE THE FOOT PEDAL TO SIGNAL THE MODE HAS ENDED. NOTE: IF THE FOOT PEDAL IS HELD DOWN FOR 5 SECONDS AGAIN, IT WILL RE-ENTER THE DEMO MODE.

Tap the foot pedal (see **Fig. 4**) to turn the lights on/off and to switch between light functions. See **Fig. 5** for a list of the functions.



Fig. 4

IF YOU HAVE ANY LIGHTS NOT WORKING, THEN CONFIRM ALL PLUG CONNECTIONS ARE SECURE AND VISIT THE SECTION ON TROUBLESHOOTING FOR LIGHTS.

LIGHT FUNCTIONS:

1. Steady WARM WHITE
2. Steady MULTICOLOR
3. Alternate WHITE & MULTICOLOR
4. Twinkle WARM WHITE
5. Twinkle MULTICOLOR
6. Slow Fade WARM WHITE
7. Slow Fade MULTICOLOR
8. Light Display (Cycles Above Functions)
9. OFF

Fig. 5

SHAPING

SHAPING IS RECOMMENDED SINCE THE TREE HAS BEEN PACKED INSIDE A BOX. THIS TREE HAS MEMORY WIRE IN ITS LEAVES SO ONLY MINIMAL SHAPING IS REQUIRED. THE TREE CAN BE RESHAPED TO ITS ORIGINAL FULLNESS BY BENDING AND SEPARATING THE BRANCHES. FOLLOWING ARE THE STEPS:

1. Turn on the lights as you are shaping the tree.
2. Reference the tree image on the cover of this instruction manual. It will help guide you on how the tree should look properly shaped.
3. Shape by section and layer, starting at the bottom of the tree and working your way up to ensure coverage of the whole tree.
4. Due to the height of the tree, it is recommended to shape the top section before placing it on the tree to avoid shaping from a chair or ladder.
5. On each branch, begin with the tips closest to the pole and work your way to the end of the branch.
6. The tips at the back of the branch, closest to the pole, should be spread out with the tips up and to the sides. At the front of the branch, shape some of the tips down also. Offset the tip from the tip before to hide the tree's pole and fill spaces. Continue spreading the tips until they resemble that of a real tree.
7. After shaping the whole tree, step back and take an overall look. Shift branches to fill any gaps. Your tree is now ready to decorate and enjoy!

CLEANING & CARE

PROPER CLEANING AND CARE WILL HELP PRESERVE THE BEAUTY OF YOUR CHRISTMAS TREE FOR MANY YEARS TO COME. HERE ARE SOME GENERAL TIPS TO FOLLOW:

- Dust gently using a soft cloth or fabric duster.
- Do NOT use any chemicals or solvents to clean.
- Handle the light sets gently. Do NOT pull or tug light sets as this may inadvertently loosen the bulbs.
- Follow all the Storage and Safety Instructions.

STORAGE

TO KEEP YOUR CHRISTMAS TREE IN GREAT CONDITION, IT IS IMPORTANT TO STORE IT PROPERLY AS FOLLOWS:

1. Remove any ornaments and decorations that were added by you and did not come with the tree.
2. Unplug the tree from the power source in your home and disconnect the plug connection between each tree section.
3. Starting with the top, separate each tree section and stand gently, being sure not to roughly handle as it could cause damage to the parts. TIP: If there is difficulty separating the tree sections, apply a small amount of lubricant where the poles join.
4. Compress each tree section by turning it upside down and squeezing the branches together so that it will fit more easily into the storage box or container. You can also tie a ribbon or cord around the sections to secure the branches closer together for storage.
5. Place all the parts gently back into the storage box. The box will help prevent the tree from being damaged should it get bumped in your garage, basement, or other storage location. Tape the box shut to keep out any dust or insects. When packing up the tree, please ensure that there is no stress or strain to the tree.
6. Be sure to store the tree in a cool, dry area free of water and moisture to prevent mold and mildew from accumulating and a musty odor from developing. Exposing your tree to excessive heat or humidity may damage your tree. DO NOT STORE THE TREE IN A DAMP AREA OR IN AN AREA WHERE THE TEMPERATURE EXCEEDS 100°F. STORE THE CARTON FLAT AND **NOT** UPRIGHT ON ITS SHORT END.

TROUBLESHOOTING FOR LIGHTS

IF YOUR LIGHTS ARE **NOT** WORKING, THEN TRY THE FOLLOWING TROUBLESHOOTING STEPS:

1. Check the tree's power adapter for proper connection to a working wall outlet.
2. Step or press the foot pedal on/off.
3. Verify the power to your wall outlet in your home is working properly.
4. Check the light set plugs withing the tree for proper positioning and tight connection. Plugs are keyed to fit one direction only with the flat section of the female plug matching up to the flat section of the male plug.



5. The lights have two settings which are similar, LIGHT DISPLAY and DEMO MODE. Both settings will cycle through the different light functions automatically. Pressing the foot pedal once will exit LIGHT DISPLAY and turn the tree off. If pressing the foot pedal once does not turn the tree off, then the tree is in DEMO MODE. To exit DEMO MODE, hold the foot pedal down for 5 seconds. A blue light inside the foot pedal will also flash to signal the mode has ended.

NOTE: LED bulbs are permanent and cannot be removed from the light sets.

IMPORTANT SAFETY

THIS TREE IS SAFE FOR INDOOR USE ONLY.

PLEASE READ AND FOLLOW ALL THE INSTRUCTIONS AND WARNING TAGS THAT ARE ON THE TREE AND PROVIDED WITH THE TREE.

SAVE THESE INSTRUCTIONS – THIS MANUAL CONTAINS IMPORTANT SAFETY AND OPERATING INSTRUCTIONS.

WHEN USING ELECTRICAL PRODUCTS, BASIC PRECAUTIONS SHOULD ALWAYS BE PRACTICED INCLUDING THE FOLLOWING:

1. **WARNING: Risk of Fire.** Electrical installation in homes involves special wiring methods to run wiring through a building structure. Consult a qualified electrician. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction. Reference the National Electrical Code, NFPA 70, specifically for the installation of wiring and clearances from power and lighting conductors.
2. **CAUTION:** This is an electrical product - not a toy! To avoid the risk of fire, burns, personal injury and electric shock, the tree should not be played with or placed where small children can reach it.
3. Do not use an extension cord.
4. Do not install or use it within ten feet of a pool.
5. Do not use it in the bathroom.
6. Do not use this product if the power adapter or light sets are damaged. Always inspect light sets and electrical cords for signs of damage or wear.
7. Be careful not to overload electrical circuits by plugging too many lights and decorations into a single outlet. Overloaded outlets can overheat and cause a fire.
8. This seasonal use product is not intended for permanent installation or use.
9. Do not secure the wiring of this product with staples or nails.
10. Do not alter the construction of the wiring in any way.
11. Unplug the product when leaving the house, retiring for the night, or if left unattended.
12. Do not use this product for anything other than its intended use.
13. Do not hang ornaments or other objects from the cords or lights.
14. Do not close doors or windows on the product or its light set cords as this may damage the wire insulation.
15. Do not cover the tree with cloth, paper, or any material not part of the tree when in use.
16. Do not mount or support strings in a manner that can cut or damage the wire insulation.
17. Do not mount or place near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
18. Do not place your tree where it is likely to wobble due to uneven floors or thick carpeting. Place on a hard, flat surface.
19. This product should not be used with a voltage converter.

THE FOLLOWING SAFETY INSTRUCTIONS APPLY TO THE POWER ADAPTER PART ONLY.

THE POWER ADAPTER PART ONLY IS RATED FOR INDOOR AND OUTDOOR USE.

TREE AND ALL OTHER PARTS ARE NOT MEANT FOR OUTDOOR USE.

1. **WARNING: Risk of Electric Shock.** When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If you do not have this receptacle, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.
2. **WARNING:** Not to use with receptacles that are weatherproof, unless it is a covered receptacle (attachment plug cap not inserted, and receptacle cover closed).
3. **WARNING: Risk of Electric Shock.** Mount the unit at a height greater than one foot from the ground surface.

FCC COMPLIANCE STATEMENT

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CANADA ISED COMPLIANCE STATEMENT

This device complies with CAN ICES-005 (B) / NMB-005 (B). Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

CUSTOMER SERVICE

THANK YOU FOR YOUR PURCHASE!

Comments or questions?

Contact us at 1-877-359-0115

customerservice@haute-decor.com

Haute Decor

PO Box 1594

Allen, TX 75013



©2024 Haute Decor

Made in China