 


INSTALLATION

 
 
Product Manual

Version: 460141US-01-26A-JQ

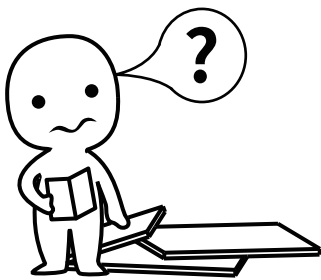


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

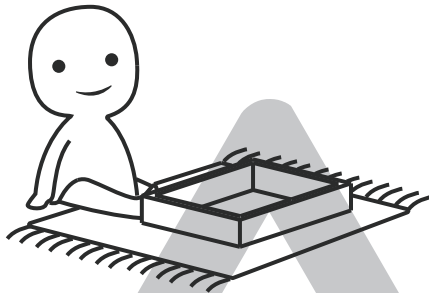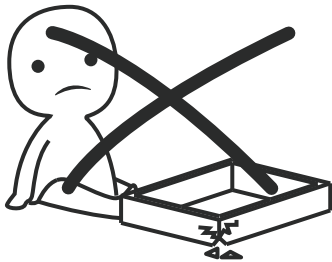



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.

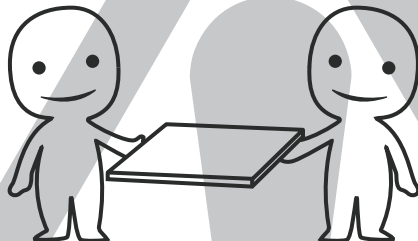

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

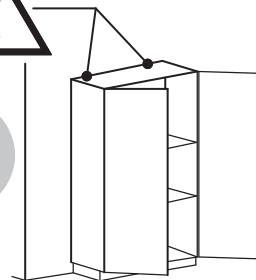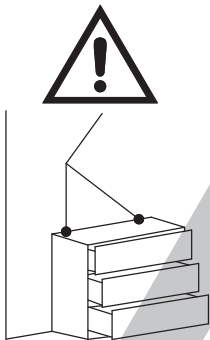

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.










Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

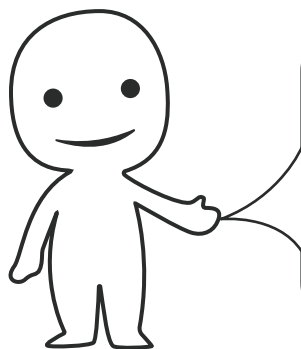


Please prepare the following tools

   

         When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

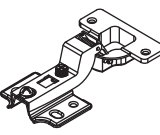A x 111  Ø 6 x 35 mm	B x 111  Ø 15 x 10 mm	C x 66  Ø 6 x 30 mm	D x 49  Ø 4 x 35 mm	E x 108  Ø 3.5 x 14 mm
F x 5 	G x 52  Ø 3 x 14 mm	H x 4  Ø 6 x 50 mm	J x 18  Ø 4 x 25 mm	K x 18  Ø 6 x 25 mm
L x 1 	M x 24 	N x 24  Ø 4 x 18 mm	P x 8 	Q x 84  Ø 3.5 x 14 mm
R x 14 	S x 6 	T x 36 	U x 2 	V x 2  Ø 4 x 14 mm
W x 2 	CL x 9 	CR x 9 	DL x 9 	DR x 9 

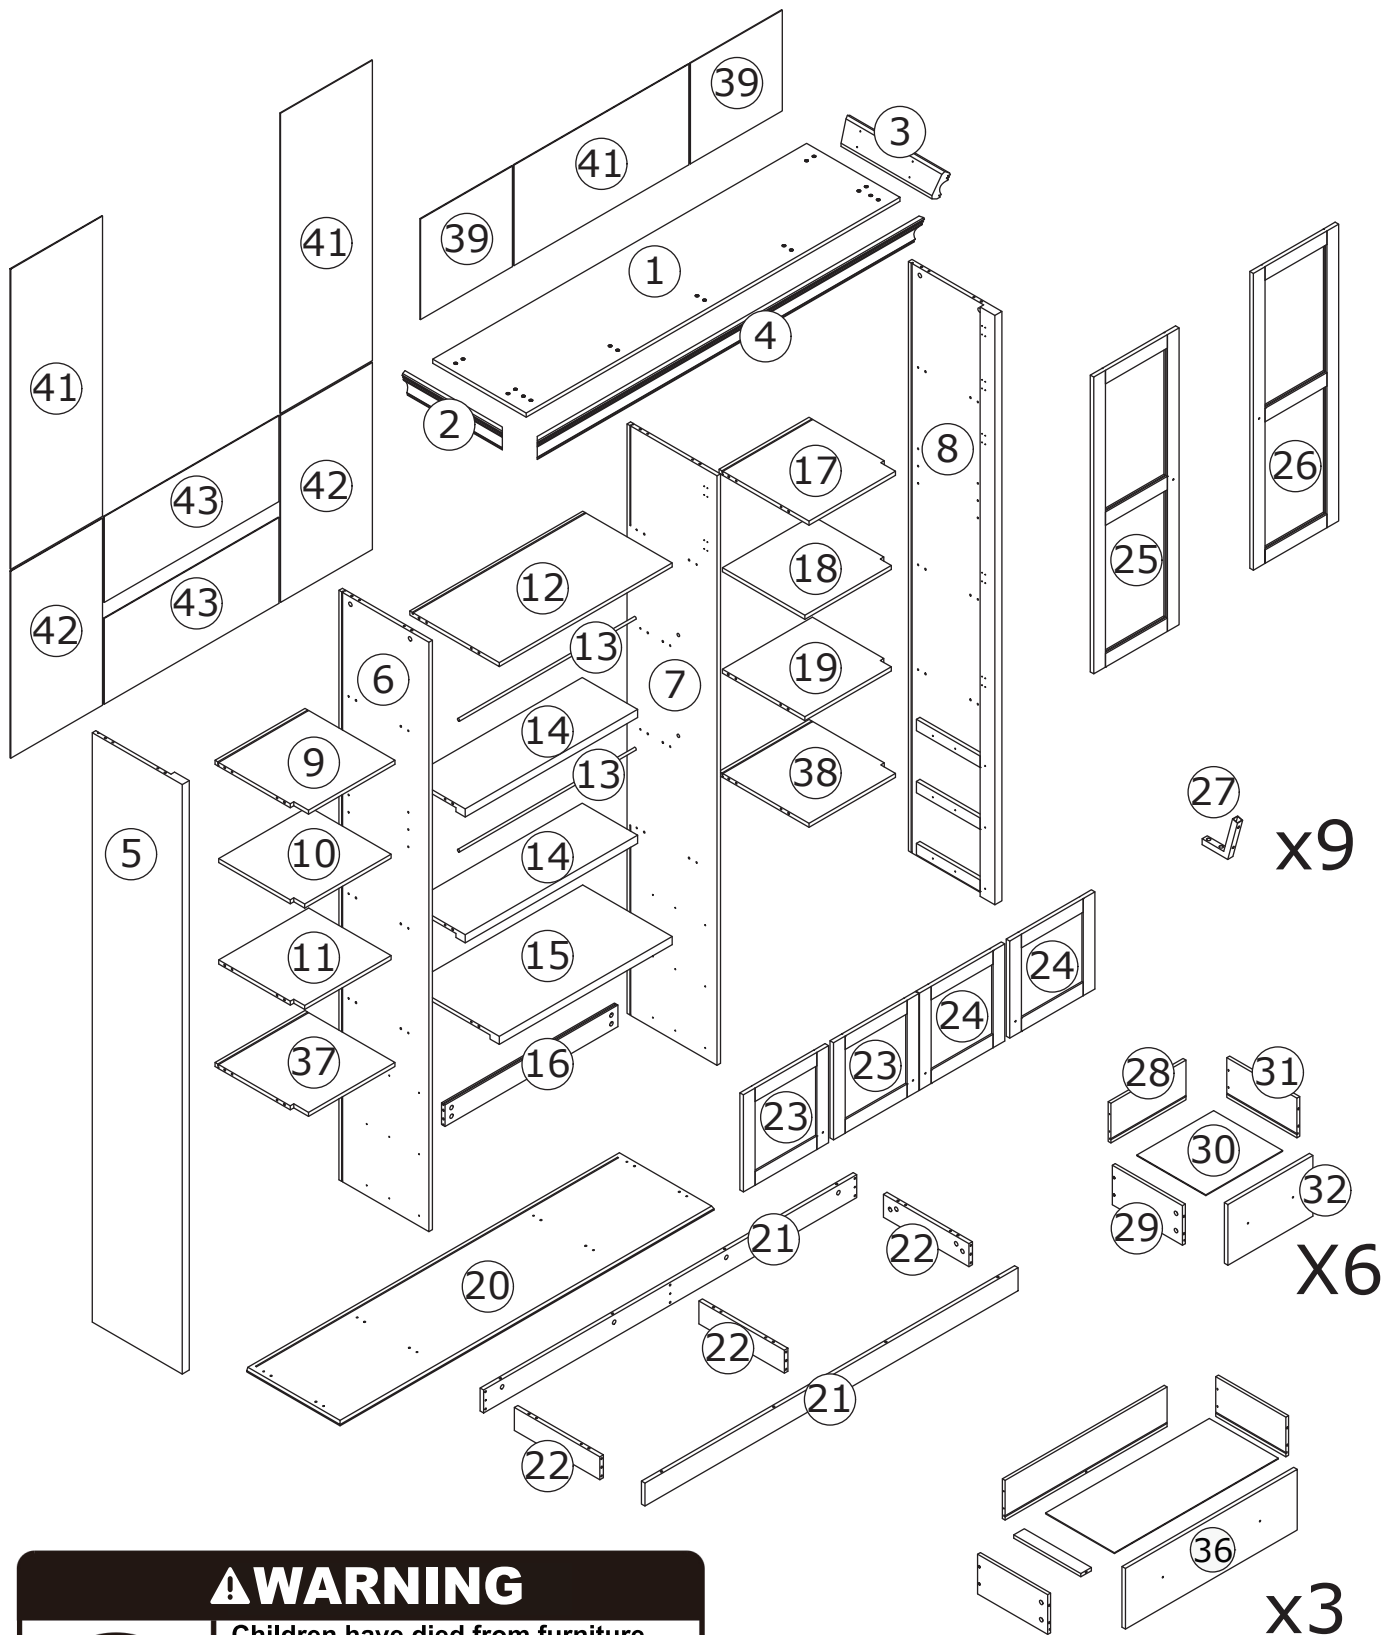 


⚠ WARNING




Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*

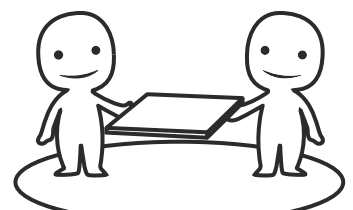

ASSEMBLED BY 2 ADULTS

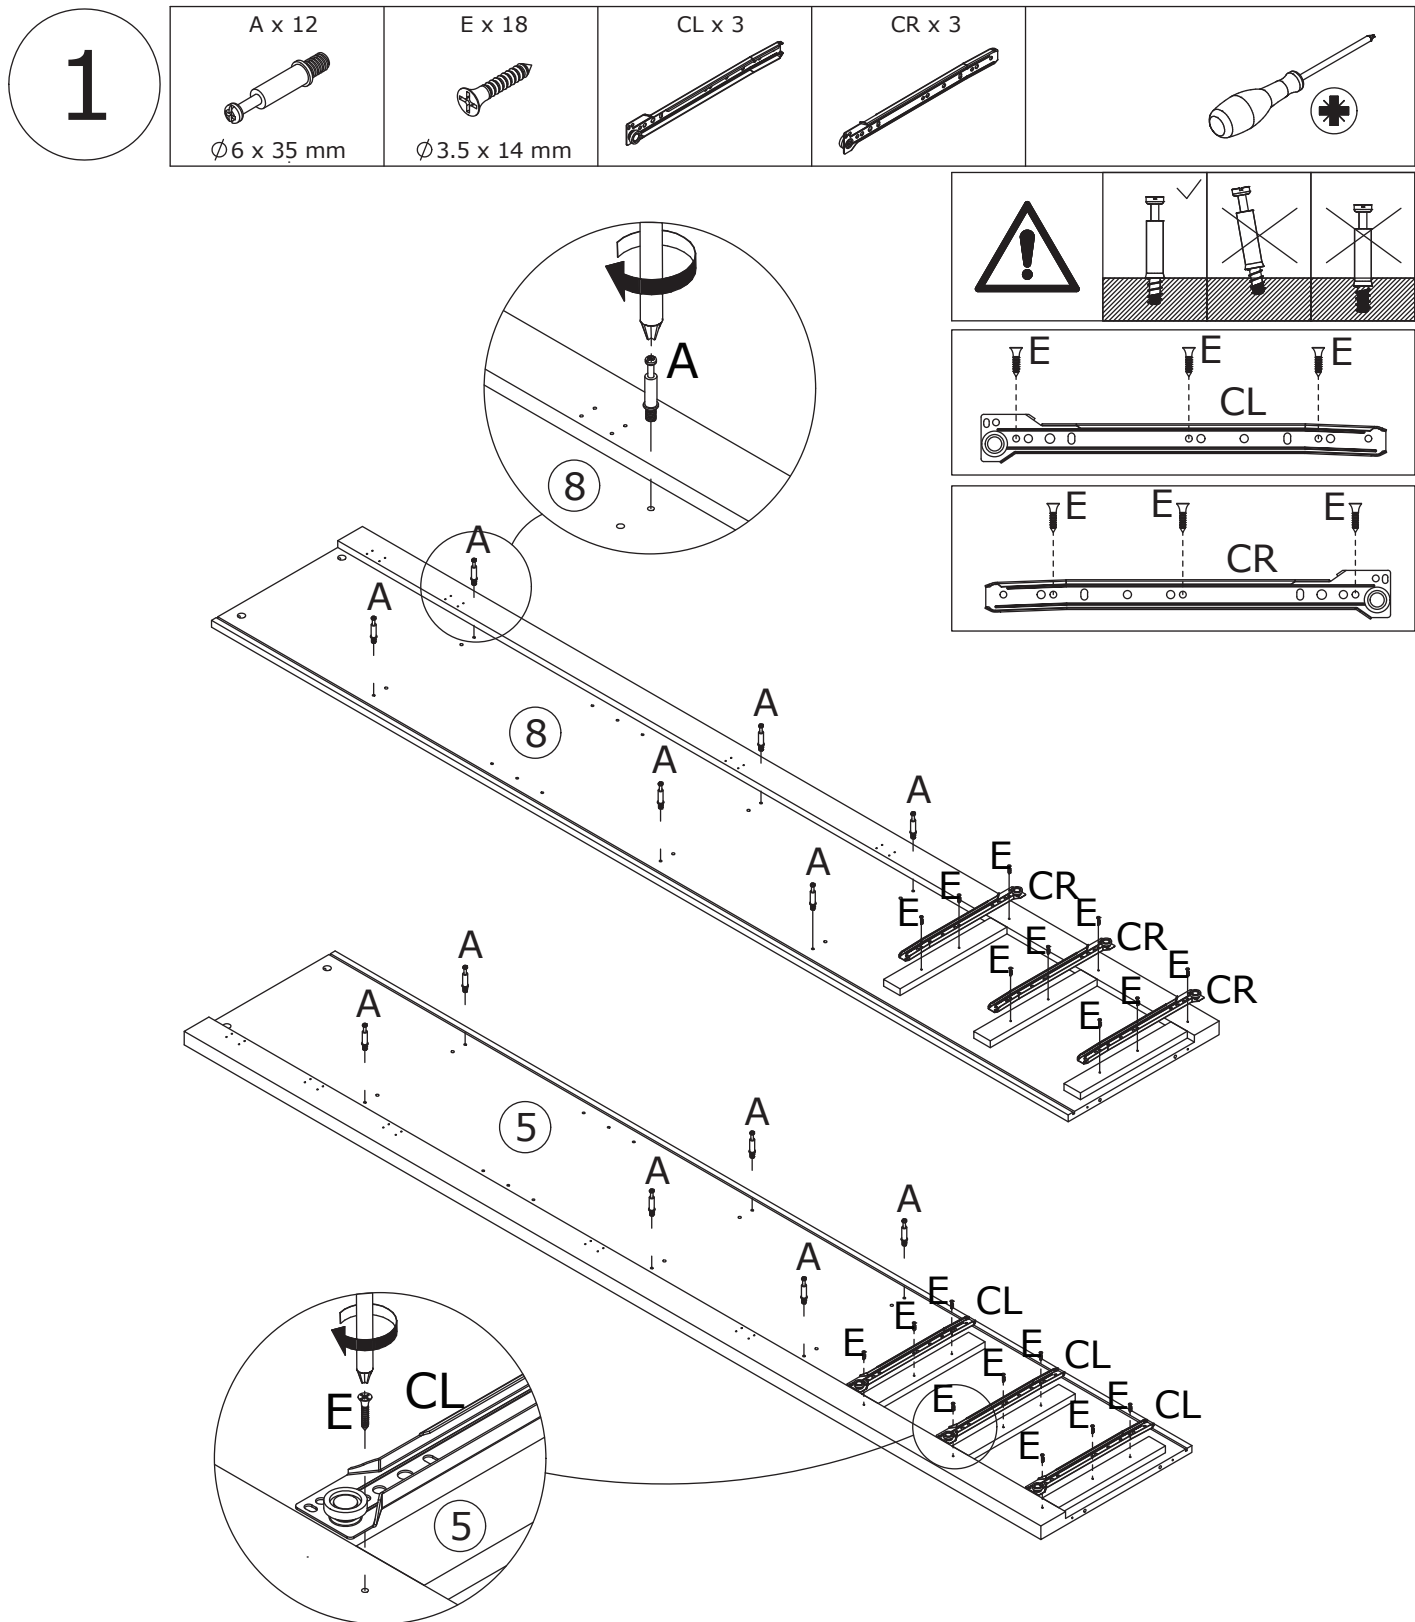 

Screw eccentric rod (A) onto plates 5 and 8.
Secure slide rails (CR) and (CL) to plates 8 and 5, respectively using screw (E) .

2

A x 16



 
 
 
 
 
E x 18



CL x 3






CR x 3

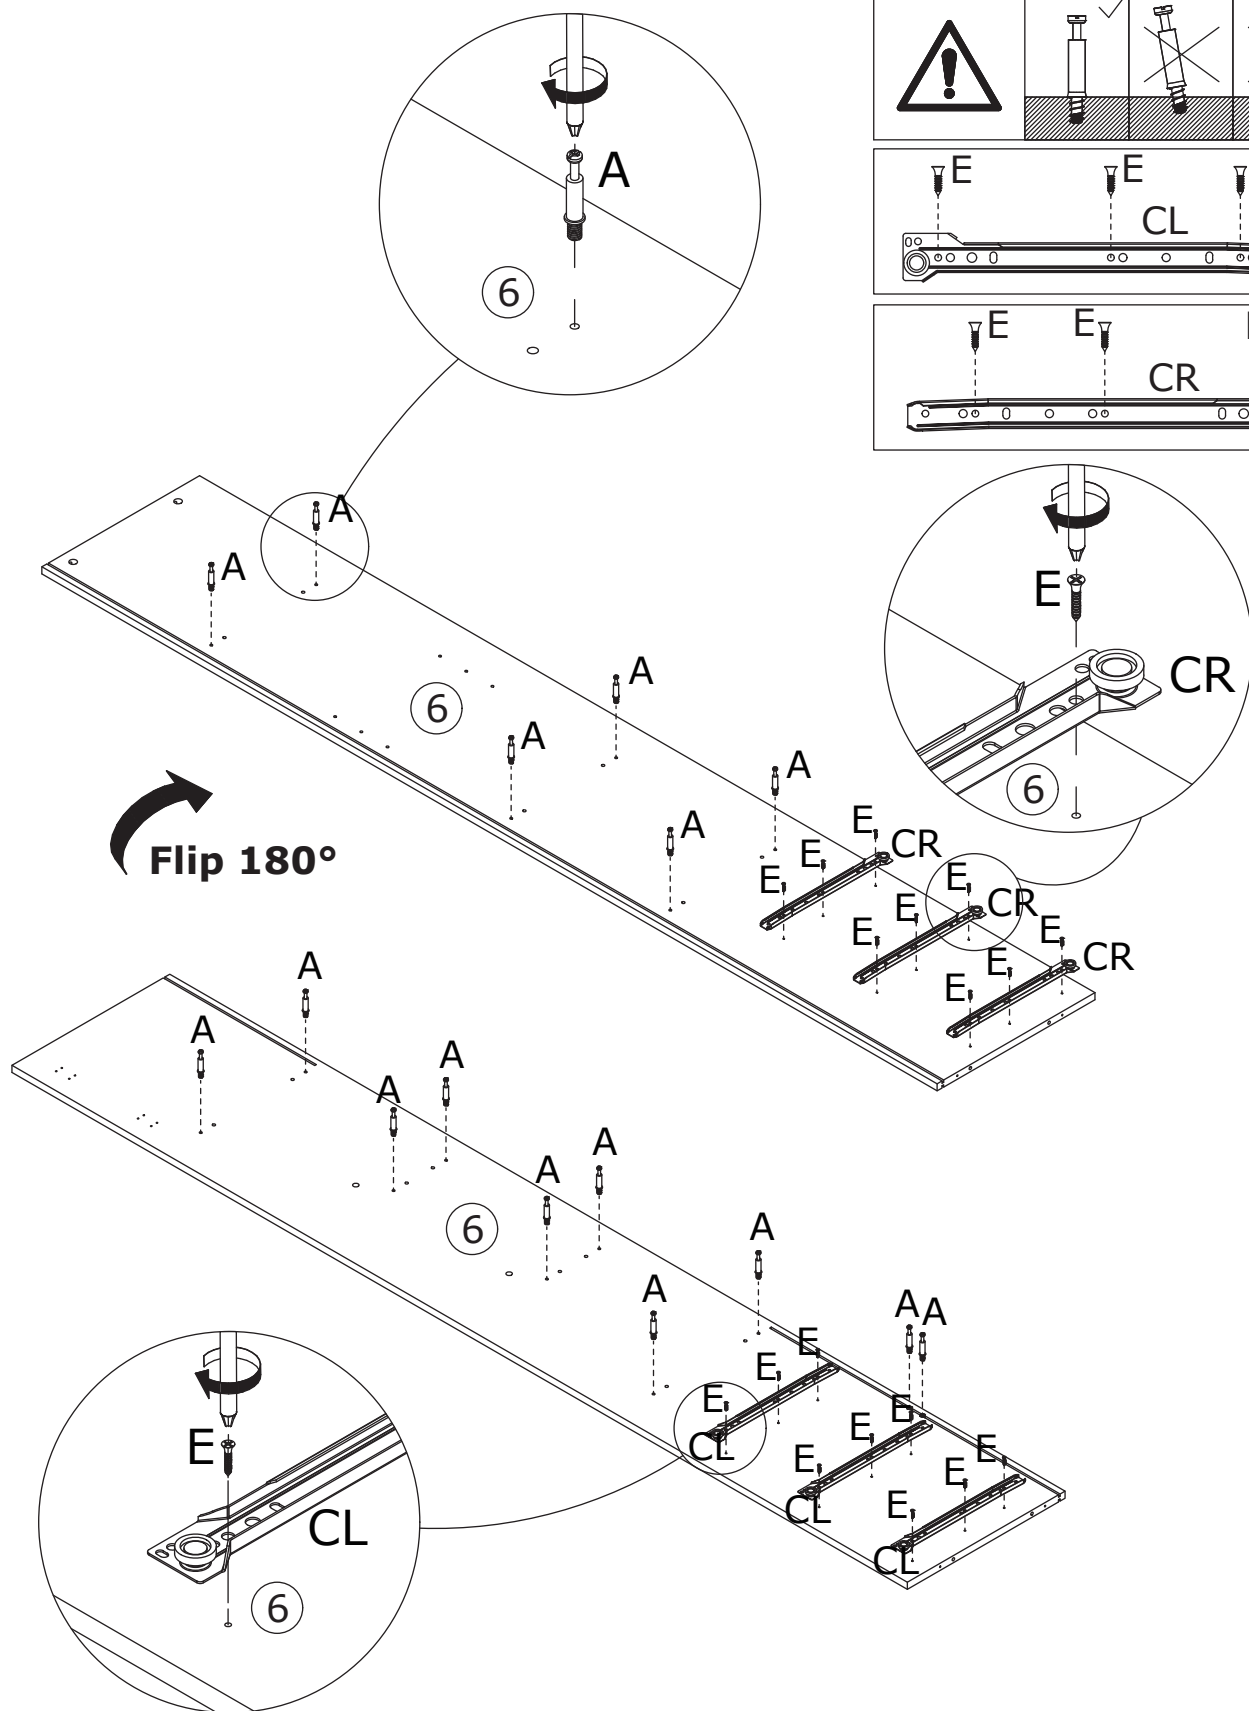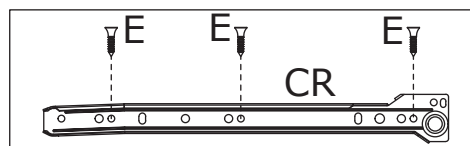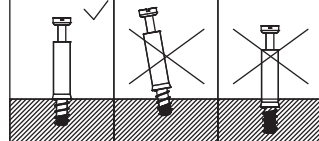

Screw eccentric rod (A) onto **both sides of** plate 6.
Secure slide rails (CR) and (CL) to plate 6 using screw (E) .

  3

A x 16  Ø 6 x 35 mm	E x 18  Ø 3.5 x 14 mm	CL x 3 	CR x 3 	
--	--	---	--	---

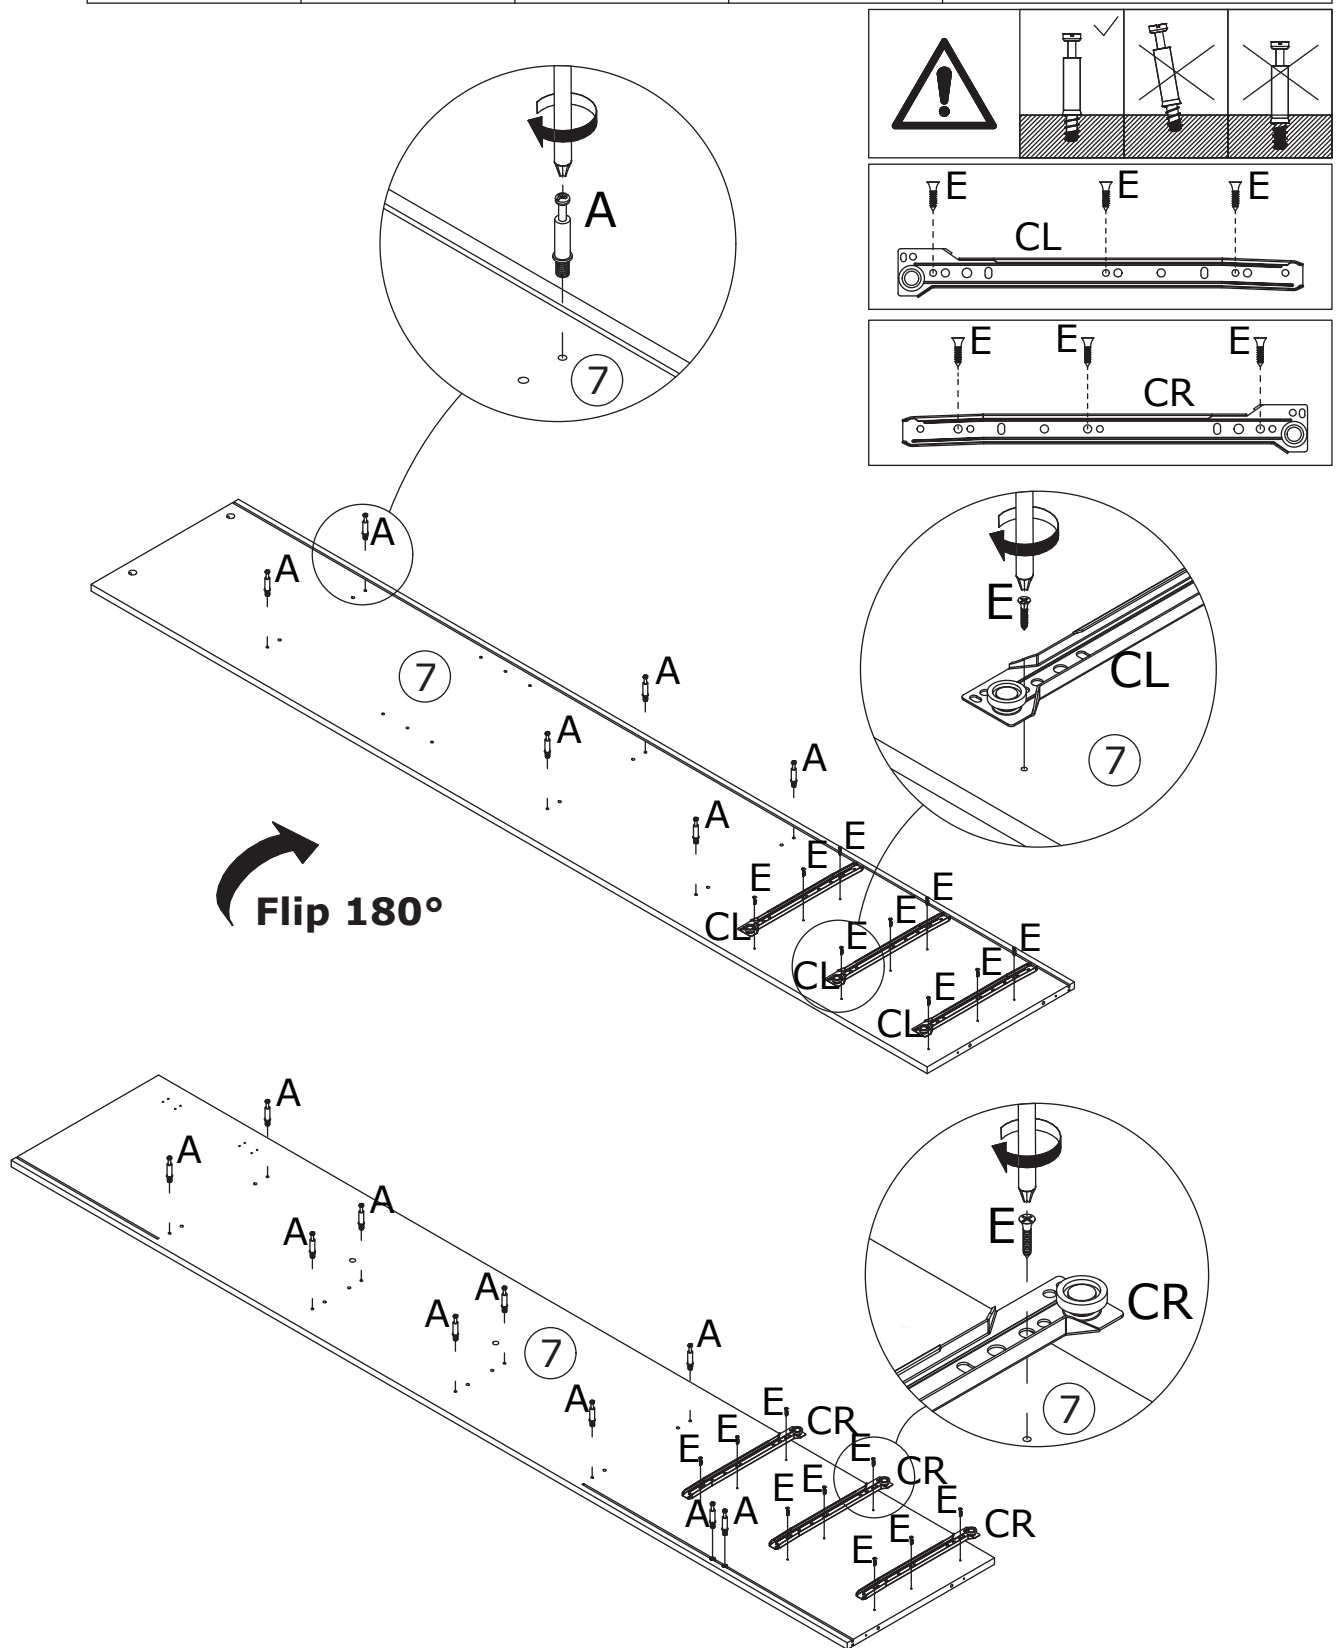 

Screw eccentric rod (A) onto **both sides of** plate 7.
Secure slide rails (CR) and (CL) to plate 7 using screw (E) .

4

 
 
F x 2



G x 4



Ø 3 x 14 mm

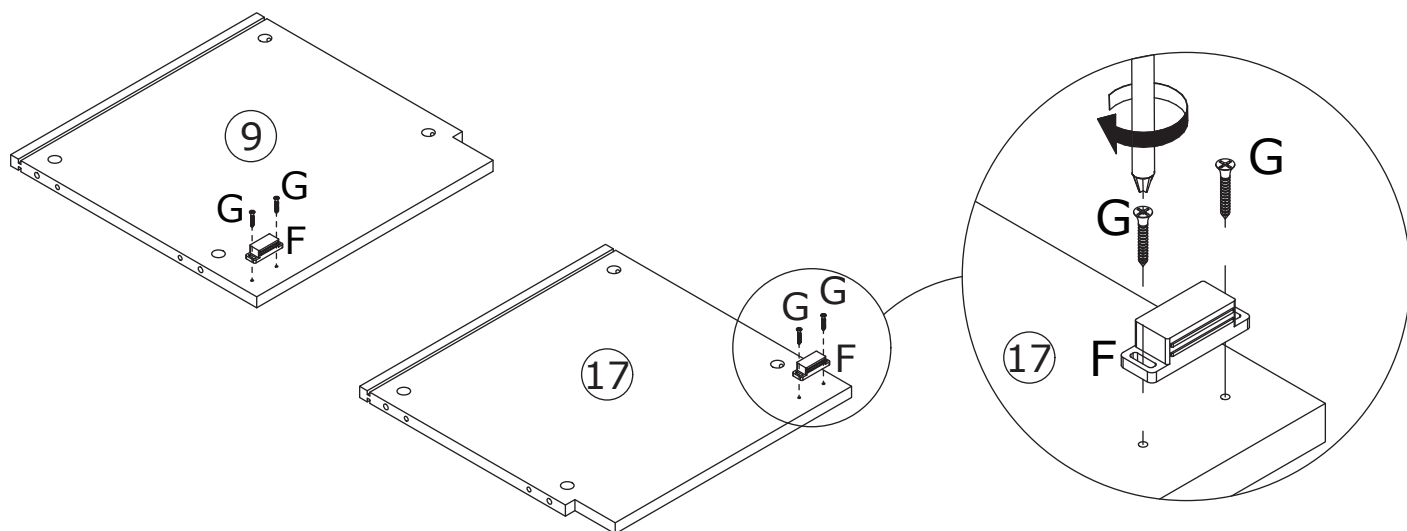

Secure magnet (F) to plates 9 and 17 using screw (G).

5

B x 6

 
 
 


Ø 15 x 10 mm

C x 6




Ø 6 x 30 mm

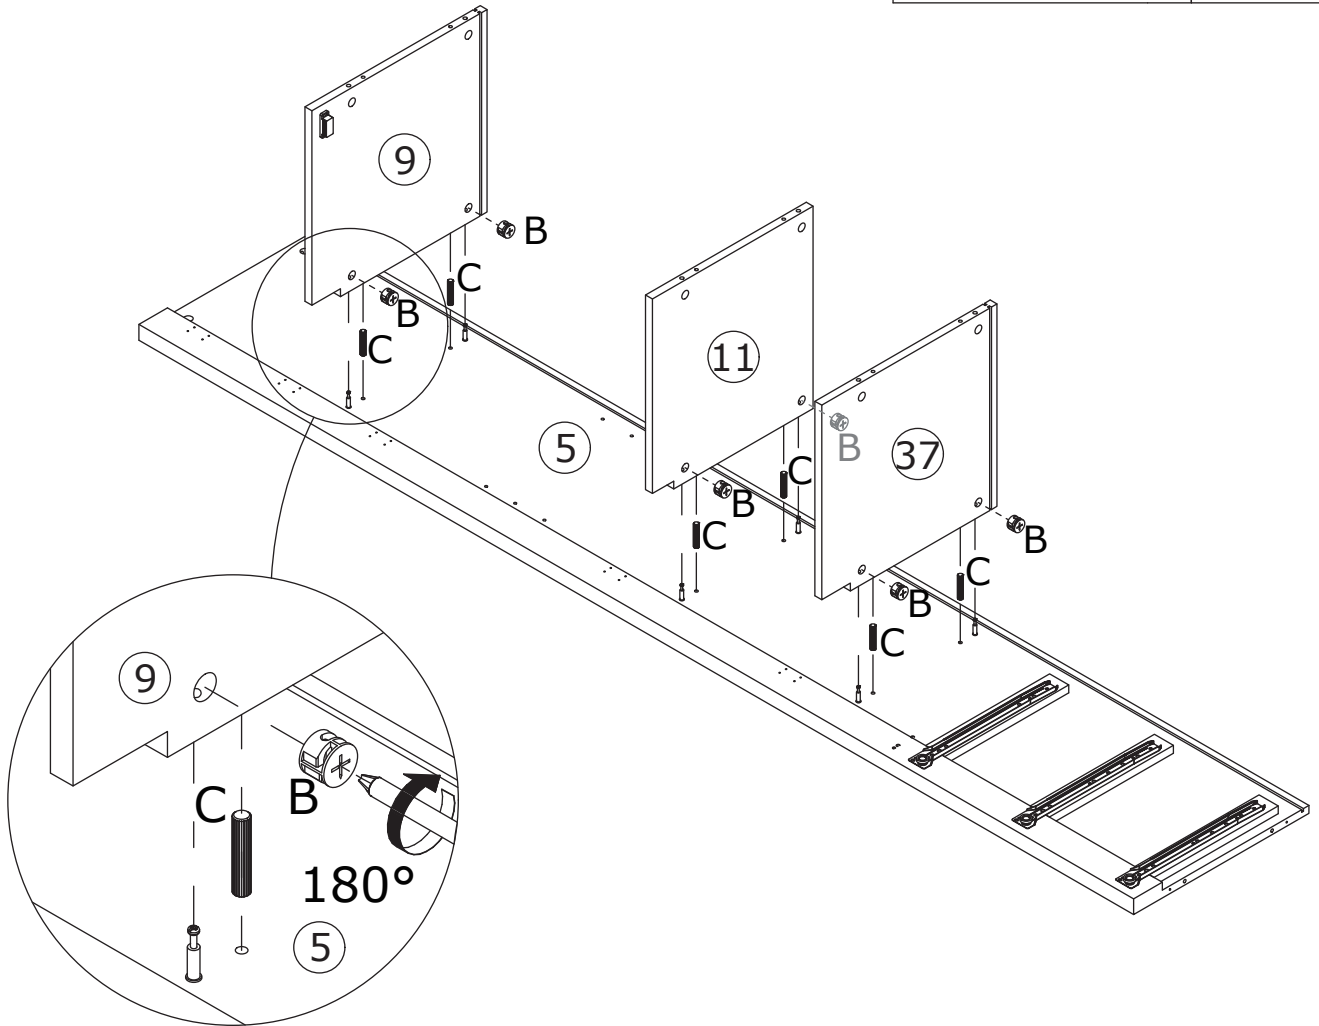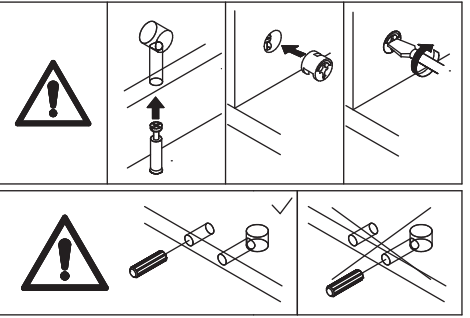


Connect plates 9, 11, and 37 to plate 5 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.


 
6

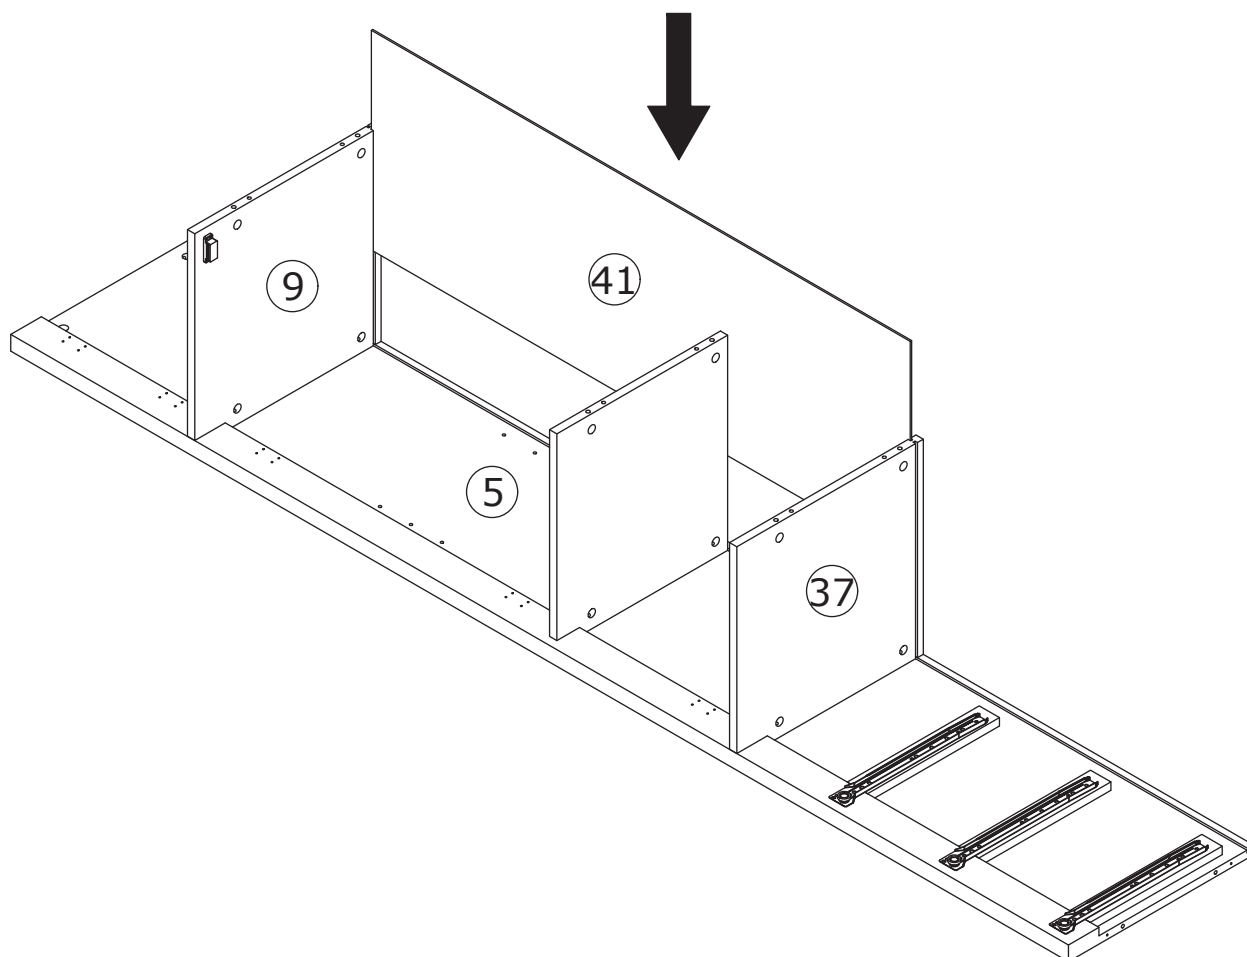

Insert plate 41 into the available slots.

 7




B x 6  Ø 15 x 10 mm	C x 4  Ø 6 x 30 mm	H x 2  Ø 6 x 50 mm	
--	---	---	---

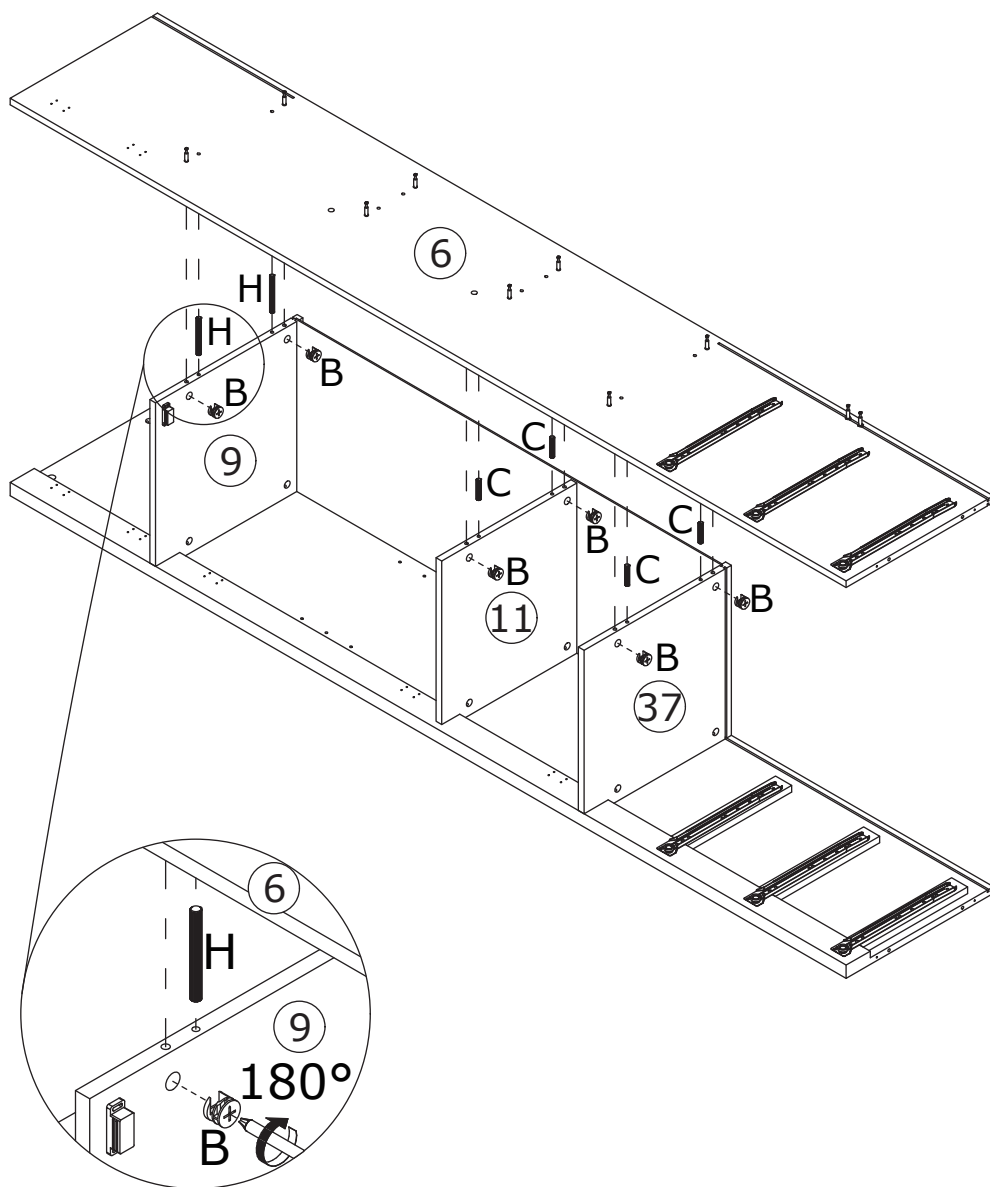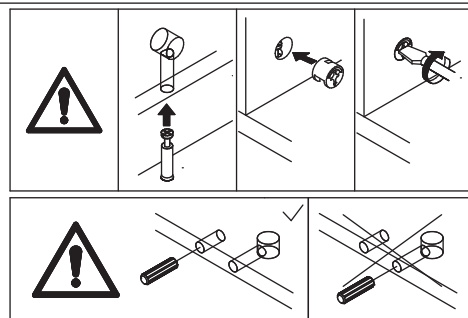  

Insert wooden dowel (C) into plates 11 and 17, insert wooden dowel (H) into plate 9 first.


Connect plates 9, 11, and 37 to plate 6, then tighten by turning eccentric wheel (B) clockwise.

   8

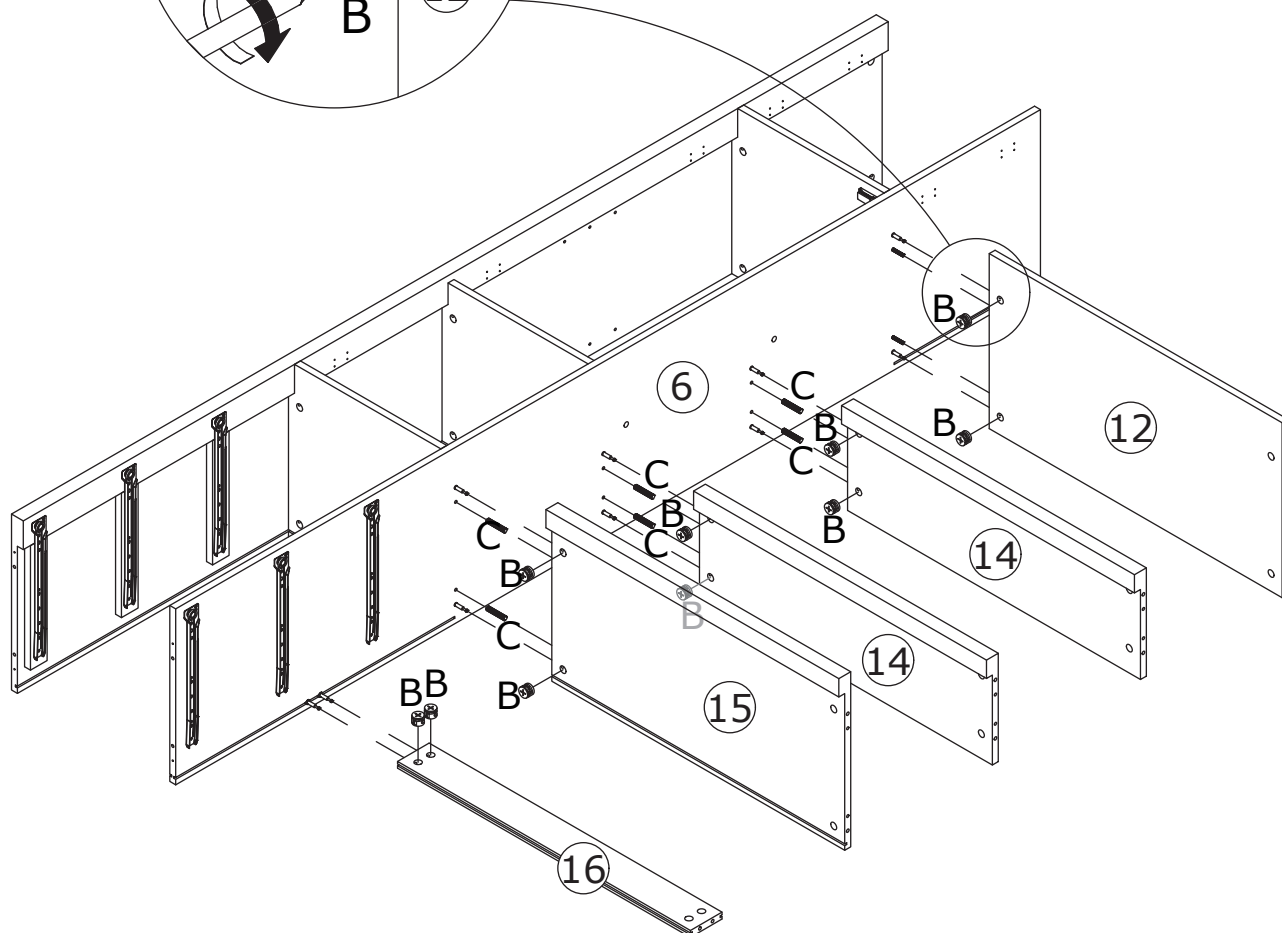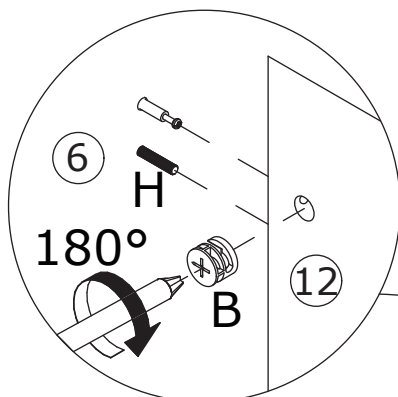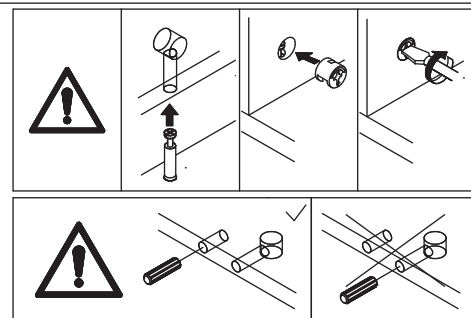

Connect plates 12, 14, 15, and 16 to plate 6 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.

 9

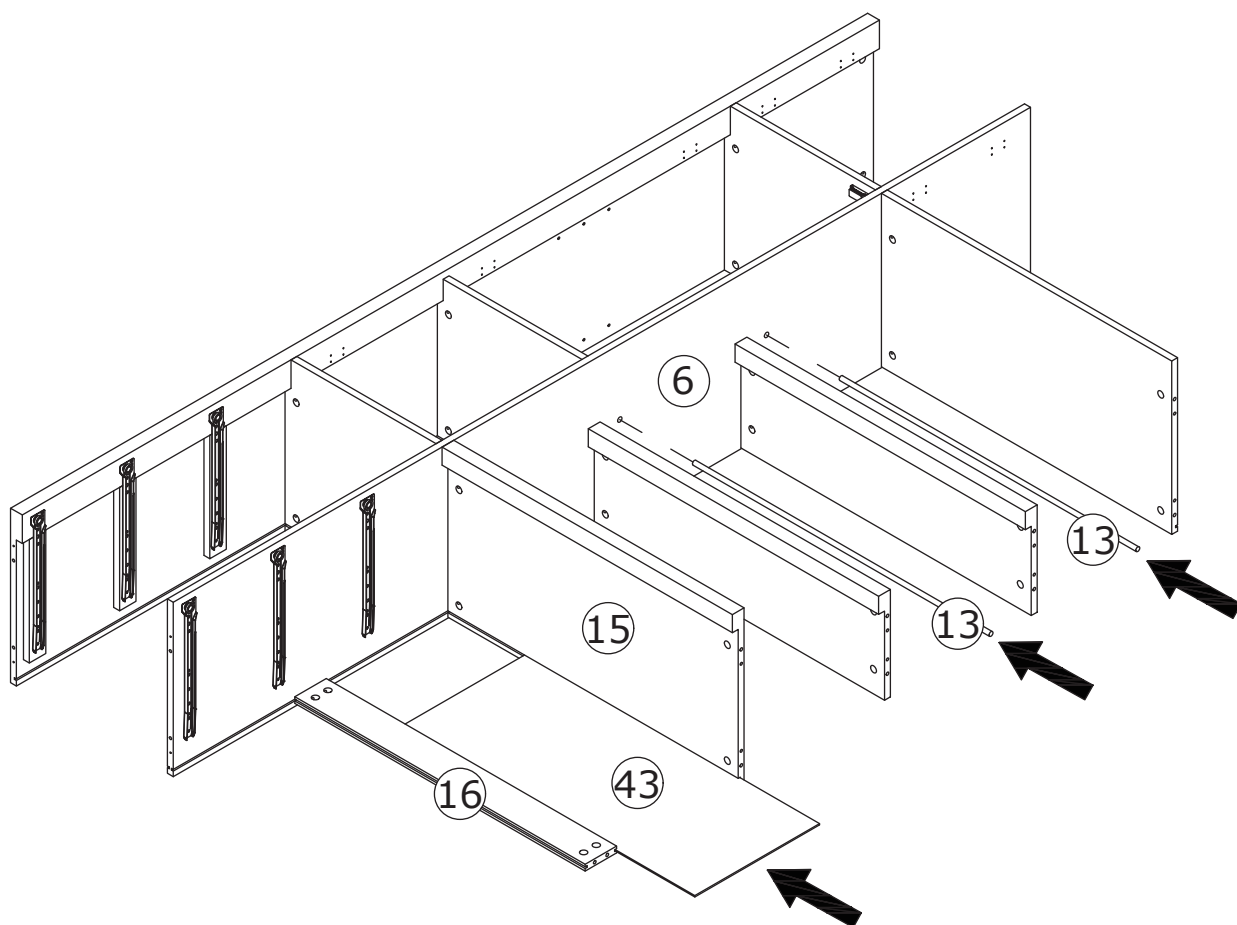

Insert plate 43 into the available slots.
Insert rod 13 into plate 6.

10

B x 10



Ø 15 x 10 mm

C x 6

 
 


Ø 6 x 30 mm

H x 2




Ø 6 x 50 mm

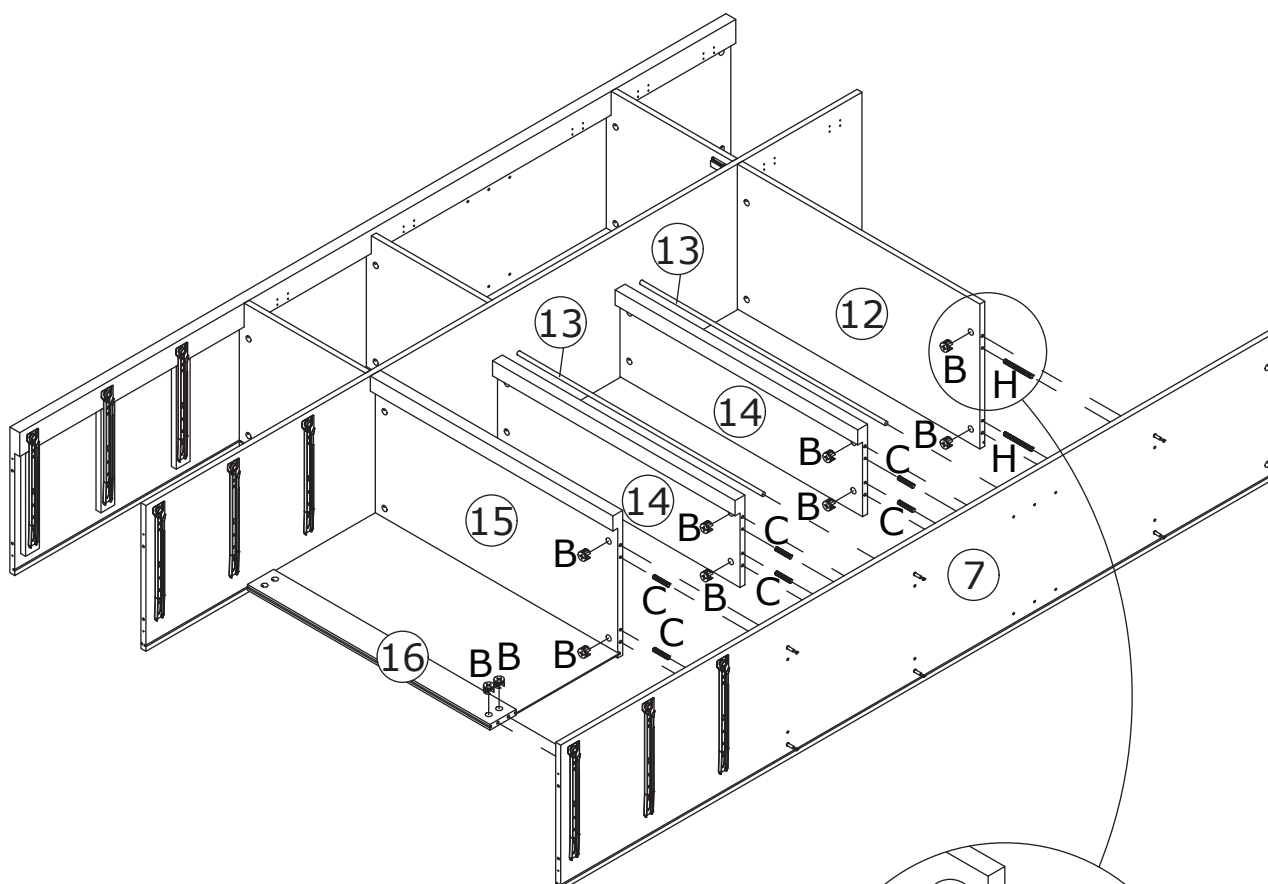

Insert wooden dowel (C) into plates 14 and 15, insert wooden dowel (H) into plate 12 first.

 Connect plates 12, 14, 15, and 16 to plate 7, then tighten by turning eccentric wheel (B) clockwise.

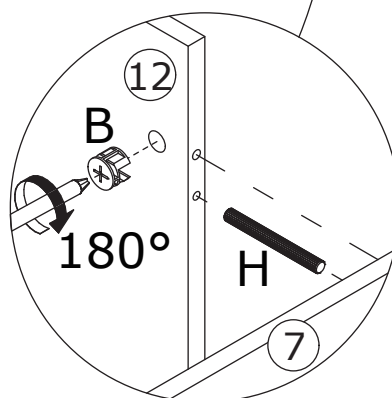

11

B x 6

 


Ø 15 x 10 mm




C x 4




Ø 6 x 30 mm



   Connect plates 17, 19, and 38 to plate 7 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.

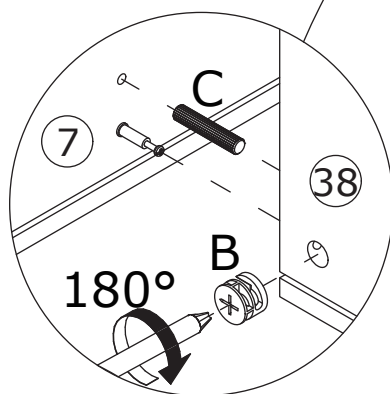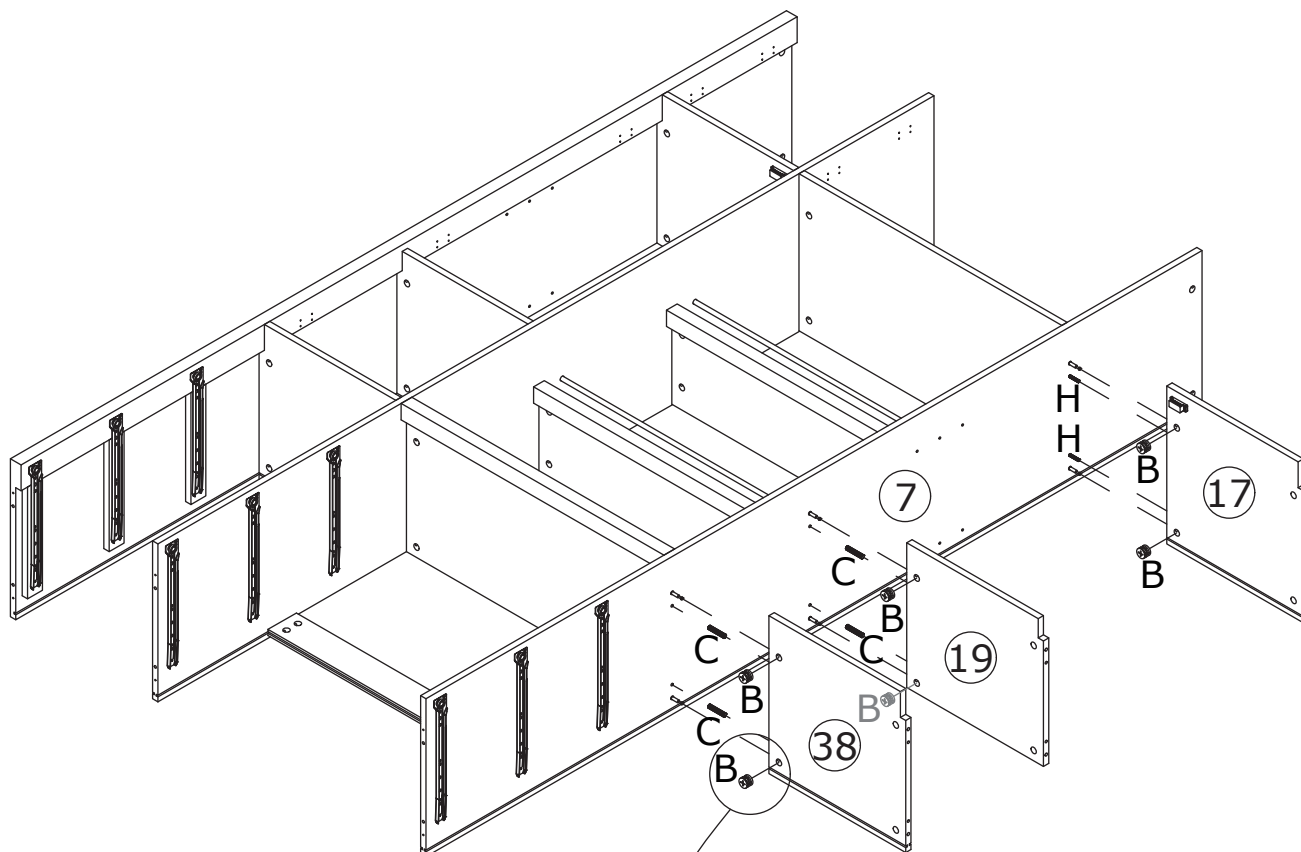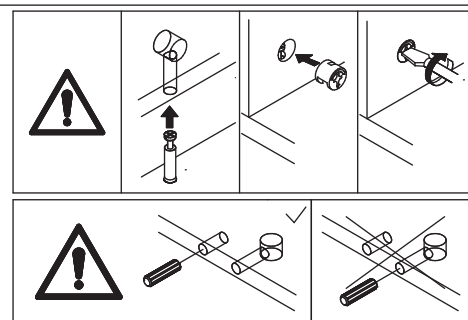

12

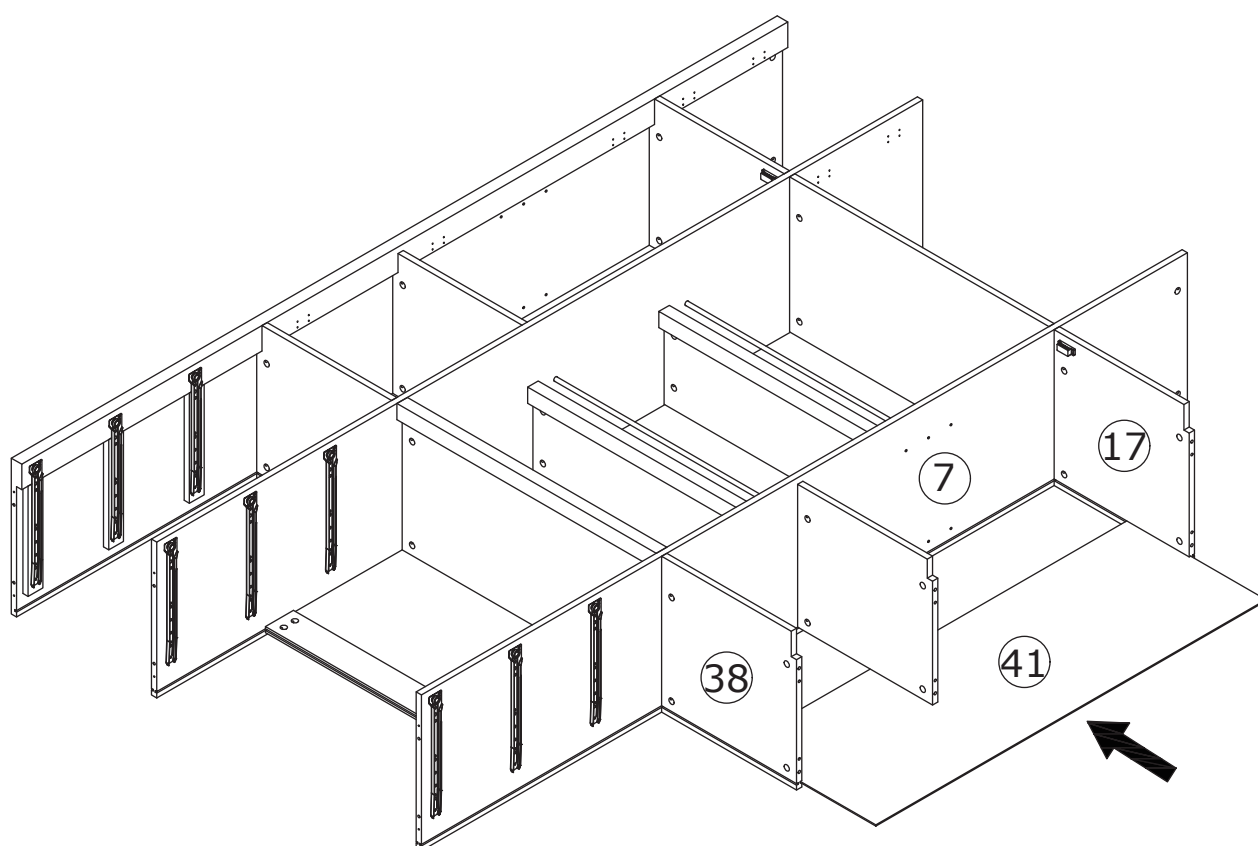 

Insert plate 41 into the available slots.

13

B x 6

 
 
 


Ø 15 x 10 mm

C x 6




Ø 6 x 30 mm

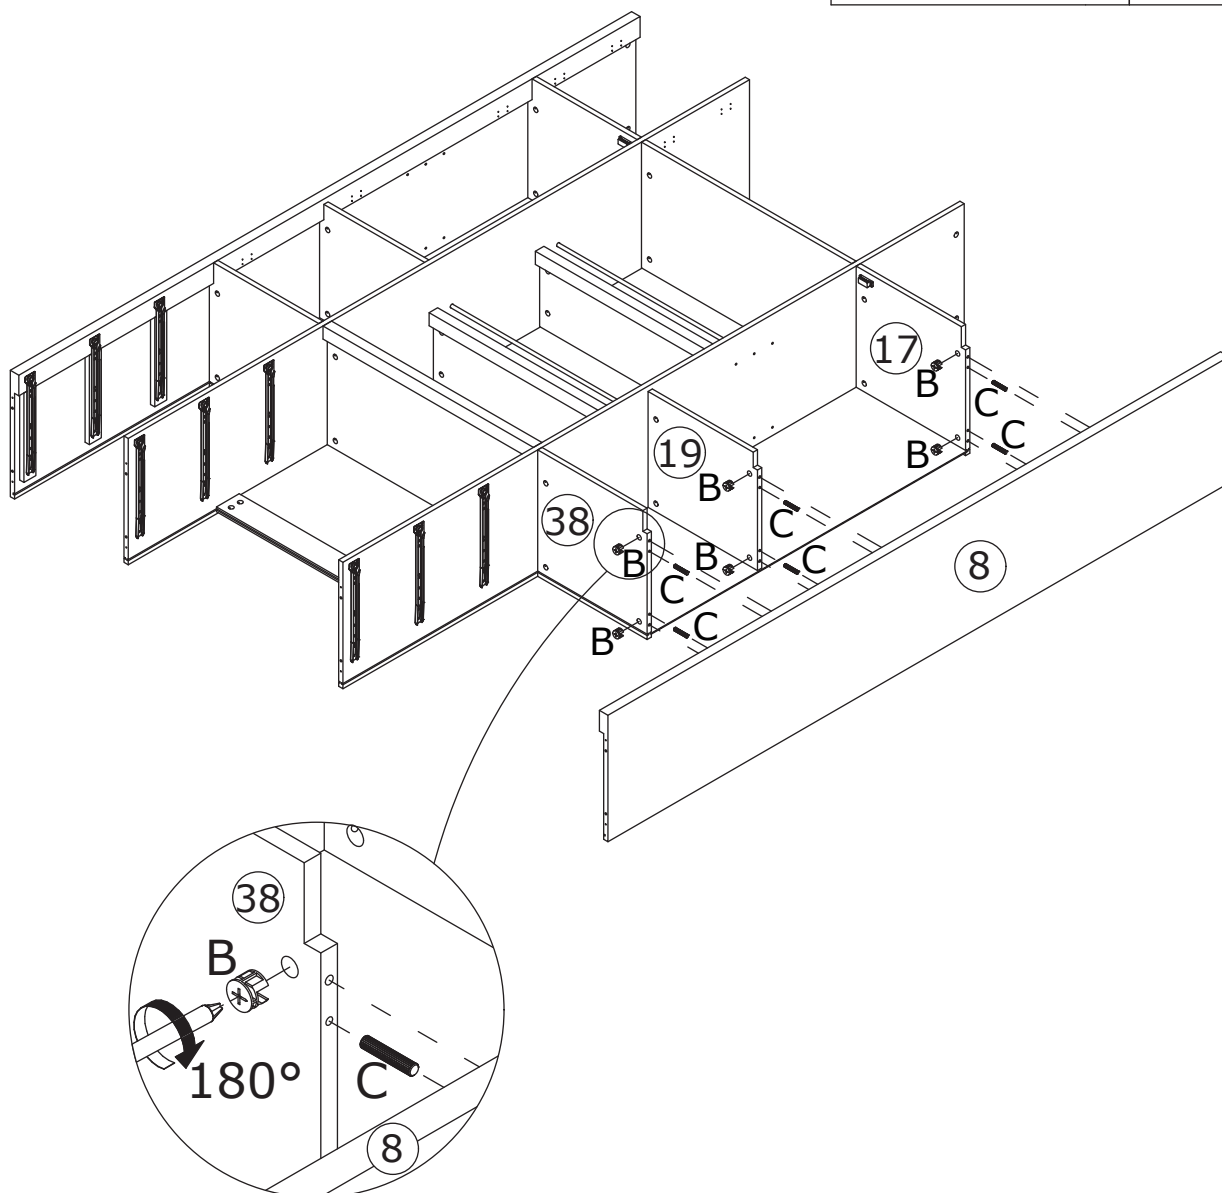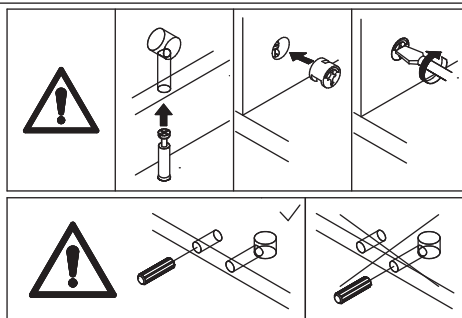





Connect plates 17, 19, and 38 to plate 8 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.

 14

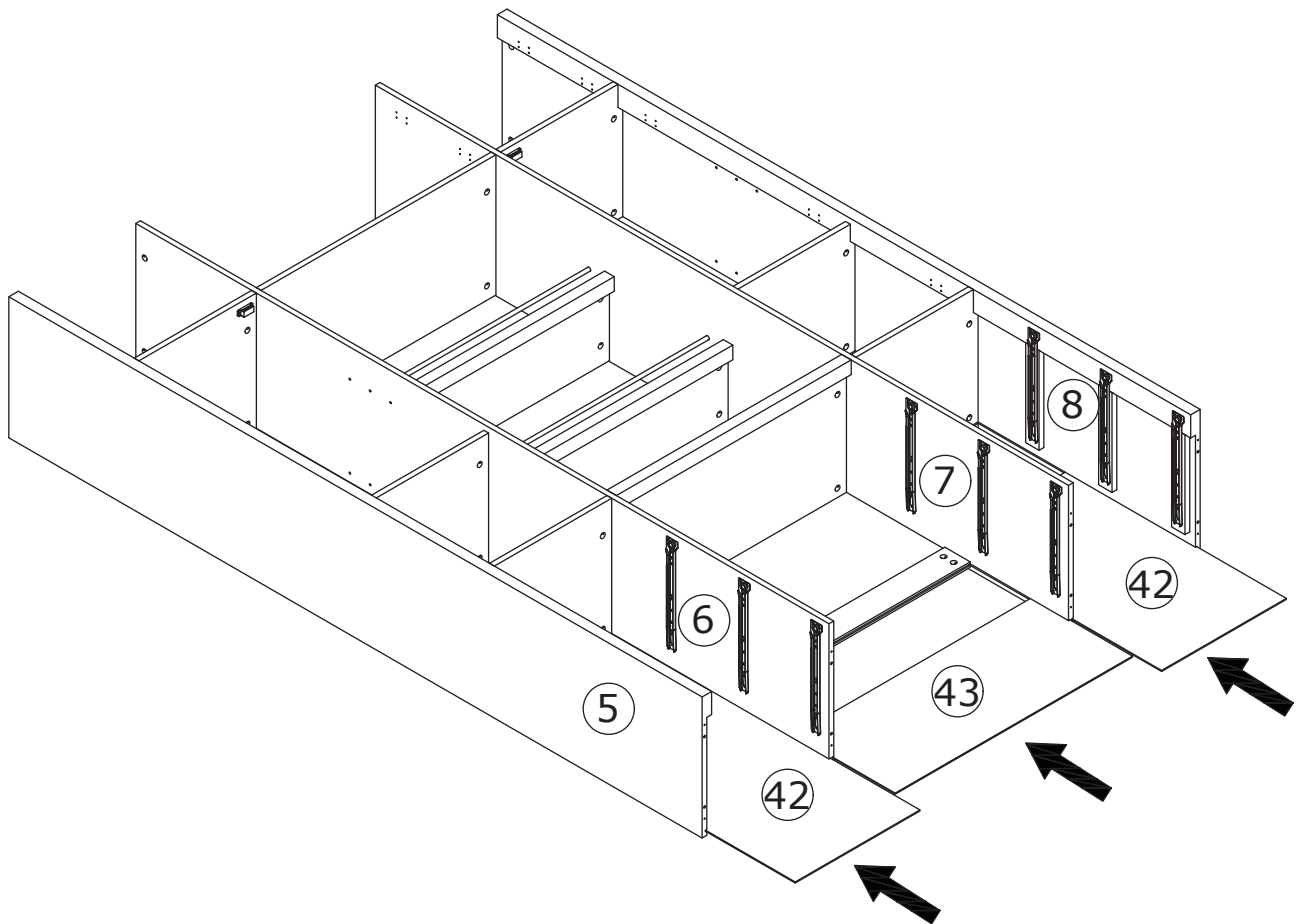

Insert plates 42 and 43 into the available slots.

    15

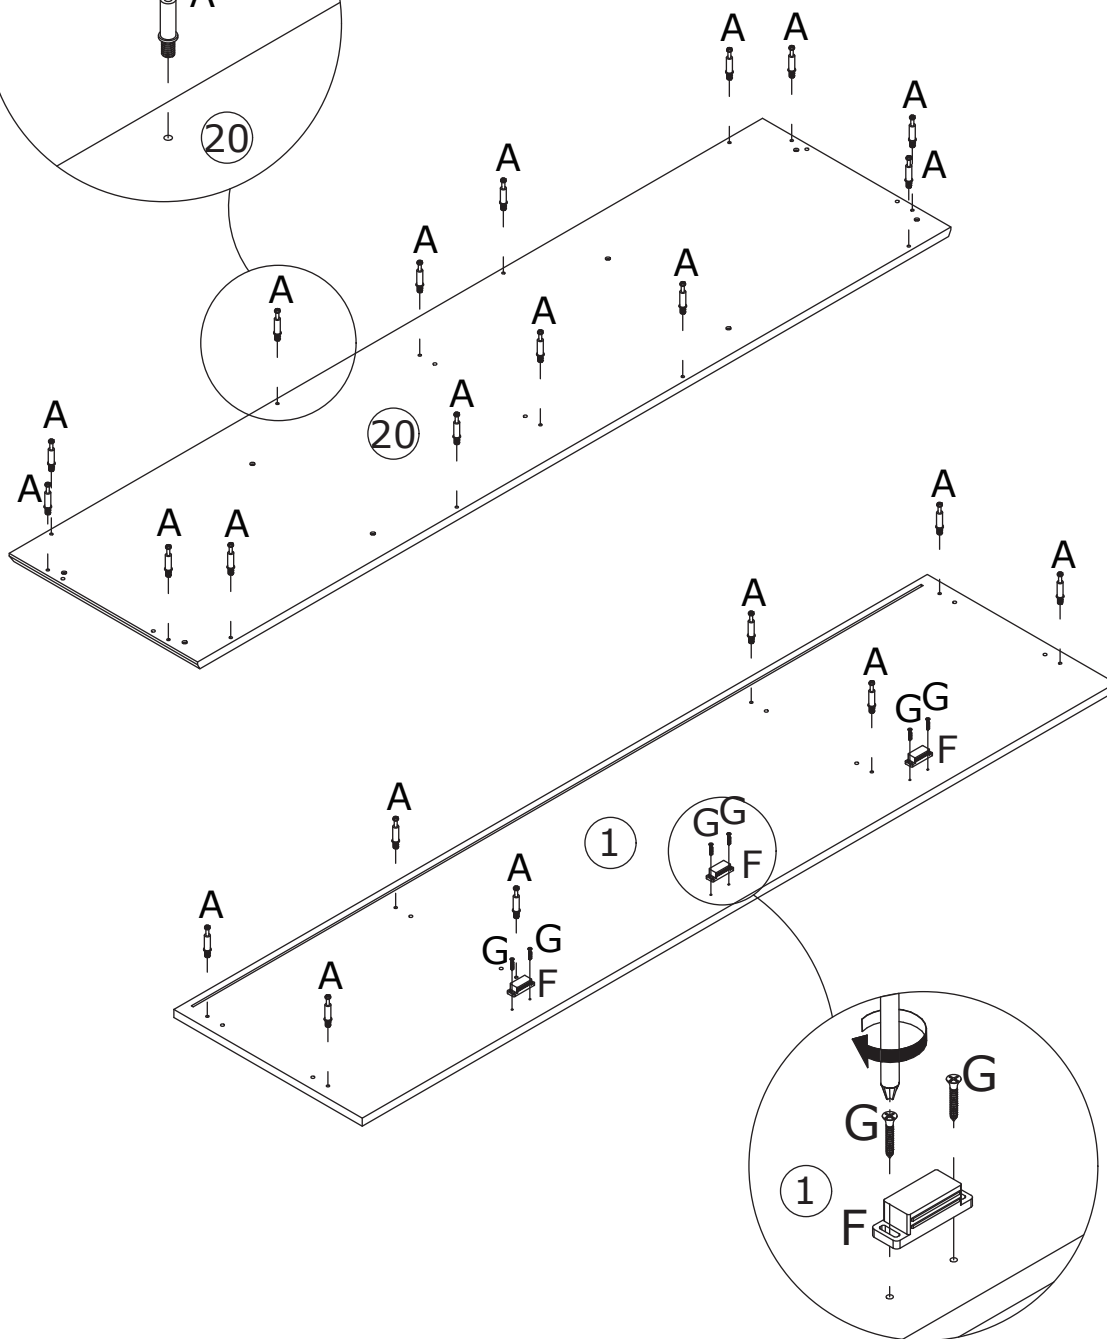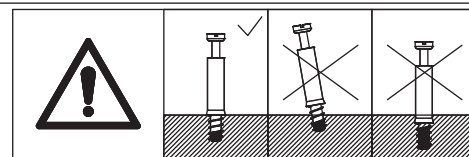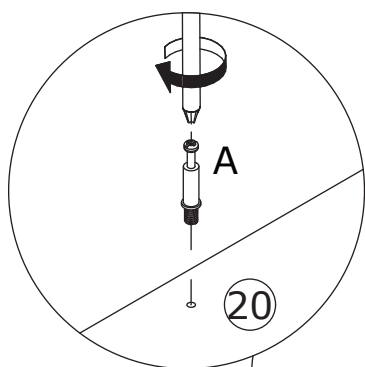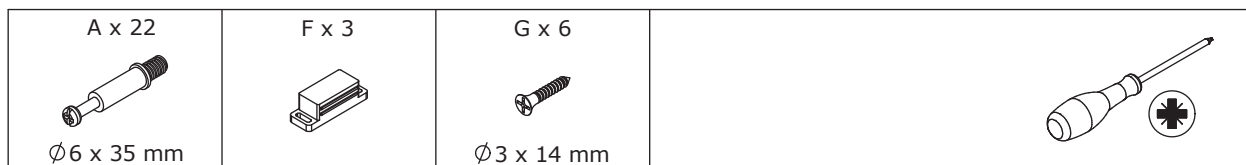

Screw eccentric rod (A) onto plate 1 and 20.
Secure magnet (F) to plate 1 using screw (G) .

16

C x 8

 
 
 
 


Ø6 x 30 mm

D x 8







Ø4 x 35 mm

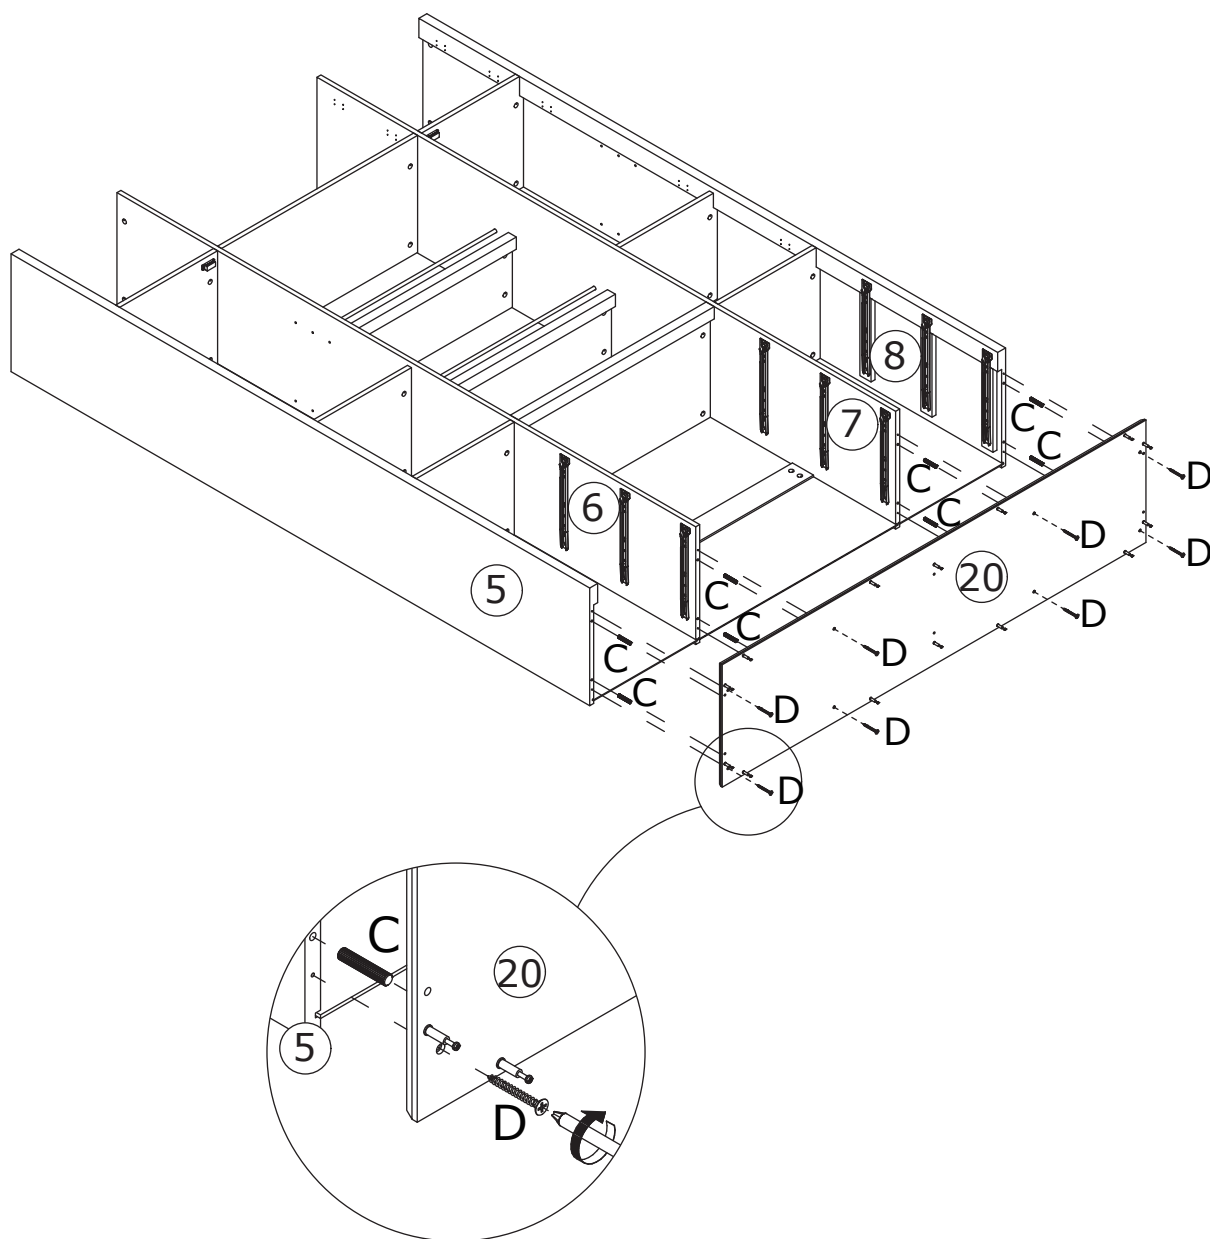

Connect plates 5, 6, 7, and 8 to plate 20 using wooden dowel (C), and secure them with screw (D).

    17

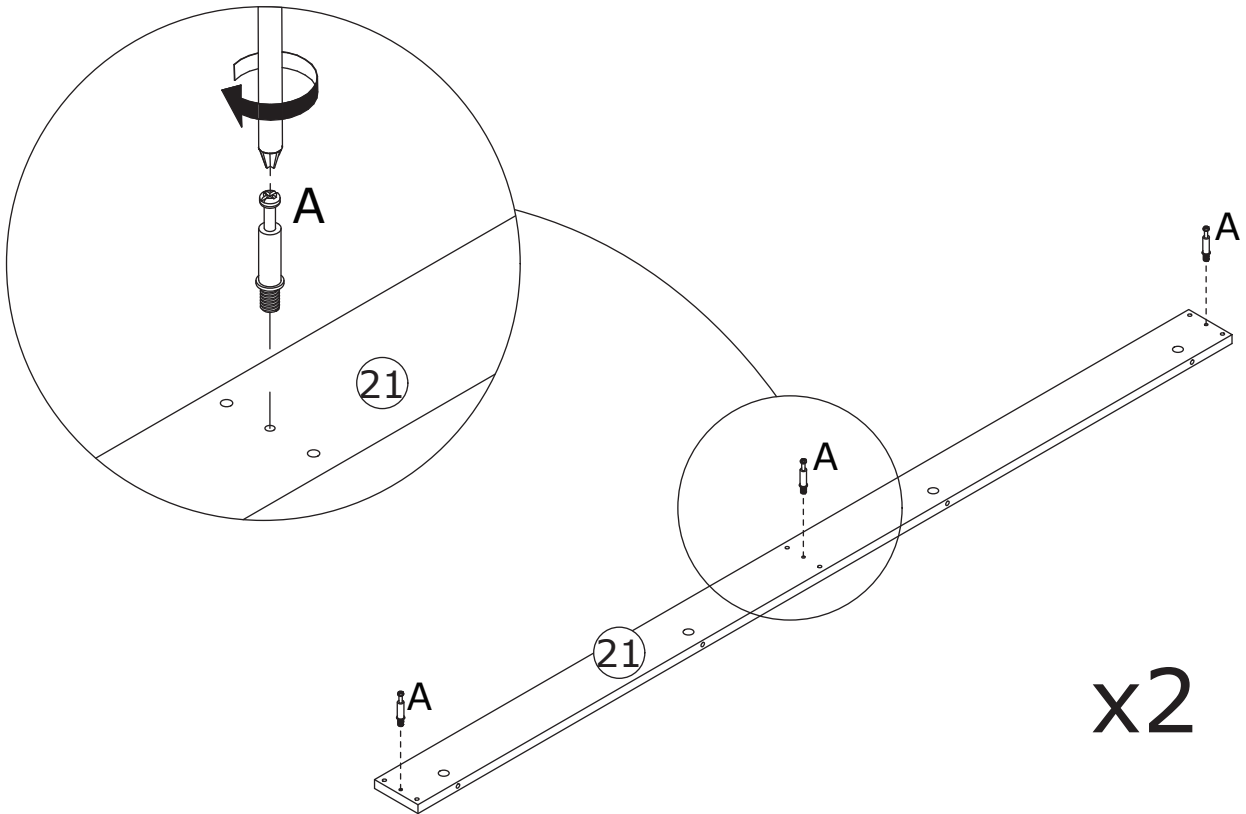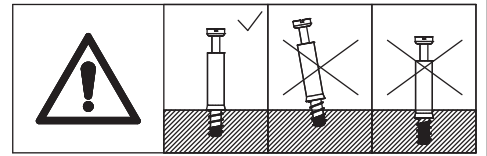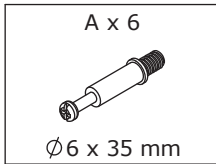

Screw eccentric rod (A) onto plate 21.

18

B x 6

 
 
 


Ø 15 x 10 mm

C x 12



Ø 6 x 30 mm

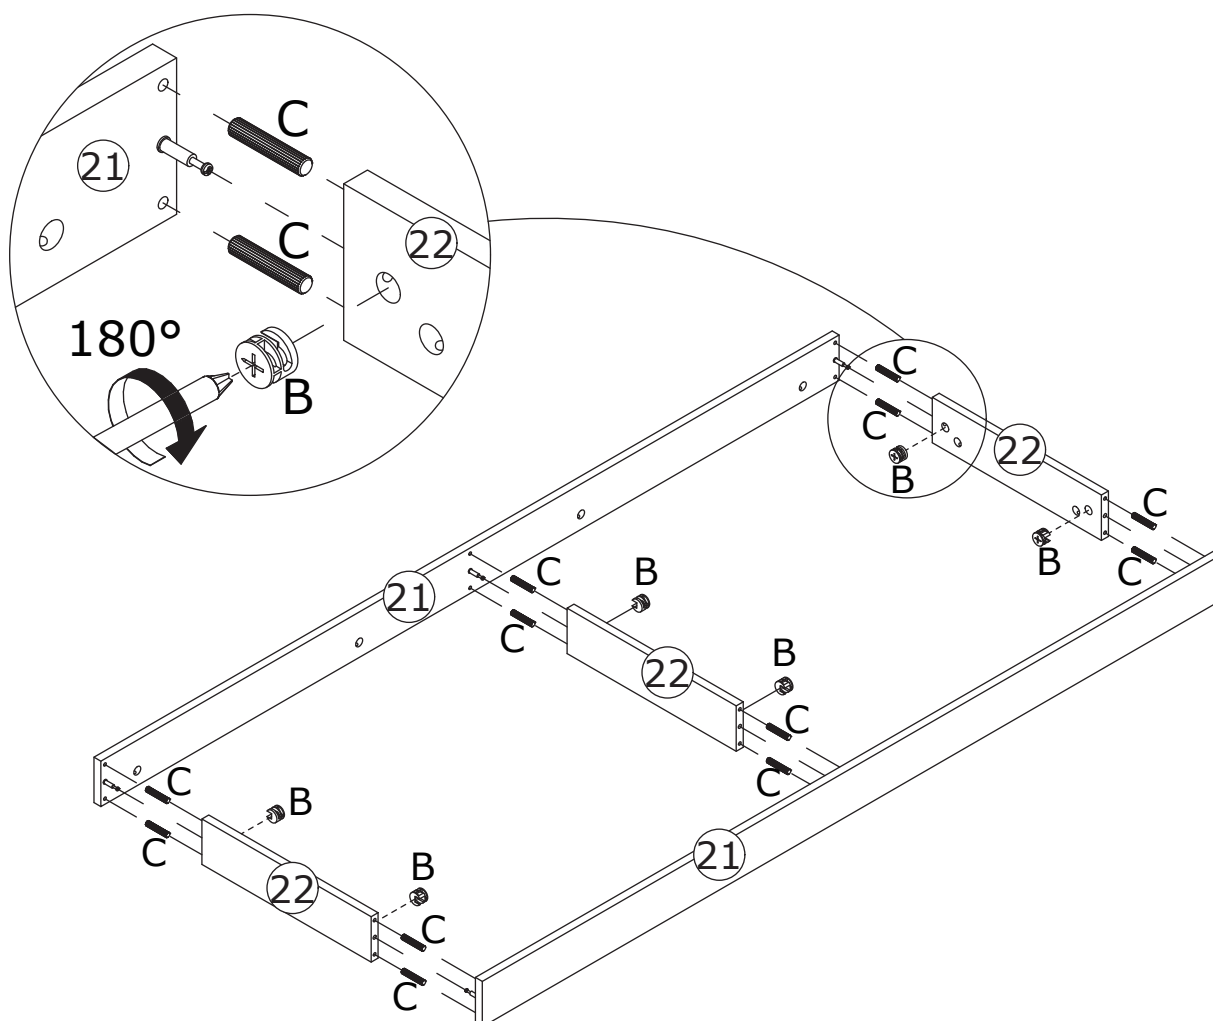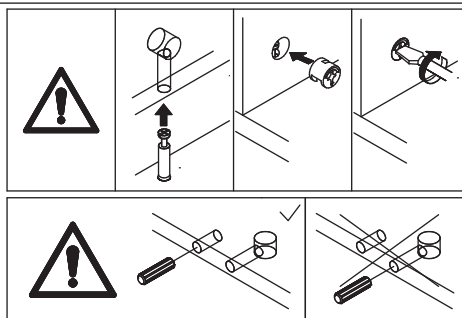

Connect plate 22 to plate 21 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.

19

B x 14

 
 
 
 


Ø 15 x 10 mm


C x 6



Ø 6 x 30 mm

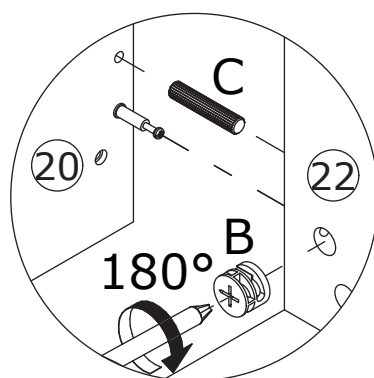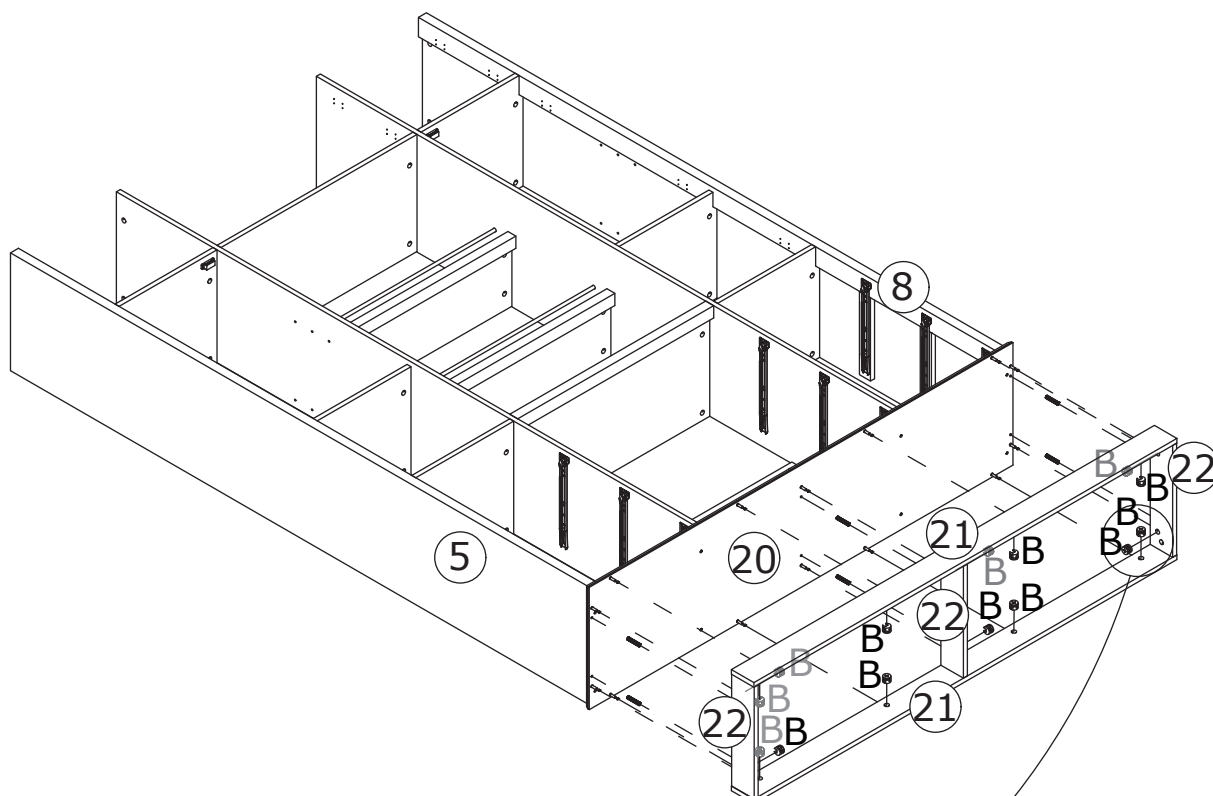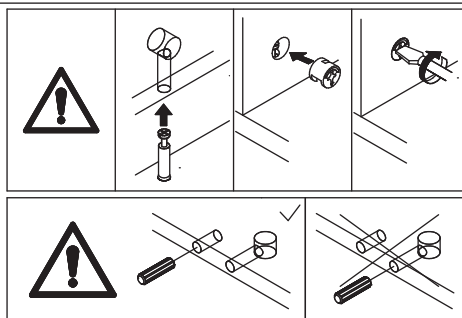

 Connect plates 21 and 22 to plate 20 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.

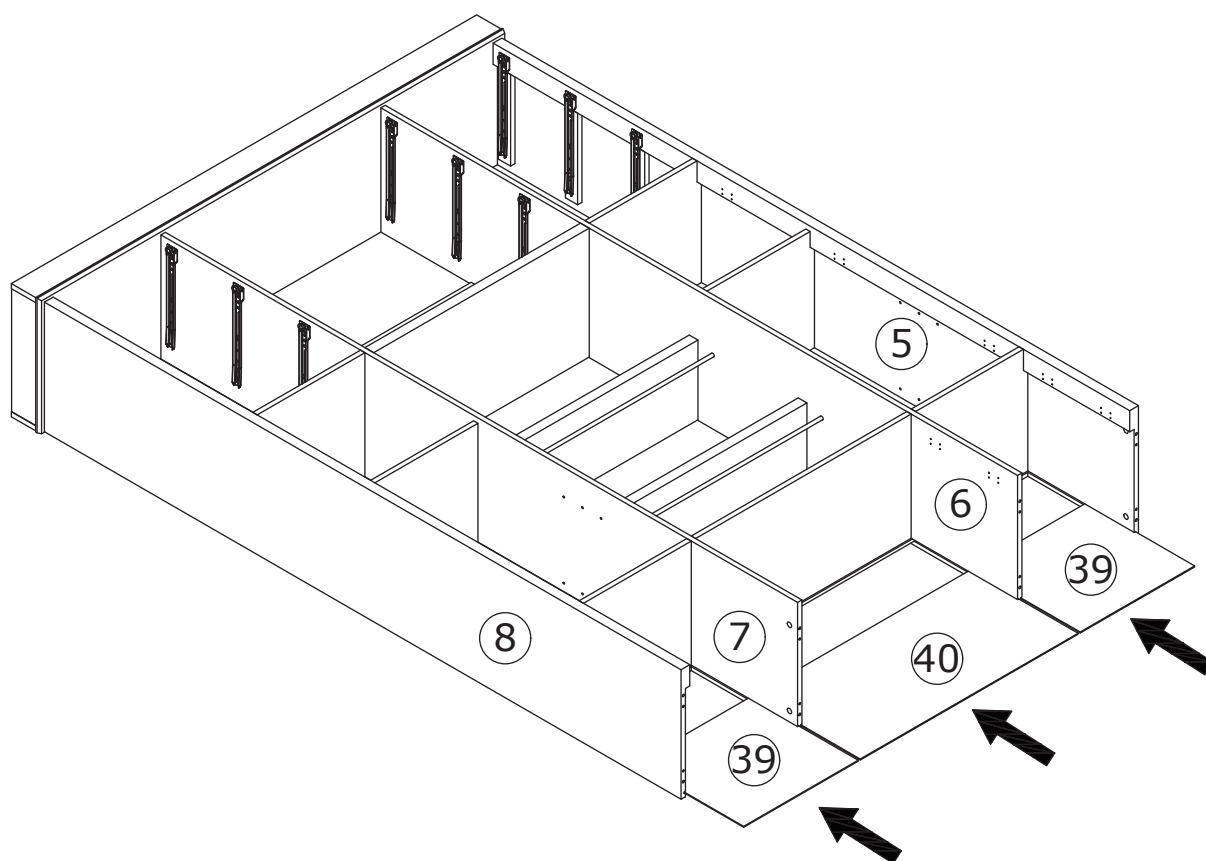

Insert plates 39 and 40 into the available slots.

21

B x 8

 
 
 


Ø 15 x 10 mm

C x 8



Ø 6 x 30 mm

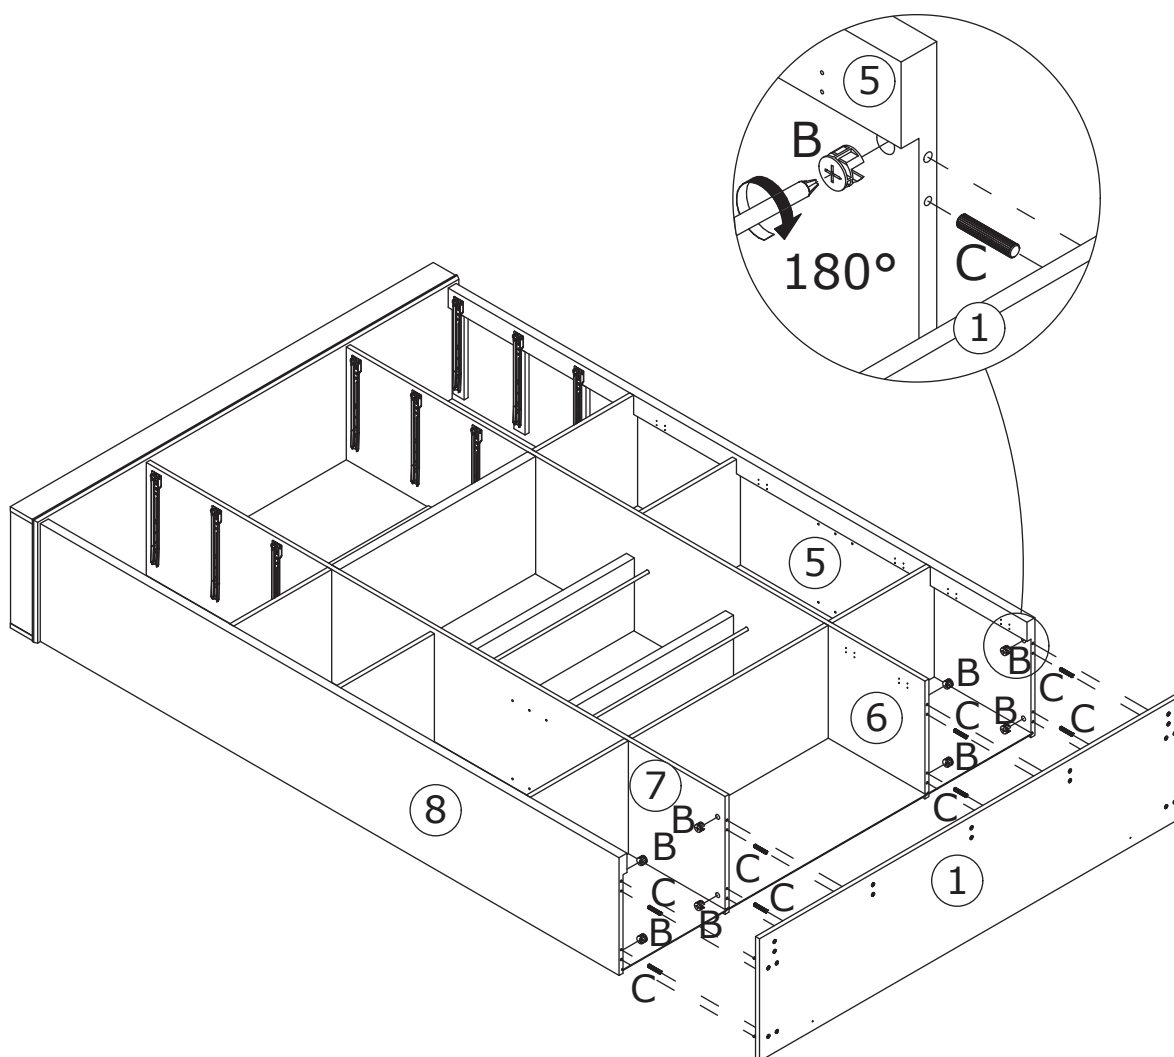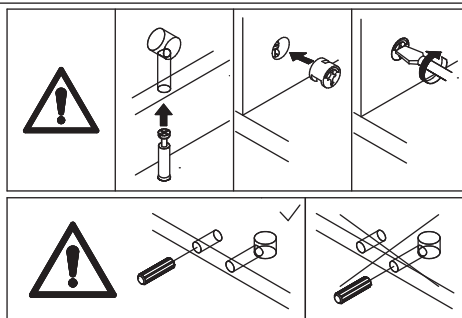



Connect plates 5, 6, 7, and 8 to plate 1 using wooden dowel (C), then tighten by turning eccentric wheel (B) clockwise.

22

J x 18



  Ø4 x 25 mm

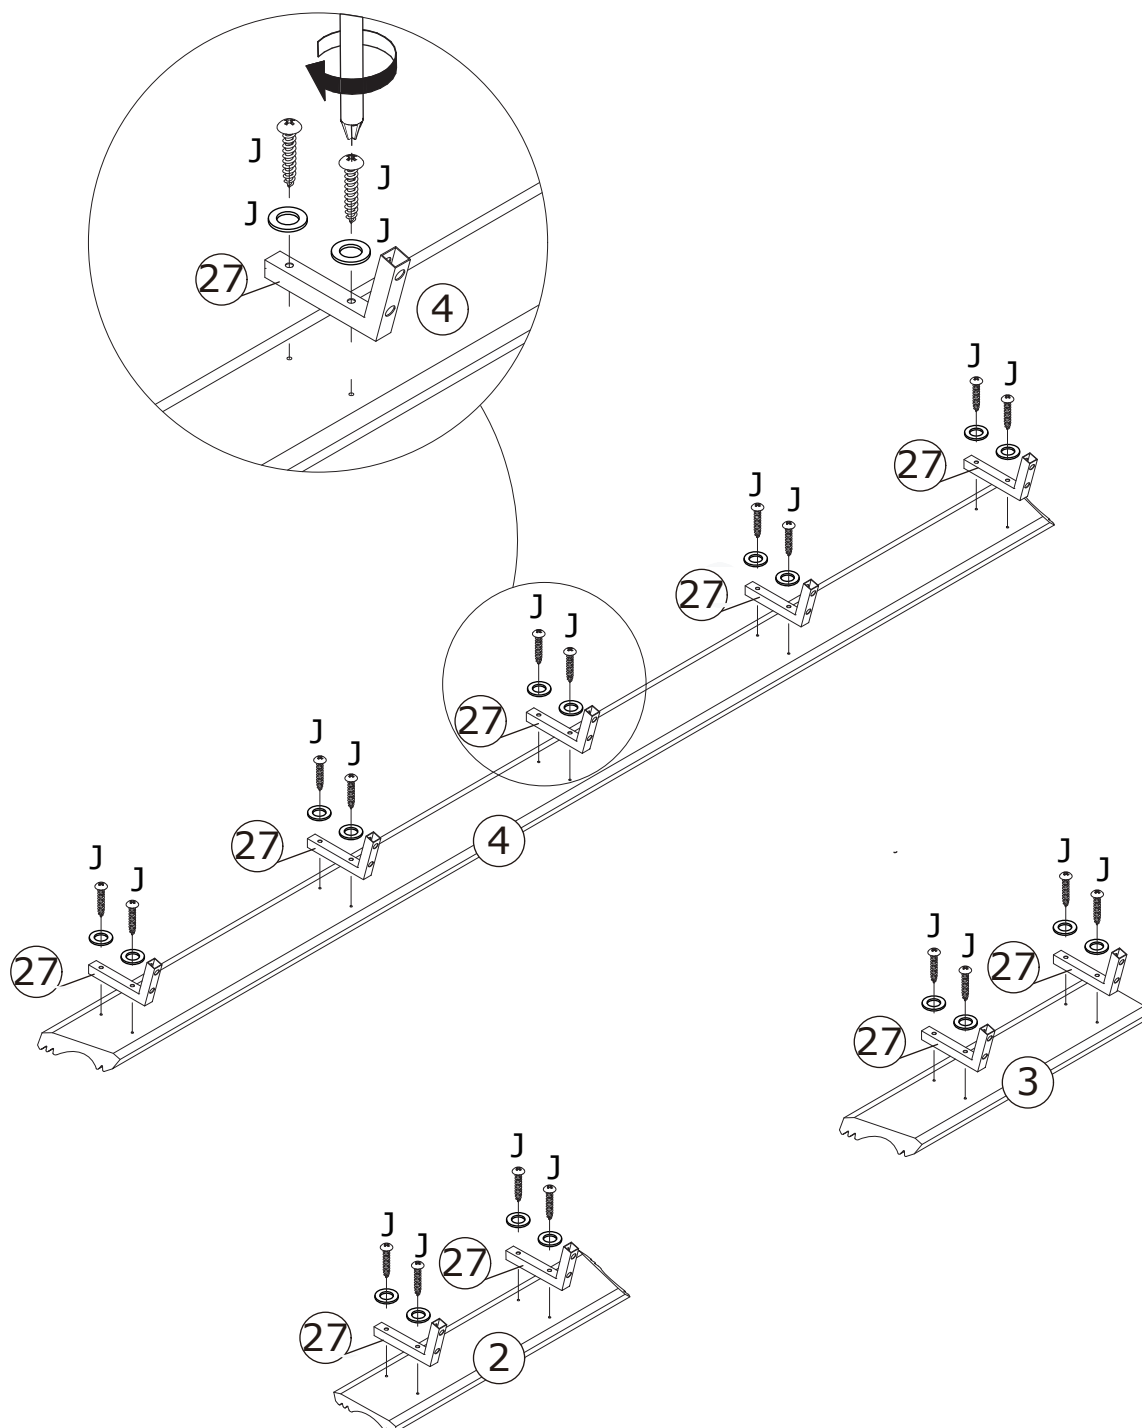





Secure part 27 to plates 2, 3, and 4 using screw.

23

K x 18



    L x 1

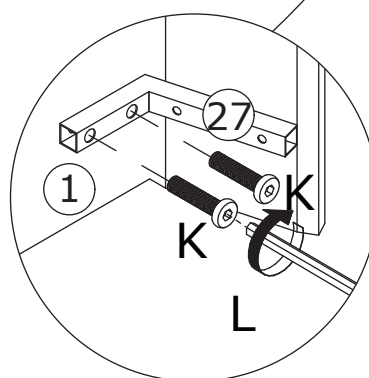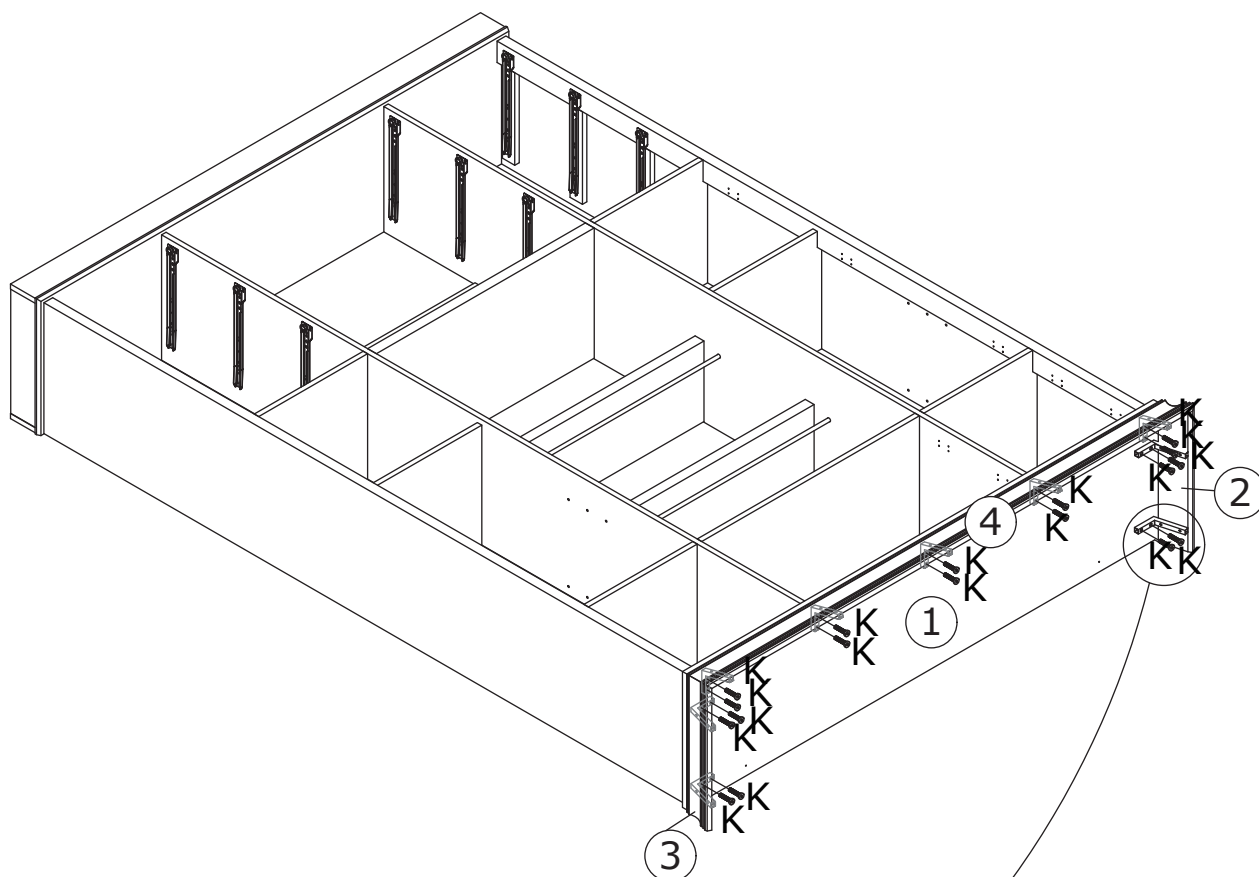



Secure plates 2, 3, and 4 to plate 1 using screw (K).

24

D x 24



  
Ø4 x 35 mm

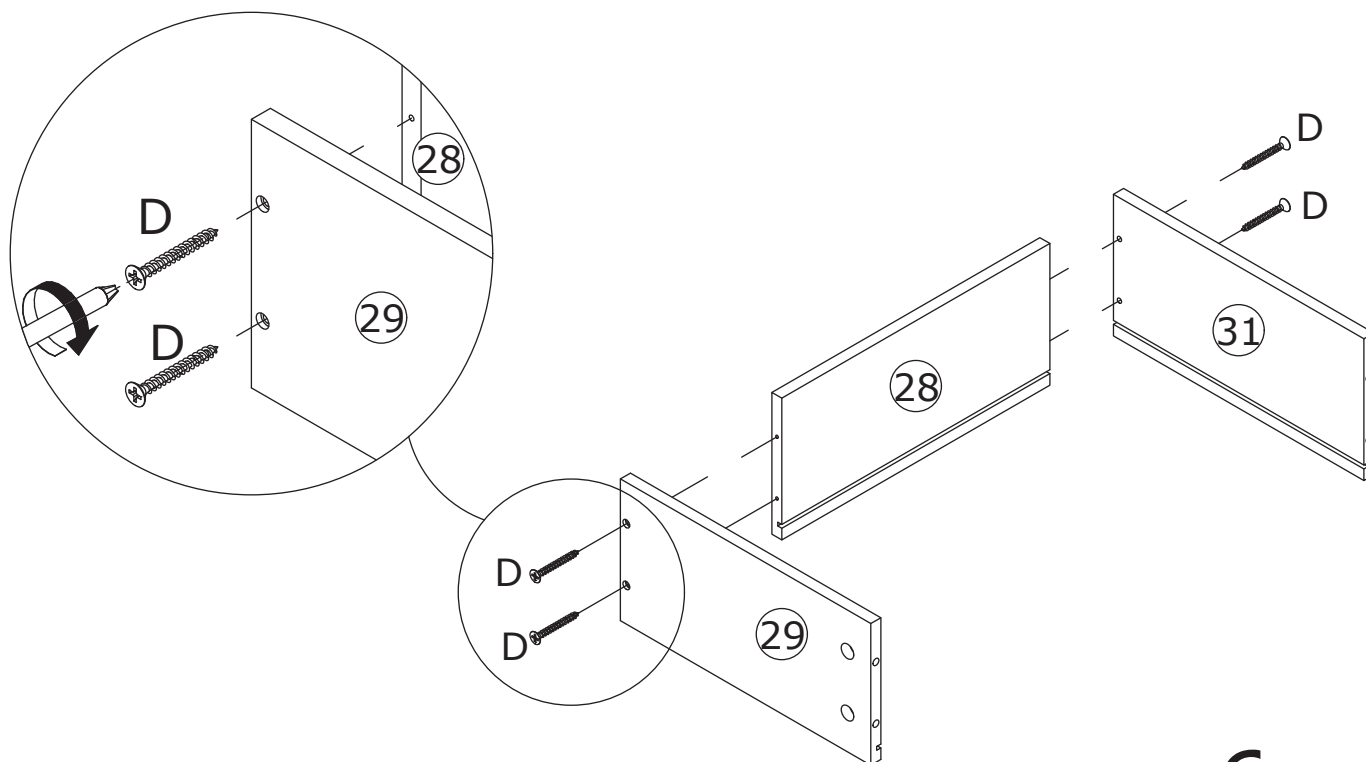

x6

Connect plates 29 and 31 to plate 28 and secure them using screw (D).

 25

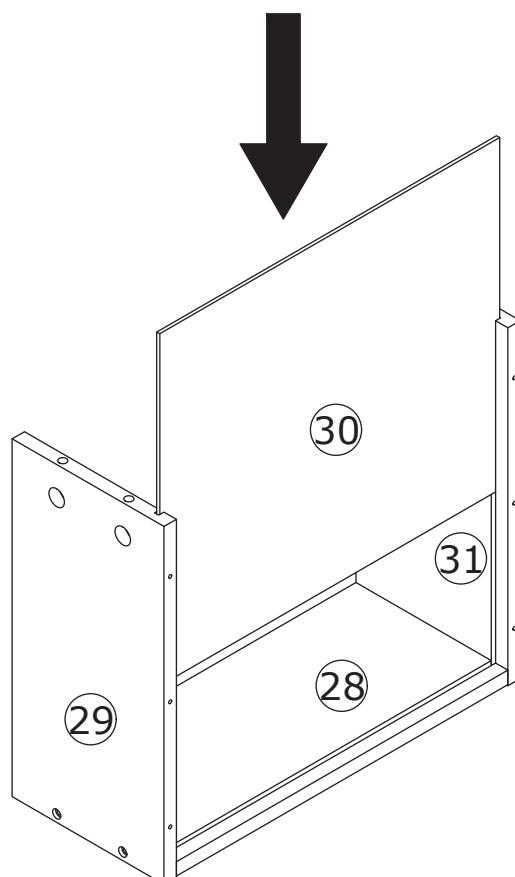


x6




Insert plate 30 into the available slots.

26

 
A x 24



Ø6 x 35 mm

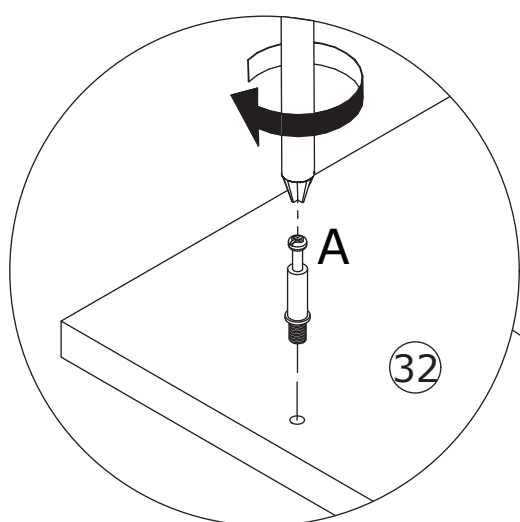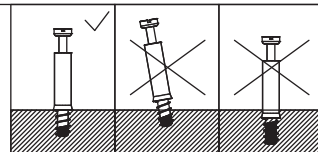   

32

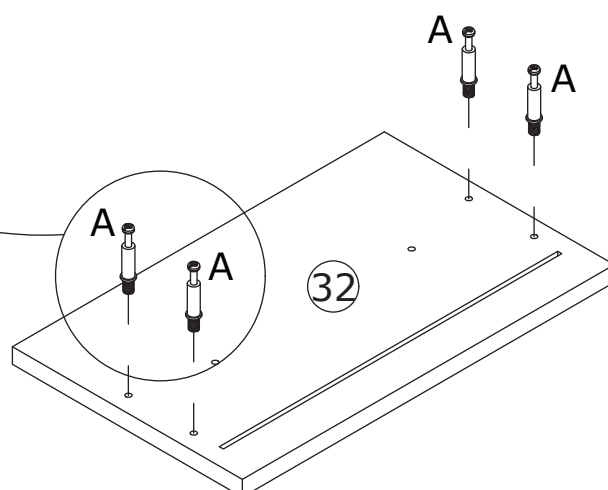 

32

x6

Screw eccentric rod (A) onto plate 32.

27

B x 24



Ø 15 x 10 mm

 
 
 
M x 12



N x 12



Ø 4 x 18 mm

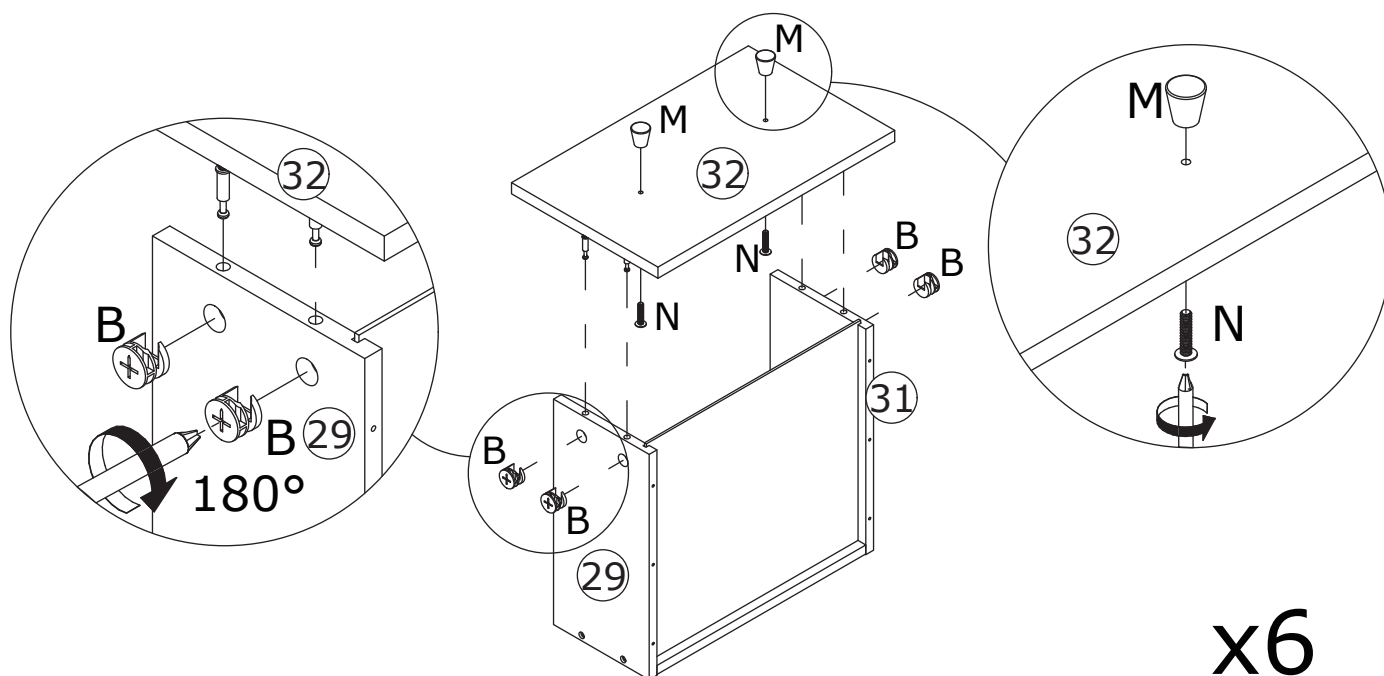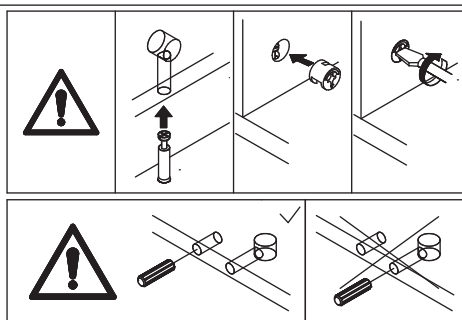

Connect plate 32 to plates 29 and 31, then tighten by turning eccentric wheel (B) clockwise.
Secure knob (M) to plate 32 using the screw (N).

 
28

E x 36





Ø 3.5 x 12 mm

DL x 6



DR x 6

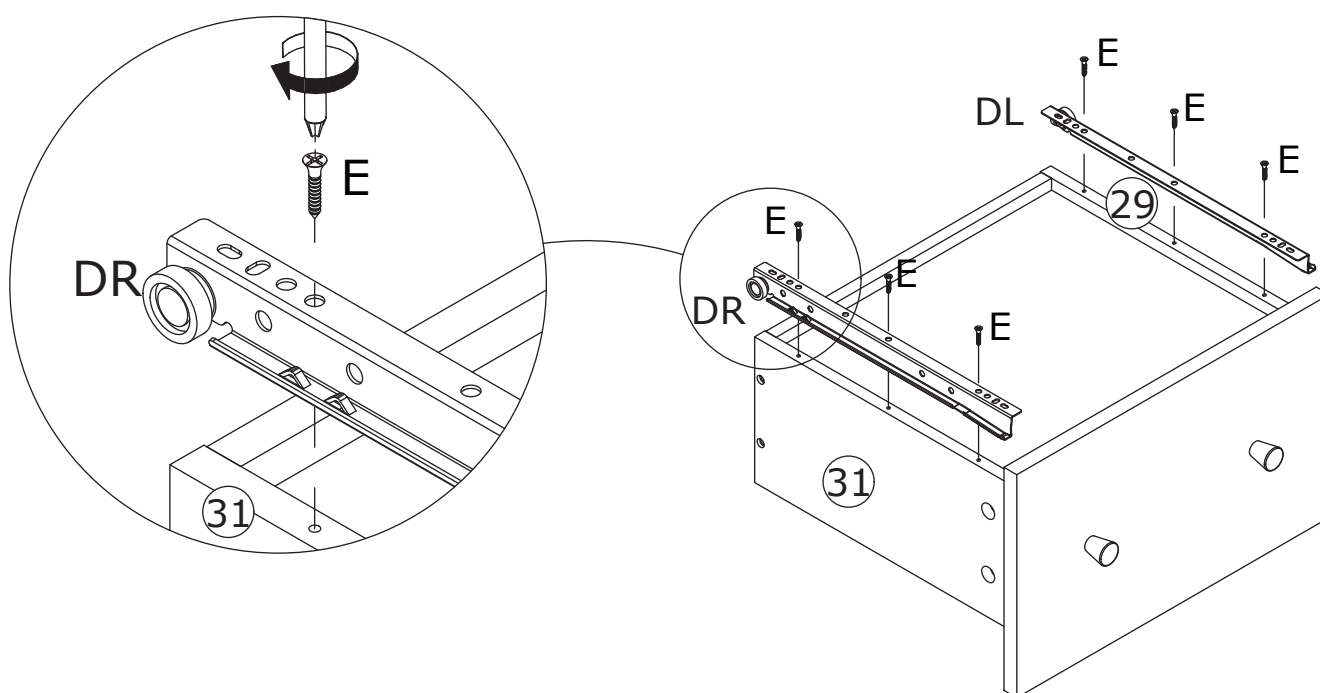  



x6

Secure slide rails (DL) and (DR) to plates 29 and 31, respectively using screw (E).

29

D x 15

  
 Ø4 x 35 mm

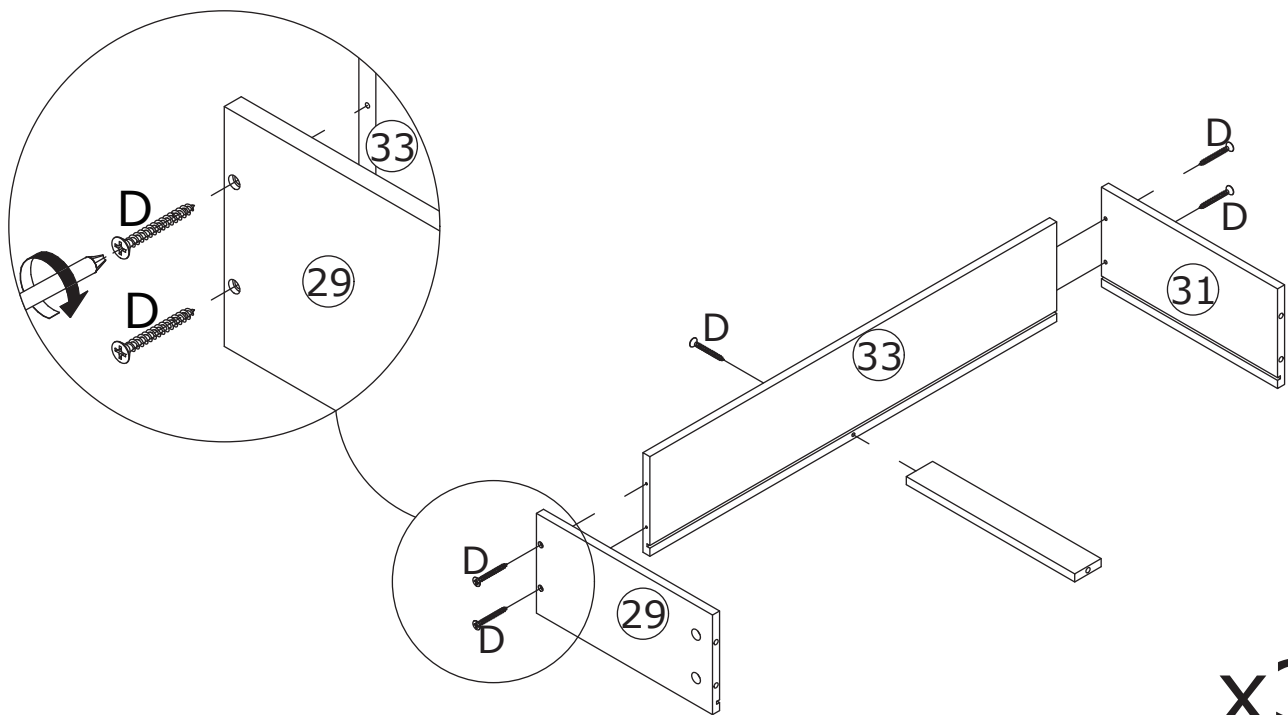

x3

Connect plates 29, 31, and 34 to plate 33, and secure them using screw (D).





 
30

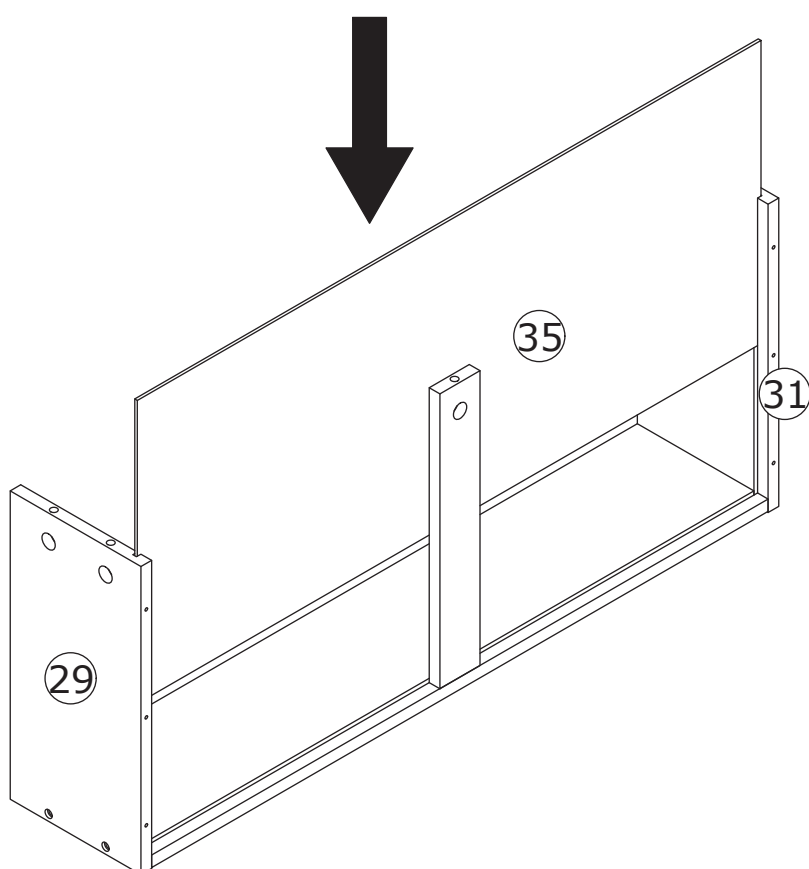

X3

Insert plate 35 into the available slots.

     31

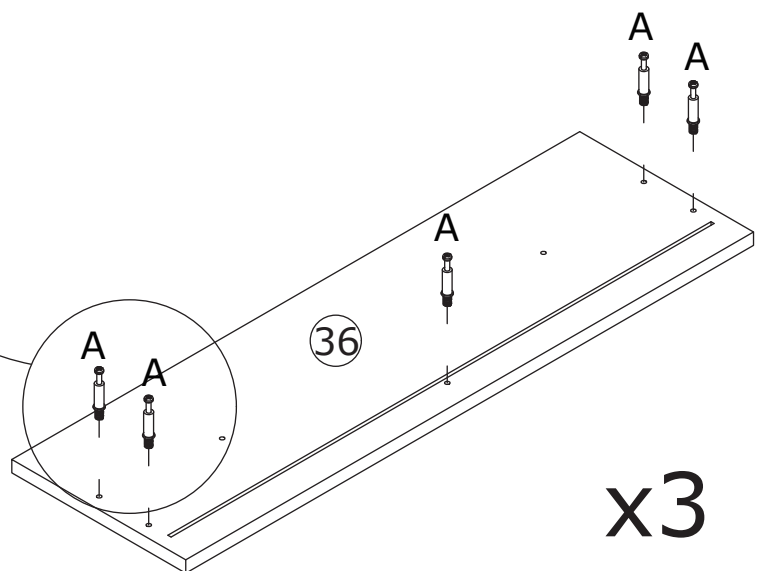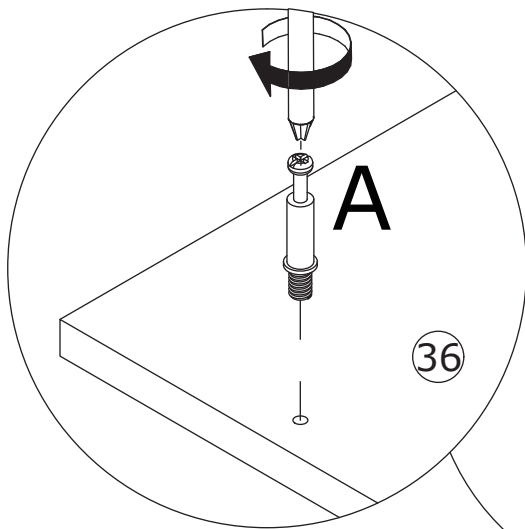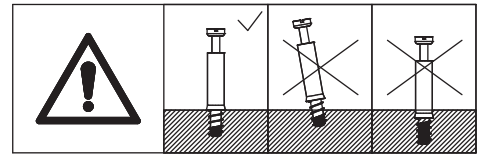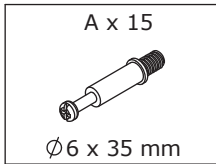

Screw eccentric rod (A) onto plate 36.

32

B x 15



Ø 15 x 10 mm

 
 
 
M x 6



N x 6



Ø 4 x 18 mm

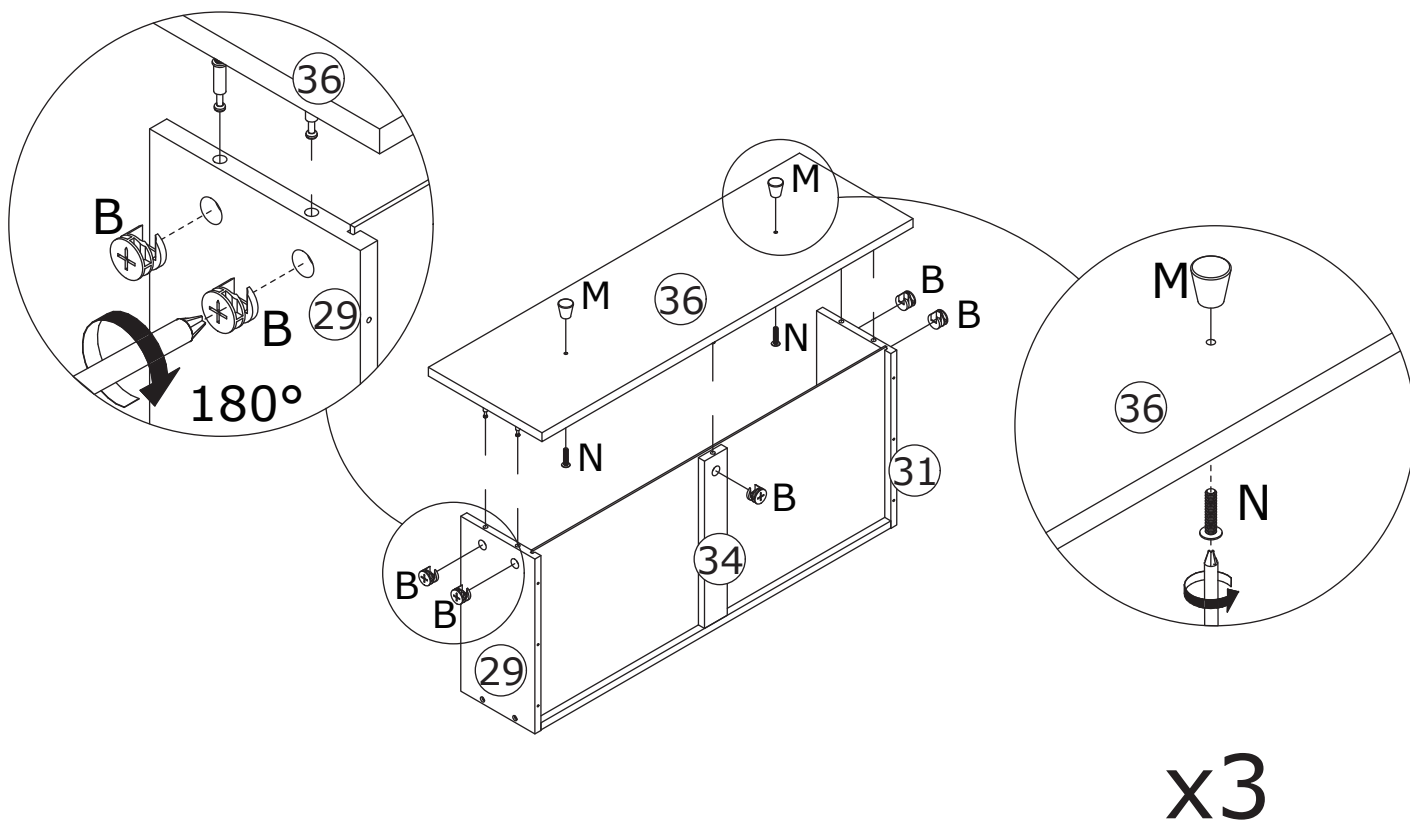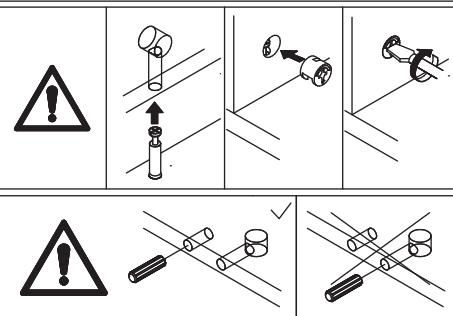

Connect plate 36 to plates 29, 31, and 34, then tighten by turning eccentric wheel (B) clockwise.
Secure knob (M) to plate 36 using screw (N).

 
33

E x 18





Ø 3.5 x 14 mm

DL x 3




DR x 3

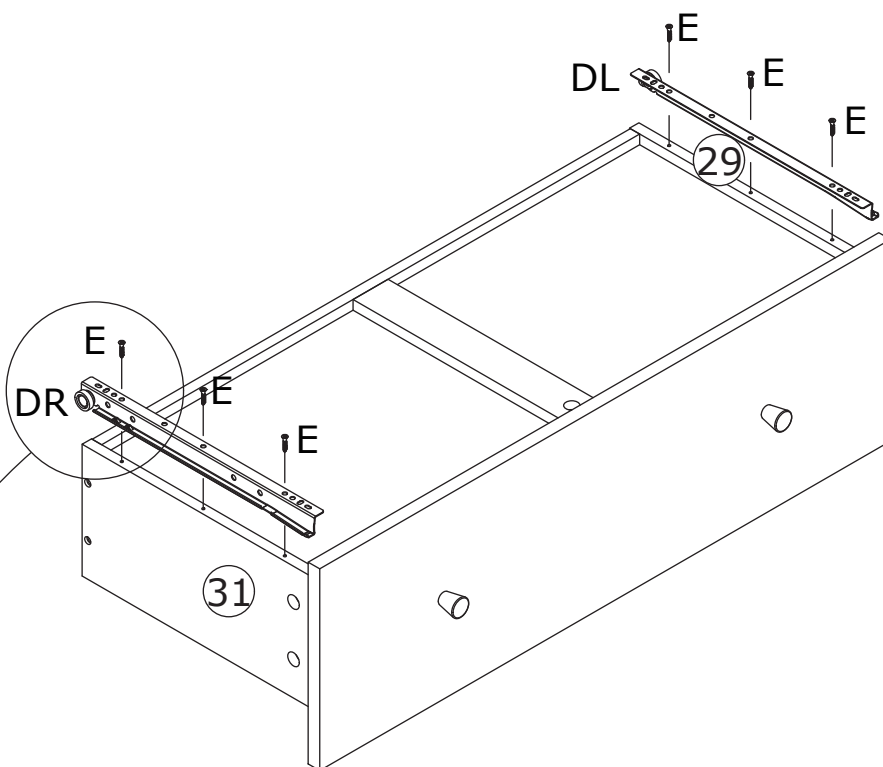  

x3

Secure slide rails (DL) and (DR) to plates 29 and 31, respectively using screw (E).


 
34

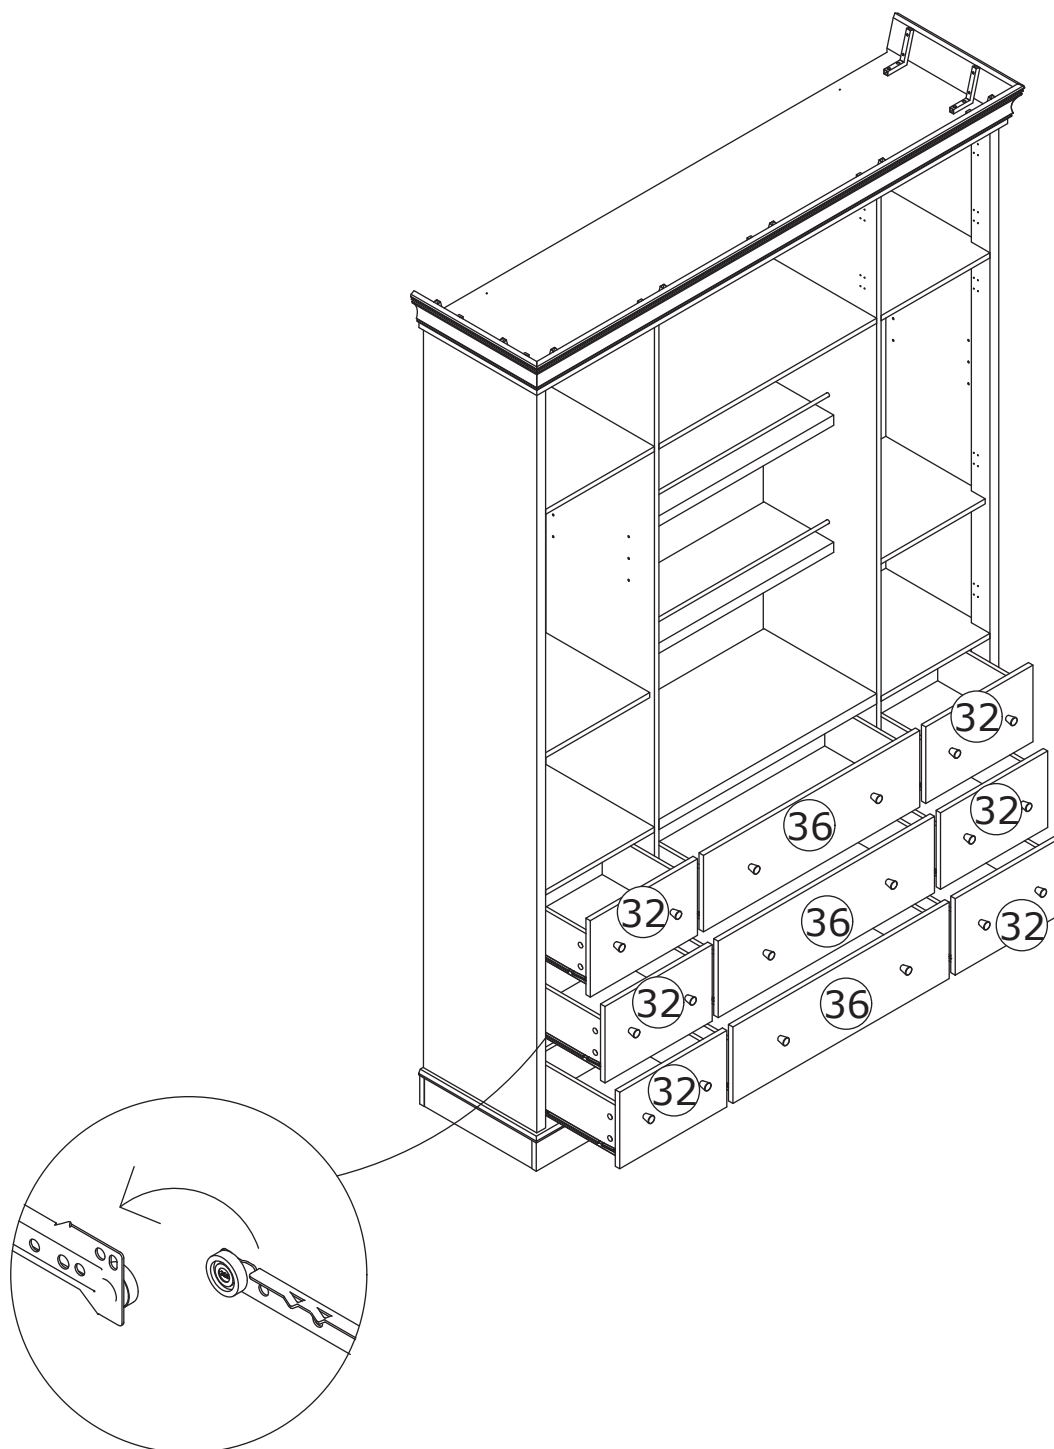

Install drawers 32 and 36 in the modular unit as shown.

35

  P x 8

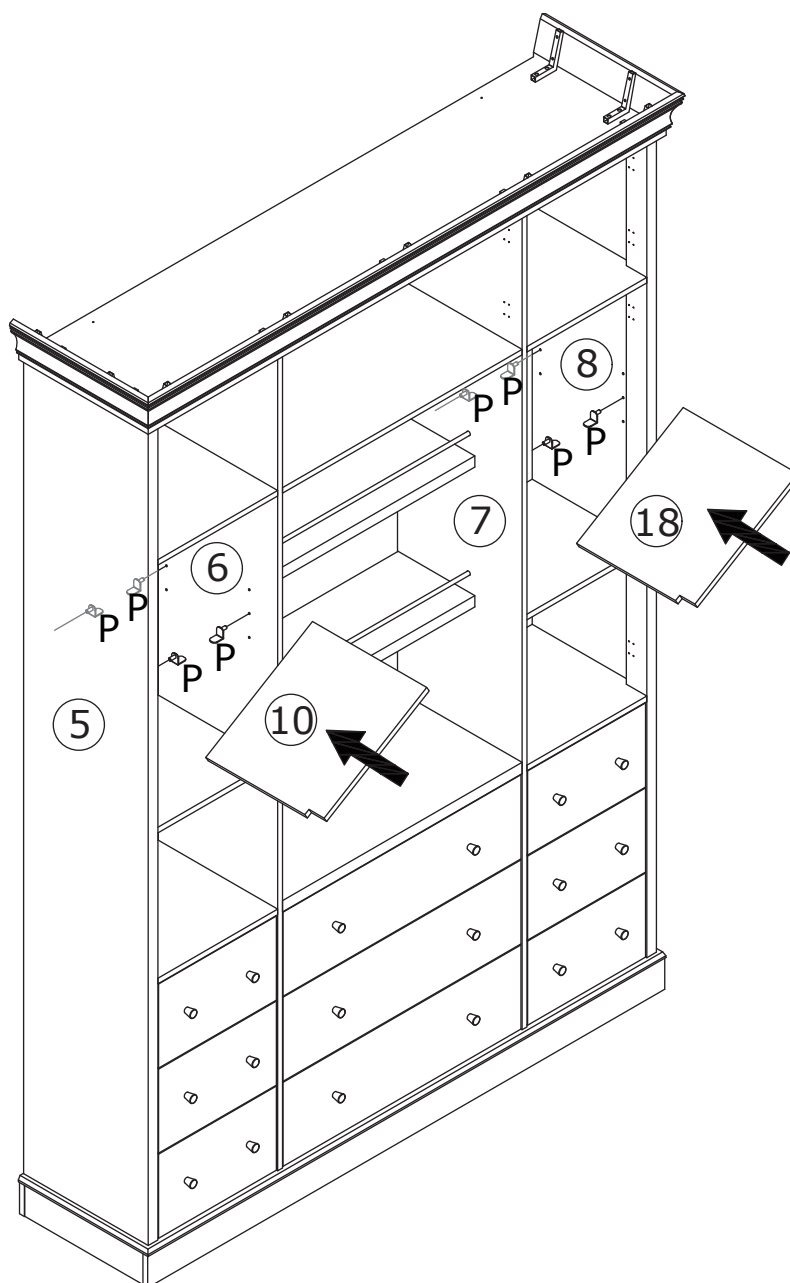

Insert pin (P) onto plates 5, 6, 7, and 8.
Then place plates 10 and 18 on pins

36

G x 4



Ø3 x 14 mm

Q x 16

 
 
 


Ø3.5 x 14 mm

R x 8



S x 4

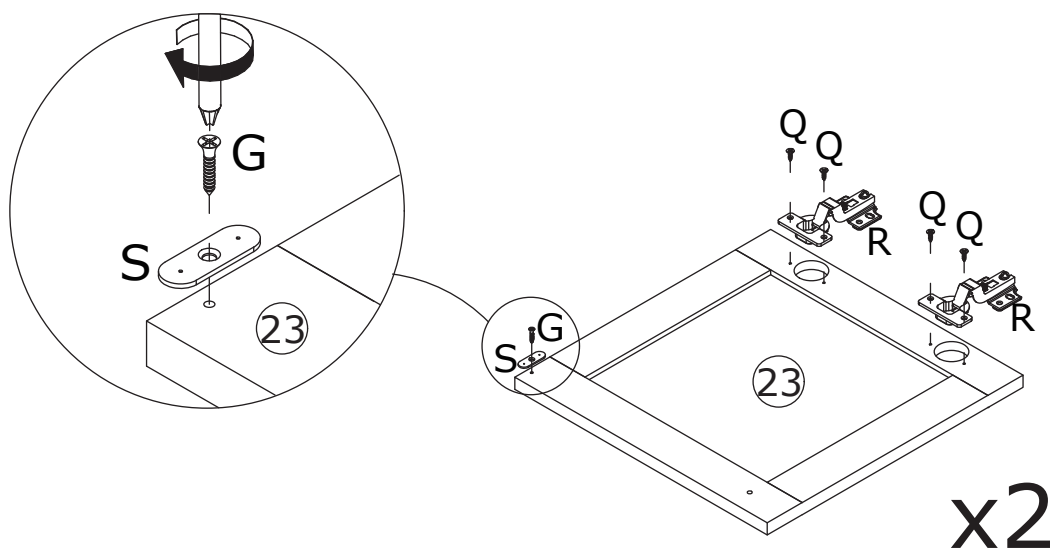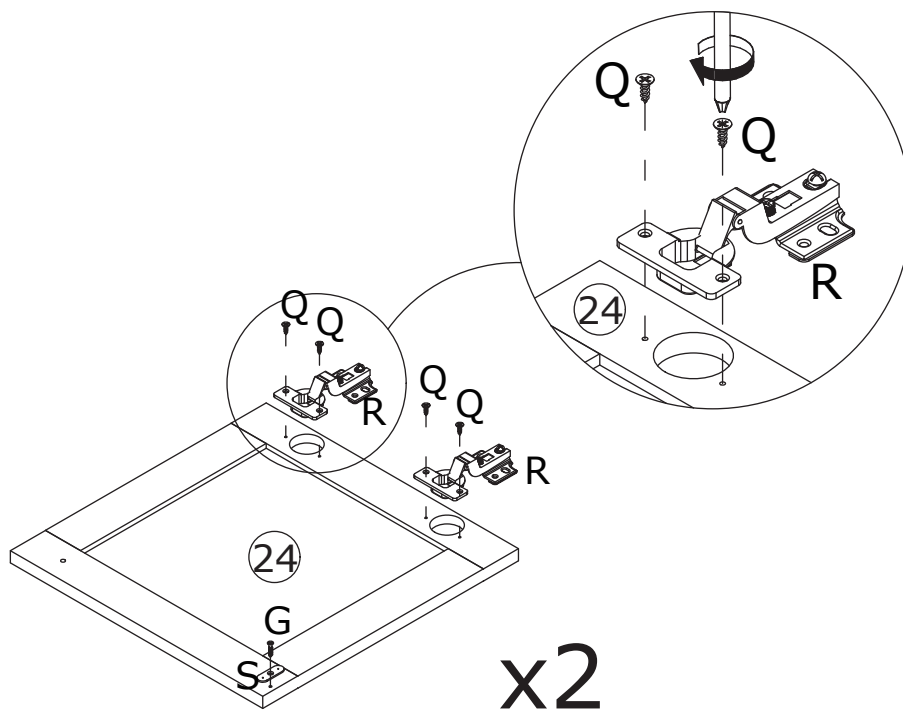

Secure hinge (R) to plates 23 and 24 using screw (Q).
Secure iron sheet (S) to plates 23 and 24 using screw (G).

37

M x 4



N x 4

 
 


Ø4 x 18 mm

Q x 32



Ø3.5 x 14 mm

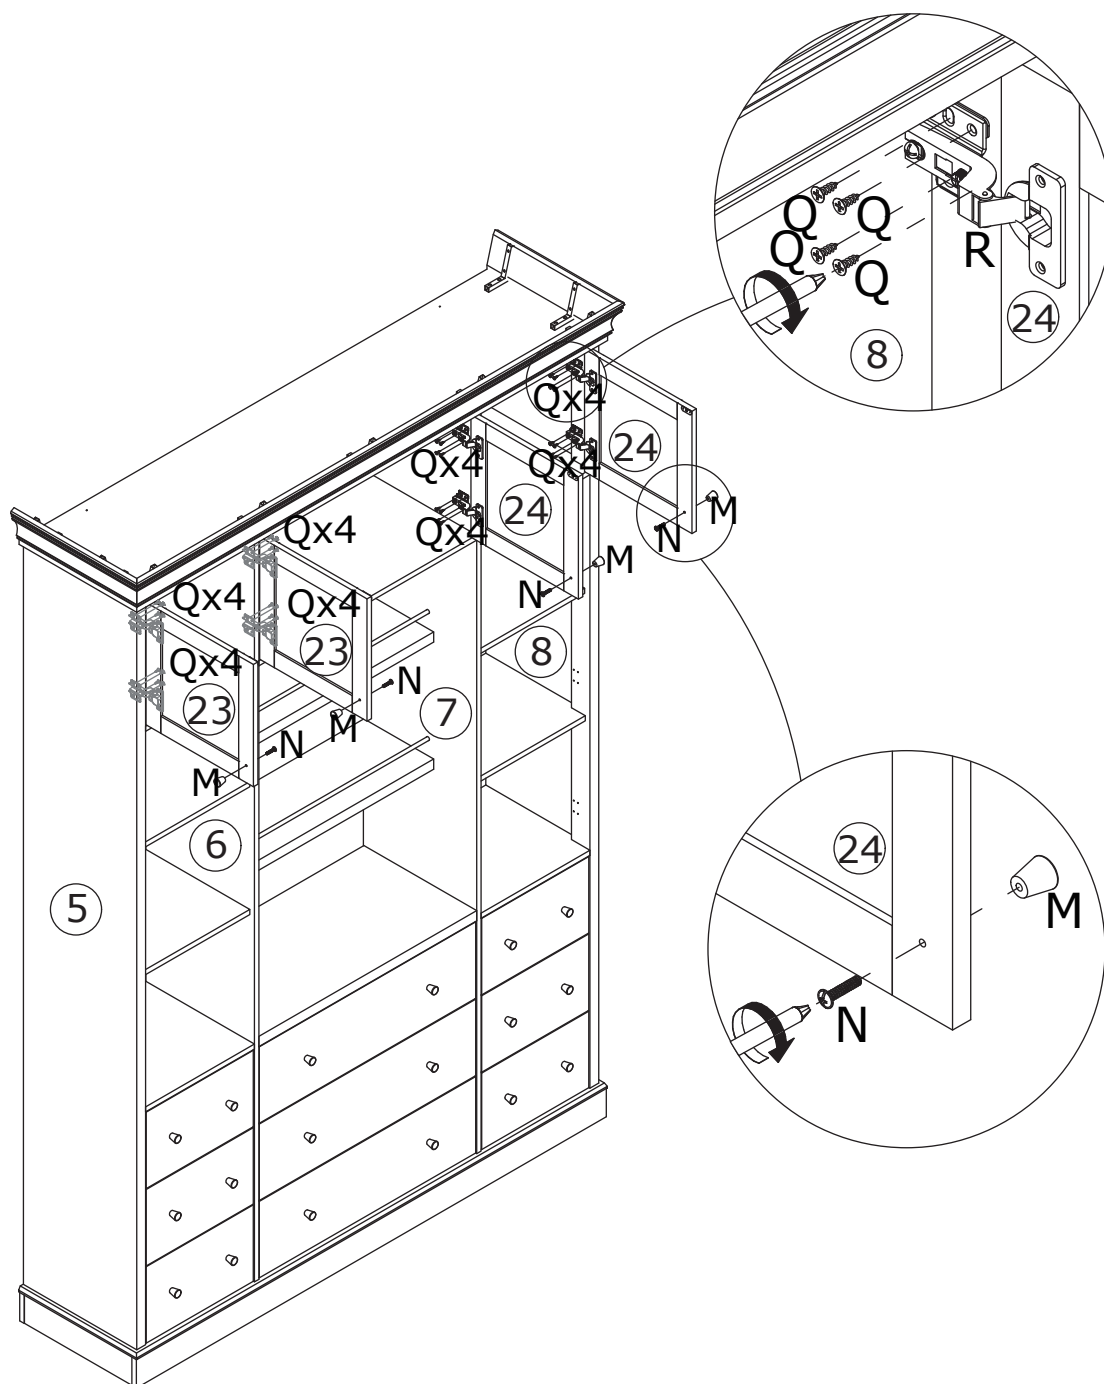

Secure plates 23 and 24 to plates 5, 6, 7, and 8 by securing hinges using screw (Q).

Secure knob (M) to plates 23 and 24 using screw (N).

38

G x 2



 
Ø3 x 14 mm

Q x 12





Ø3.5 x 14 mm

R x 6



S x 2

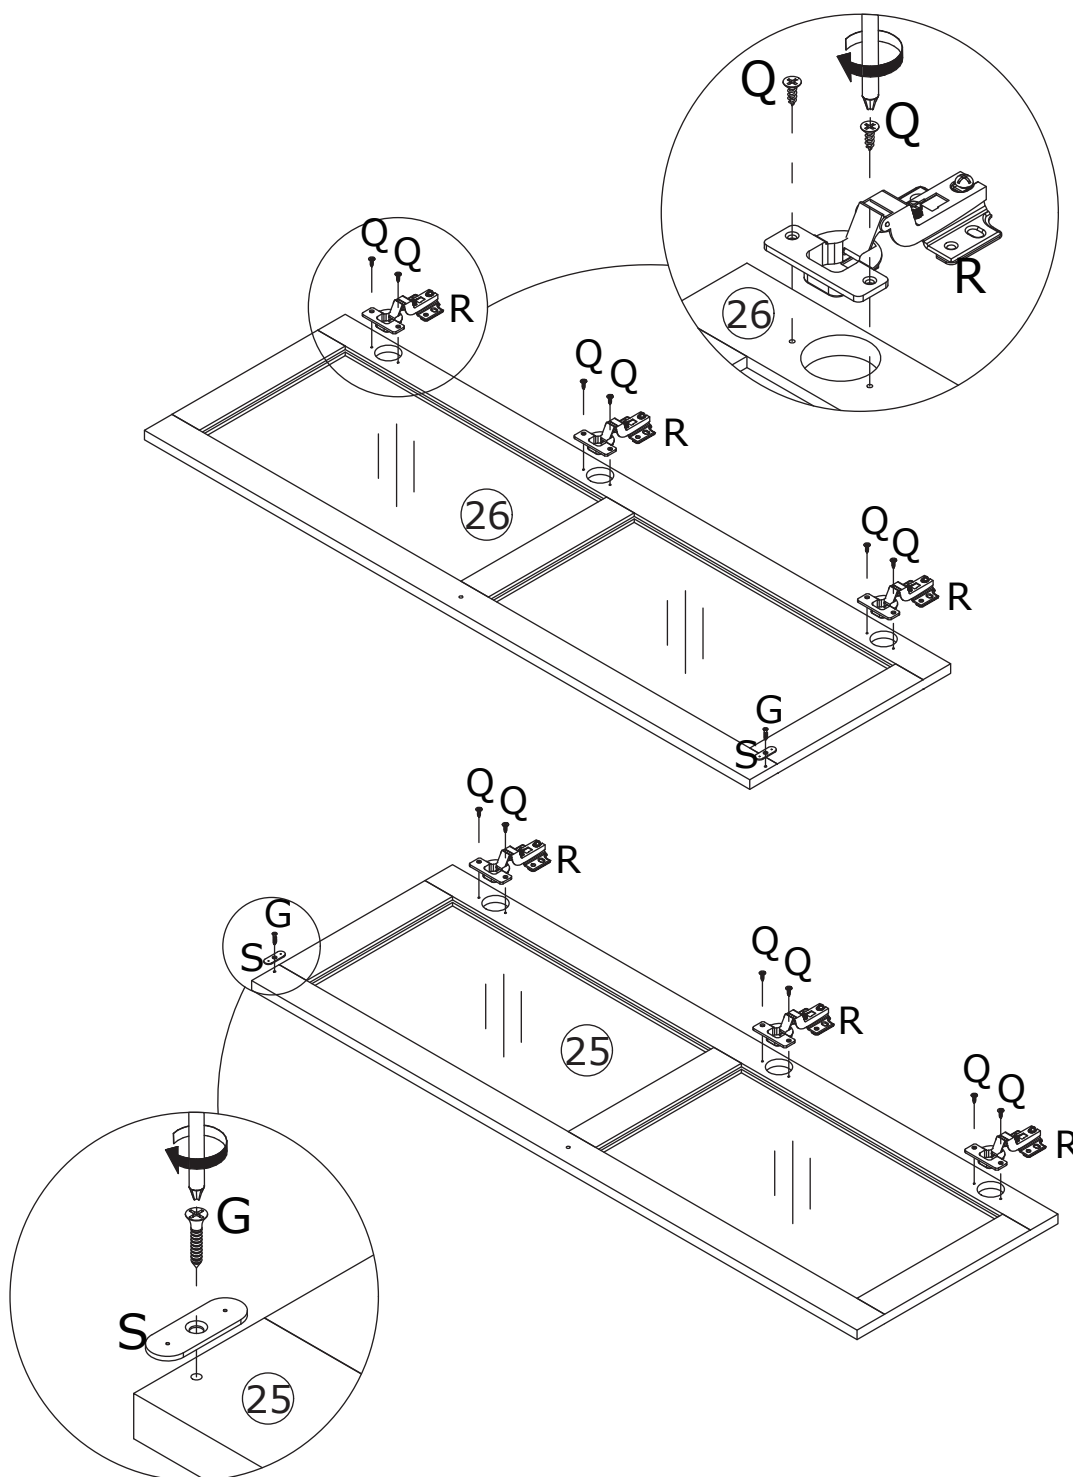  

Secure hinge (R) to plates 25 and 26 using screw (Q).
Secure iron sheet (S) to plates 25 and 26 using screw (G).

39

M x 2



N x 2

 
 


Ø4 x 18 mm

Q x 24




Ø3.5 x 14 mm

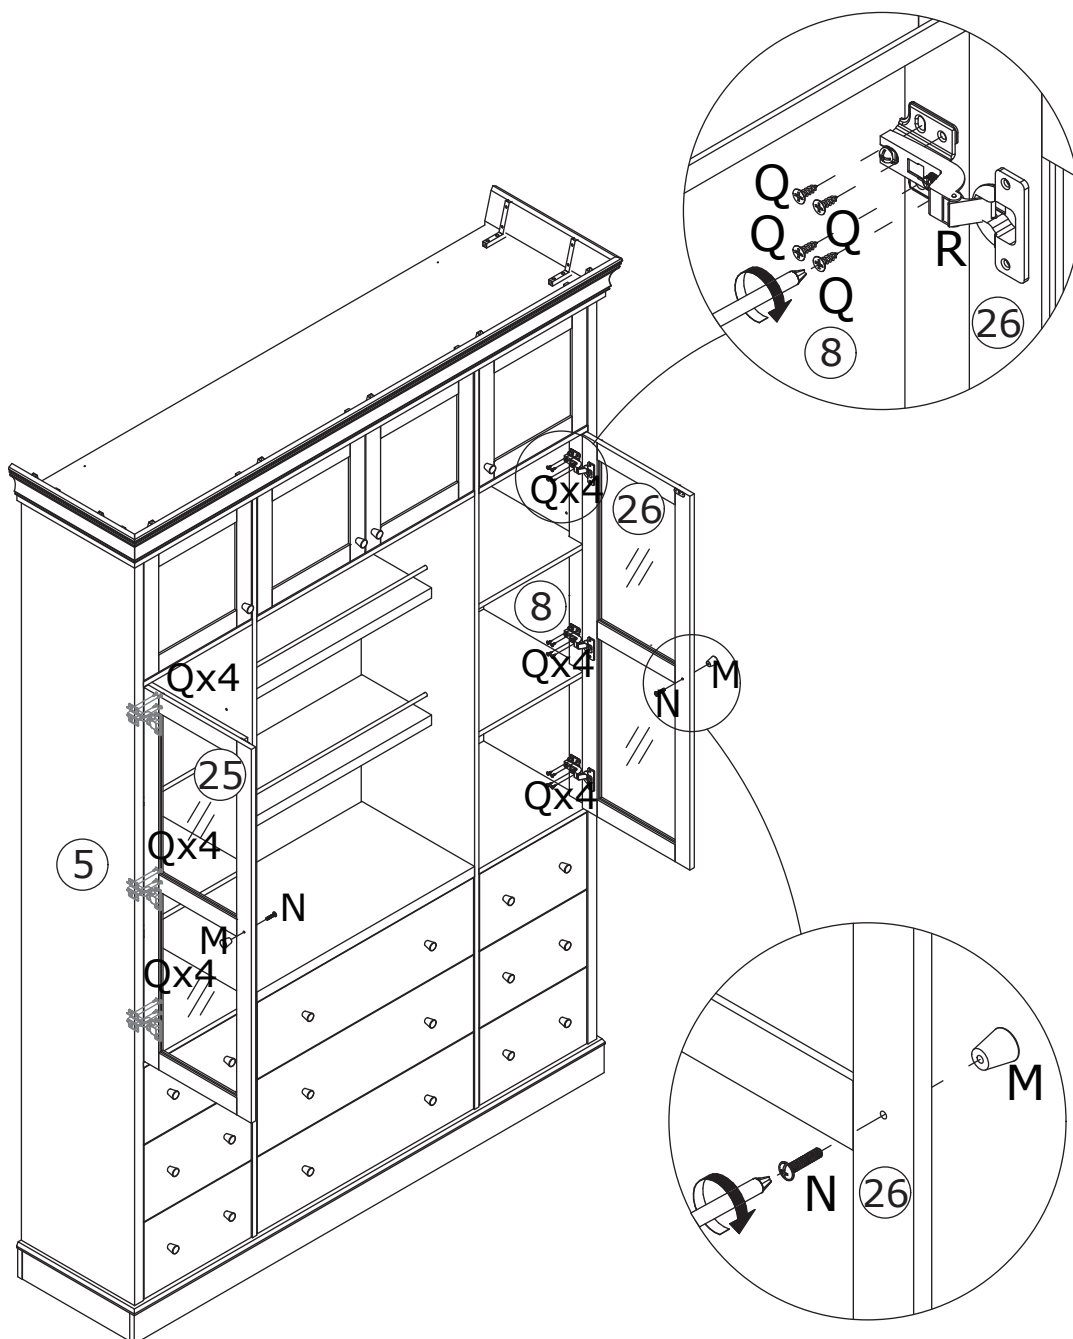

Secure plates 25 and 26 to plates 5 and 8 by securing hinges using screw (Q).


 
Secure knob (M) to plates 25 and 26 using screw (N).




If the door panels are not aligned, please adjust the screws on the hinges according to the illustration.

Or you can search this link to view the teaching video.

  
<https://youtu.be/n0Lb36SoODM>

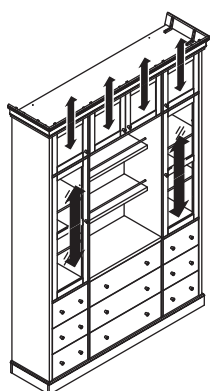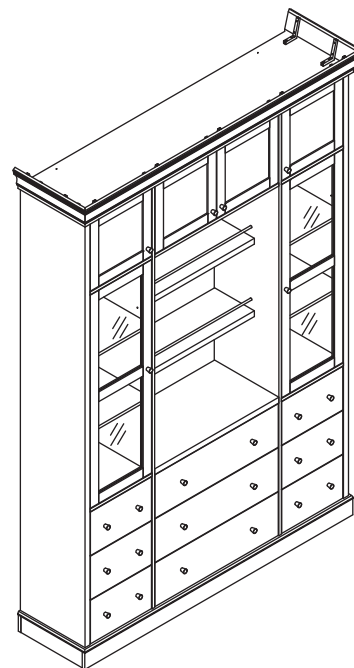



①

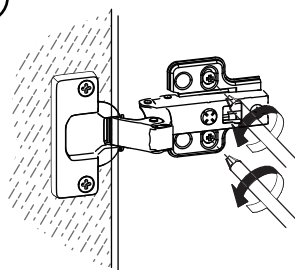 


②

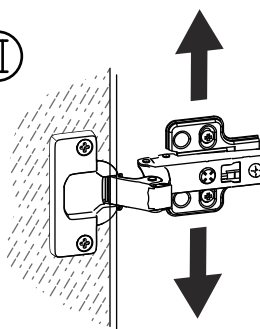 


③

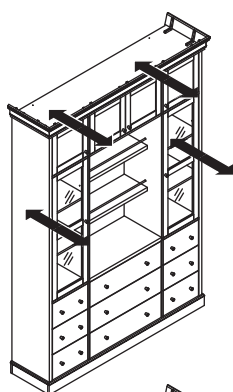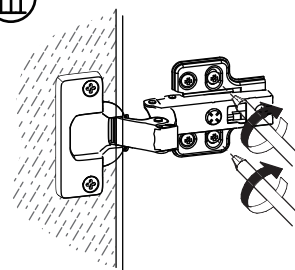  



①

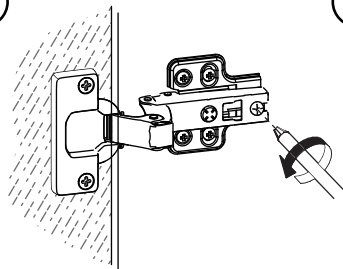 


②

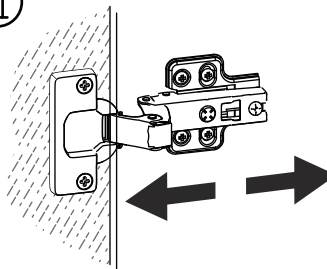 


③

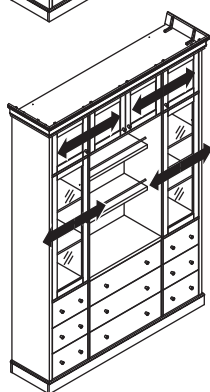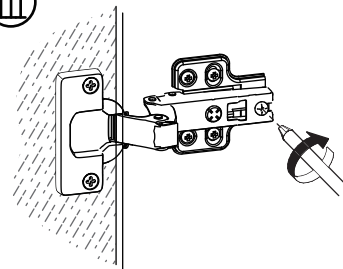  

①

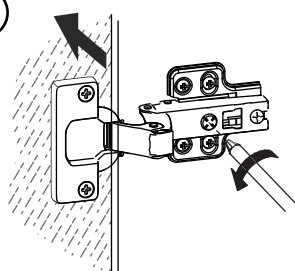 

②

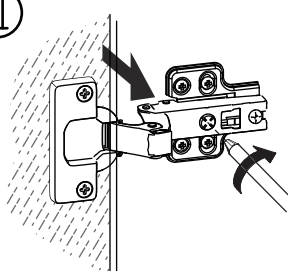 



41

G x 36



Ø 3 x 14 mm

  T x 36

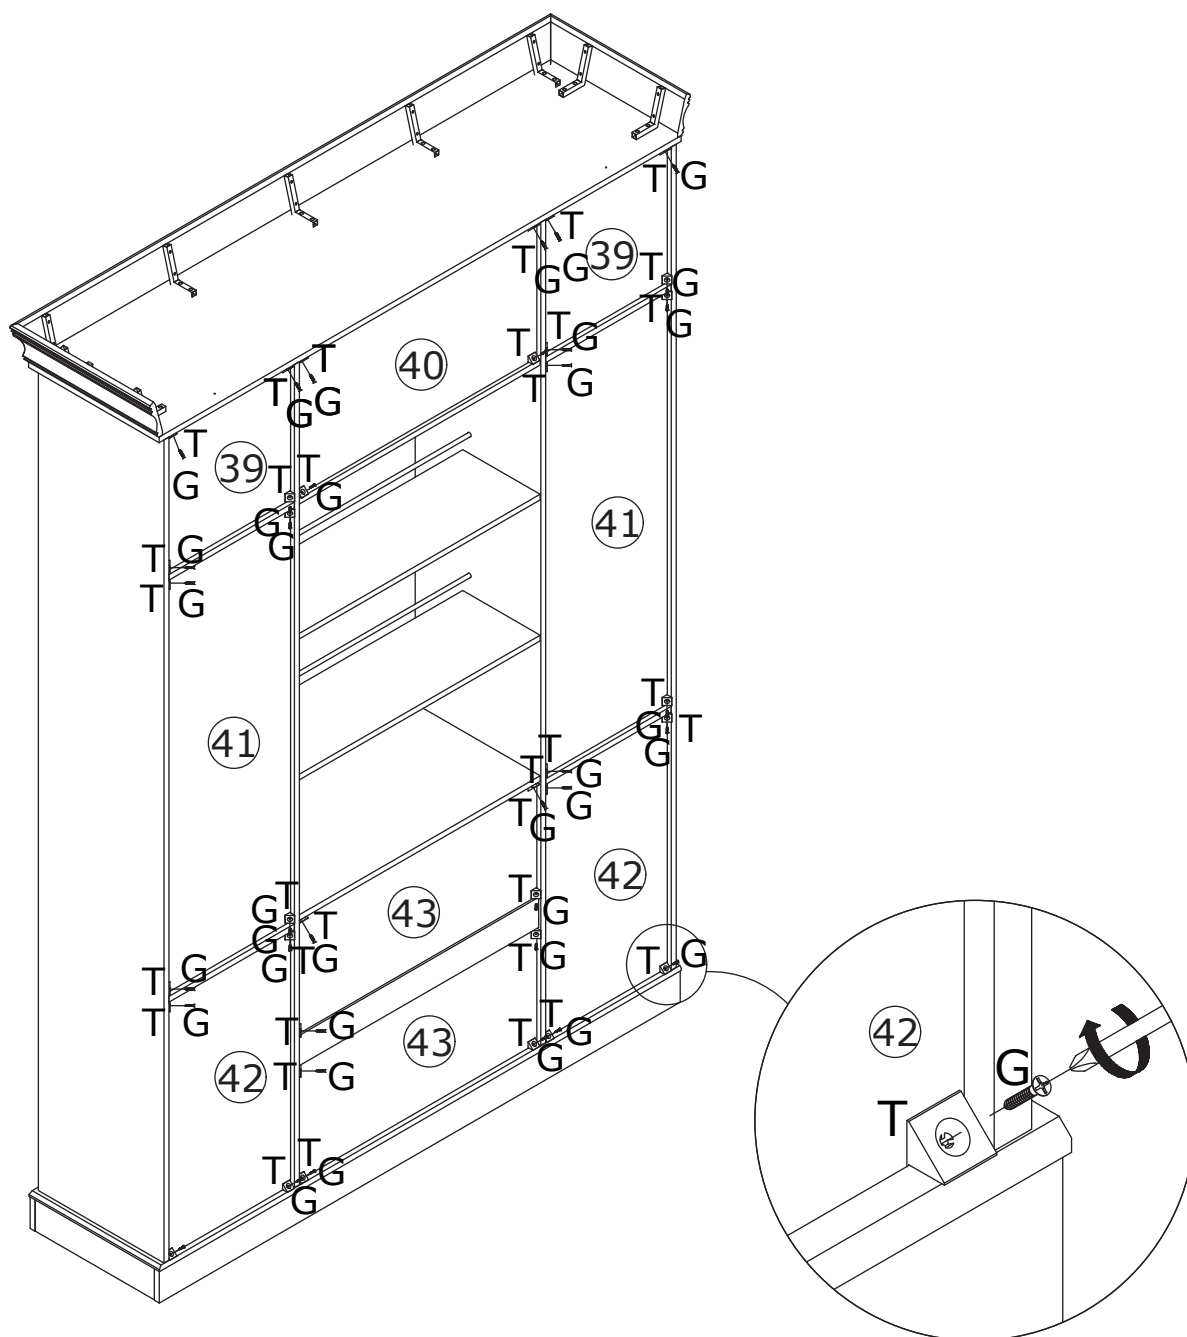

Insert clip (T) into back slots and secure them using screw (G).

42

 
 
U x 2



V x 2



Ø4 x 14 mm

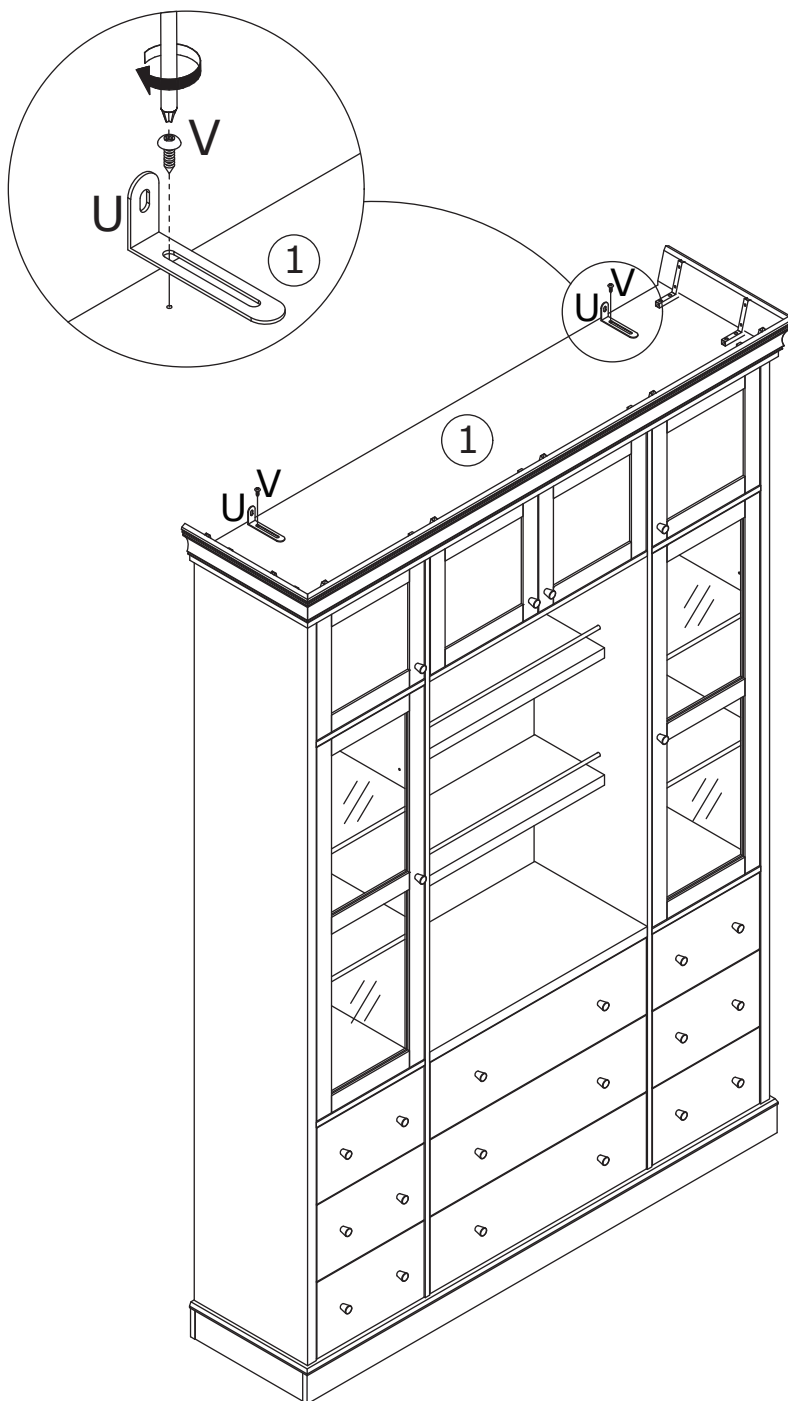






Secure bracket (U) to plate 1 using screw (V).

43



D x 2



     W x 2

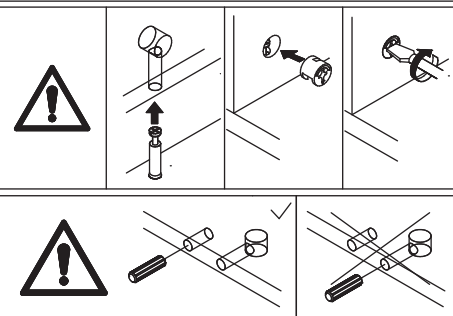

Install the anti-tip device as shown.

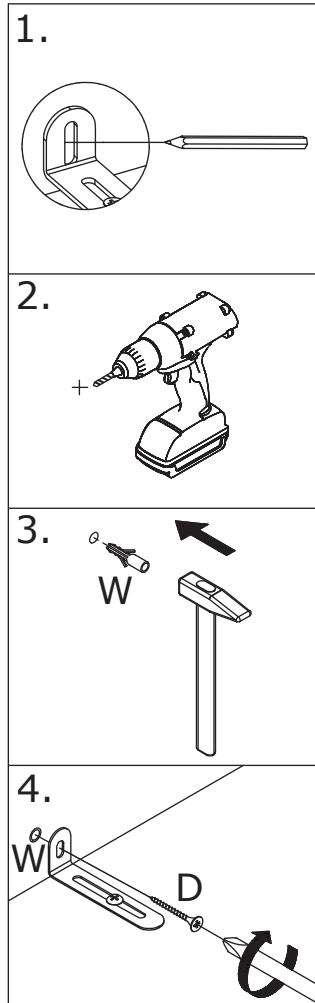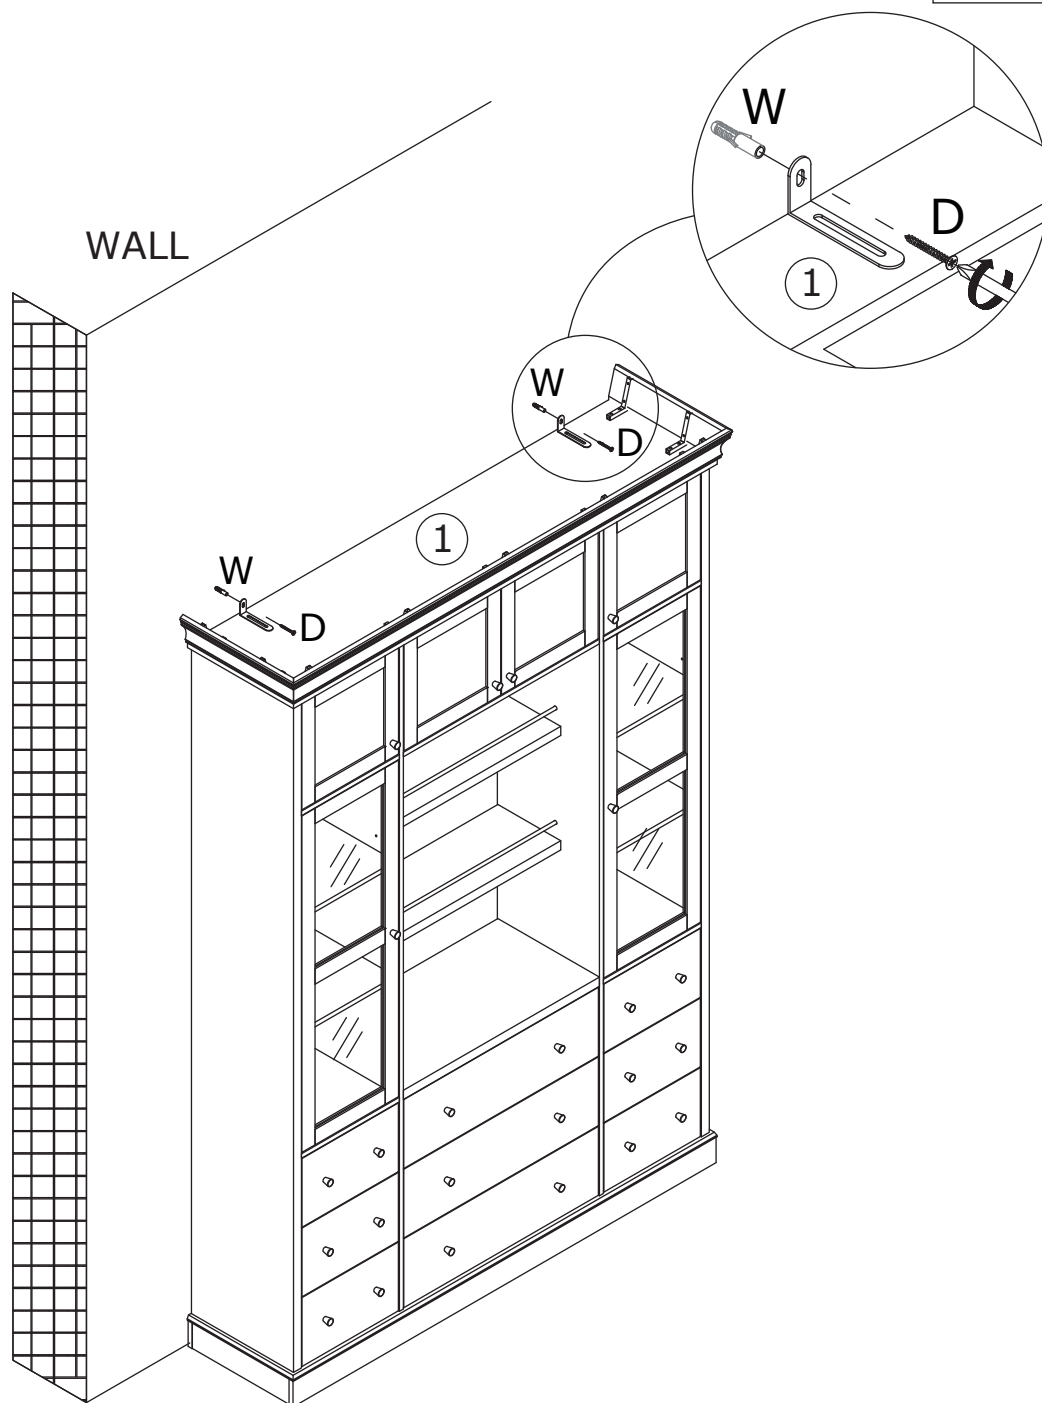  



WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068