 


ASSEMBLY INSTRUCTION


ROUND TABLE

A Table Top



1pc

B Base

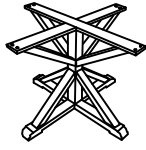

1pc

C Bolt
Ø5/16"x1-1/2"



8pcs

D Flat Washer
Ø5/16"x22mm



 
8pcs

E Lock Washer
Ø5/16"x13mm




8pcs

F Allen Key
M5




1pc

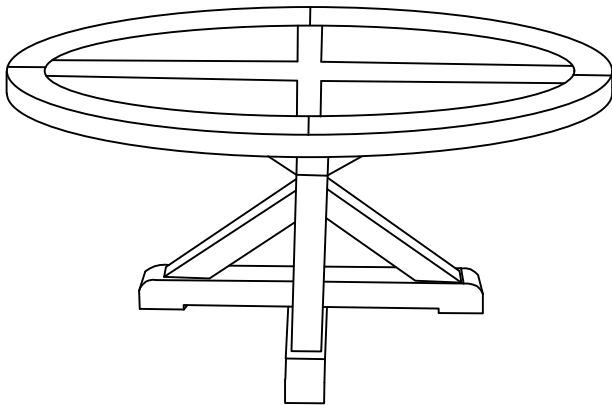

This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

- 1** Attach Base (B) to Table Top (A) using Bolt (C), Flat Washer (D), Lock Washer (E) by Allen Key (F) as below shown.

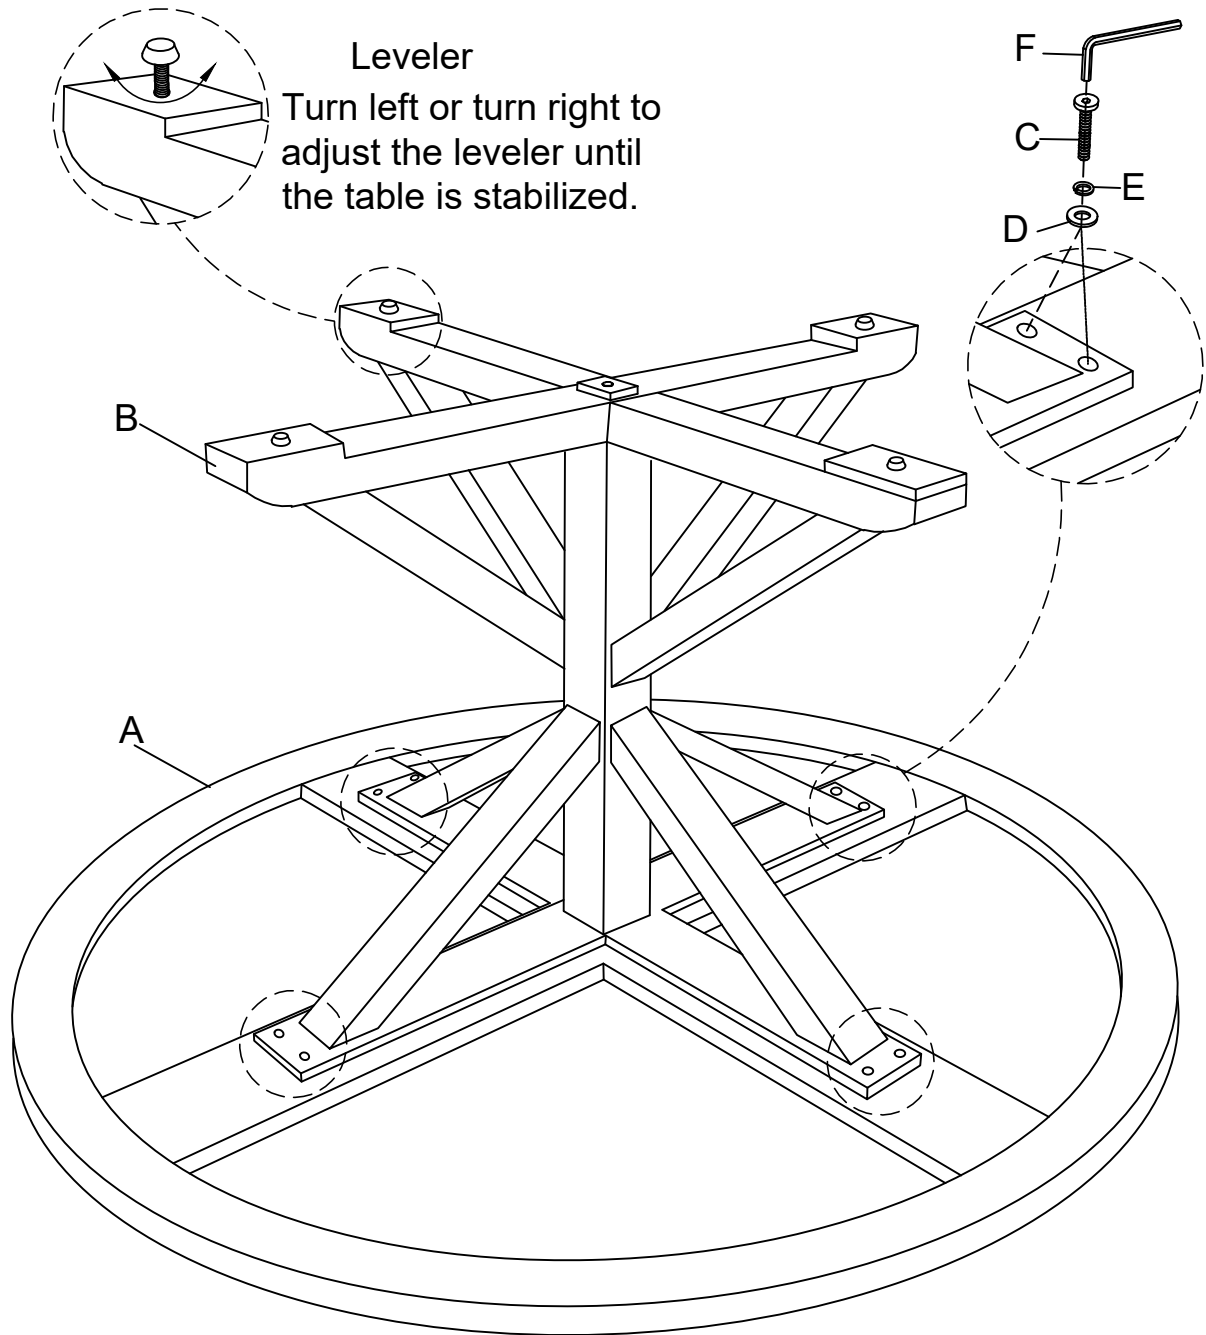








 
 



Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

ASSEMBLY INSTRUCTIONS


DINING CHAIR

A Chair Back  1 pc	B Seat Frame  1 pc	C Left Supporter  1 pc	D Right Supporter  1 pc
E Front Leg  2 pcs	F Seat  1 pc	G Pan Head Bolt 1/4", 5/8"  8 pcs	H Lock Washer 1/4"  8 pcs
I Flat Washer 1/2"  8 pcs	J Flat Head Bolt 1/4", 1"  6 pcs	K Wood Screw M5, 3/4"  3 pcs	L Allen Wrench 2 3/4", 1/4"  1 pc




This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

- 1** Attach Seat Frame (B) to Chair Back (A) using Pan Head Bolt (G), Lock Washer (H) and Flat Washer (I) with Allen Wrench (L).

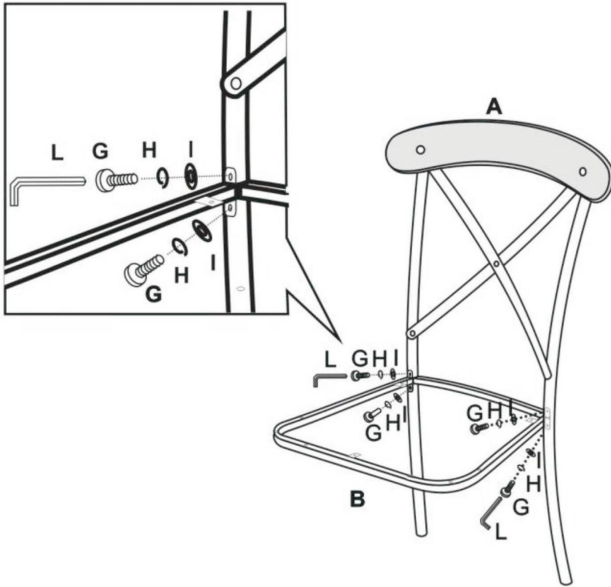


- 2** Attach Left & Right Supporter (C&D) to Chair Back (A) and Seat Frame (B) using Pan Head Bolt (G), Lock Washer (H) and Flat Washer (I) with Allen Wrench (L).

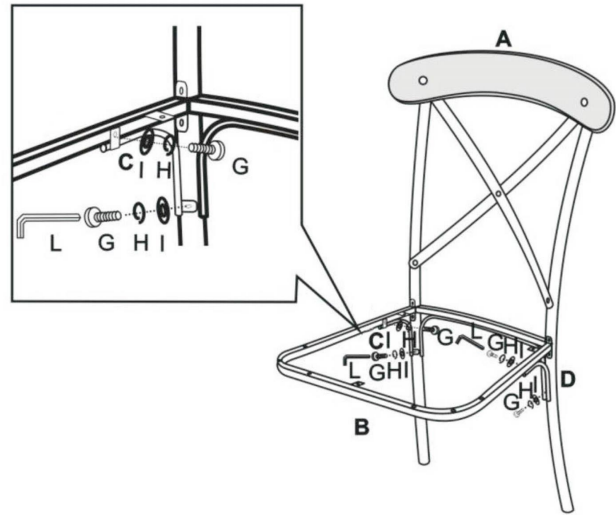


Take the Allen Wrench and turn the bolts until the legs are secured. **DO NOT TIGHTEN COMPLETELY.** Stop when you feel you are adding force to tighten the bolts.

- 3** Attach Front Leg (E) to Seat Frame (B) using Flat Head Bolt (J) with Allen Wrench (L).

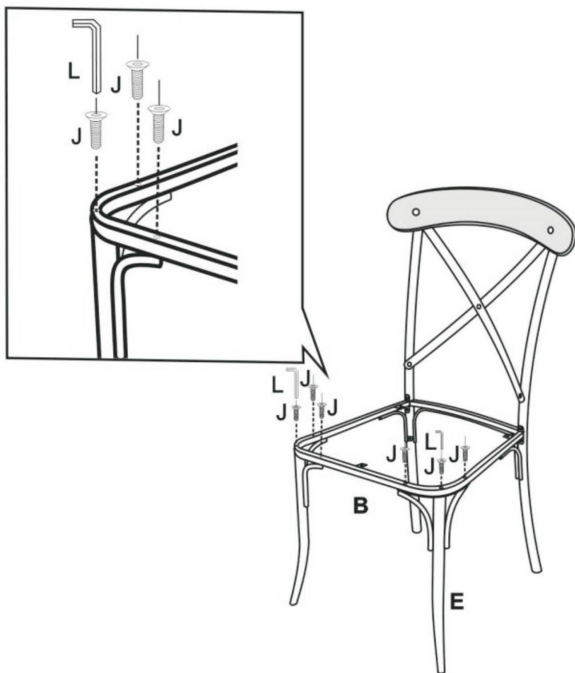

- 4** Attach Seat (F) to Seat Frame (B) using Wood Screw (K) with a screwdriver (not provided).

Stand the chair on an even surface and check for balance. If it wobbles, press down on the uneven leg and tighten the bolts. Once balanced, apply even pressure to the center and tighten all bolts without over-tightening.

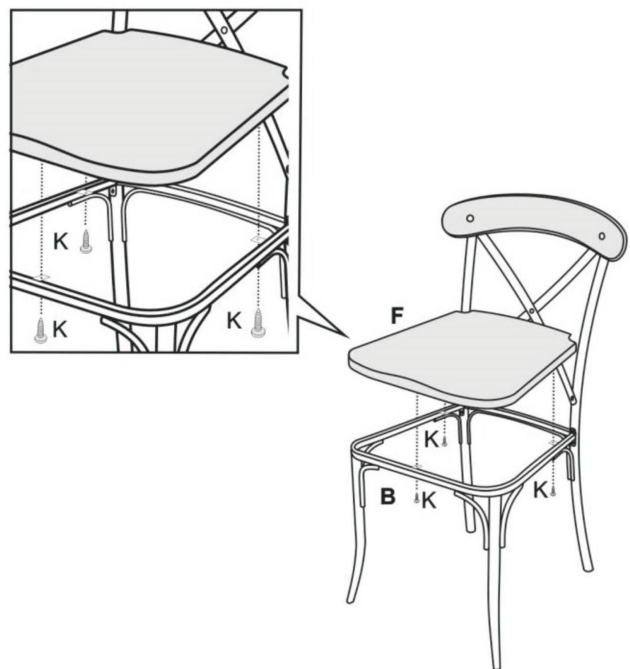

Helpful Tip: While tightening the bolts from underneath, have someone sit in the chair.

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.