 
 
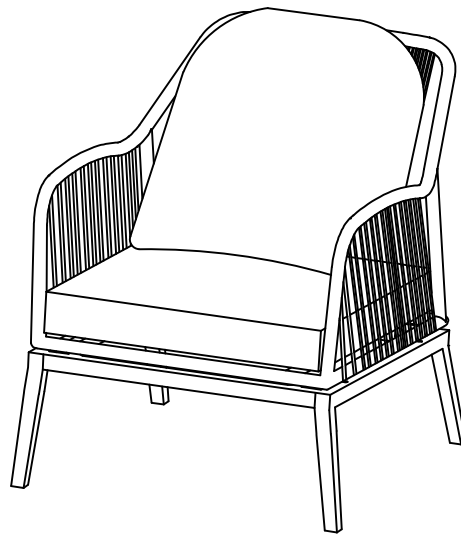 
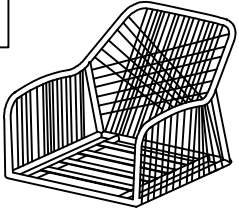 
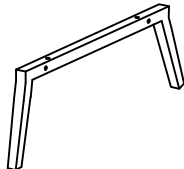 
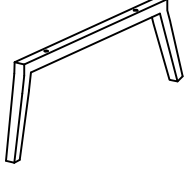 
 







Outdoor Wicker Arm Chairs
CO7361

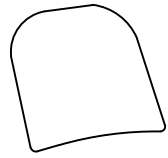

PART LIST


A 	B 	C 	D 
Seat Panel 2 PCS	Left Leg 2 PCS	Right Leg 2 PCS	Seat Frame 2 PCS
E 	F 		
Seat Cushion 2 PCS	Back Cushion 2 PCS		

   HARDWARE LIST

#1  1/4 "x1.4 "L	#2  1/4 "x2 "L	#3 	#4 
Short Bolt 8 PCS (Extra 1)	Long Bolt 8 PCS (Extra 1)	Flat Washer 16 PCS (Extra 1)	Allen Wrench 1 PC

Step 1: Lay seat frame (part D) down on a soft flat surface, such as carpet, as shown below. Attach left leg (part B) and right leg (part C) to seat frame (part D) using short bolts (part #1), flat washers (part #3) and allen wrench (part #4).

 
Note : Please do not fully tighten bolts until unit is fully assembled.

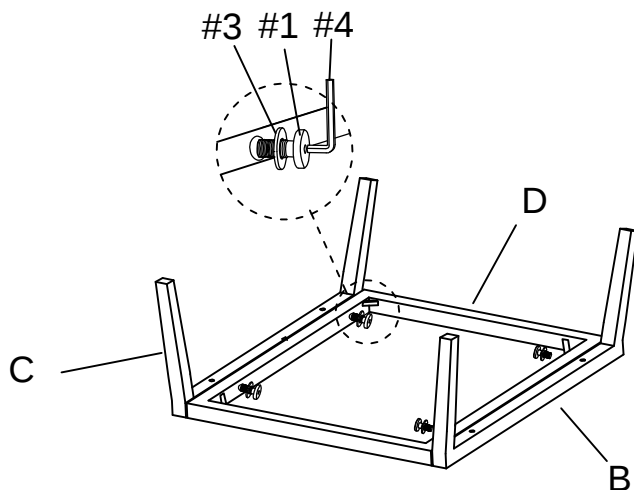

- #1  x 4
- #3  x 4
- #4  x 1

Step 2: Attach left leg (part B) and right leg (part C) to seat panel (part A) using long bolts (part #2), flat washers (part #3) and allen wrench (part #4).

 Note : Please fully tighten all bolts at this time.

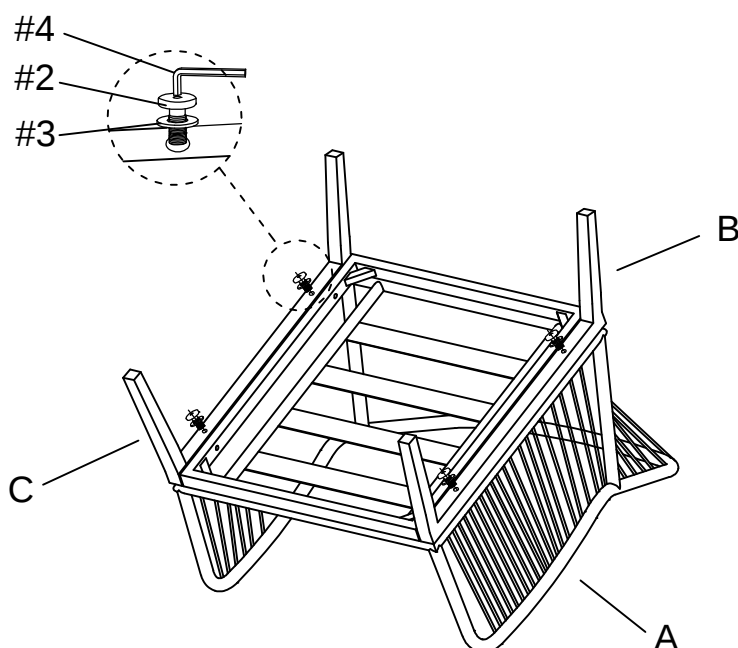

- #2  x 4
- #3  x 4
- #4  x 1

Step 3: Carefully turn unit upright. Place seat cushion (part E) and back cushion (part F) as shown below. Repeat steps 1-3 to assemble remaining chair.

