

Thank you for your purchase!



Modern Cushioned Barstool with Wood Frame



ASSEMBLY INSTRUCTIONS

Before You Begin:

Please identify all component parts and hardware pieces required before you begin. Carefully remove all of the components from the packaging and set aside for assembly. Assemble on a soft surface to prevent scratching during assembly.

Caution:

Tighten all components securely before use. Failure to do so may result in personal injury.

DO NOT use any sharp objects to open plastic wrapped components as damage to product or components may result.

Warning:

CHOKING HAZARD - Small Parts. Adult Assembly Required.

DO NOT ALLOW CHILDREN TO CLIMB ON FURNITURE

Serious or fatal injuries can occur from furniture tipping over. You must install Tipping Restraint Hardware (where included) to help prevent the unit from tipping and causing accidental injury, instability, death or damage. The tipping restraint is intended only as a safety measure, it is not a substitute for proper adult supervision.

To help prevent furniture from tipping over it must be permanently attached to the wall. Anti-Tip Safety Wall Straps suitable for the unit weight and wall materials (if not included) should be purchased and installed.

Customer Service Email: CustomerExperience@belnick.com | Phone: 866-552-2810

CH-210925-7-WH-GG / CH-210925-7-BK-GG

Have a Question/Concern?

Quality products and first-class customer service are the cornerstone of long-lasting consumer relationships. We strive toward excellence in all we do and want you to be completely satisfied with your purchase.

Please contact our exceptional Customer Experience Agents at the email address or phone number shown below to assist you with any product questions or issues before requesting a return.

We look forward to serving you in a friendly, efficient manner to resolve any issues you may have.

Customer Service Email: CustomerExperience@belnick.com

Customer Service Phone: 866-552-2810

Our Warranty Statement

 
 
 
 
This warranty covers manufacturing defects associated with your new product. The product is warranted from the original purchase date and to the original purchaser for normal usage, according to the below-referenced specifications and limitations.

- ☒ Non-moving metal parts are warranted for 5 years.
- ☒ Component parts including pneumatic cylinder, control mechanism, base and casters are warranted for 2 years.
- ☒ All other items are warranted for 1 year.

Normal usage means use in compliance with the restrictions and weight limits specified for the product. In the absence of product-specific restrictions and weight limits, normal usage means use for no more than forty hours per week by persons weighing 250 lbs. or less. Coverage terminates if the product is sold or otherwise transferred. Repairs made by parties other than Belnick also void this warranty.


This warranty will not cover: (1) labor, freight, or damage from misuse, abuse, negligence, alteration, assembly, installation, attachments, accident, vandalism, acts of nature or any other event beyond the control of Belnick; (2) tearing, scratching, scuffing, or blemishing of leather or fabric; (3) cosmetic damage that may result from normal usage; (4) damage attributable to use by persons exceeding specified weight limits or commercial use exceeding forty hours per week; or (5) rust or other damage caused by exposure to moisture. The user assumes all risk of injury resulting from use of his product. Liability for incidental or consequential damage is excluded. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

PARTS

PART 1 QTY: 1  Seat	PART 2 QTY: 1  Wood Leg	PART 3 QTY: 1  Wood Leg	PART 4 QTY: 2  Long Wood Footrest	PART 5 QTY: 2  Short Wood Footrest	PART 6 QTY: 8  Wood Pin	PART 7 QTY: 1  X Shape Metal Connector
PART 8 QTY: 4  M6x50mm	PART 9 QTY: 8  M6x40mm	PART 10 QTY: 5  M6x20mm	PART 11 QTY: 17  Flat Washer	PART 12 QTY: 1  Allen Wrench	PART 13 QTY: 4  Felt Pad	


STEP 1

STEP1: Turn the Wood Legs (Part 2 and Part 3) upside down and cross them in the middle. Insert (2) Wood Pins (Part 6) into each side of the (2) Long Wood Footrests (Part 4). Insert the other ends of the (2) Wood Pins halfway into the middle holes of the Wood Legs.

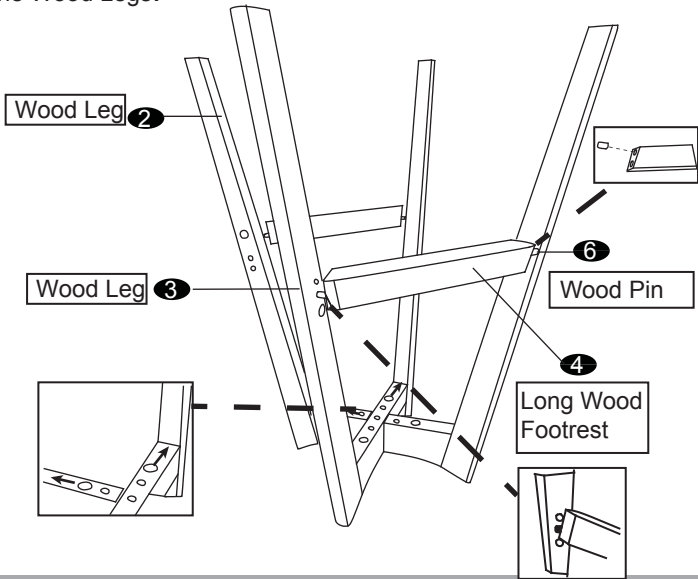


STEP 2

STEP2: Insert (2) Wood Pins (Part 6) into each side of the (2) Short Wood Footrests (Part 5). Insert the other ends of the (2) Wood Pins halfway into the middle holes of the Wood Legs.

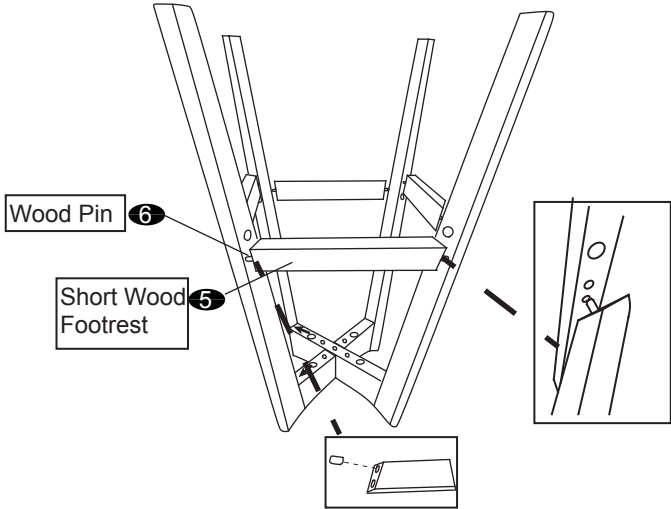


STEP 3

STEP3: Make sure all of the Wood Pins are fully inserted into the Wood Legs.

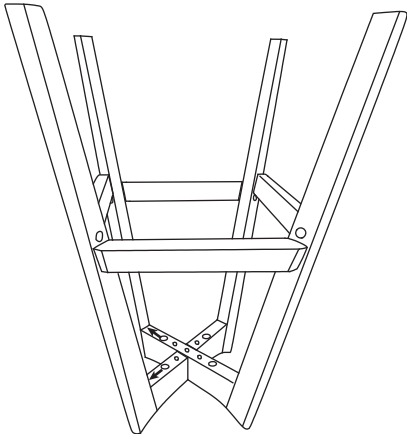


STEP 4

STEP4: Attach the Long and Short Footrests to the Wood Legs using (8) Flat Washers (Part 11) and (8) M6X35MM Screws (Part 9). Tighten loosely using the Allen Wrench (Part 12).

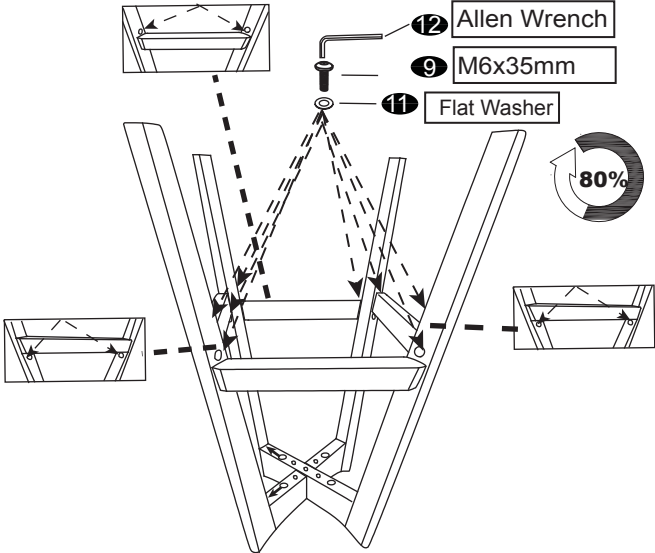


STEP 5

STEP5: Attach the X Shape Metal Connector (Part 7) to the inner holes in the crossed part of the legs using (5) Flat Washers (Part 11) and (5) M6X16MM Screws (Part 10). Tighten loosely using the Allen Wrench (Part 12).

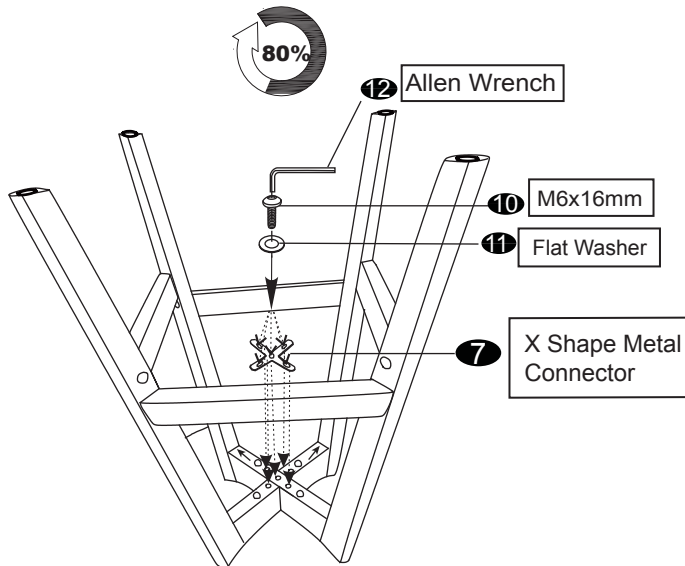

STEP 6

STEP6: Return chair to the upright position and place the legs onto a flat surface. Completely tighten all screws from Step 4 and Step 5 using the Allen Wrench (Part 12).

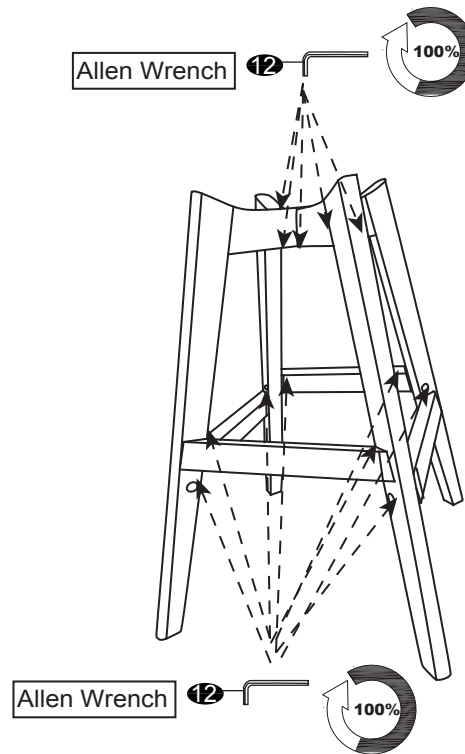

STEP 7

STEP7: Turn the Seat (Part 1) upside down on a smooth, clean surface. Attach the assembled legs to the bottom of the Seat using (4) Flat Washers (Part 11) and (4) M6X50 Screws (Part 8). Completely tighten using the Allen Wrench (Part 12). Stick the Felt Pads (Part 13) to the bottoms of the 4 wood legs.

NOTE: Ensure the legs are placed with the Long Wood Footrests facing the front and back of the seat.

