 
 
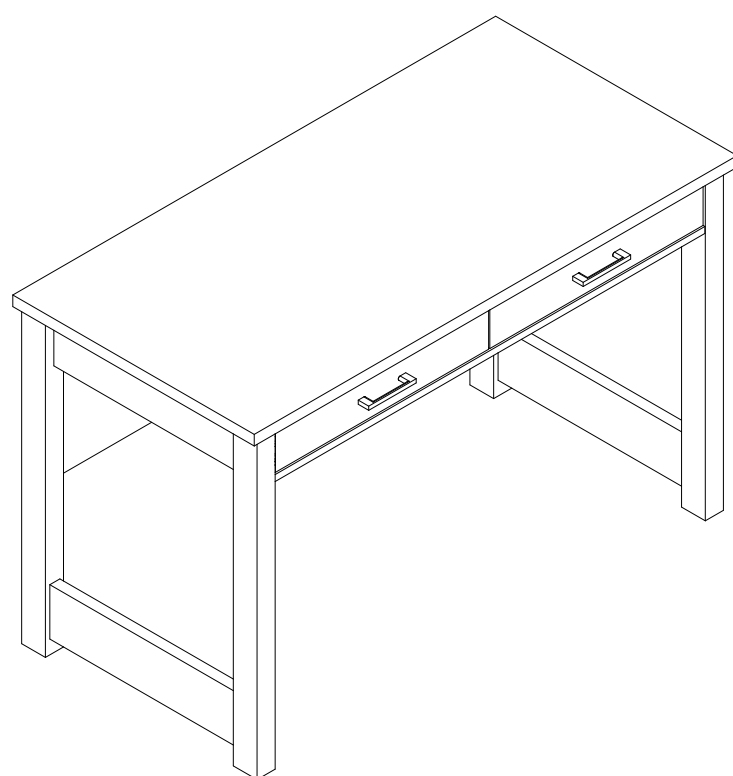 
 
 
 





MONTAGEANLEITUNG

Ø15x12  A x 26	Ø7x35  B x 26	Ø8x30  C x 15	Ø3.5x14  D x 24	1065x30x20  E x 1
Ø5x50  F x 6	Ø4x40  G x 10	Ø14  H x 4	M4x18  I x 4	96mm  J x 2
CL 16"  CR  x2	DL 16"  DR  x2			

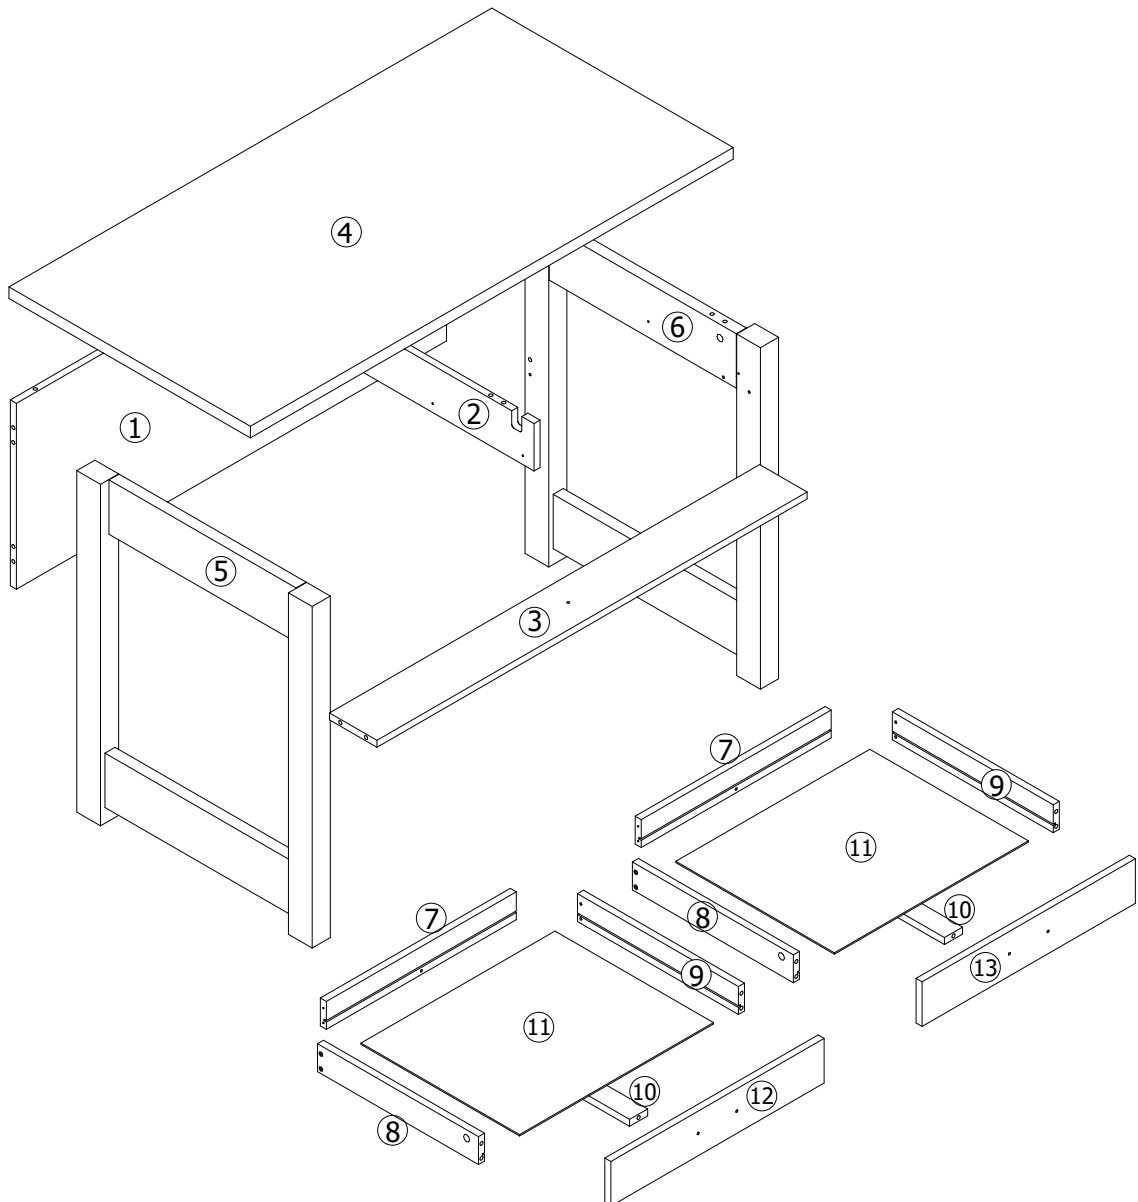


SCHRITT 1

 Bx8
Dx6
CLx1
CRx1

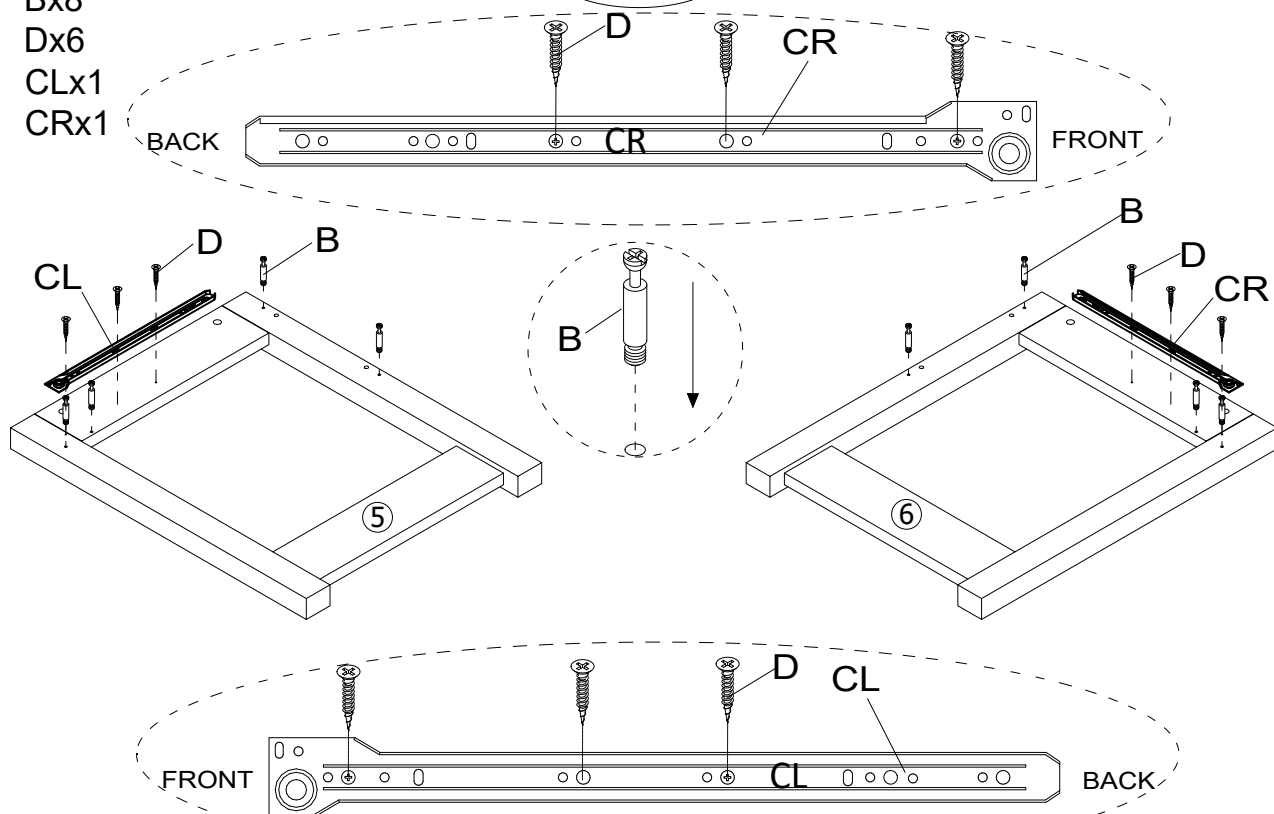




SCHRITT 2

 Ax1
Bx1

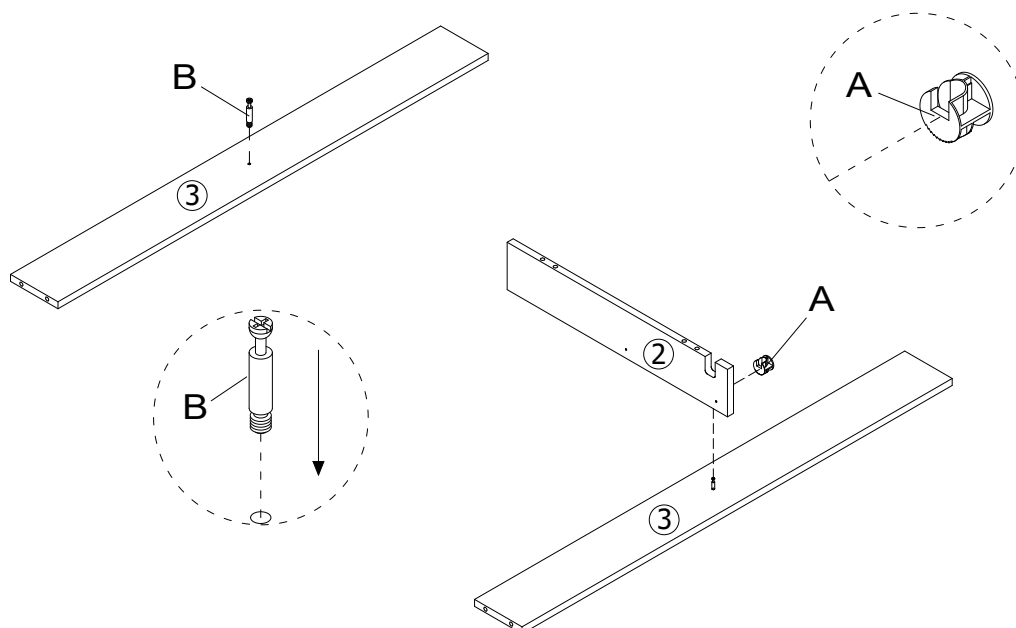





SCHRITT 3

   Dx6
CLx1
CRx1

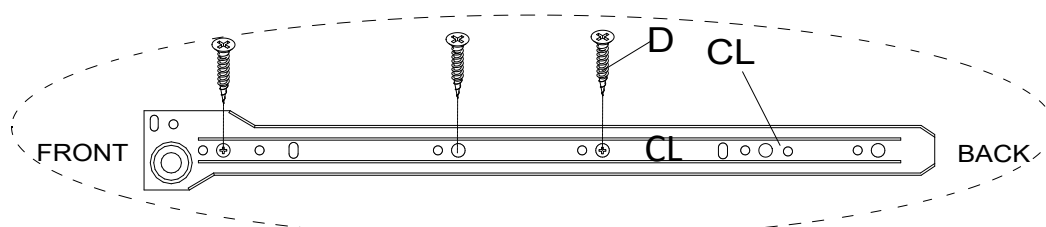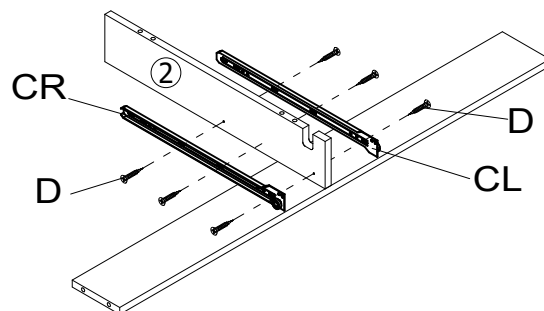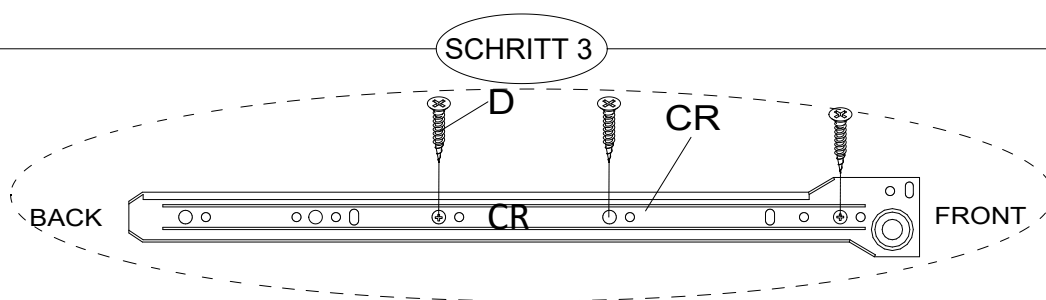


SCHRITT 4

    Bx11
Ex1
Fx6

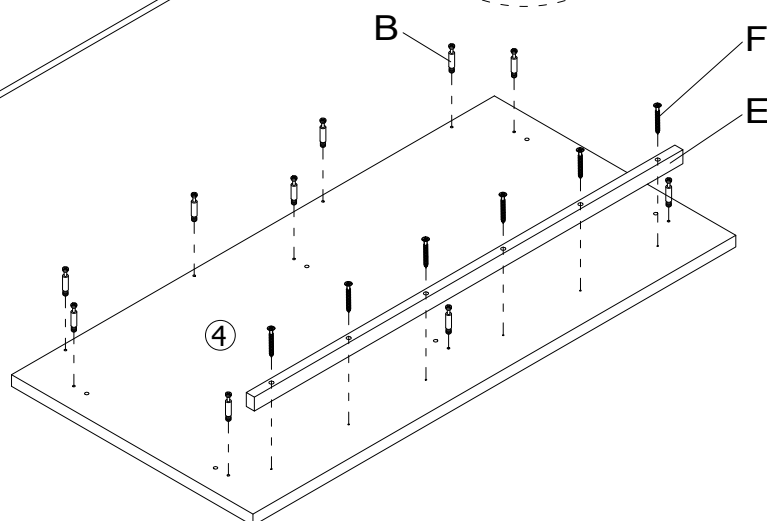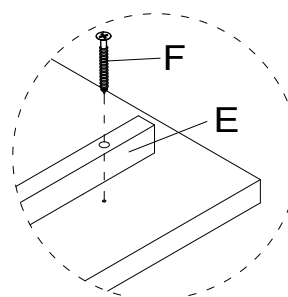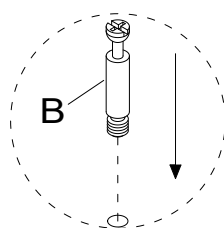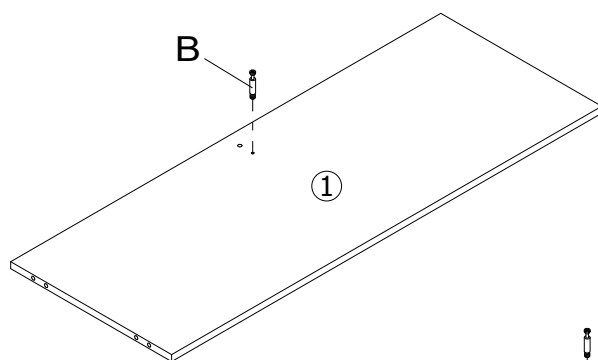


SCHRITT 5

 Ax1
Cx1

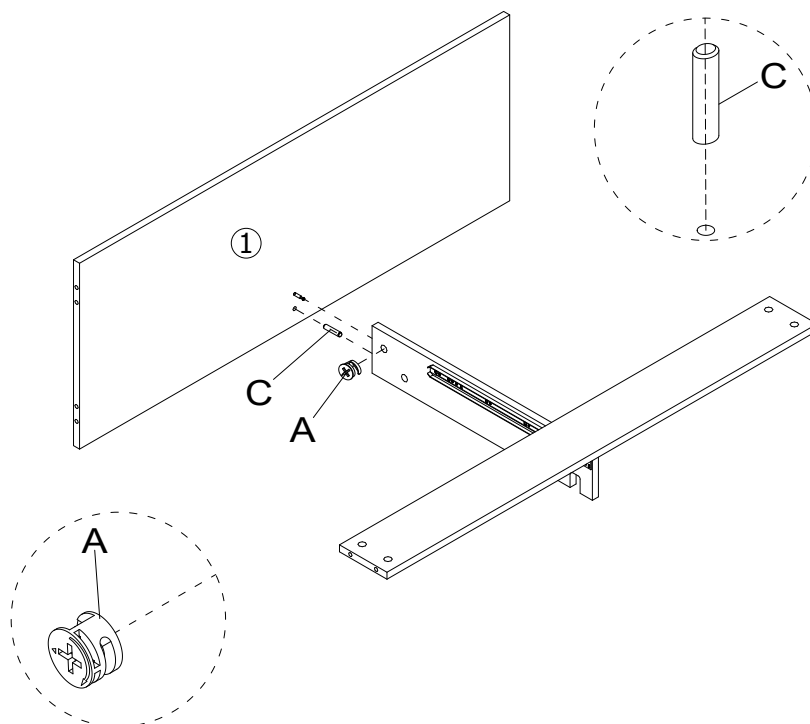


SCHRITT 6

 Ax4
Cx2

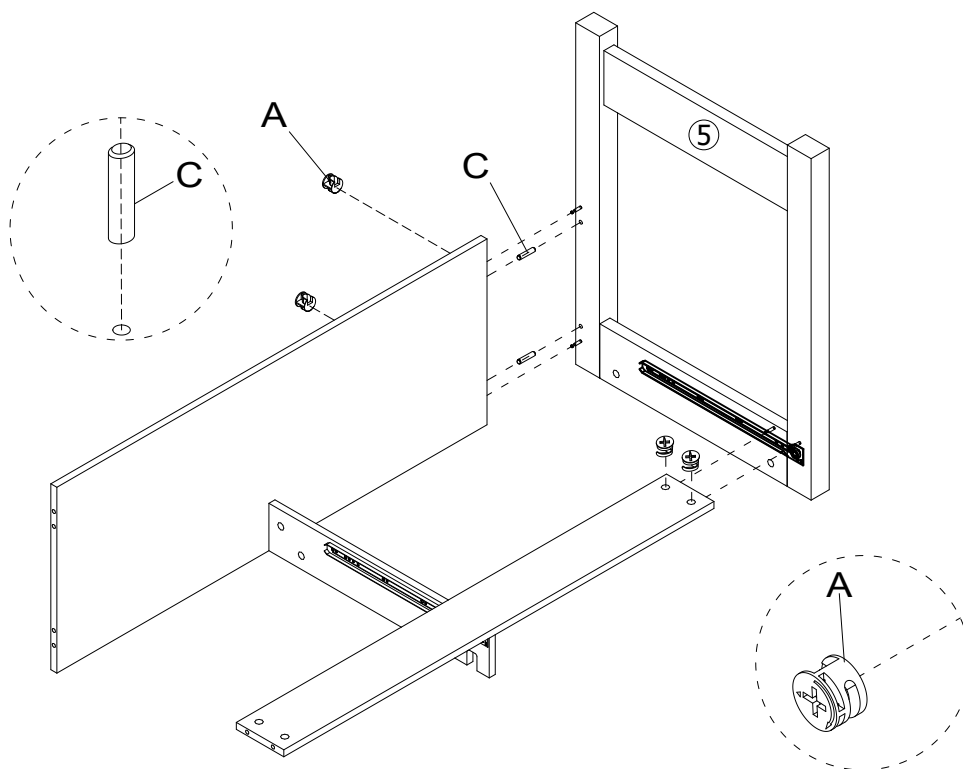


SCHRITT 7

 Ax4
Cx2
Hx4

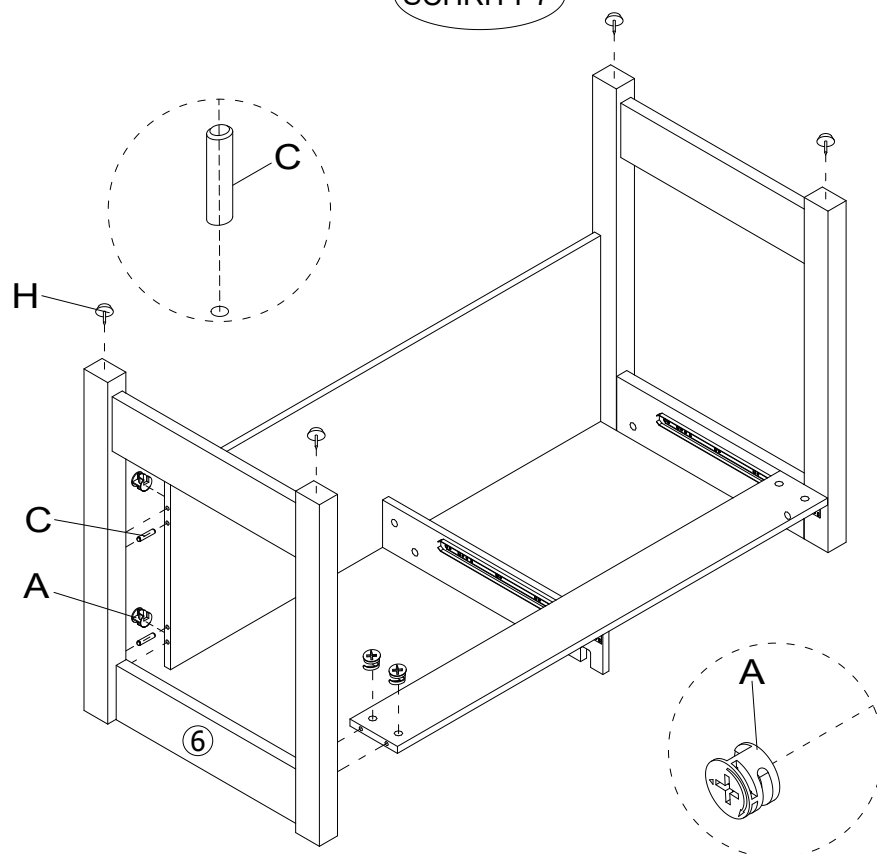








SCHRITT 8

 Ax10
Cx6

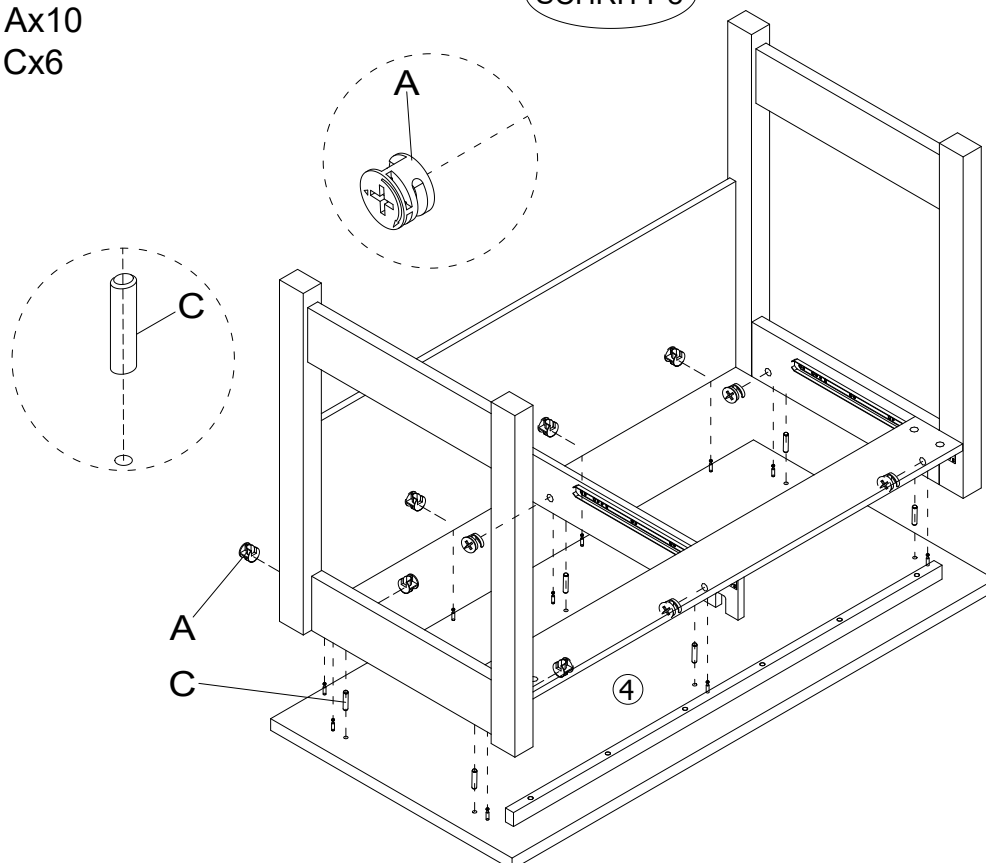

SCHRITT 9

   
 
 
 
 
Ax6
Bx6
Cx4
Gx10

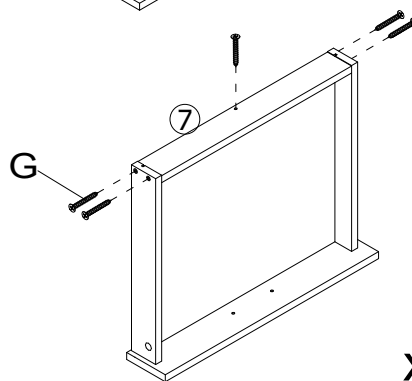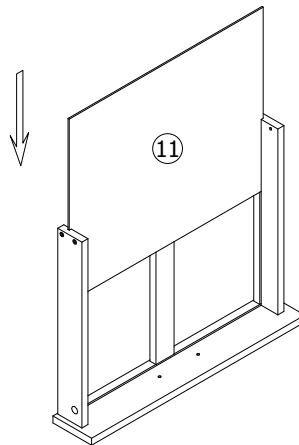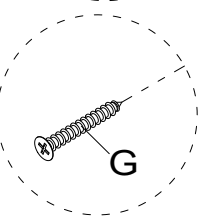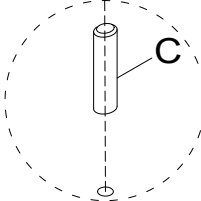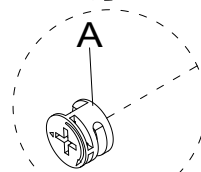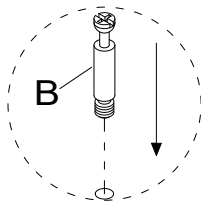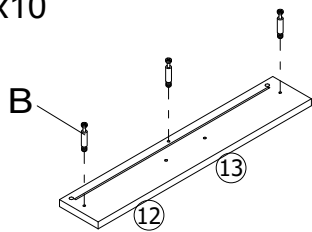

x2


SCHRITT 10

     Dx12
Ix4
Jx2
DLx2
DRx2

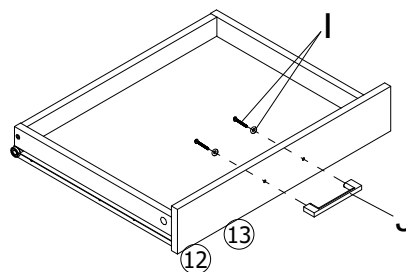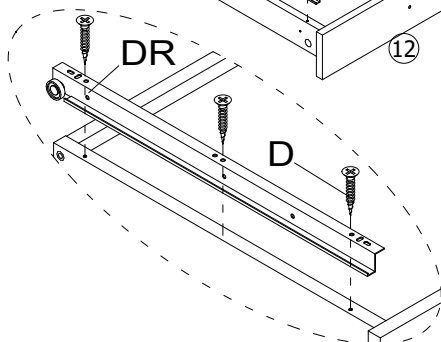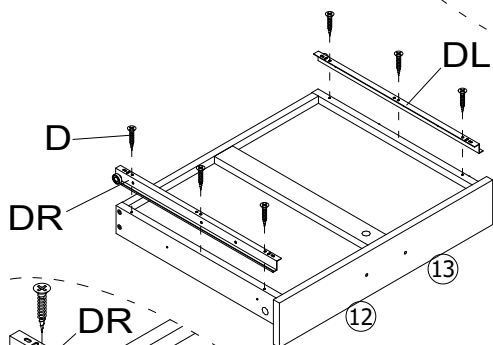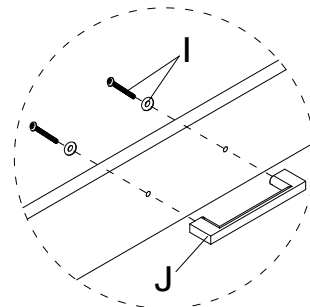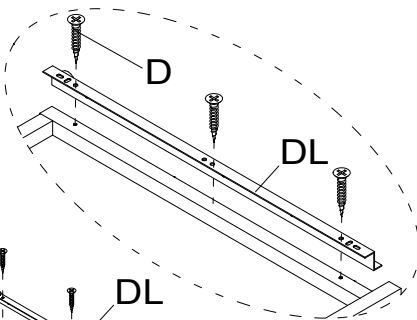

x2

 SCHRITT 11

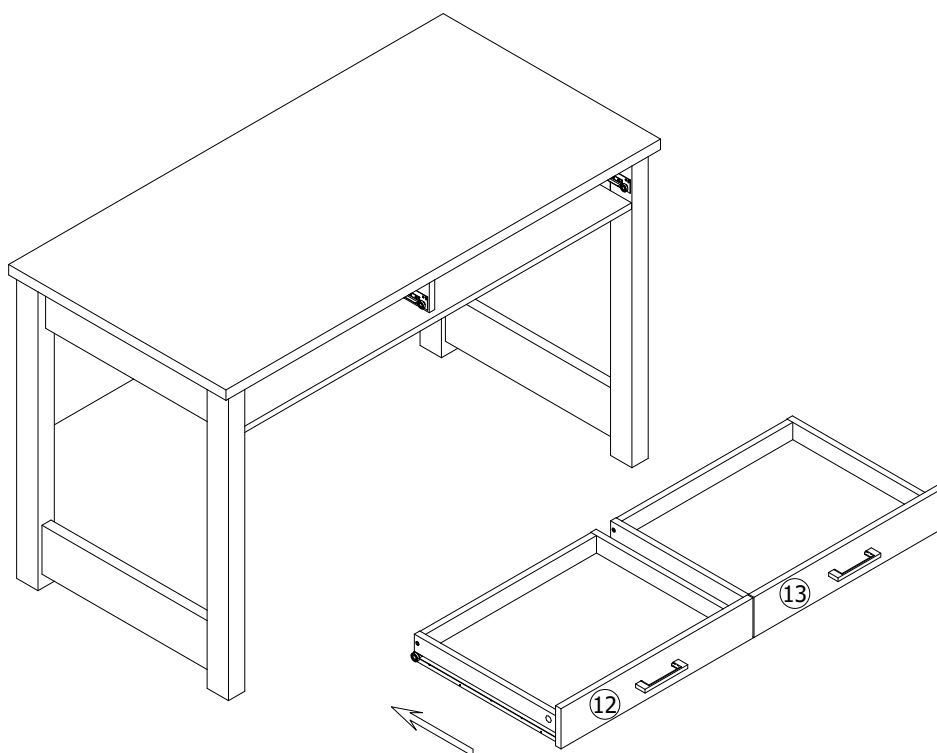

SCHRITT 12

