

Installation instructions




Product full picture



step one

step two

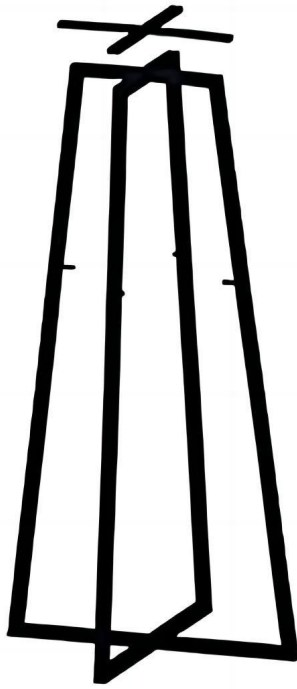

step three

step four



step five



key points of installation

- 1、 Align the nut so that the screw and nut are interlocked, use a wrench to tighten the screws, and first do not tighten all the screws too tightly. Finally, adjust them uniformly
- 2、 After the initial installation of all iron components is completed, the screws can be slowly tightened, and the tightening amplitude of all screws should be synchronized. At the same time, adjust the horizontal and vertical lines of each iron component
- 3、 Some screws may not need to be tightened (for example, if there are multiple screw holes for fixing partitions or the same iron parts, one less can be tightened as needed), depending on personal needs, and will not affect use
- 4、 Due to the long distance, some parts of the product may have slight scratches during transportation, which is a normal phenomenon and does not affect its use. We do not accept it as a reason for return or exchange. Please understand and thank you