

**better chef**<sup>®</sup>  
BETTER RESULTS

SAVE THESE INSTRUCTIONS  
HOUSEHOLD USE ONLY

## **ELECTRIC BBQ GRILL**

BARBECUE ELECTRIQUE  
PARRILLERA ELÉCTRICA PORTÁTIL



**Model no. IM-355**

READ AND SAVE THIS USE AND CARE BOOK  
CONSERVER CE GUIDE D'ENTRETIEN ET D'UTILISATION  
POR FAVOR LEA ESTE INSTRUCTIVO ANTES DE USAR  
EL PRODUCTO

# IMPORTANT SAFETY INSTRUCTIONS

1. Read all instructions
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock do not immerse cord, plugs, or (state specific part or parts in question) in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors. **FOR HOUSEHOLD AND INDOOR USE ONLY**
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Do not attempt to touch cooking surface or other hot surface. Use handles or knobs.
14. To protect against electric shock, do not immerse cord, plugs, or heating element in water or any other liquids. Only wipe the heater element and temperature control with a damp cloth, never immerse these parts into water to clean?
15. Unplug this barbecue from the power surface when not in use and before cleaning. Allow appliance to cool down before attempting to clean or service.
16. Do not place power cord where it may come in contact with hot surfaces, or pose a tripping hazard.
17. Do not place this appliance on or near electric burners or in a heated oven.
18. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
19. Do not use this appliance for anything other than its intended use.
20. Only use a properly-grounded power source.
21. Do not use fuel, such as charcoal or lava rocks, with this appliance.
22. This product is not designed for commercial use.
23. This product is not designed for tabletop use. Do not set this product on a table.
24. Use only with a properly-grounded GFCI (Ground-fault circuit-interrupter) household circuit.
25. Keep the barbecue and electric controller dry at all times.
26. Never alter or remove the grounding plugs on the power cord or replacement information.
27. Keep electric plugs off of the ground and dry at all times.
28. In case of fire, turn the controller 'OFF', unplug the barbecue from the power source and allow the fire to burn out its own. Do not use water to try to extinguish a fire.
29. Do not use water or any other liquid spray to clean barbecue while it is still plugged in. Unplug the barbecue from the power source, unplug the electric controller from the barbecue, and remove the heating element before cleaning.
30. Do not operate this barbecue while under the influence of drugs, alcohol or while fatigued.
31. Do not use barbecue lighter fluid, lube rocks, gasoline, kerosene, or alcohol with this barbecue.
32. Do not use in the presence of explosive or flammable gases, vapors or other substances.
33. Keep all combustible material at least 21" (53cm) away from the grill at all times. Do not use this barbecue or any other gas product under any overhang or near combustible structures.
34. Do not use this barbecue unless it is completely assembled and all parts are securely fastened and tightened.
35. Use only identical replacement parts.
36. Do not attempt to move this appliance while it is in use.
37. Always open the barbecue lid carefully-Heat and steam trapped inside the lid can burn.
38. Set up this barbecue on a hard, smooth level surface.
39. Do NOT use on wood decks.
40. Keep all electric cords away from the hot surface.
41. After a period of storage, inspect the barbecue for abrasion, wear, cuts, or damage to the controller and power cord.
42. Always use a meat thermometer to ensure food is cooked to a safe temperature.
43. Death, serious injury, or severe property damage may result if the above safety precautions are not followed carefully.
44. Save these instructions

## WARNING

1. Do not store or use gasoline or any other flammable vapors or liquids in the vicinity of this appliance.

2. When cooking with oil/grease, do not allow oil or grease to exceed 350° F (175° C). Do not store extra cooking oils in the vicinity of this appliance.

3. A short power-supply cord (or detachable power-supply cord) should be used to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

4. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.

5. If a longer detachable power-supply cord or extension cord is used:

- The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance; and
- The cord should be arranged so that it will

not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally. the extension cord should be a grounding-type 3-wire cord

6. Do not place heater element on the flammable material (such as wood table...), while heater element is still hot, or it is connected to the temperature control plug and energized.

## HARD WARE



Small Screw-(M5x12) 7pcs



Medium Screw-(M6x20) 9pcs



Small wing nut-(M5) 6pcs



Small wing nut-(M6) 9pcs



Medium Screw-(M6x45) 4pcs



Lock washer 12pcs



Flat washer 25pcs



Locking pin

# ASSEMBLY INSTRUCTIONS

- Before starting assembly, open the packaging and remove all pieces. Compare contents of packaging with 'Product & Hardware' diagrams on page 2 to ensure all parts are present.
- Tighten all connections by hand first. Once assembly is complete, tighten all connections fully.

## STEP 1

Screw out the M6X45 screws on one end of the stand, to add four pieces of flat washers on the stand end, then put the stand through the base and screw the base together with the stand by 4 pieces M6X45 screws again



1

## STEP 2

Screw out the four medium screw M6X20 on the other end of the stand put the stand through the connection part, then make the screws tight with the connection box through the holes



2

## STEP 3


Place the stand on the flat ground, screw out the five pieces of Medium wing nut M6 on the connection part, put on the bowl, then fix the bowl with the connection by the five piece M6 Medium wing nuts



3

## STEP 4

To screw out the wing nuts M6 on the handles , fix the two handles on the bowl by wing nuts M6 again.

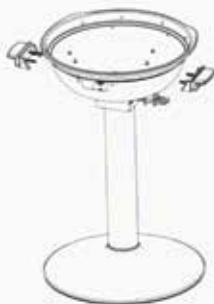

4

## STEP 5

To fix the hinge bracket, screw out the small wing nut M5, then put the screw M5X12 through the holes on the bowl , to fix the hinge bracket on the bowl by the wing nuts M5 again.



5

## STEP 6

Screw out the small wing nut on the hinge bracket, fix the hinge bracket on the lid .



6

## STEP 7

To fix the hinge bracket on the bowl together with the hinge bracket on the lid by the locking pin, Then lock them by the M5 small wing nut.



## STEP 8

To fix the air vent on the middle of the lid



## STEP 9

To fix the lid handle on the lid by Medium wing nut M6



## STEP 10

To put the heating reflector plate and heating element in the bowl, fix it by M5X12, then lock by the nut M5.



10

## STEP 11

To put the cooking grill and the Warm-kept Grid(For option) in the bowl (Note: this Warming-kept Grid is for option when cooking. If you put on this grid, the unit lid should be kept open to avoid the foods deformed by the grid)



11

## OPERATING INSTRUCTIONS


**NOTE: Using an extension cord is NOT recommended. If an extension cord is absolutely necessary;**

- Use a UL-approved 3-prong grounded extension cord that is rated for at least 15 A.
- NEVER connect two or more extension cords in series.
- Use the shortest extension cord possible.
- Use a min. 16 AWG gauge extension cord of less than 50' in length.
- Keep the power cord connection dry and off of the ground.
- Avoid running the power or extension cord across walkways, driveways, or anywhere where it could pose a tripping hazard.

### POWERING UP THE BARBECUE

1. Make sure that the control knob is turned fully to the 'OFF' position (Fig. A).
2. Plug the controller fully into the barbecue (Fig. 2).
3. Plug the other end of temperature control knob into a dry GFCI (Ground-fault circuit-interrupter) power outlet.
4. Adjust the setting on the control knob the desired temperature level.

Settings on controller are indicated by triangular mark. Illustration shows controller in "OFF" position.

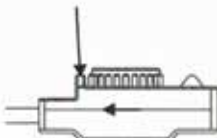

Raised lip of controller should be inserted until it is snug against element bracket.

### TURNING OFF THE BARBECUE

1. Turn the temperature control knob to 'OFF'.
2. Unplug the power cord from the wall outlet.
3. Unplug the temperature controller from the barbecue.

### INITIAL USE

Before cooking on this grill for the first time, operate the grill for about 15 minutes with the lid closed and the power turned on 'HIGH'. This will "heat clean" the internal parts and dissipate odors from the manufacturing process.

## COOKING

1. Set temperature controller to desired level and allow temperature to be reached.
2. Place food on cooking grill.
3. With lid open or closed, cook until desired internal temperature is reached.
4. Lid is NOT intended to be locked while cooking.

## CLEANING AND CARE

### CAUTION:

1. All cleaning and maintenance should be performed when the barbecue is cool to touch and with power supply disconnected.
2. Do NOT clean any parts in a self-cleaning oven or dishwasher. The extreme heat will damage the finish.
3. All cleaning and maintenance should be done only while the appliance is disconnected from the supply circuit.

### NOTE

1. Do not use abrasive clearing agents on this product, as they will damage the finish.
2. Never use oven cleaner on this product.

### CLEANING :

1. Wipe surface grime off with a clean cloth and mild dishwashing detergent or baking soda.
2. For stubborn surface dirt, use a citrus-based degreaser and a nylon scrubbing soda.
3. Rinse clean with water.
4. Allow surface to dry fully before use.

### CLEANING THE HEATING ELEMENT:

1. Ensure the grill is unplugged from the power source and the temperature control unit is removed.
2. Remove the cooking grill.
3. Removed the heating element by unscrewing the wing nuts and lifting the element out.
4. Gently clean the heating element with a damp cloth. Do not scratch the element's surface of immerse in water.
5. Reinstall the heating element.
6. Inspect the temperature controller and power cord for any possible damage, and then reinstall.

Cleaning the Temperature Control Plug  
Only clean with a damp cloth, do not immerse in water.

---

# WARRANTY

Length of Warranty  
1 year from date of purchase

Within 1 year from date of purchase,

1) Return product to place of purchase  
(if your dealer allows)

OR

2) Send product postage pre-paid to:  
I.E.A.C.  
3030 E. Vernon Ave.  
Vernon, CA 90058

Please include original dated receipt, explanation of defect and return name and address as well as a contact phone number. We will, within 10 days of receiving your product, return a new or refurbished (at our discretion) product at **NO ADDITIONAL CHARGE**. We will also return your receipt. If product is found to be in working condition, we will return product postage collect.

**PACK YOUR PRODUCT WELL!**

We will not be responsible for damages incurred as a result of improper packing.