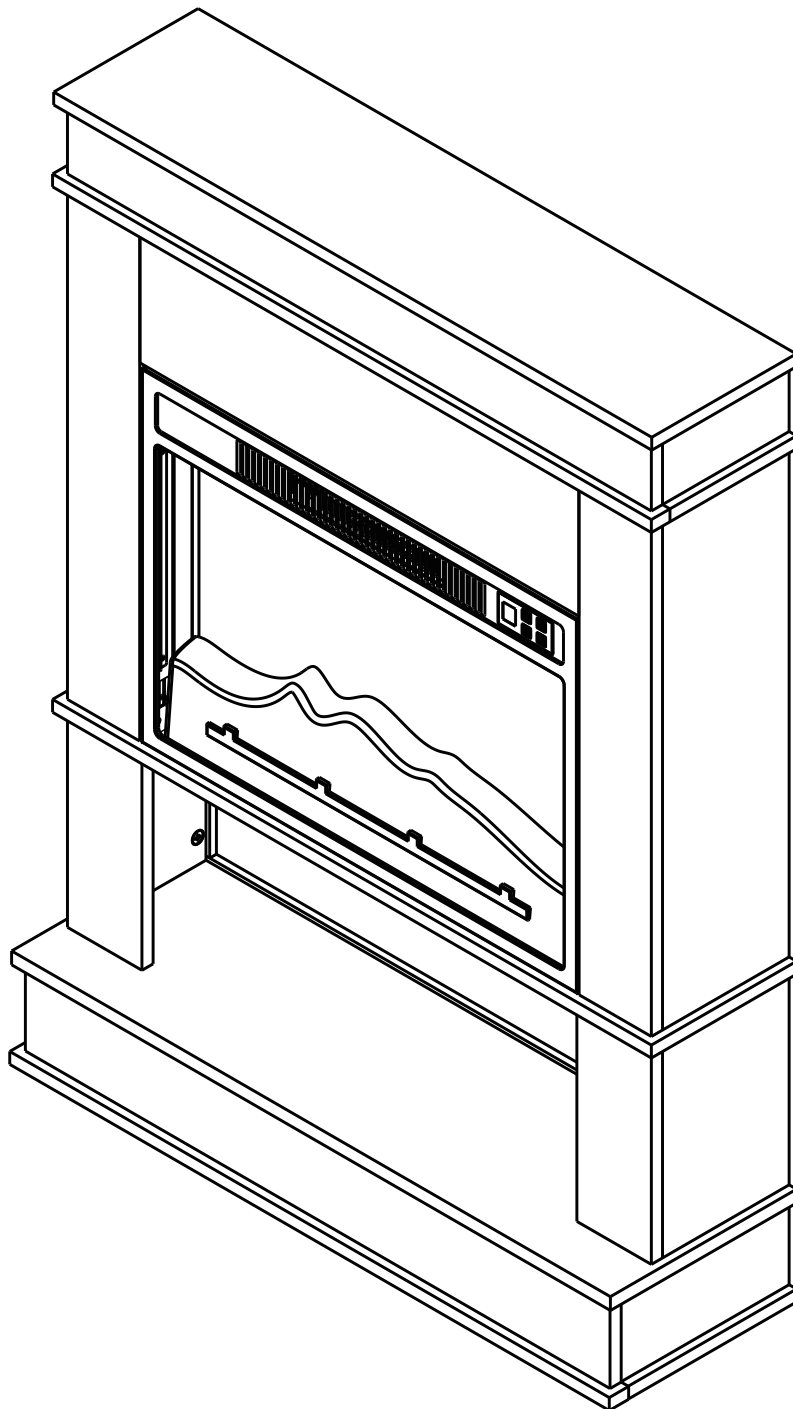 


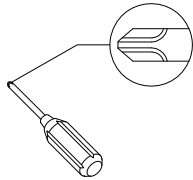 
INSTRUCTION MANUAL

Model # FS-YC-005

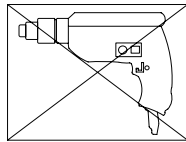 


General Assembly Guidelines

- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The four main types of hardware used to assemble this product are: wood dowels, cam bolts and locks, bolts and screws.
- VI. A Phillips head screwdriver is required for the assembly of this product.



- VII. Power tools should not be used to assemble this product.

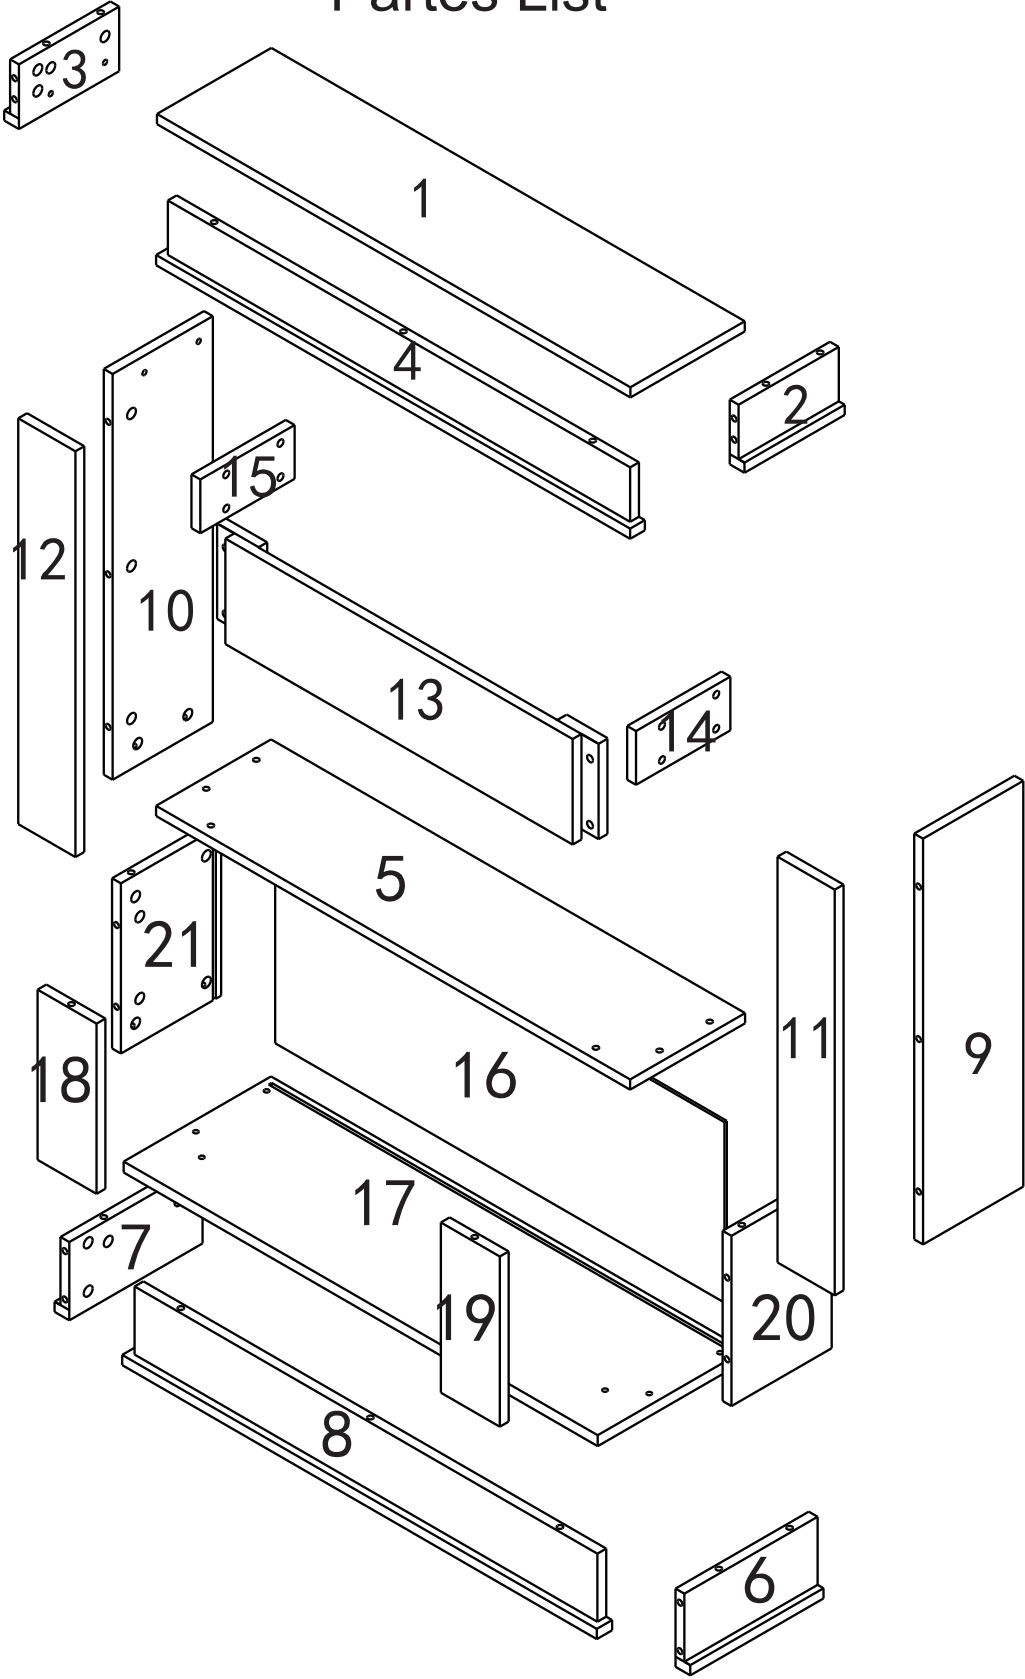 


DO NOT RETURN!

Please contact our customer service team for help first.

Email: mjy941218@hotmail.com

Partes List



Hardware List

 



 
A			Cam lock	46 PCS
B			Cam bolt	46 PCS
C		Ø 4x20mm	Bolt	12 PCS
D				12 PCS

Fig.1

A  7

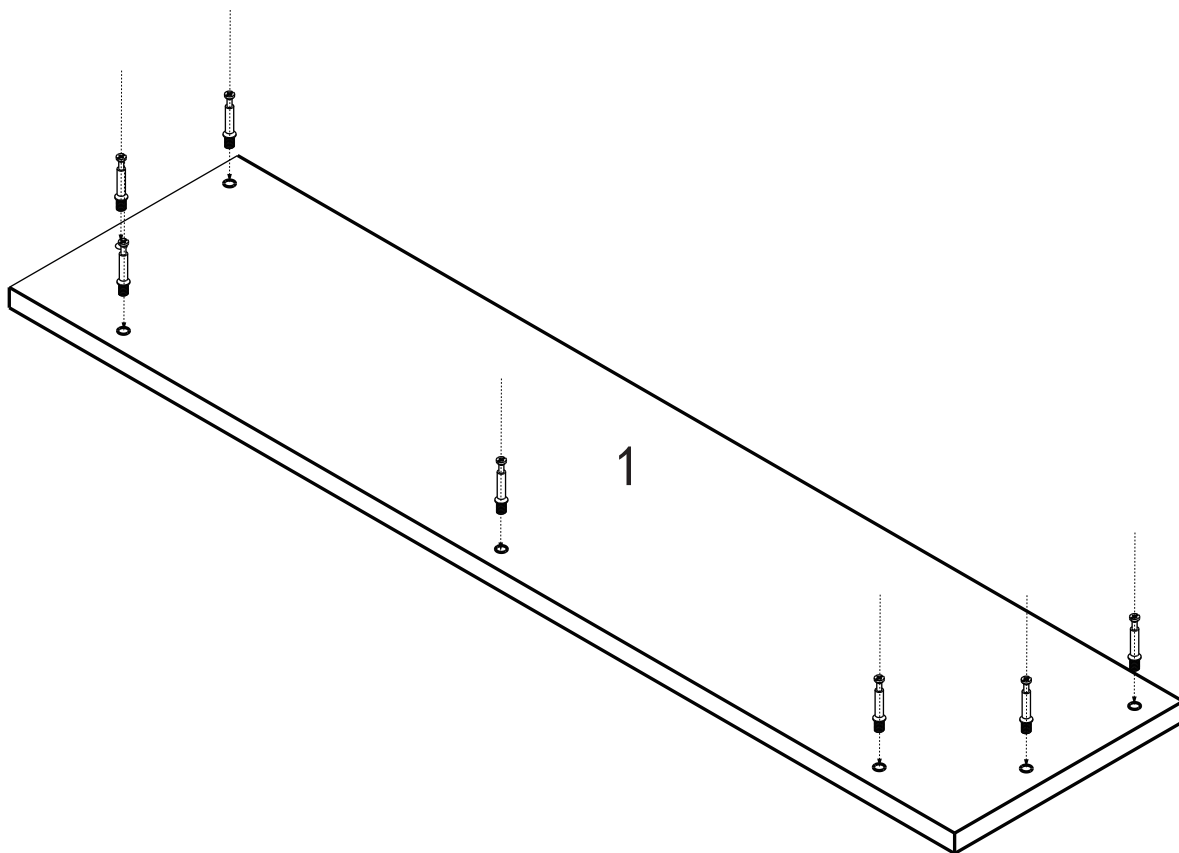 
 


Fig.2

A  2

B  2

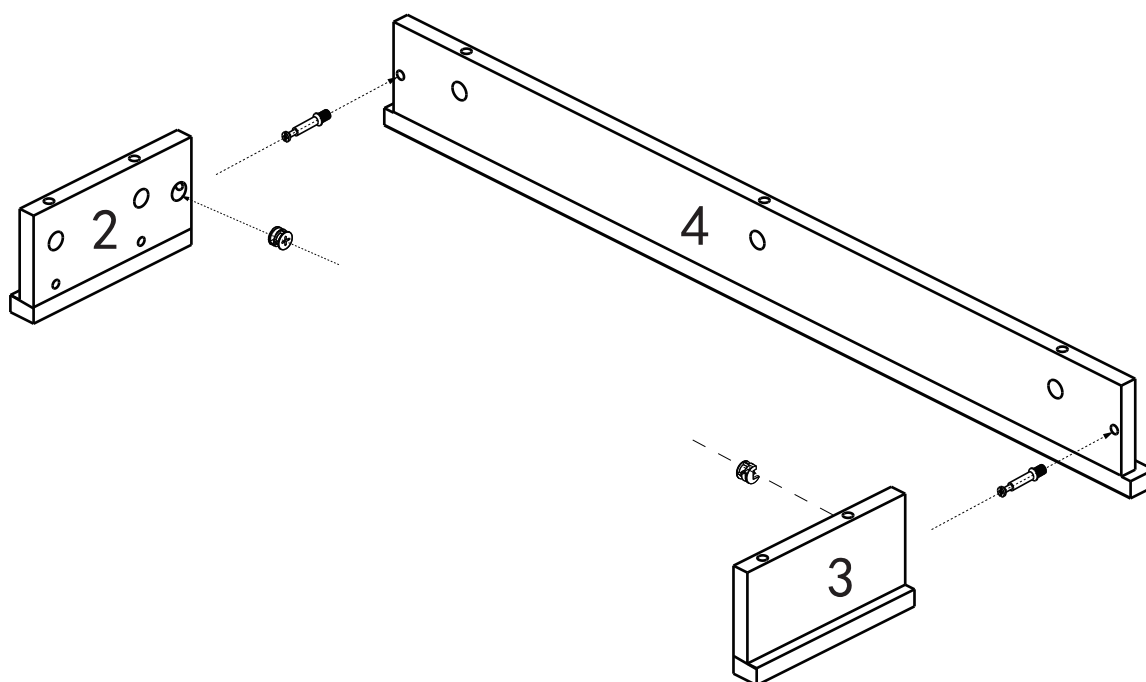 


Fig.3

B  7

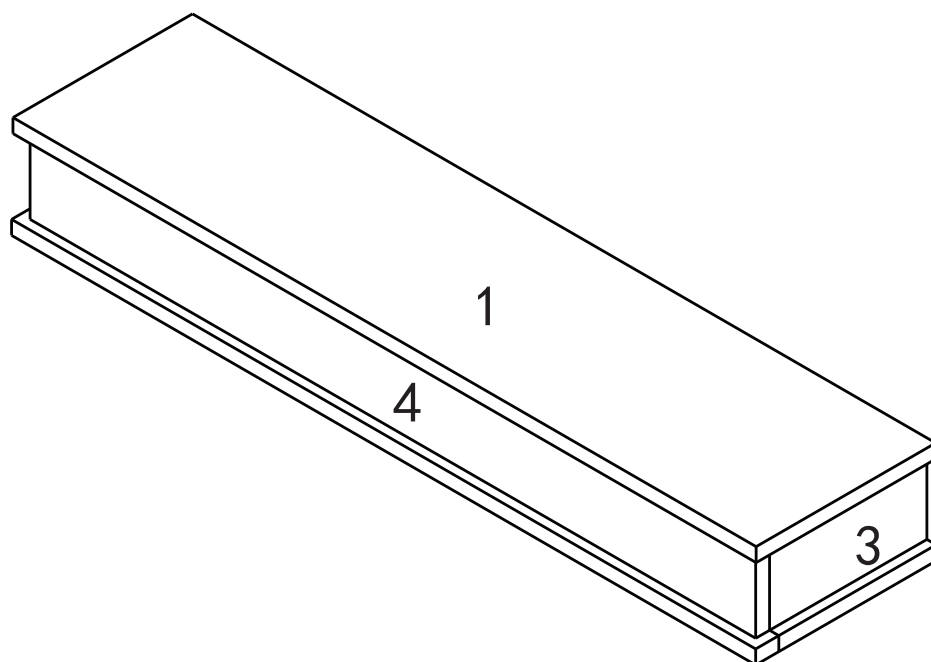 
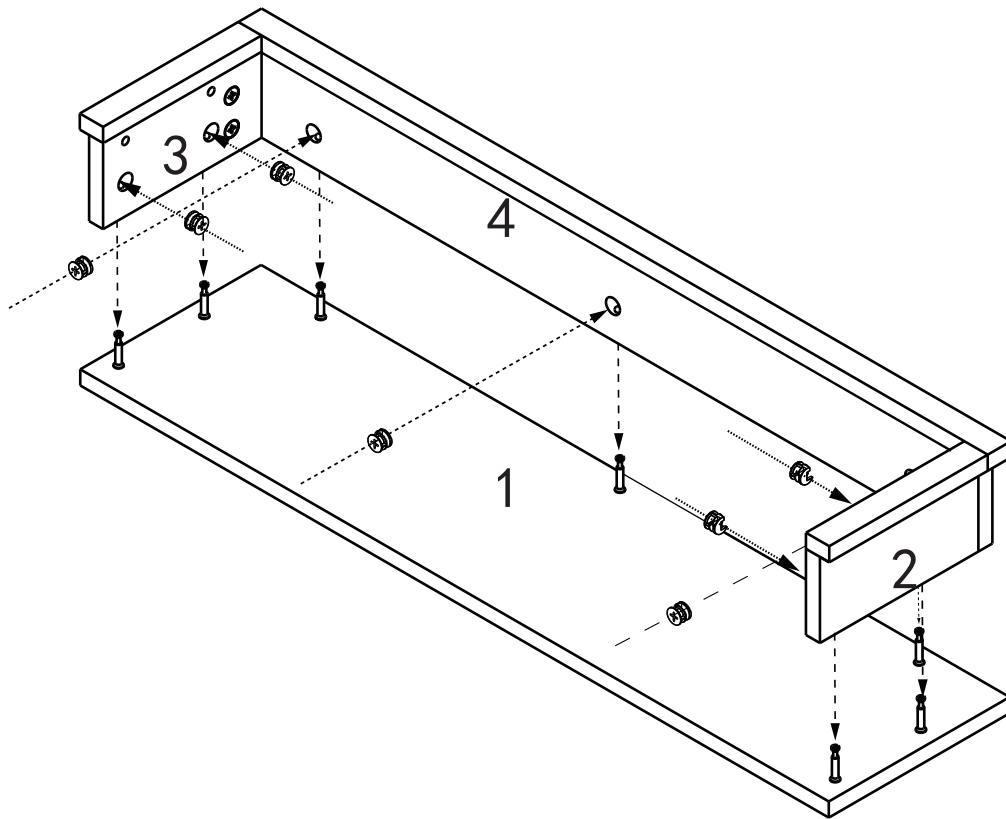 


Fig.4

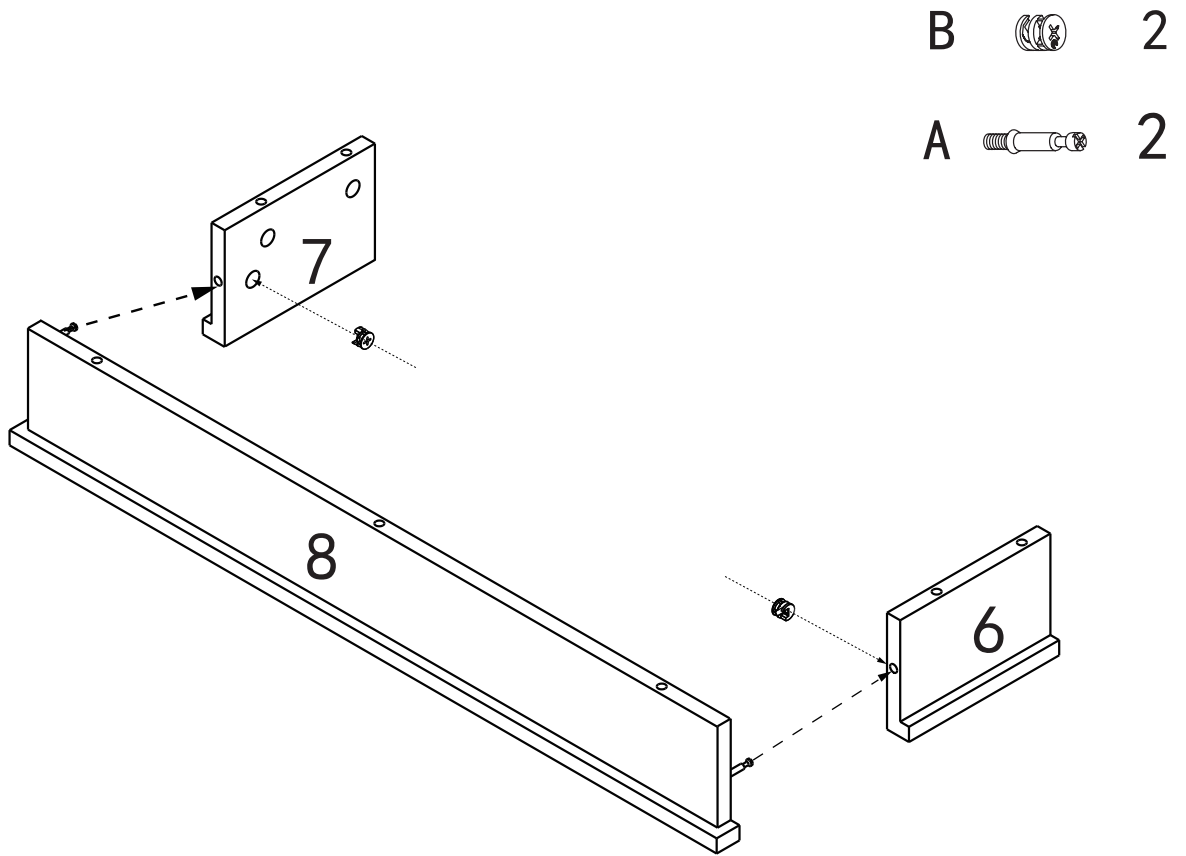 


Fig.5

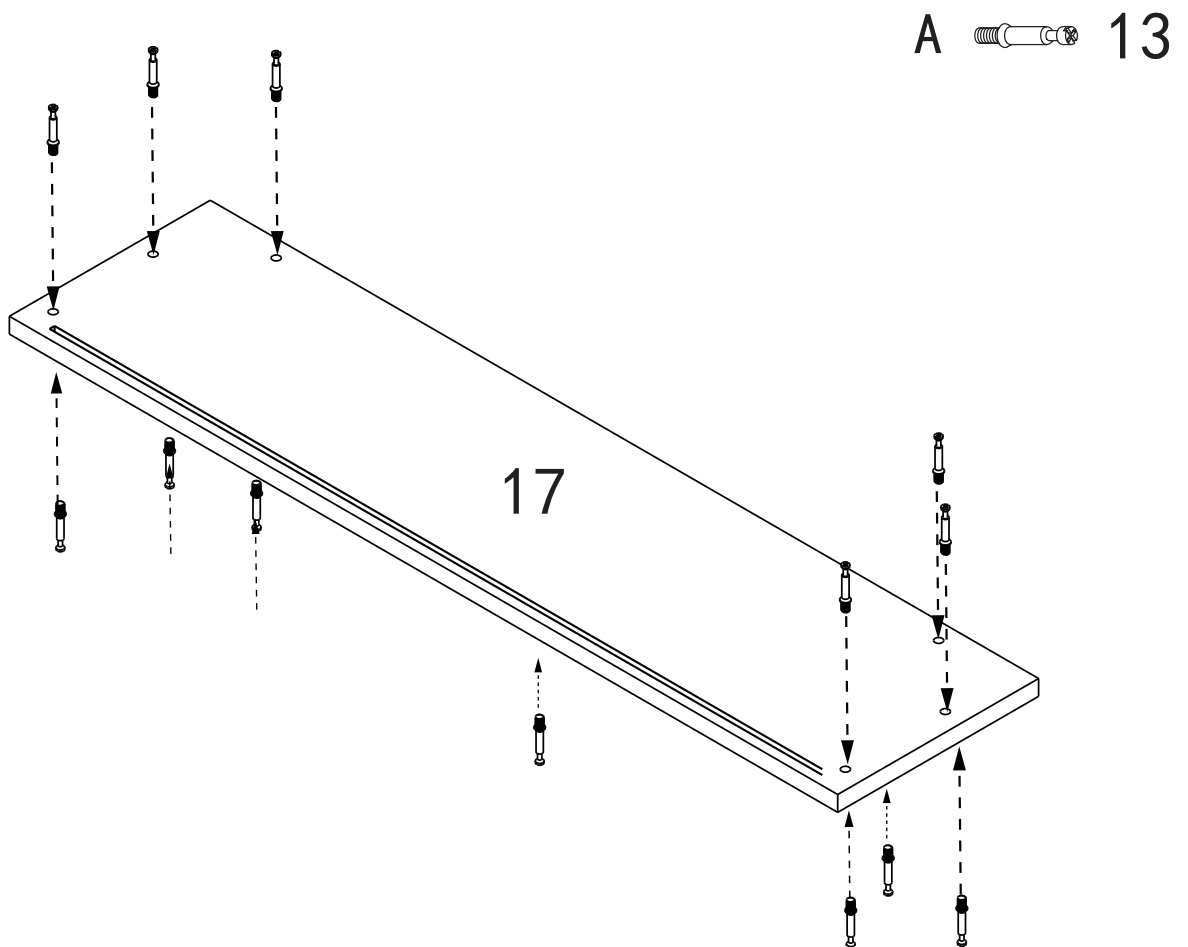 


Fig.6

B  7

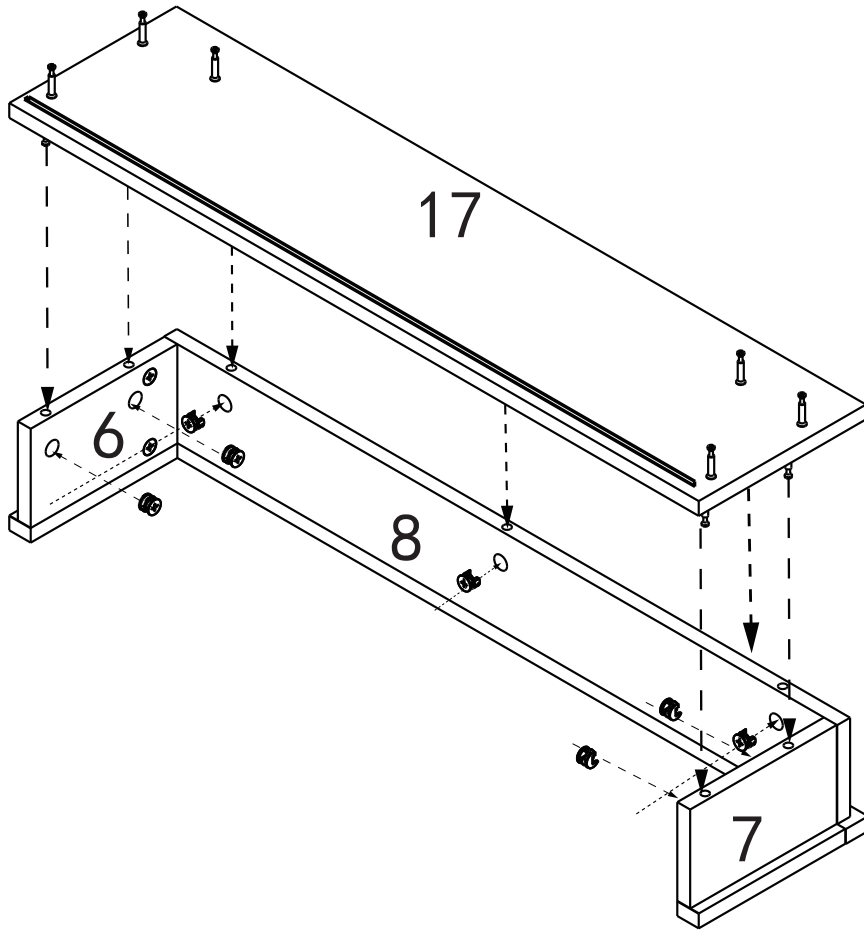 
 


Fig.7

Fig.6

A  2

B  2

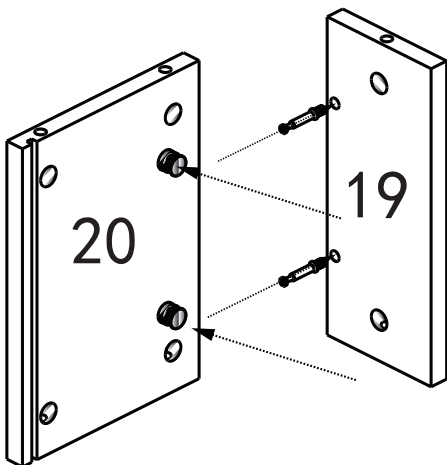 
 


Fig.8

A  2

B  2

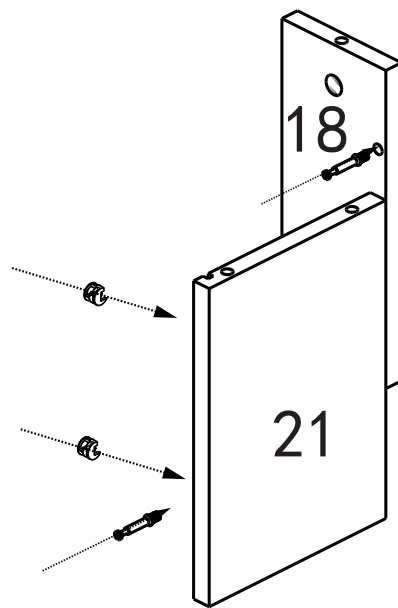 


Fig.9

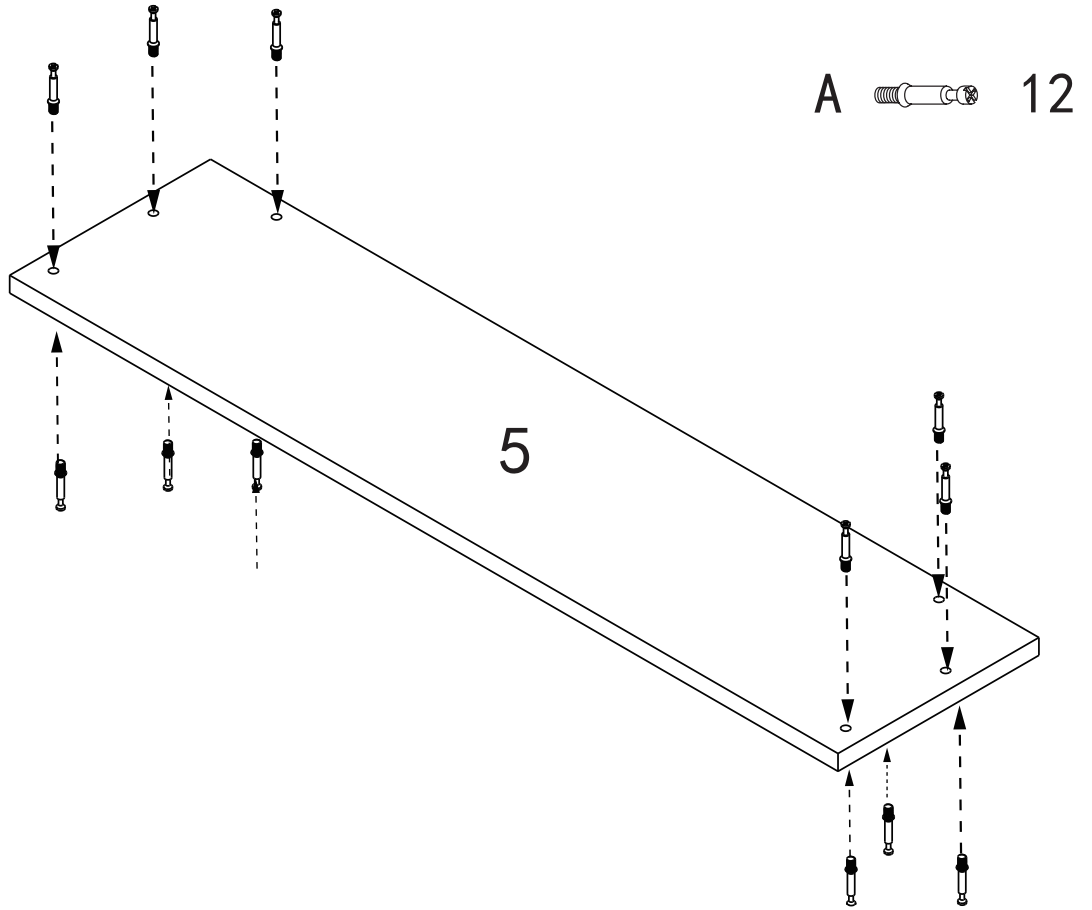 


Fig.9

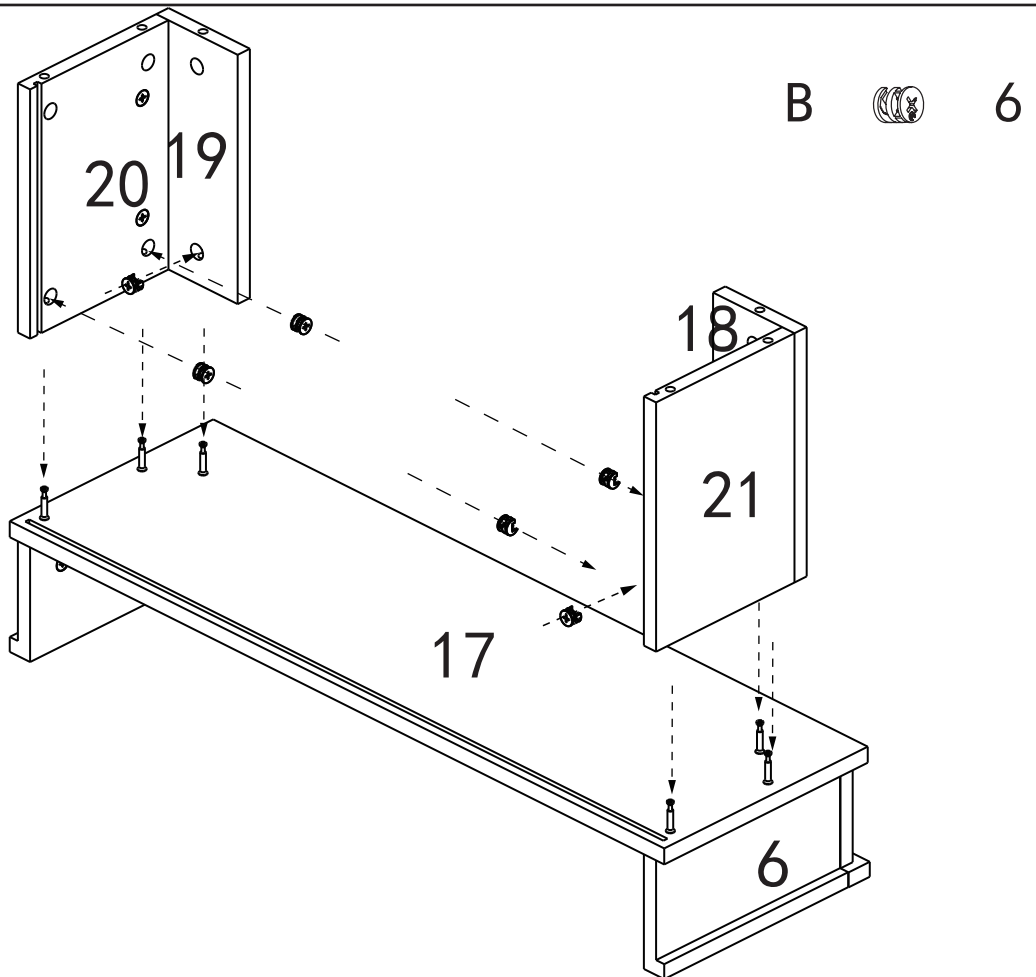 


Fig.10

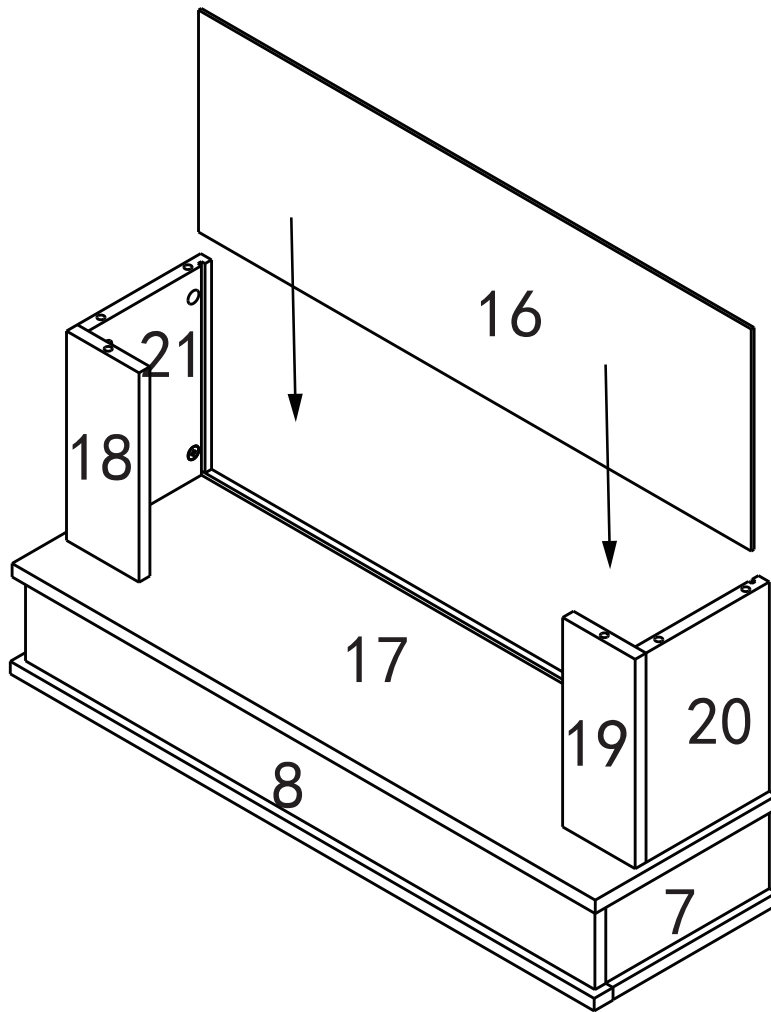 
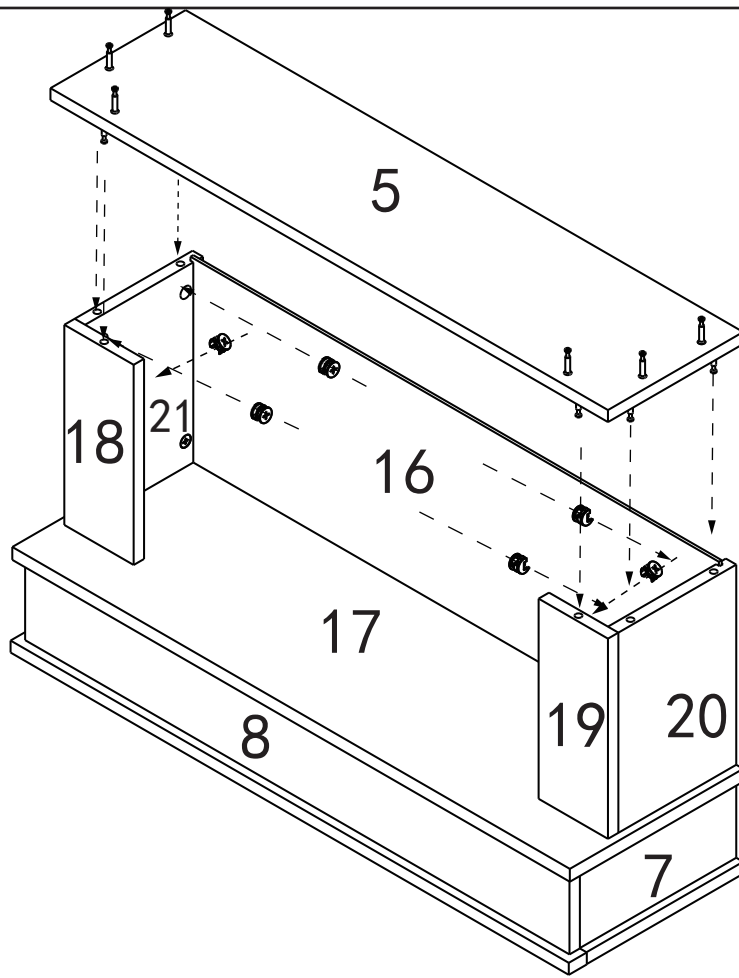 
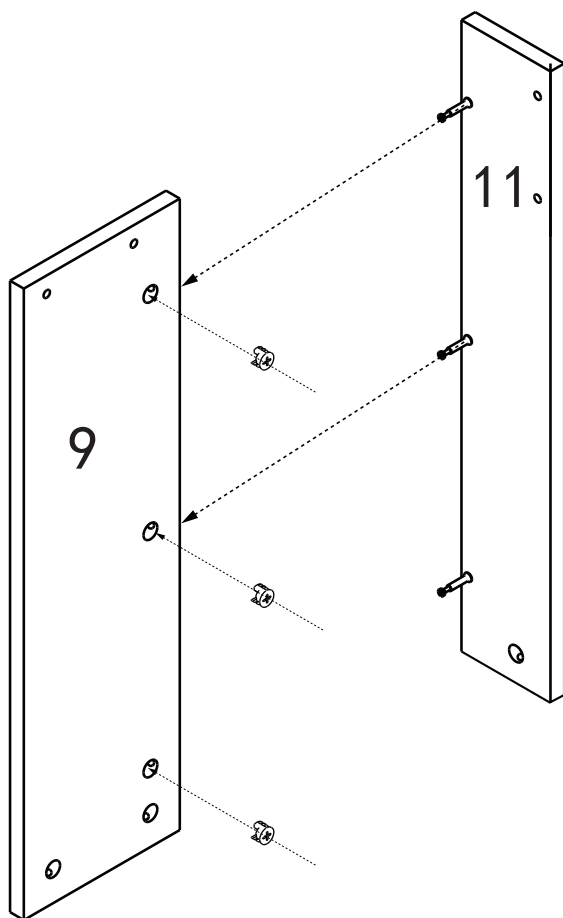 


Fig.11



B  6

Fig.12



 

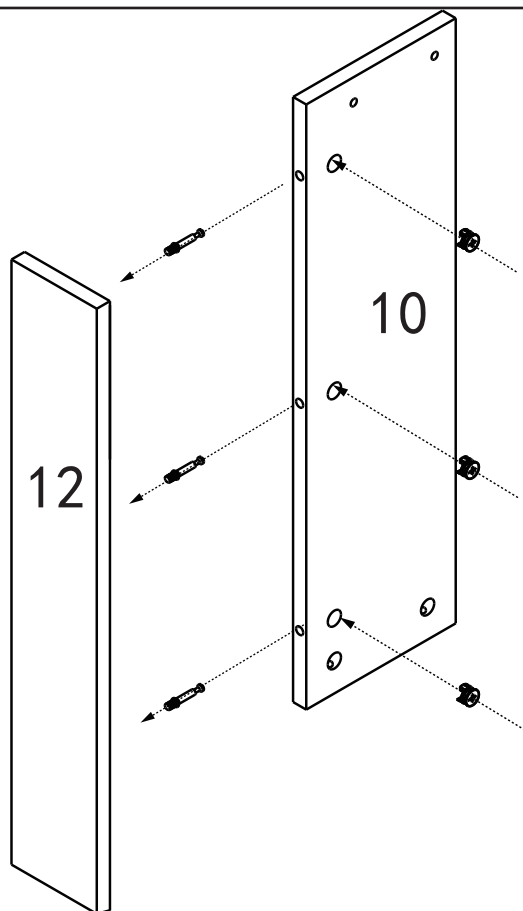 
- A  3
- B  3

Fig.13



 

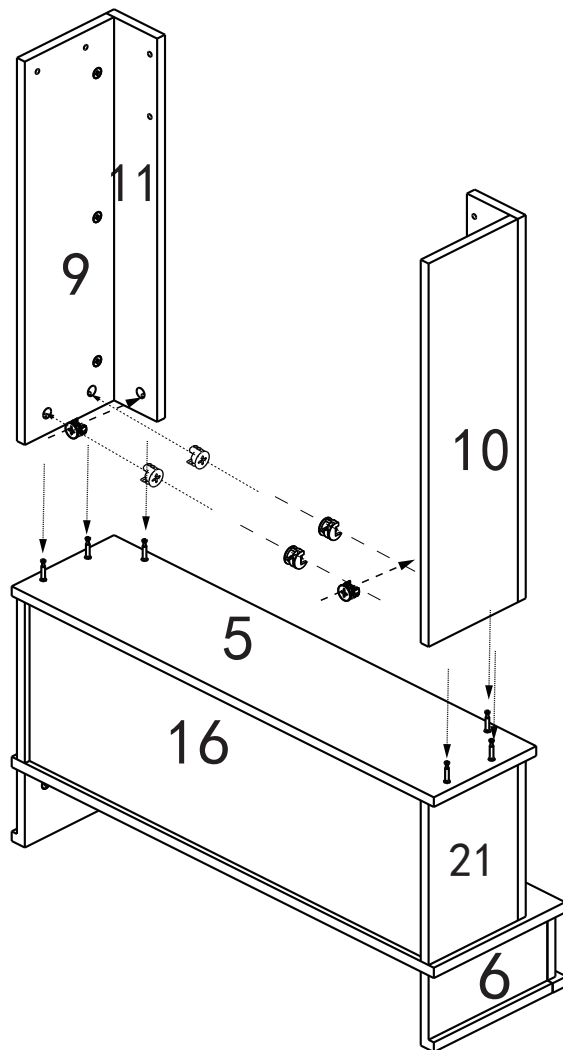 
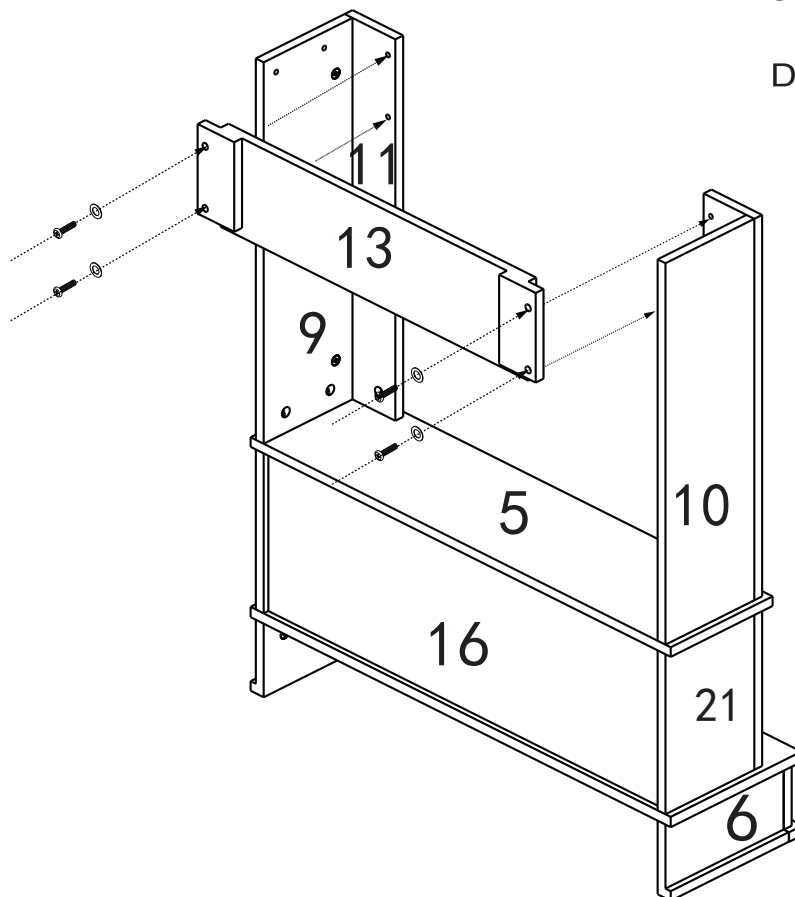 
- A  3
- B  3

Fig.14



B  6

Fig.15



C  4

D  4

Fig.16

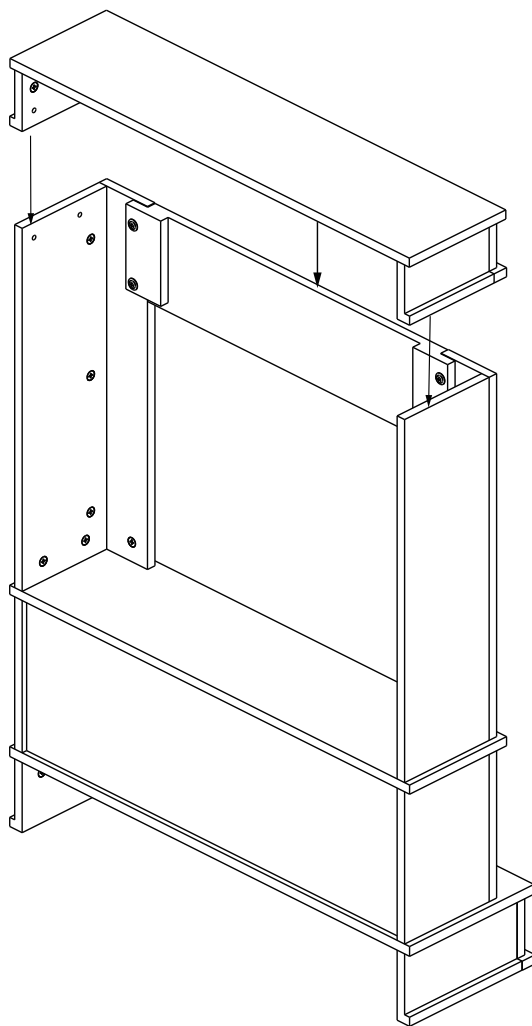 
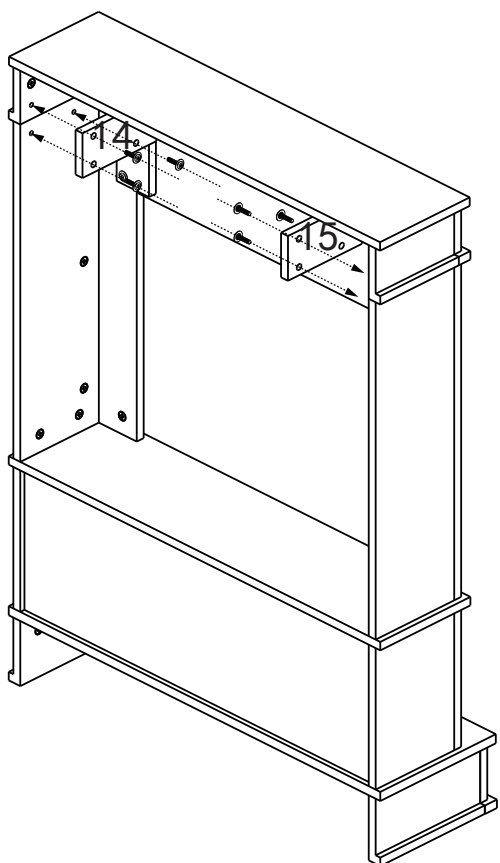 
 



Fig.17



- C  8
- D  8

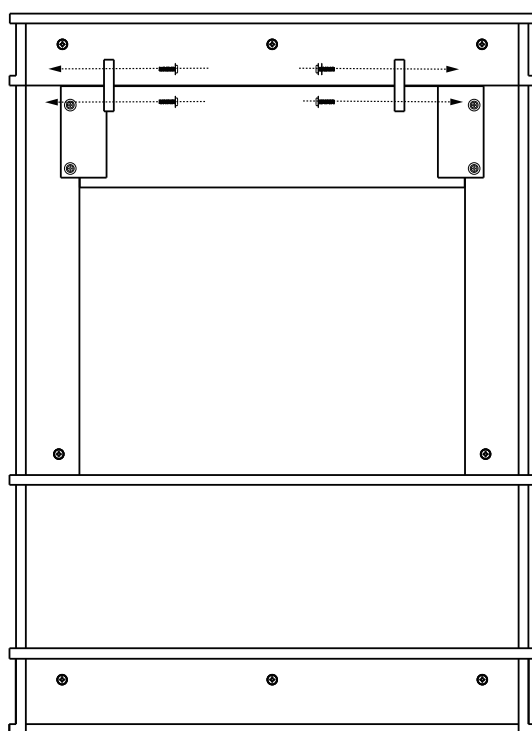 


Fig.18

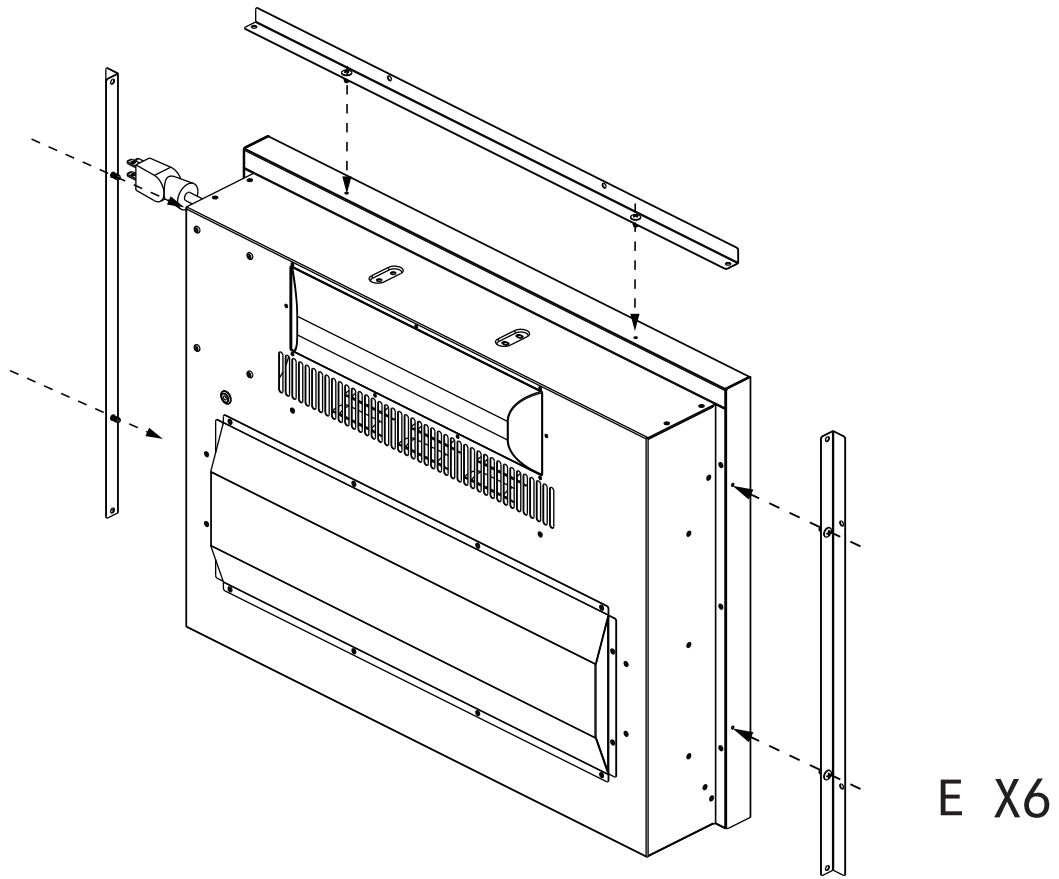 


Fig.19

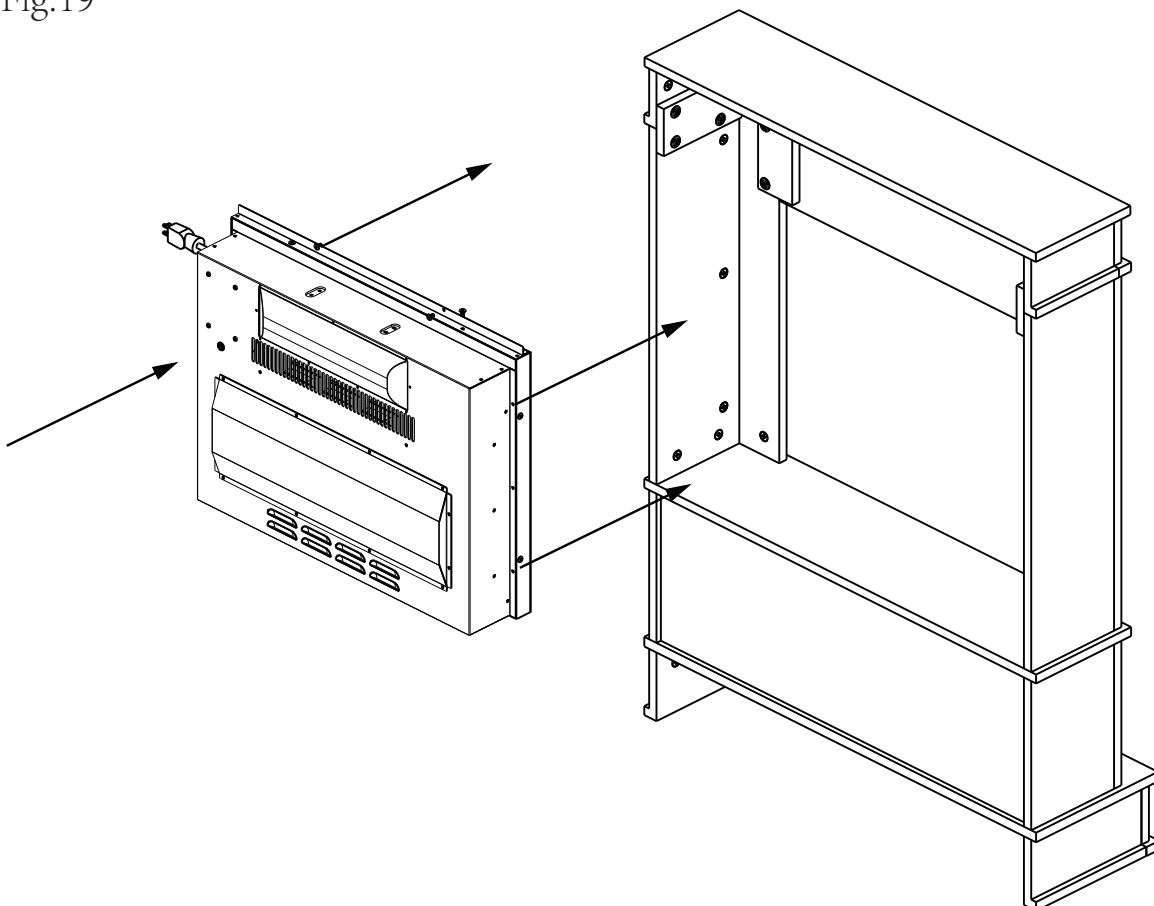 
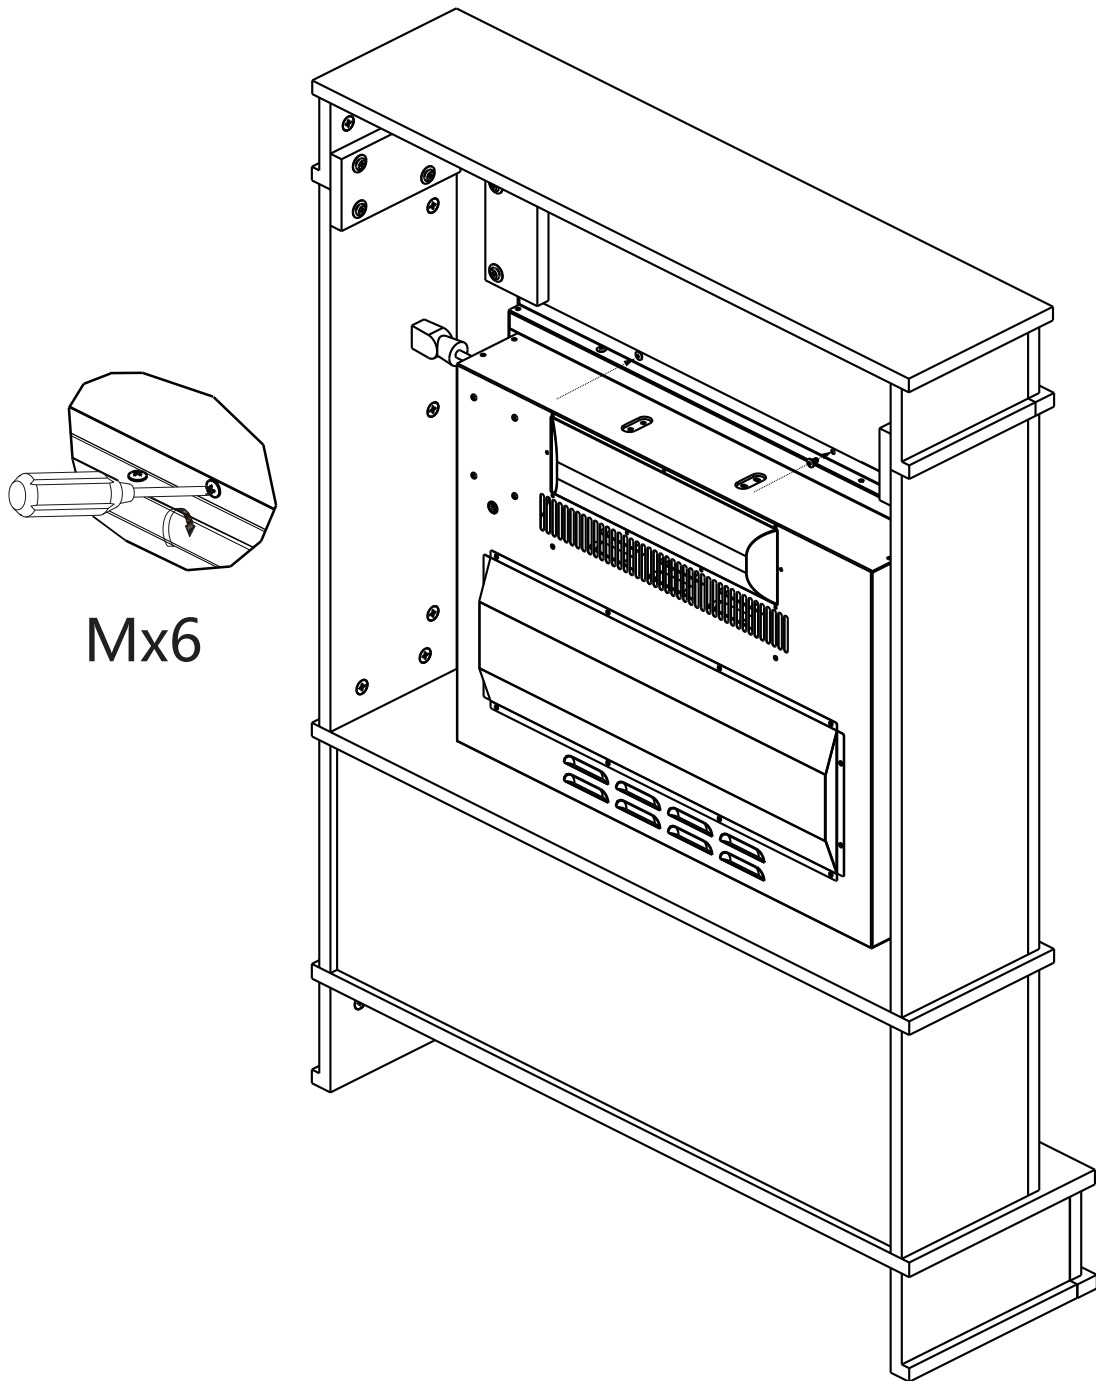 
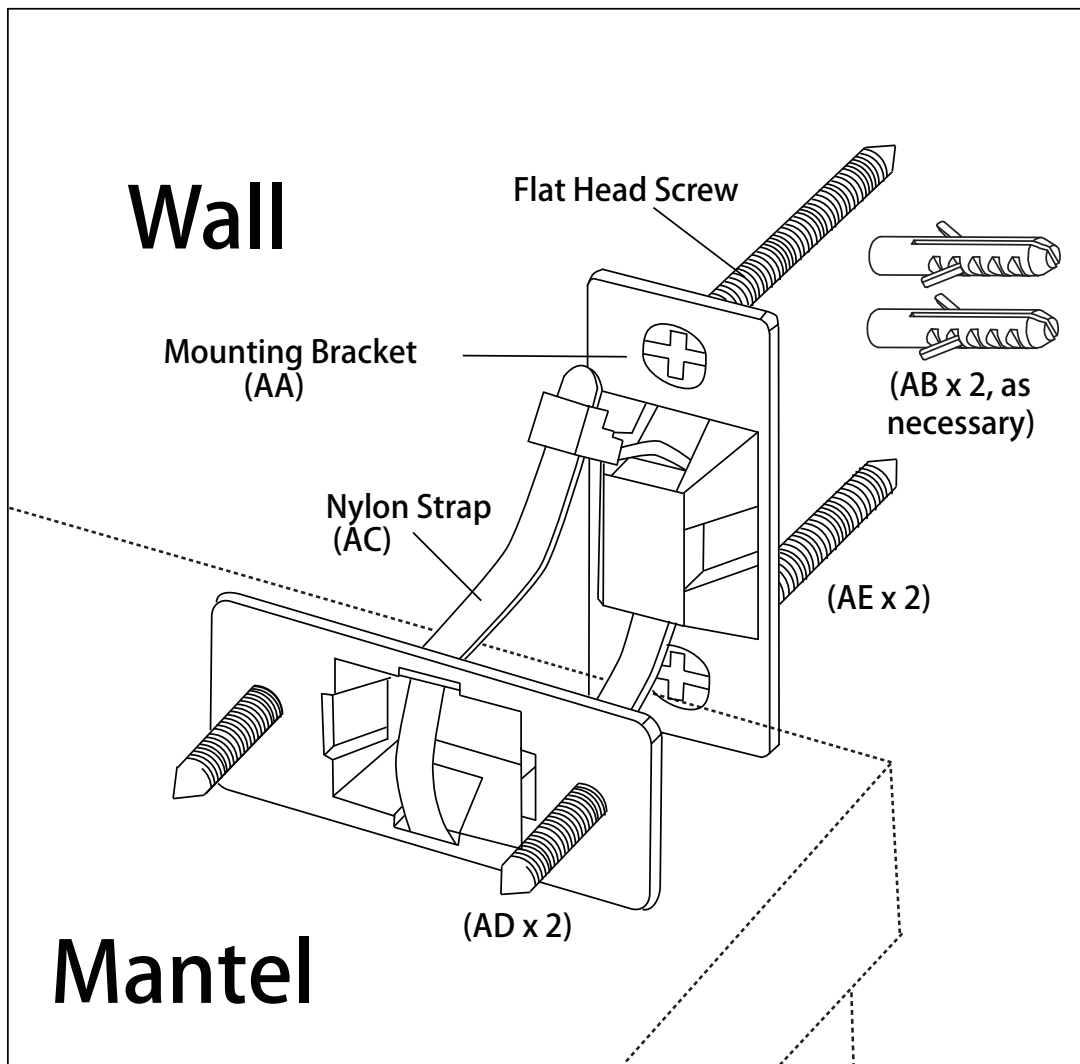 


Fig.20



Assembly

Anchoring the media console



Care and maintenance



Do not use abrasive or chemical cleaners. Discolouring or damage to finish may result.

Clean media console with a non-abrasive cloth. Clean as often as necessary.

note:

Excessive sun exposure may cause discolouring or fading of media console finish.