




we furnish fun.

ASSEMBLY INSTRUCTIONS

ARVOS GAME TABLE

IMPORTANT:

Do not fully tighten screws until the entire table is assembled.

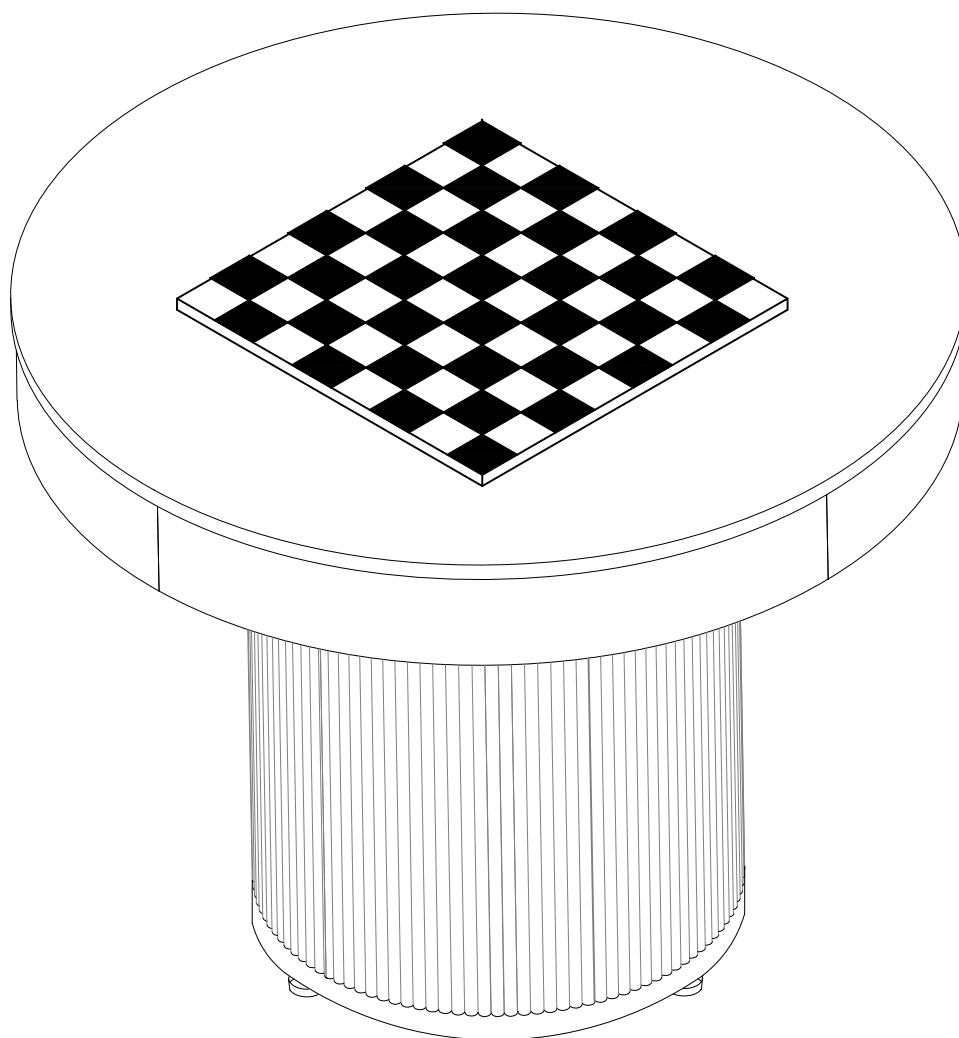



ASSEMBLY INSTRUCTIONS

ARVOS GAME TABLE

HARDWARE LIST

ITEM#	SAMPLE	DESCRIPTION	QTY.
H1		Bolt(5/16" x 1-3/8")	4
H2		Lock Washer (5/16")	4
H3		Flat Washer (5/16")	4
H4		Allen Wrench (5/16")	1

PARTS LIST

ITEM#	SAMPLE	DESCRIPTION	QTY.
P1		Table top	1
P2		Chessboard Insert	1
P3		Leg Plate	1
P4		Base	1
P5		Chess Pieces	1 Set




we furnish fun.

ASSEMBLY INSTRUCTIONS


ARVOS GAME TABLE

STEP 1

Remove the **chessboard insert (P2)** and any accessories stored inside the **table top (P1)**.

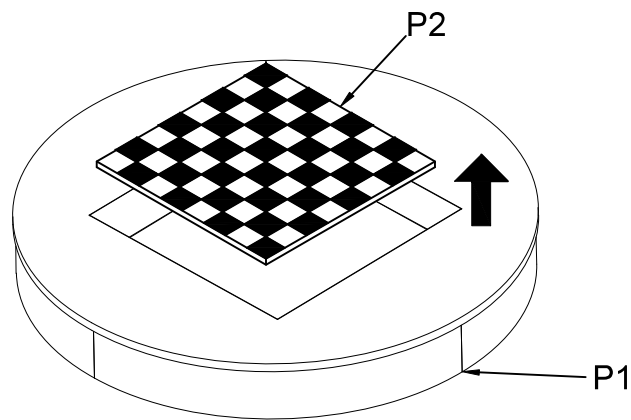

place the table top (P1) upside down on a clean, flat and soft **surface to prevent damage**.
Detach the leg plate (P3) under the top (P1).

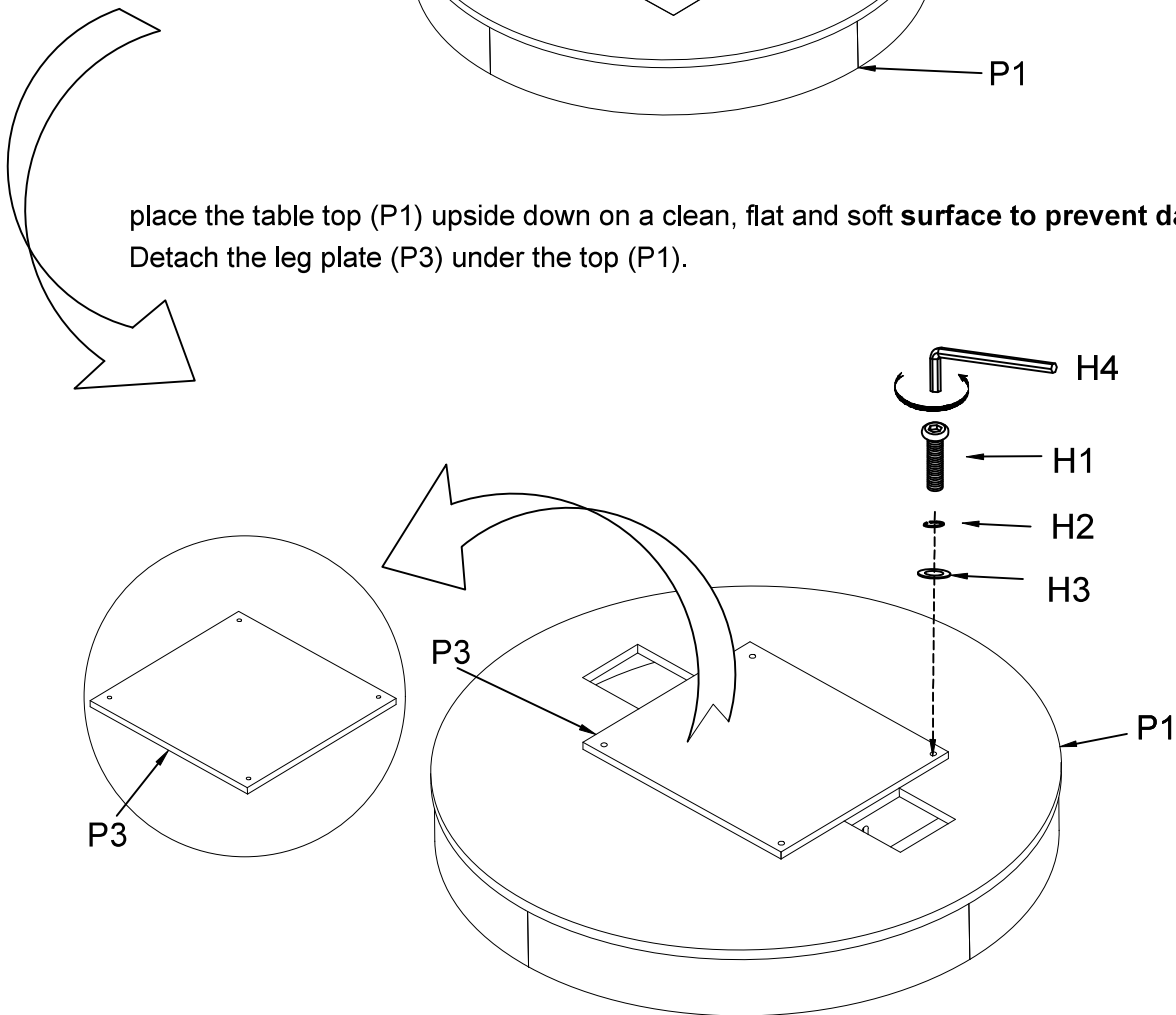



ASSEMBLY INSTRUCTIONS

ARVOS GAME TABLE


STEP 2

Attach the **leg plate (P3)** to the **base (P4)** as shown.

Secure using:

- (H1) Bolts
- (H2) Lock Washers
- (H3) Flat Washers
- (H4) Allen Wrench

Do not fully tighten.

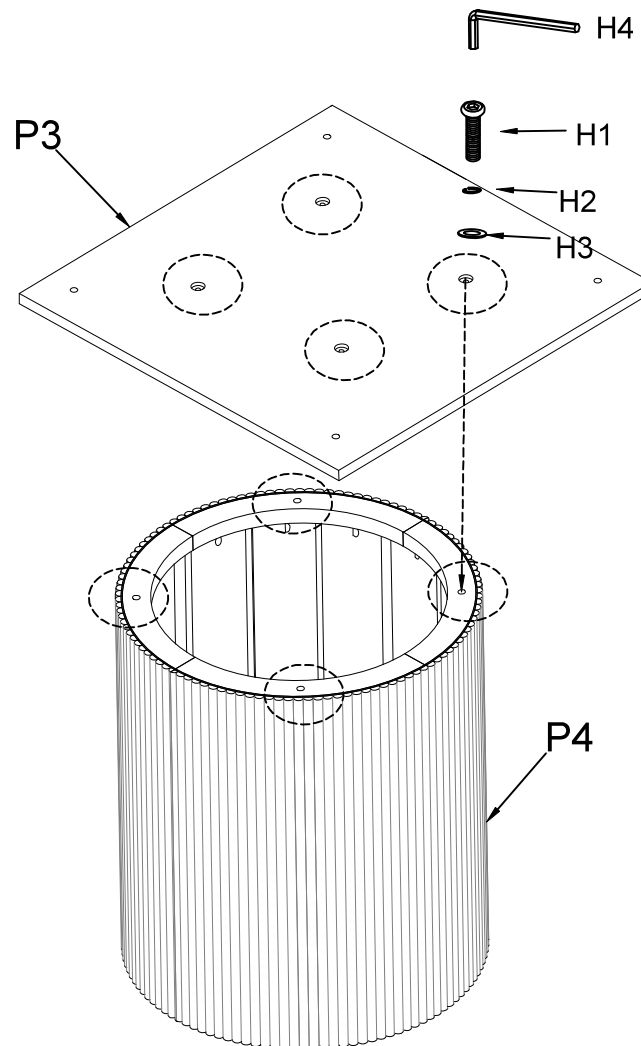



ASSEMBLY INSTRUCTIONS

ARVOS GAME TABLE


STEP 3

Attach the assembled **base (P4)** and **leg plate (P3)** to the **table top (P1)**.

Secure using:

- (H1) Bolts
- (H2) Lock Washers
- (H3) Flat Washers
- (H4) Allen Wrench

Once all parts are aligned, **fully tighten all hardware.**

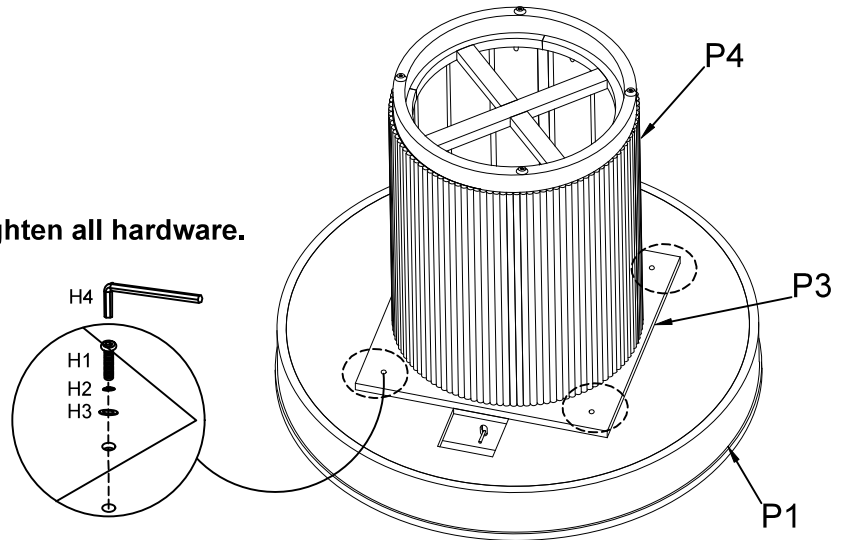


STEP 4

Place the table in the upright position.

Reach underneath the table top to locate the metal lifting rod hardware installed beneath the table frame.

Use your finger to push the metal lifting rod hardware upward.

Once the metal lifting rod hardware is pushed up, the Chessboard Insert (P2) will pop up slightly from the table top, allowing the user to easily remove, flip, or reposition it.

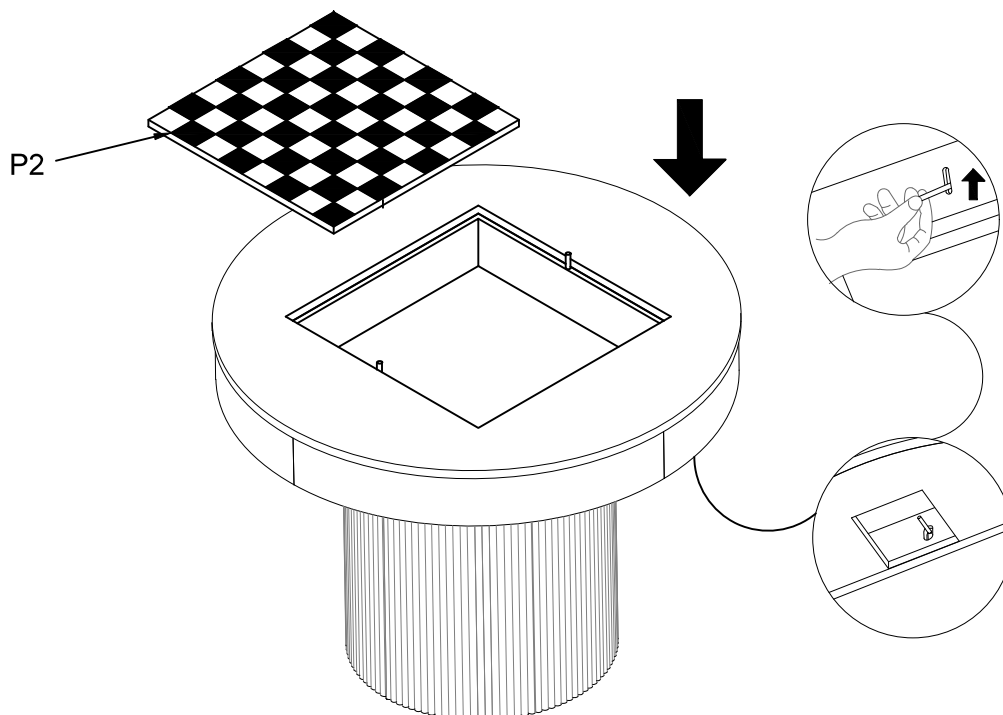





we furnish fun.
ASSEMBLY INSTRUCTIONS

ARVOS GAME TABLE

FINAL STEP

Adjust the levelers on the bottom of the base as needed to ensure the table is level.

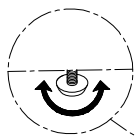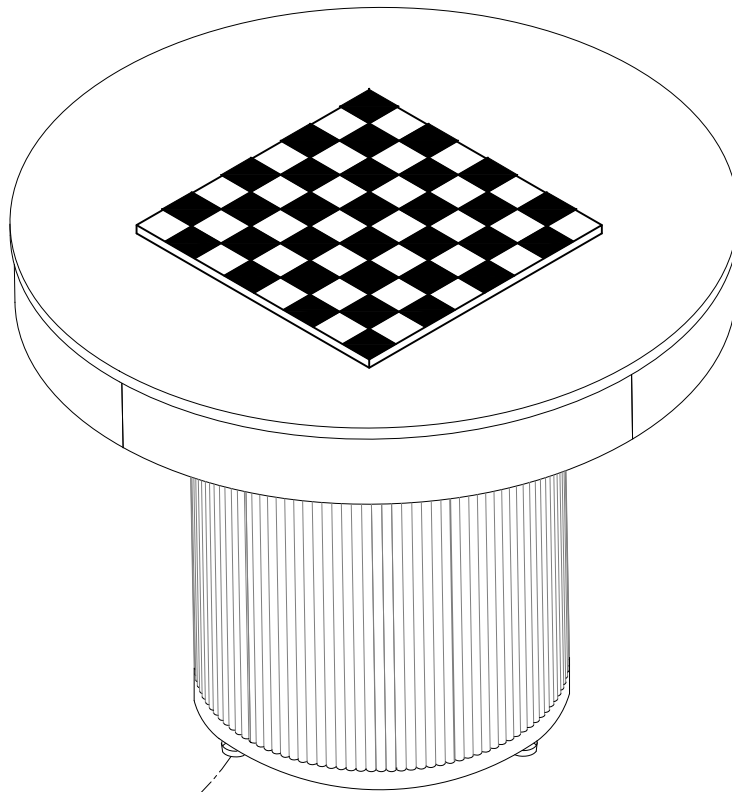

Adjustable levelers

ASSEMBLY IS COMPLETE