

F123

Leather Luxury Safe Drawer

operation instructions



The pictures are for reference only.
The actual product shall prevail.



Entry method

Thank you for using this product. Please read the product manual
carefully before installation


**Note: The factory default password is 123456.
Spare keys should not be placed in the storage compartment**

1、 Product parameters:

Model name: F123 Leather Luxury Drawer
 Working power supply: lithium-ion battery
 Number of passwords: 100 Password length: 6-12 digits
 Number of fingerprints: 100

Starting method: deceleration motor+mechanical transmission
 Working voltage: 3.5V~4.2V
 Standby current: ≤ 55uA
 Emergency power supply: 5V Type-C
 Relative humidity: 20% RH~90% RH
 Working temperature: -20 ° C~+55 ° C

2、 Analysis of functional parts:

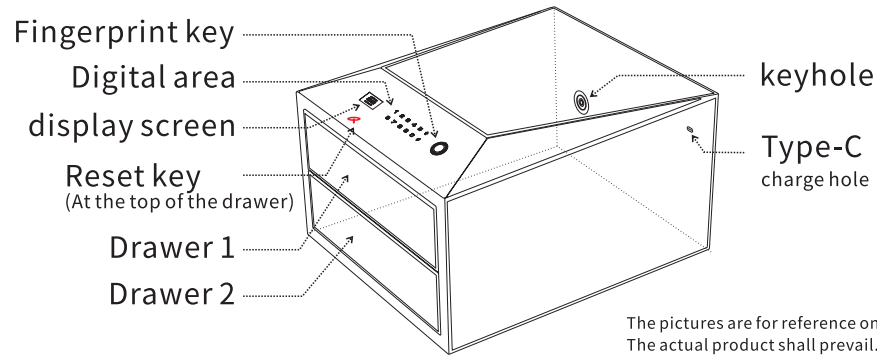

The factory default password is "123456", please do not put the spare key in the storage compartment

3、 Unlock method:

After a single successful verification, all drawers can be continuously opened, and sleep after 8 seconds without operation.

(1) Unlock with Password: Touch the numeric area to wake up the system. Enter the initial password "123456" and press the "#" key to confirm. The "*" key is the clear key. If the password is entered incorrectly, press the "*" key to clear and re - enter.

(2) Unlock with Fingerprint: Any fingerprint can be used to unlock.

If the password/fingerprint is correct: The LED screen displays "Open 1 / Open 2". Press the corresponding number to open.

4、 Restore factory settings:

- When the door is open, press and hold the reset button. After 5 seconds, the red light will turn on, and a voice prompt will indicate that the factory settings are being restored. The password and all fingerprints will be cleared, and the system will return to its factory - default state.
- Select "Restore Factory Settings" in the system management menu.

5、 Function settings:



Enter the settings menu:

Touch the digital area to wake up the system, then enter the administrator password. **Be sure to press the '*' and '#' keys *Consecutively***, followed by the administrator password (either the initial password '123456' or any fingerprint). After pressing the '#' key to confirm, you will enter the management menu.

1. Registered user


(enter fingerprint and password)



Note: Please enroll the administrative user first, and then enroll the regular users. The enrollment can be done continuously. Press the "*" key to go back to the previous menu.

- Register management user → Register fingerprint password → Please press voice operation (enter 6-12 digit password at this time, press "#" to confirm, enter twice (password input), or press multiple angles 5 times (fingerprint input)) to add successfully.
- Register as a regular user → Register fingerprint password → Please press voice operation (enter 6-12 digit password at this time, press "#" to confirm, enter twice (enter password), or press fingerprint from multiple angles 5 times (enter fingerprint)) to add successfully.

2. Delete User

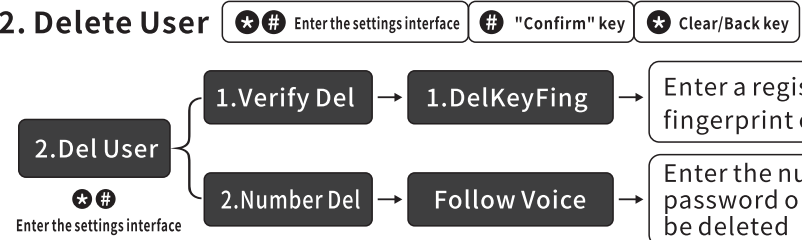


Note: If all data is deleted, the initial administrator password "123456" will be restored.

- Verify deletion → Delete according to registered fingerprint/password information → Delete successfully.
- Number deletion → Delete according to the number information assigned during successful registration → Delete successfully.

3. System settings


⌘ # Enter the settings interface # "Confirm" key ✖ Clear/Back key

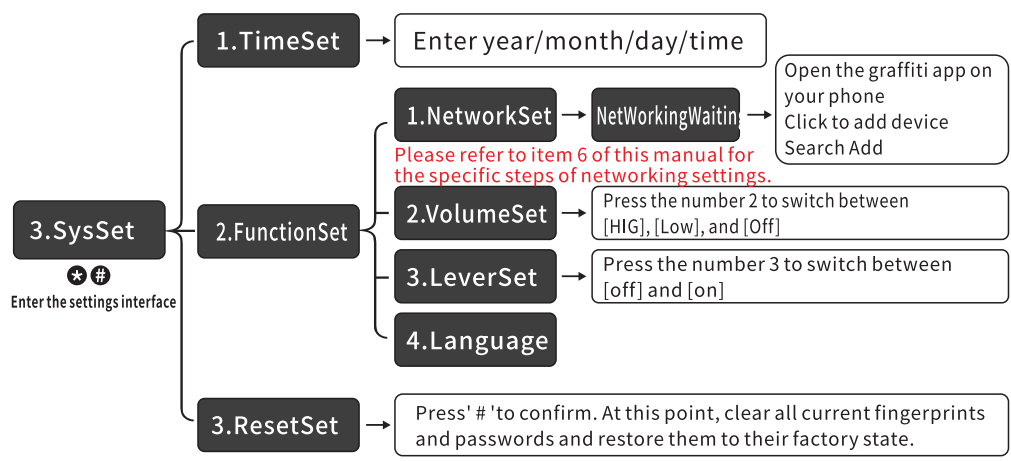

- (1) Time setting → Follow the prompts to operate. (Automatic update time after distribution network)
- (2) Function settings
 - ① Networking settings: Devices can be connected to the internet and require the use of a graffiti app for network distribution. After distribution, the lock will be uploaded and unlocked Functions such as recording, remote unlocking, error alarm, vibration alarm, battery display, member management, etc.
- *Note: The specific steps for setting up the internet connection can be found in item 6 of this manual.
- ② Volume setting: System volume setting, with three settings options: high and low. (default high) Press the number 2 to switch between [High], [Low], and [Off].
- ③ Vibration switch setting: After turning on the vibration switch, if vibration or password fingerprint error is detected for 5 consecutive times, the alarm will start. At the same time, pressing the button is not operable, and entering the correct fingerprint can clear the alarm. (Default Off) Press the number 3 to switch between [Off] and [On] system anti-theft settings.
- (3) Restore factory settings: Press "#" to confirm. At this time, all current fingerprints and passwords will be cleared and the factory status will be restored.

4. Data Statistics and Records


⌘ # Enter the settings interface # "Confirm" key ✖ Clear/Back key

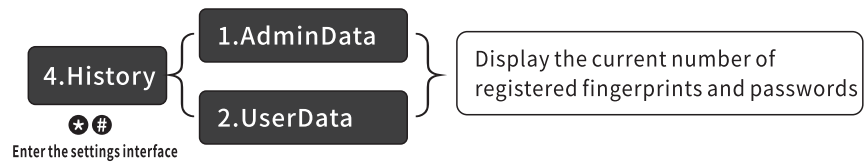

6. Specific steps for networking settings:

Installation and Connection of Tuya Smart APP: Scan the QR code on the right or search for "Tuya Smart" in the mobile app store (application) to download and install the APP → Click to open it and register a Tuya Smart account.

1. In the single-layer storage and extraction settings interface ⌘ # Enter the settings interface, select "3 System Settings", then select "2 Function Settings", and then press "1 Networking Settings" to enter the distribution network status. (Continuous "drip" sound prompt on the distribution network)
2. In the APP, click "+" → "Add Device" → "Select Add" → "Successfully Added".

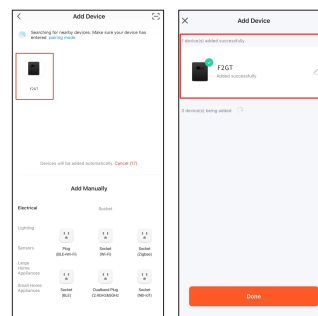

When using it for the first time, you need to add an administrator first.

- The local fingerprint and password will not be updated simultaneously on the APP.

Remarks:

1. The time will be automatically updated after a successful network connection.
2. The temporary password can be used to unlock the door remotely.
3. The unlocking information will be updated after connecting to the mobile phone.

7. Other:

1. When prompted that the battery is low, please select a 5V Type-C charging wire to charge in a timely manner.
 2. Supports virtual passwords, with a maximum of 30 virtual passwords.
- Example: The correct password is 686868, which can be entered as 121746868689498133

8. Attachment configuration:

1. Type-C charging cable;
2. Instructions;
3. Spare key * 2;
4. Desiccant;

