


## How to Adjust the Light Temperature

### Important Notice:

1. Please turn off the light before adjusting the power and CCT (Correlated Color Temperature).
2. Turn the light back on only after you have completed your power and CCT selection.

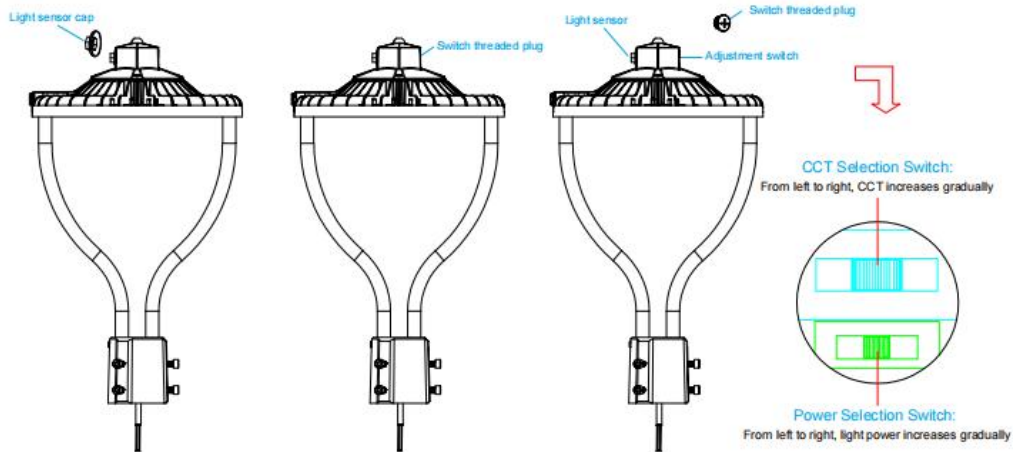

1. With the power off, unscrew the switch threaded plug.
2. Toggle the adjustment switch to set the desired CCT & power.
3. After adjustment, tighten the switch threaded plug securely.
4. If light-sensing function is needed, remove the light sensor cap.

### CCT Selections:

There are 3 color temperatures available (CW/NW/WW)  
Please select the color temperature you prefer before installation

| WW    | NW    | CW    |
|-------|-------|-------|
| 3000K | 4000K | 5000K |

### Power Selections:

There are 3 power options (L/M/H), please select the power according to your needs

|          |        |         |         |
|----------|--------|---------|---------|
| PCA-60W  | L(60%) | M( 80%) | H(100%) |
|          | 36W    | 48W     | 60W     |
| PCA-80W  | L(60%) | M( 80%) | H(100%) |
|          | 48W    | 64W     | 80W     |
| PCA-100W | L(60%) | M( 80%) | H(100%) |
|          | 60W    | 80W     | 100W    |
| PCA-150W | L(60%) | M( 80%) | H(100%) |
|          | 90W    | 120W    | 150W    |