

Kids Play Kitchen



WARNING!!


(Requires adult assembly)












Warning: Assembly by an adult







Kids Play Kitchen Set Installation Manual

This product is not suitable for children under 36 months of age and should be used under adult supervision; This product contains small parts, etc., which may cause accidental ingestion by children 36 months and younger. The danger of suffocation; after disassembling the package, please make sure that the plastic bag is not part of the toy itself. Keep the packaging away from babies and children vent the danger of suffocation!

1	2	3	4	5	6	7	8	9	10	11	12	13
14	15	16	17	18	19	20						
21	22	23	24	25	26	27 Support plate × 1	28 sink × 1					
29 Range hood × 1	30 handle × 4	31 Ice maker × 1	32 Faucet × 1	33 induction cooker × 1	34 Ice cubes × 2	35 plastic cup × 1						
36 Kitchenware bucket × 1	37 clock × 1	38 Saucepan × 1	39 Saucepan × 1	40 C Door shaft × 2	41 AB Door shaft × 10	42 switch × 2						
43 Hour hand × 1	44 Minute hand × 1	45 nail × 1	46 Cooking spatula × 1	47 Cooking spatula × 1	48 Knife × 1	49 Door stopper × 4						
50 Condiment bottles × 2	51 screw A × 49	52 screw B × 6	53 screw C × 12	54 screw D × 14	55 Faucet screw E × 1							

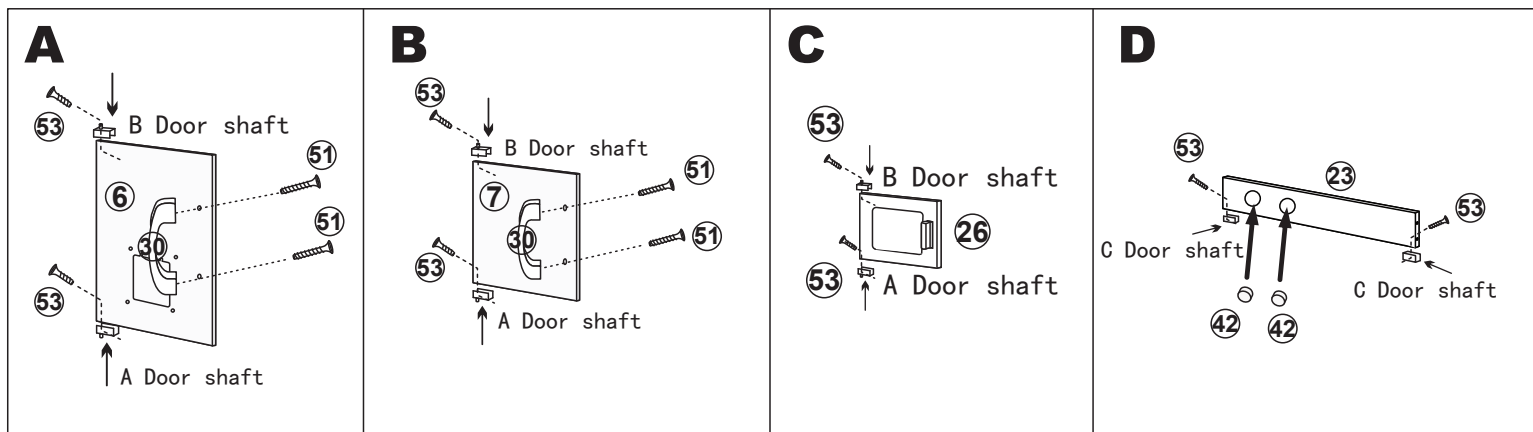

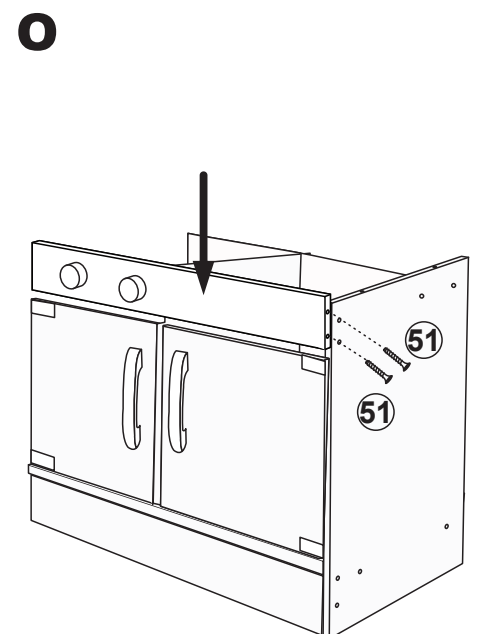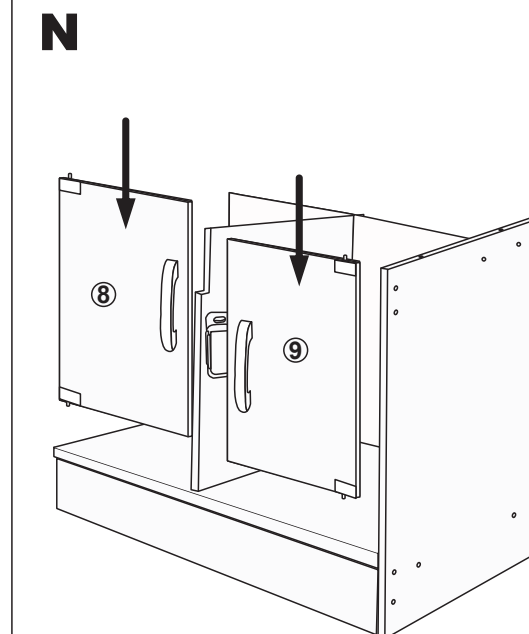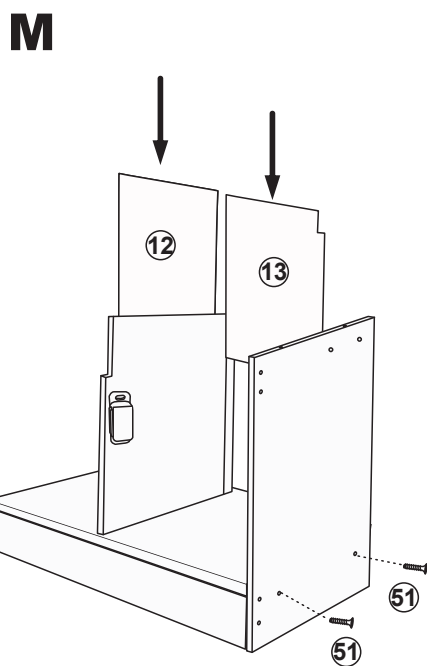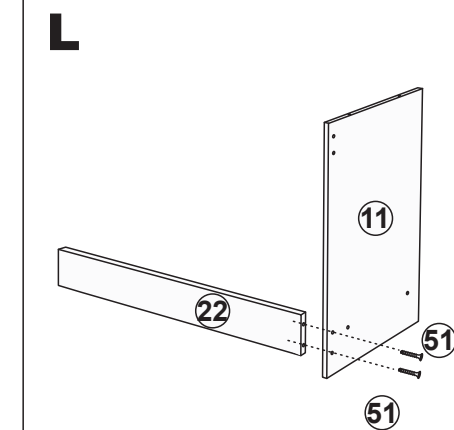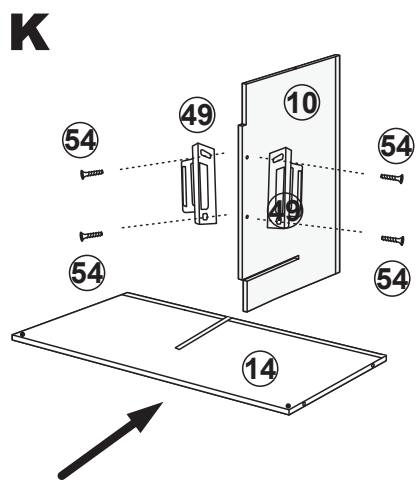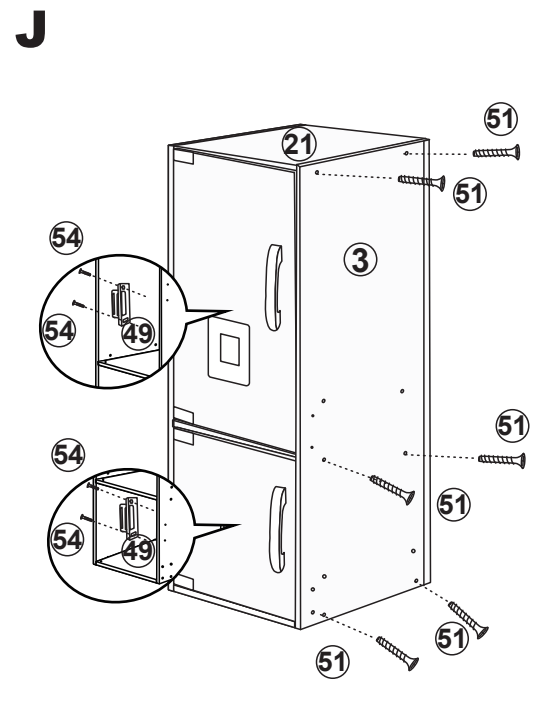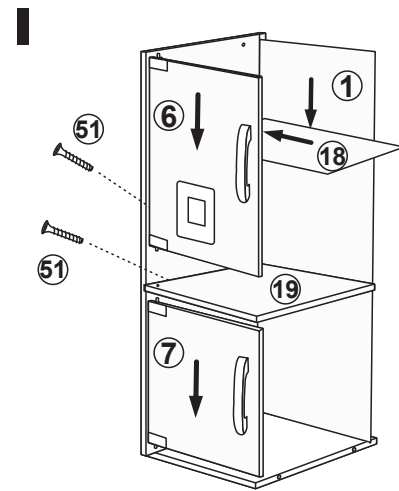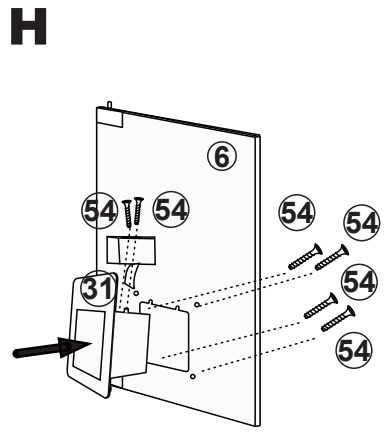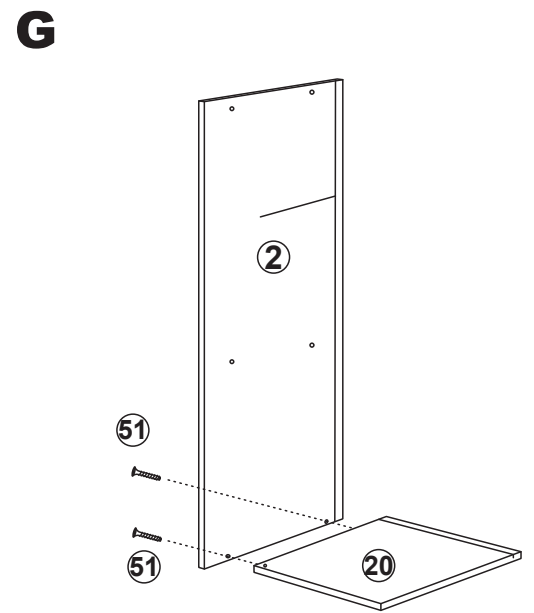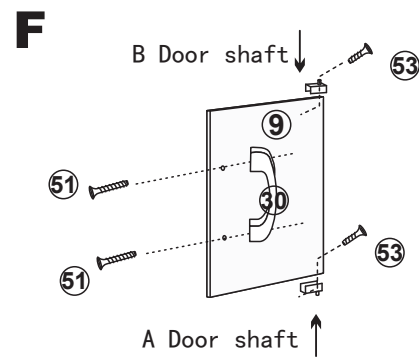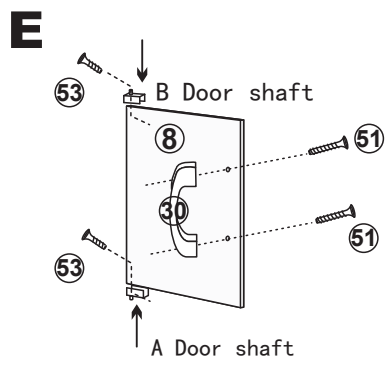

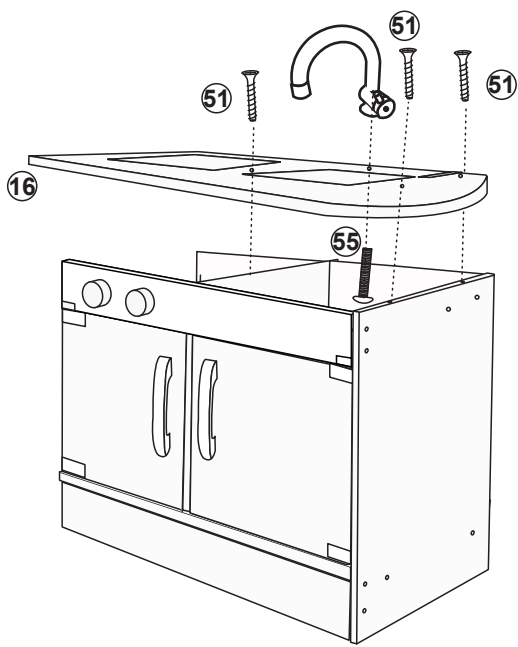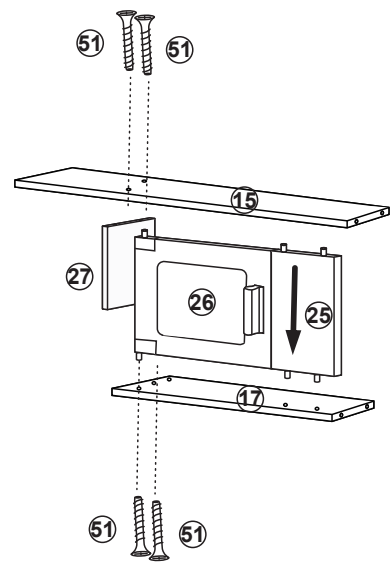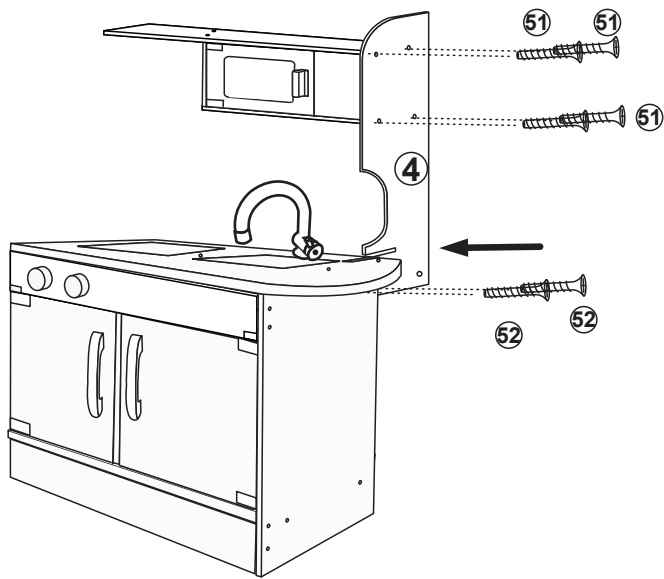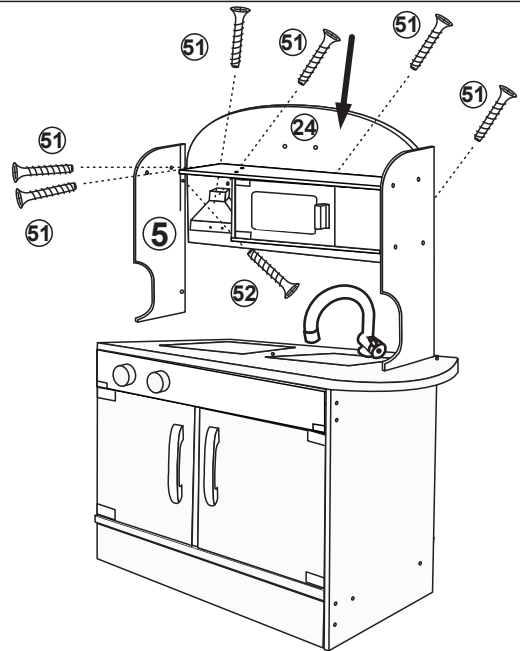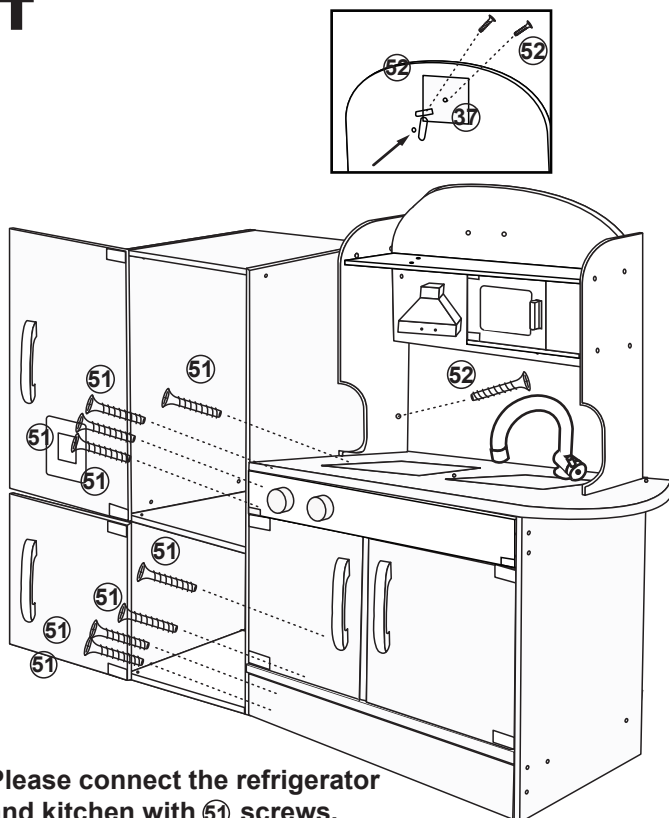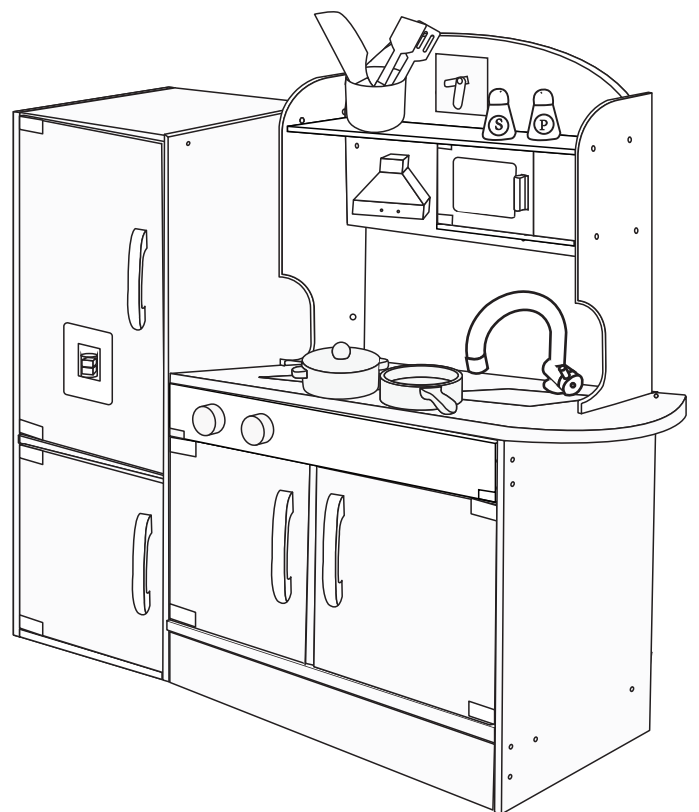P**Q****R****S****T****U**

Please connect the refrigerator and kitchen with 51 screws.