 


# **INSTALLATION**

 
 
## *Product Manual*

Version: 590068US-01-26A-SJT

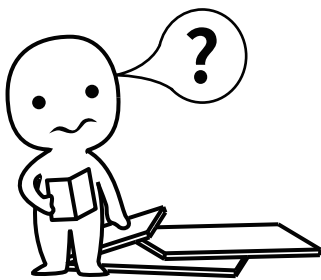


### **IMPORTANT INFORMATION!**

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

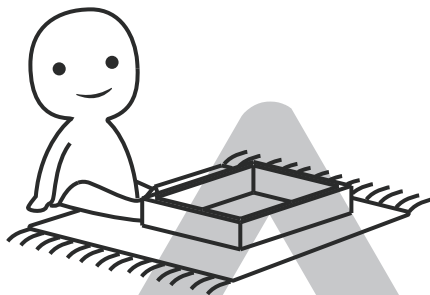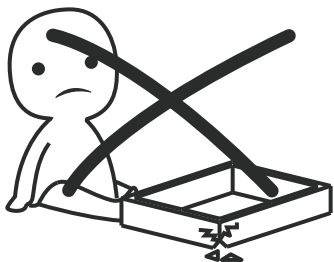



### **AVOID SCRATCHES!**

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

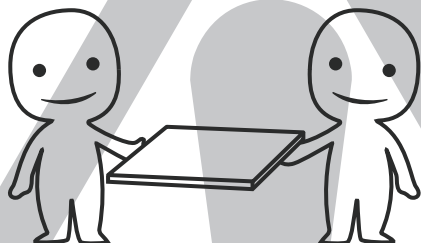

### **IMPROVE EFFICIENCY !**

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

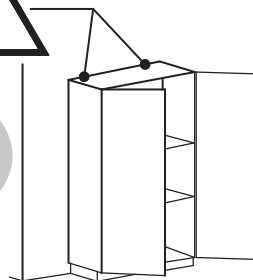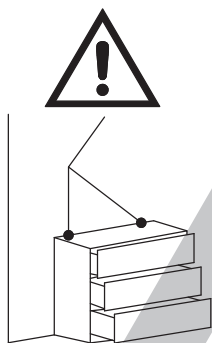

### **ANTI-TOPPLE WARNING !**

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

### **IMPORTANT !**




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.















Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

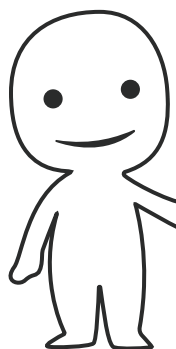


Please prepare the following tools

   

              When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size
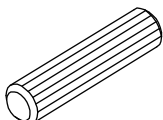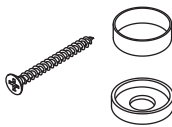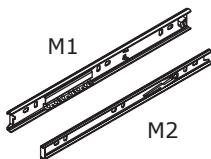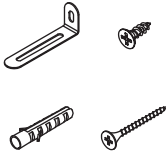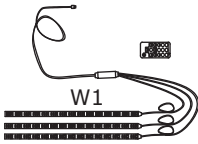
|                                                                                                                      |                                                                                                                    |                                                                                                                     |                                                                                                                       |                                                                                                                           |
|----------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|
| <p>A x 42</p>  <p>Ø 6 x 40 mm</p>   | <p>B x 18</p>  <p>Ø 8 x 40 mm</p> | <p>C x 2</p>  <p>Ø 8 x 20 mm</p>   | <p>D x 4</p>                        | <p>E x 76</p>  <p>Ø 3.5 x 35 mm</p>    |
| <p>F x 24</p>                     | <p>G x 6</p>                    | <p>H x 4</p>  <p>Ø 7 x 50 mm</p> | <p>I x 4</p>  <p>Ø 4 x 25 mm</p>  | <p>J x 112</p>  <p>Ø 3.5 x 12 mm</p> |
| <p>L x 20</p>  <p>Ø 6 x 35 mm</p> | <p>M x 10</p>                   | <p>N x 6</p>                     | <p>O x 10</p>  <p>Ø 4 x 8 mm</p> | <p>P x 2</p>  <p>Ø 4 x 18 mm</p>     |
| <p>Q x 42</p>  <p>Ø 15 x 9 mm</p> | <p>R x 2</p>                    | <p>S x 10</p>                    | <p>T x 18</p>                     | <p>U x 6</p>  <p>Ø 6 x 50 mm</p>     |
| <p>V x 6</p>                      | <p>W x 1</p>                    | <p>X x 9</p>                     | <p>Y x 4</p>                      | <p>Z x 2</p>                         |

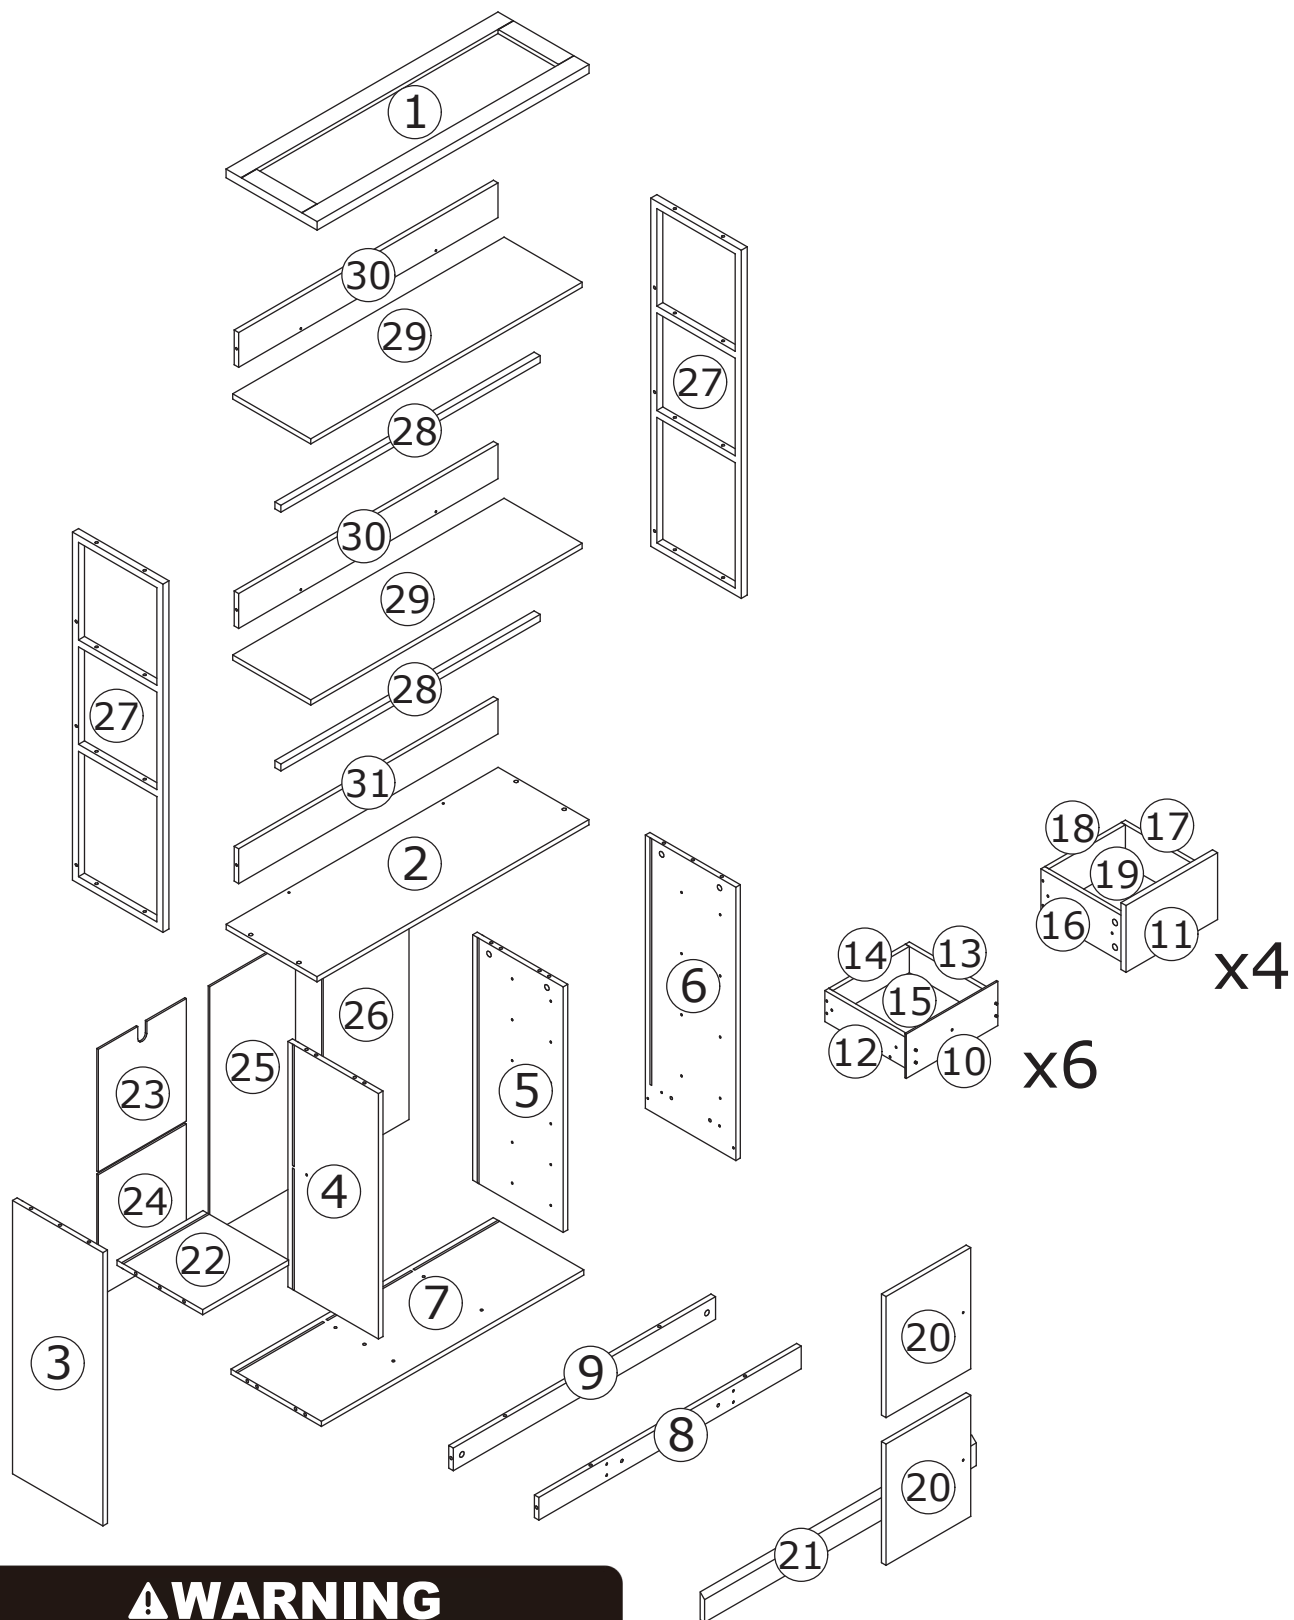 


## ⚠ WARNING




**Children have died from furniture tipover. To reduce the risk of furniture tipover:**

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 
*This is a permanent label.  
Do not remove!*

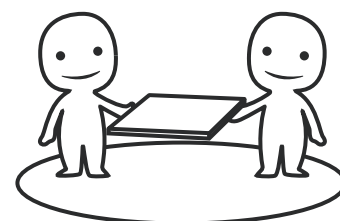

ASSEMBLED BY 2 ADULTS

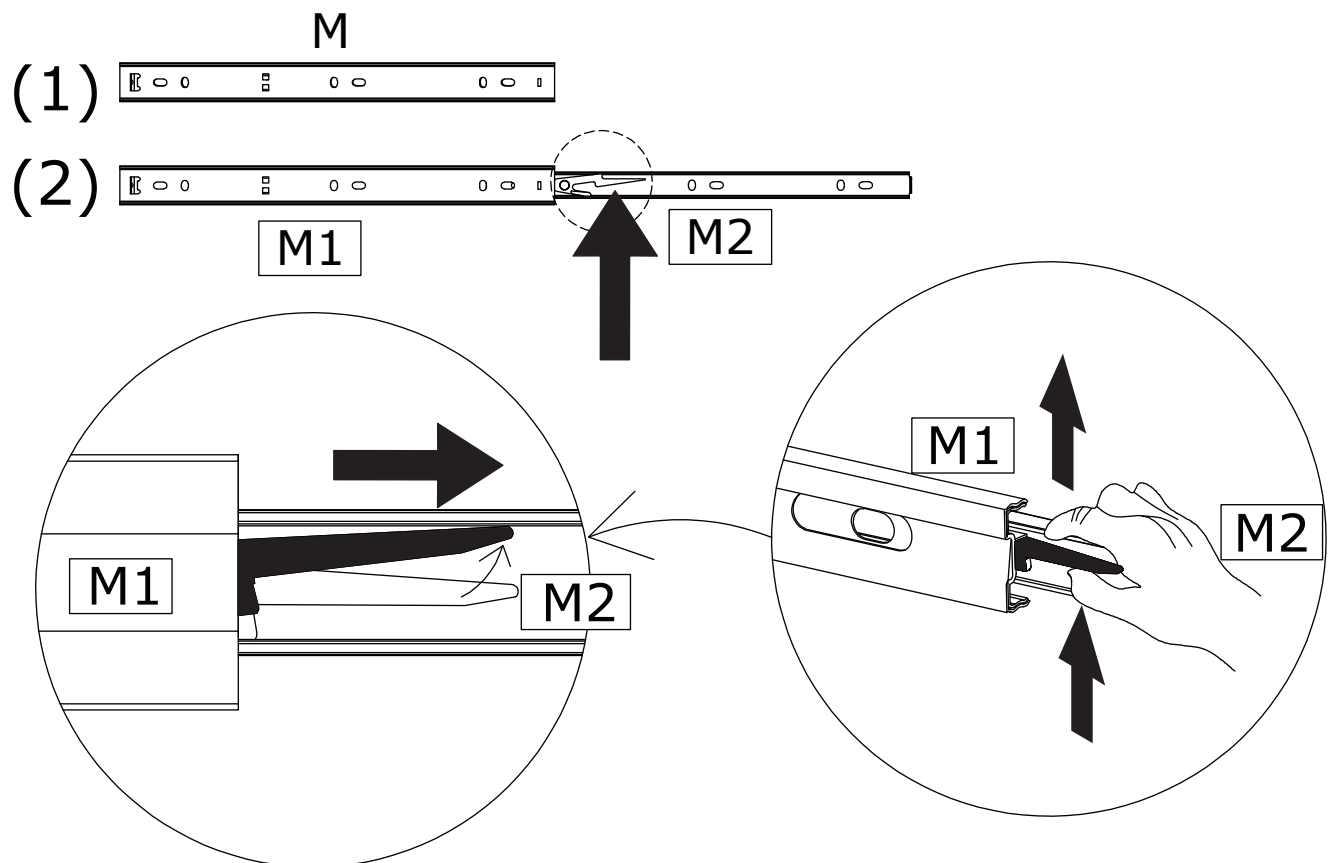 

 Move the black paddle upward  
and pull out (M2) to the right.

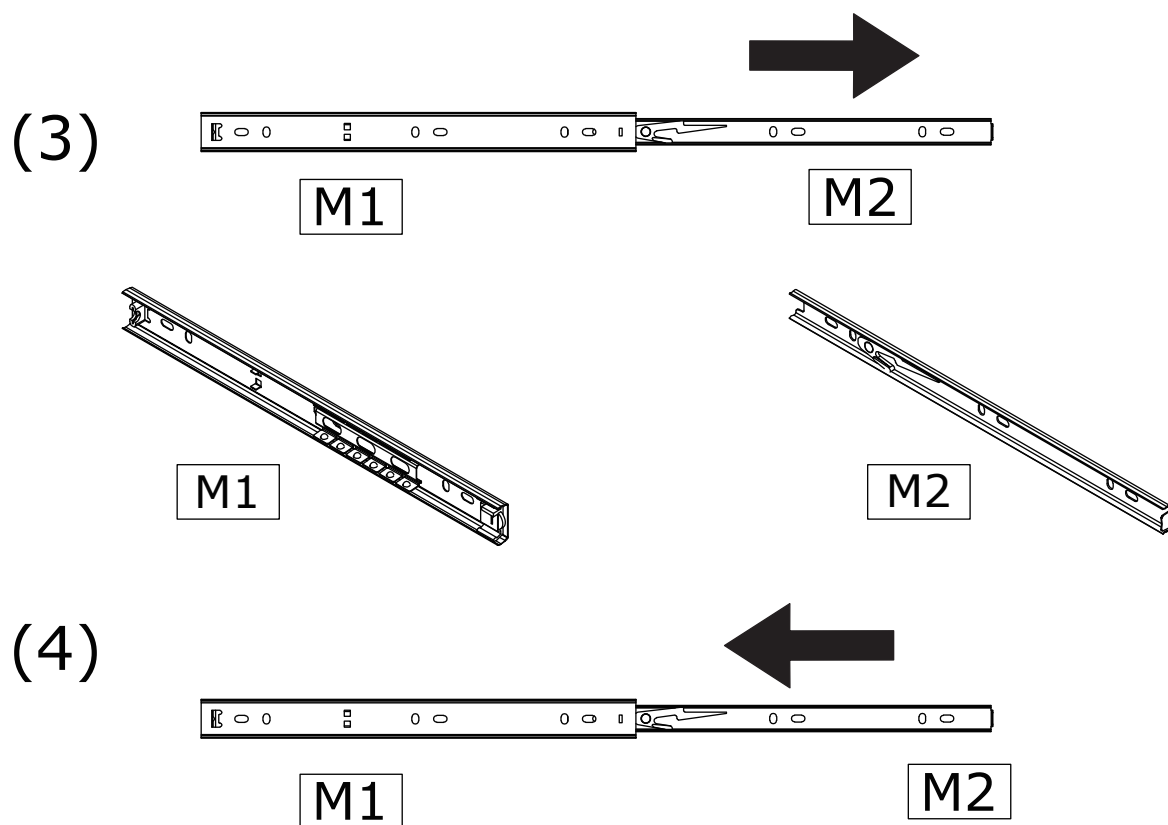

# 1

J x 20

 


Ø 3.5 x 12 mm

M x 10







M1






Secure slide rail (M1) to boards 4 and 6 using screw (J).

    
(Note: Screws should be installed at the center position of the slide rail holes.)

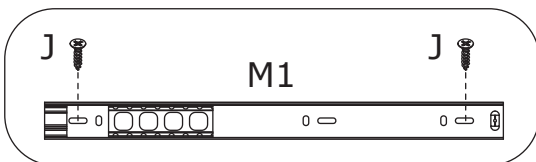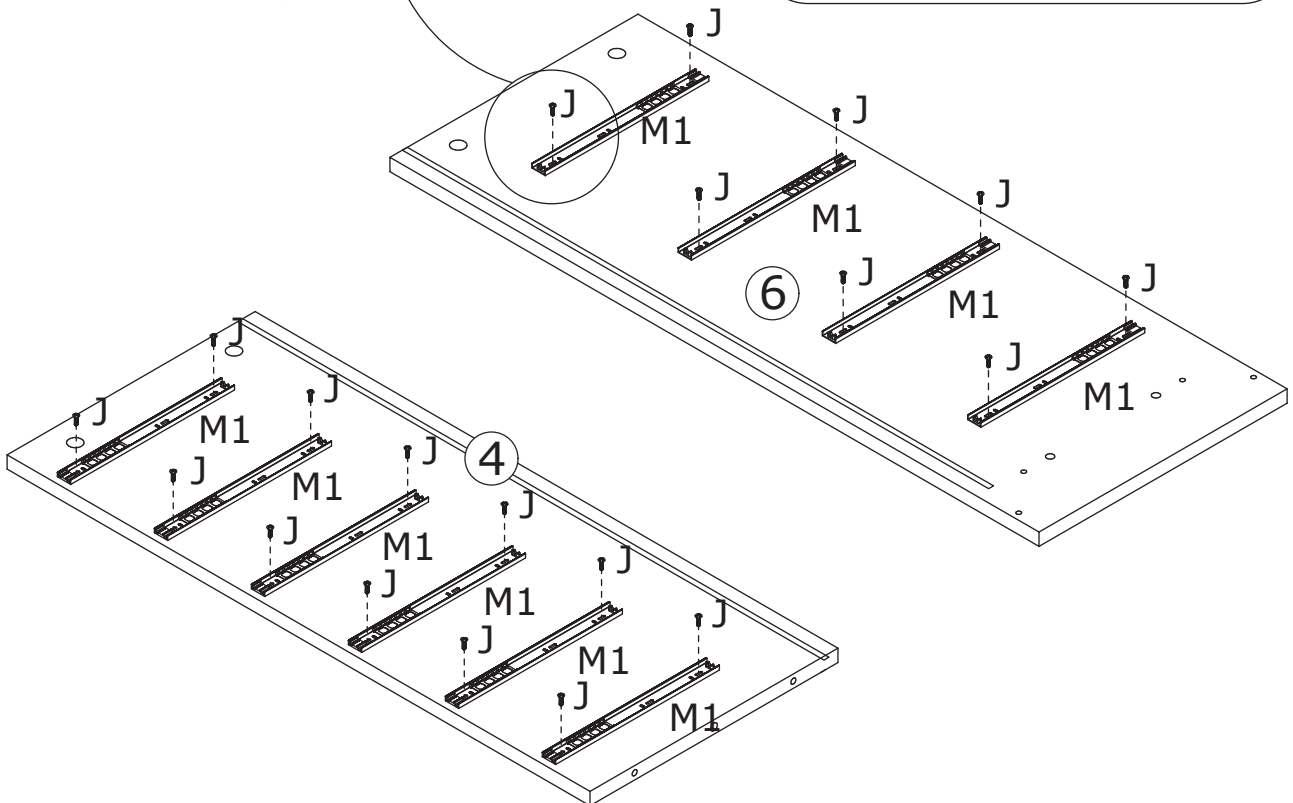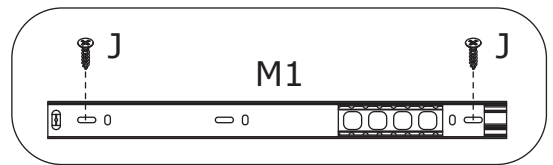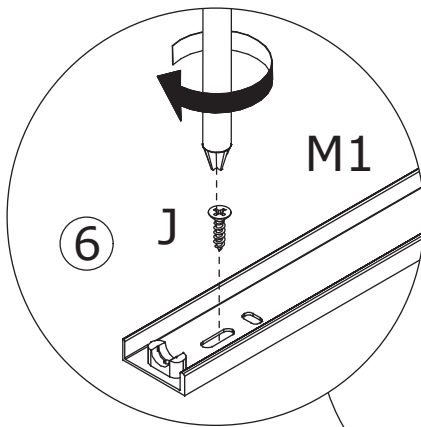

2

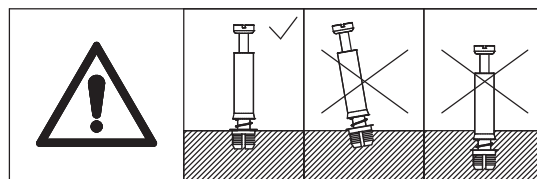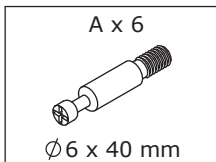   

 Screw eccentric rod (A) onto boards 4 and 6.

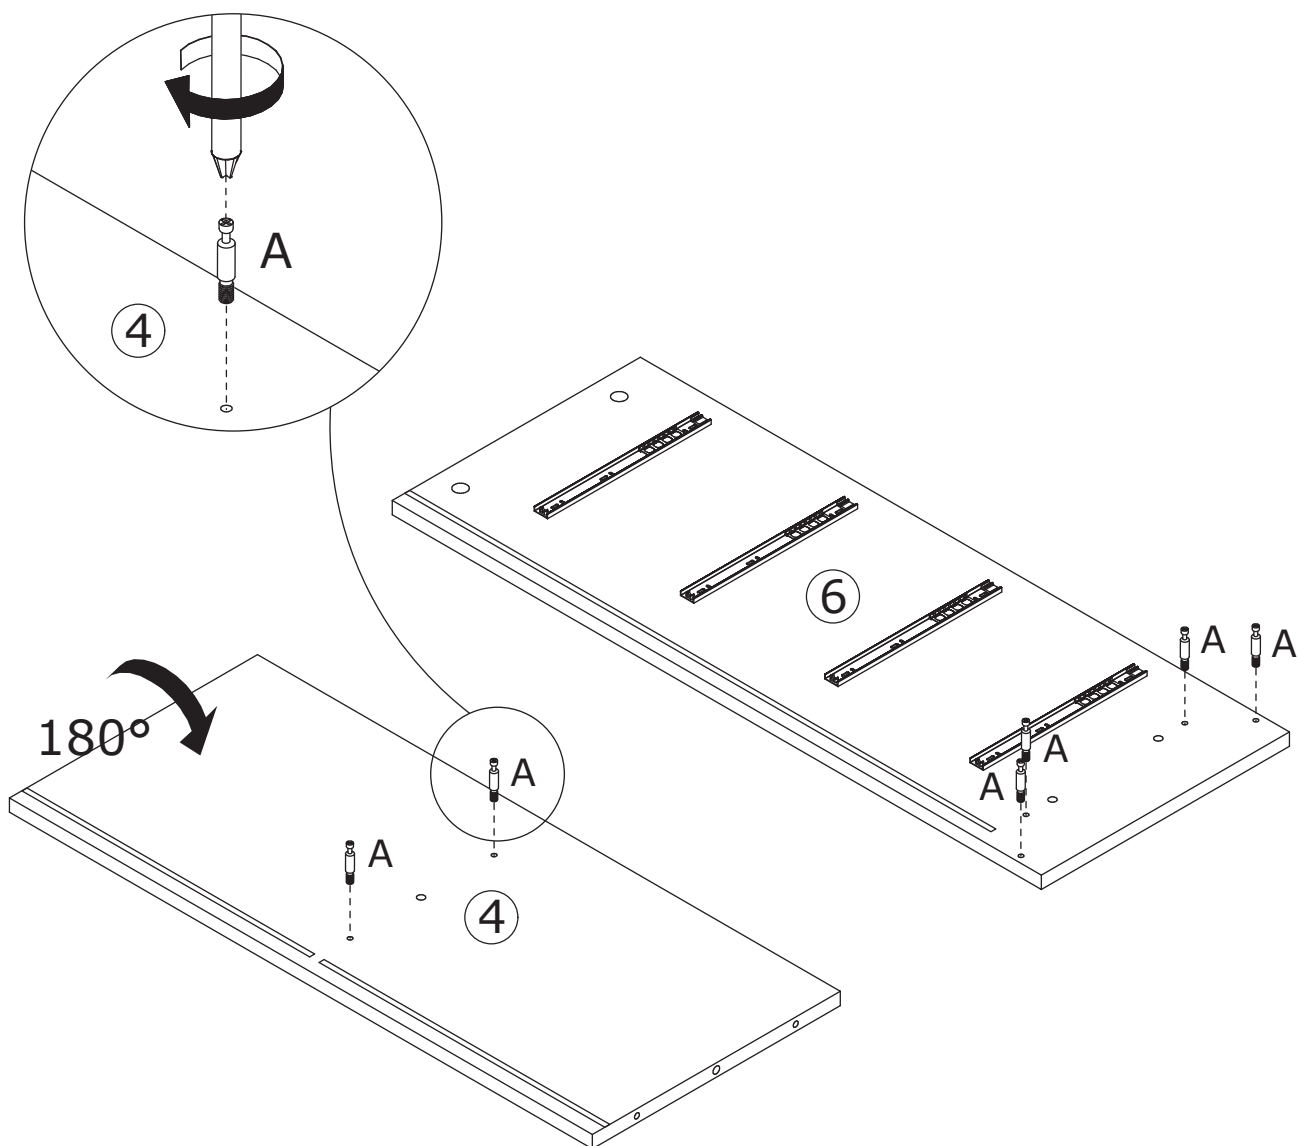

# 3

J x 20

 


Ø 3.5 x 12 mm


M x 10



M1




 Secure slide rail (M1) to **both sides of** board 5 using screw (J).  
(Note: Pay attention to the mounting hole positions of the slide rail and ensure screws are installed at the center of the holes.)




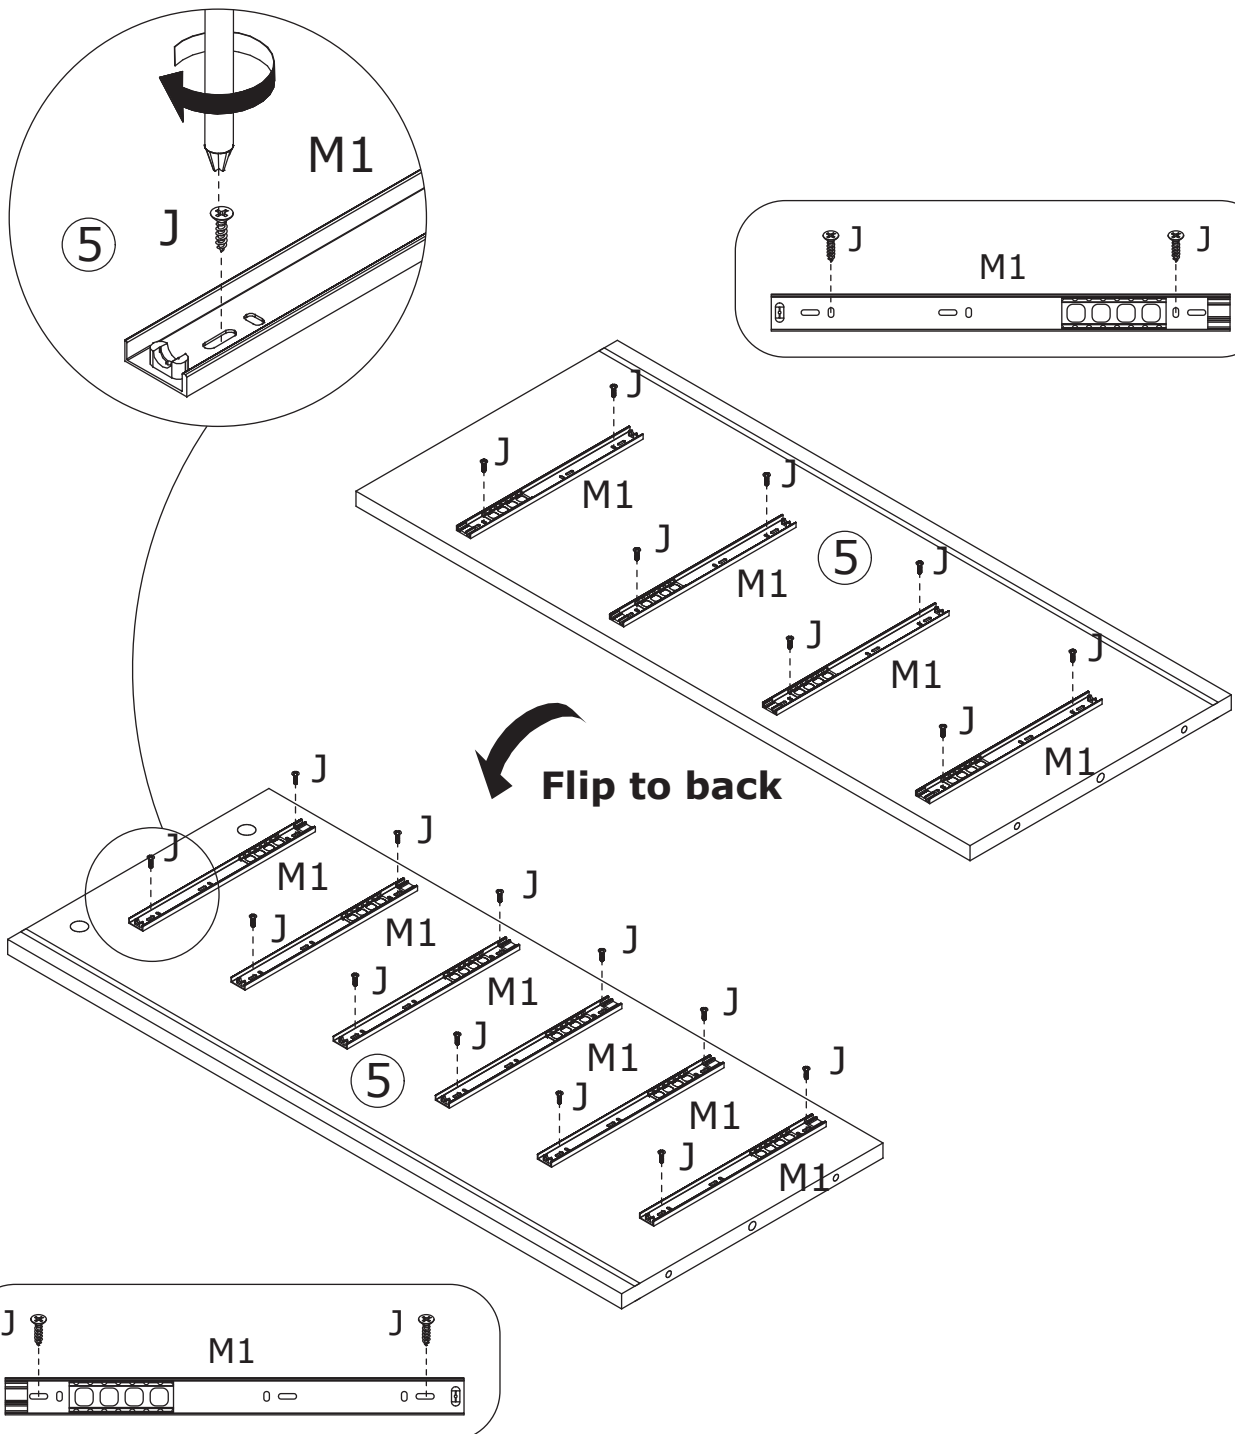


4

 
B x 6

 $\varnothing 8 \times 40 \text{ mm}$ 

    
H x 4

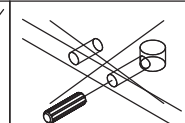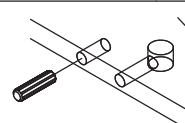 $\varnothing 7 \times 50 \text{ mm}$ 

 
Connect boards 4, 5, 8, and 9 to board 7 using dowel (B).  
Then secure boards 7, 4, and 5 using screw (H).

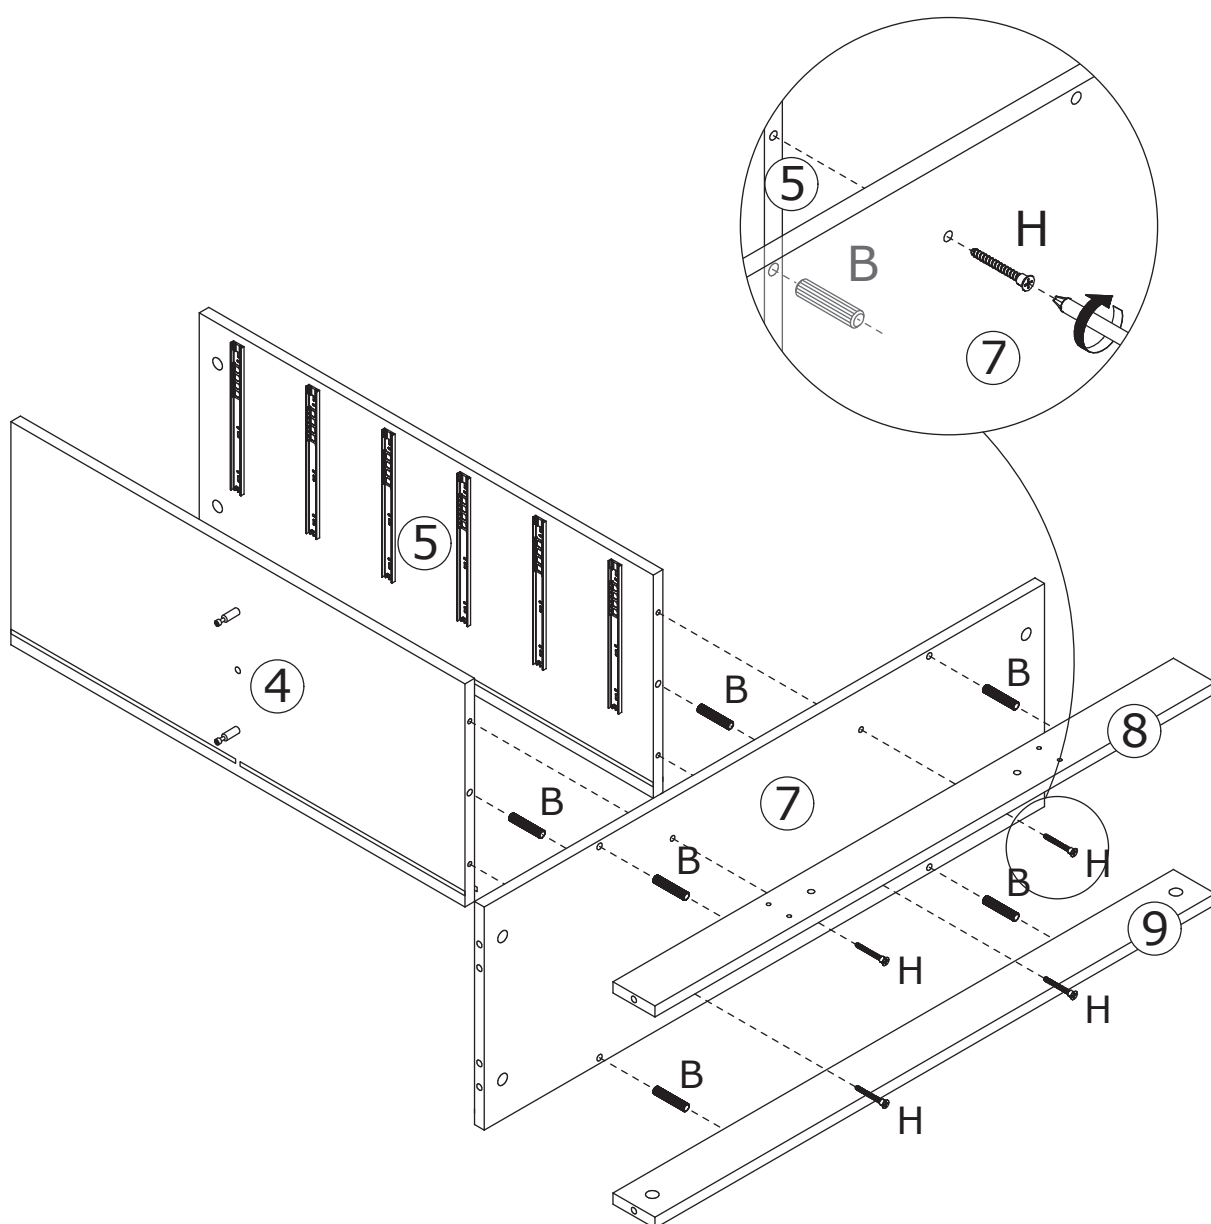

5

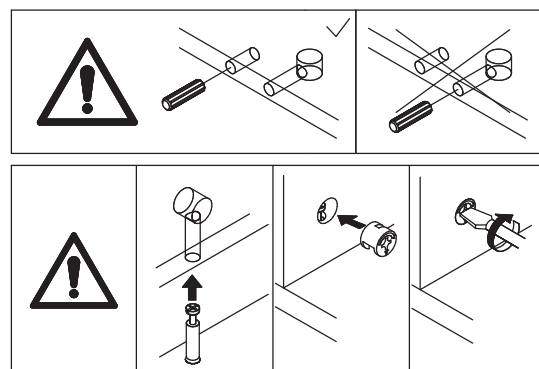 


 Connect board 22 to board 4, board 6 to boards 7, 8, and 9 using dowel (B), then tighten by turning eccentric cam (Q) clockwise.

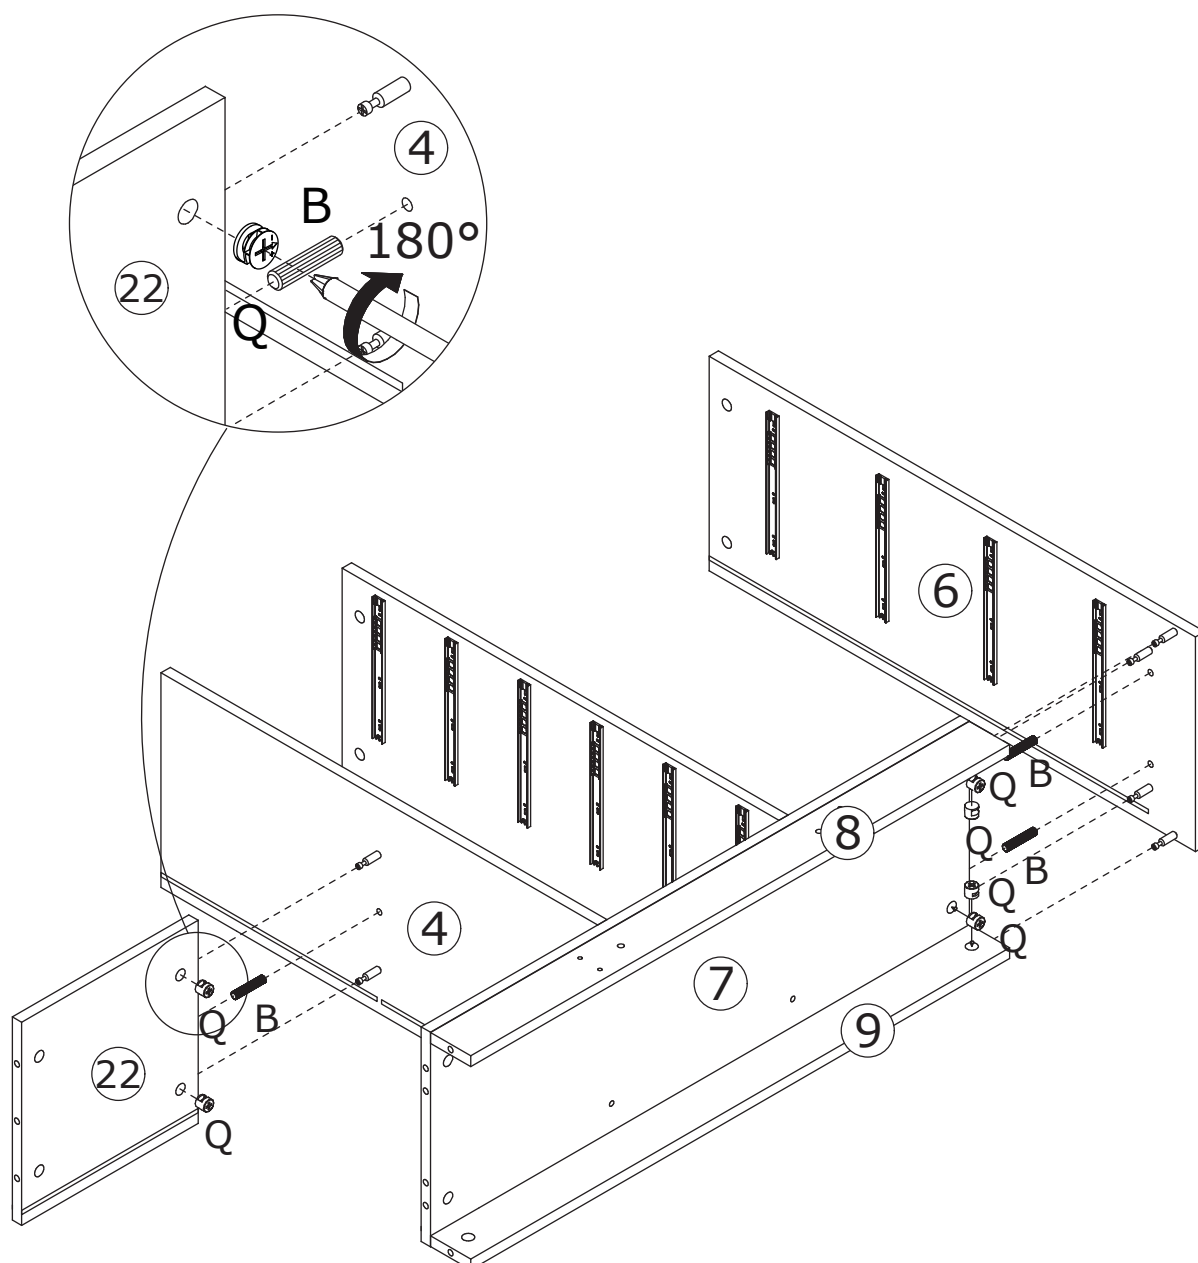




6

 Insert board 24 into the  
available slots.

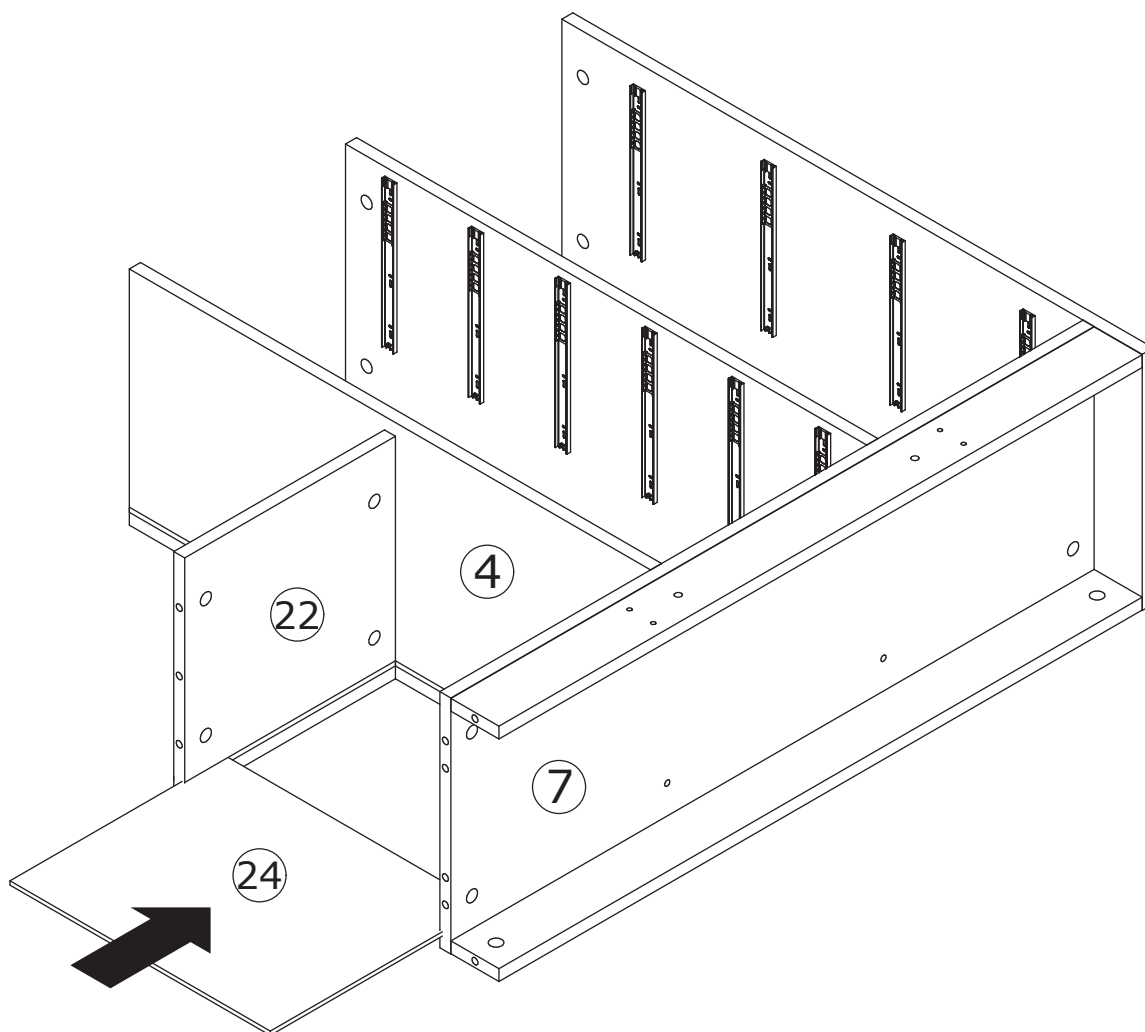


7




 
A x 6  
  
 Ø6 x 40 mm

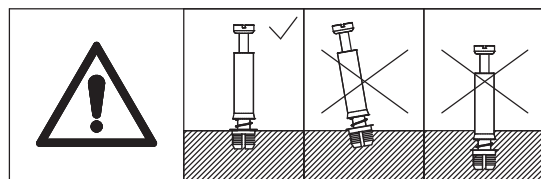  


Screw eccentric rod (A) onto board 3.

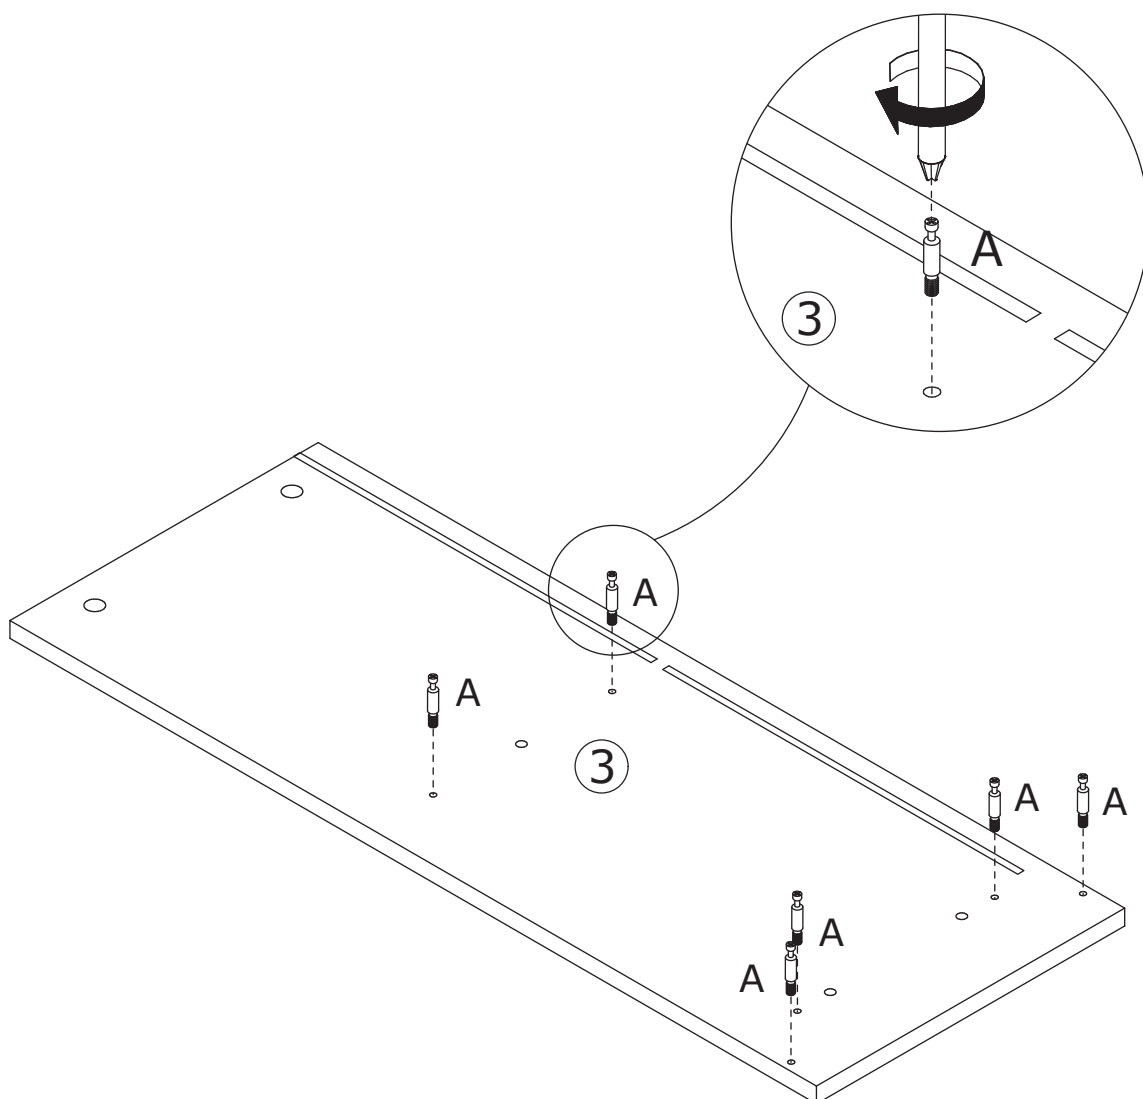 

8

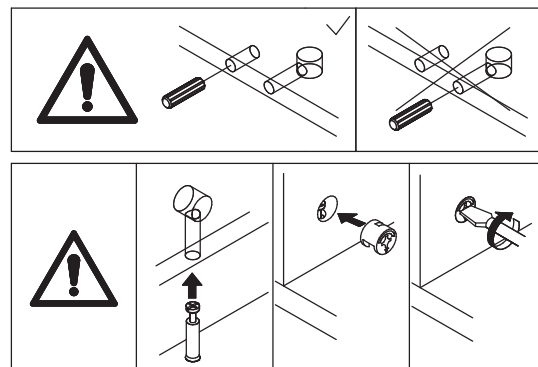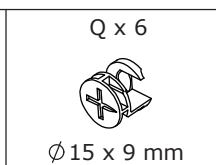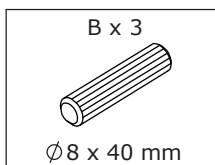    


 Connect board 3 to boards 7, 8, 9, and 22 using dowel (B), then tighten by turning eccentric cam (Q) clockwise.

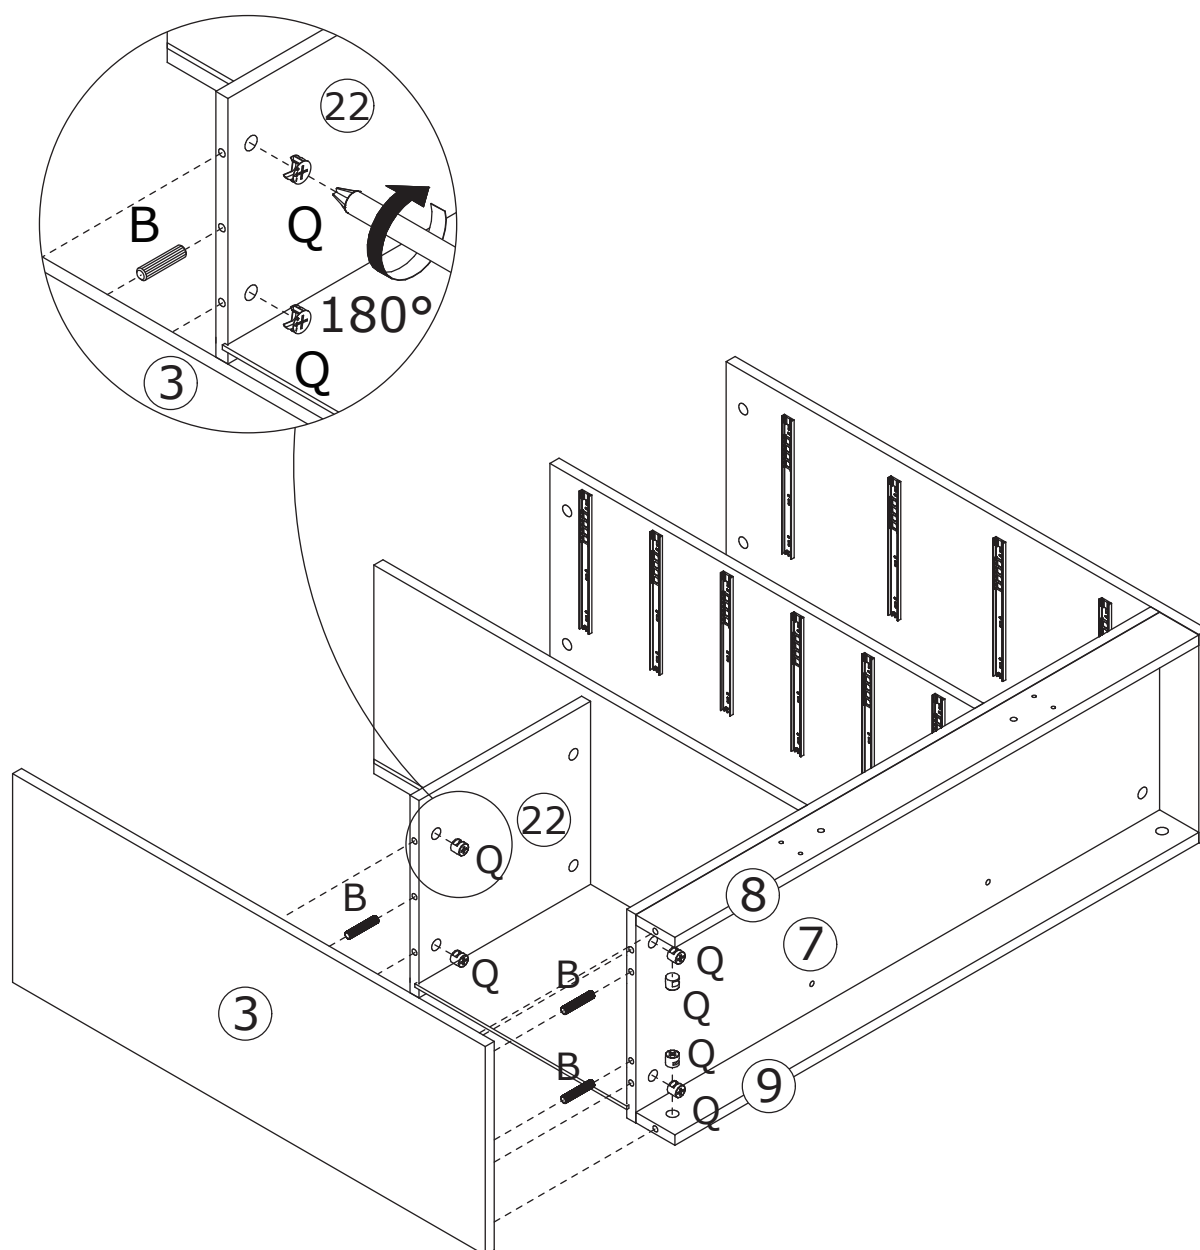


9

 
Insert boards 23, 25, and 26 into the available slots.

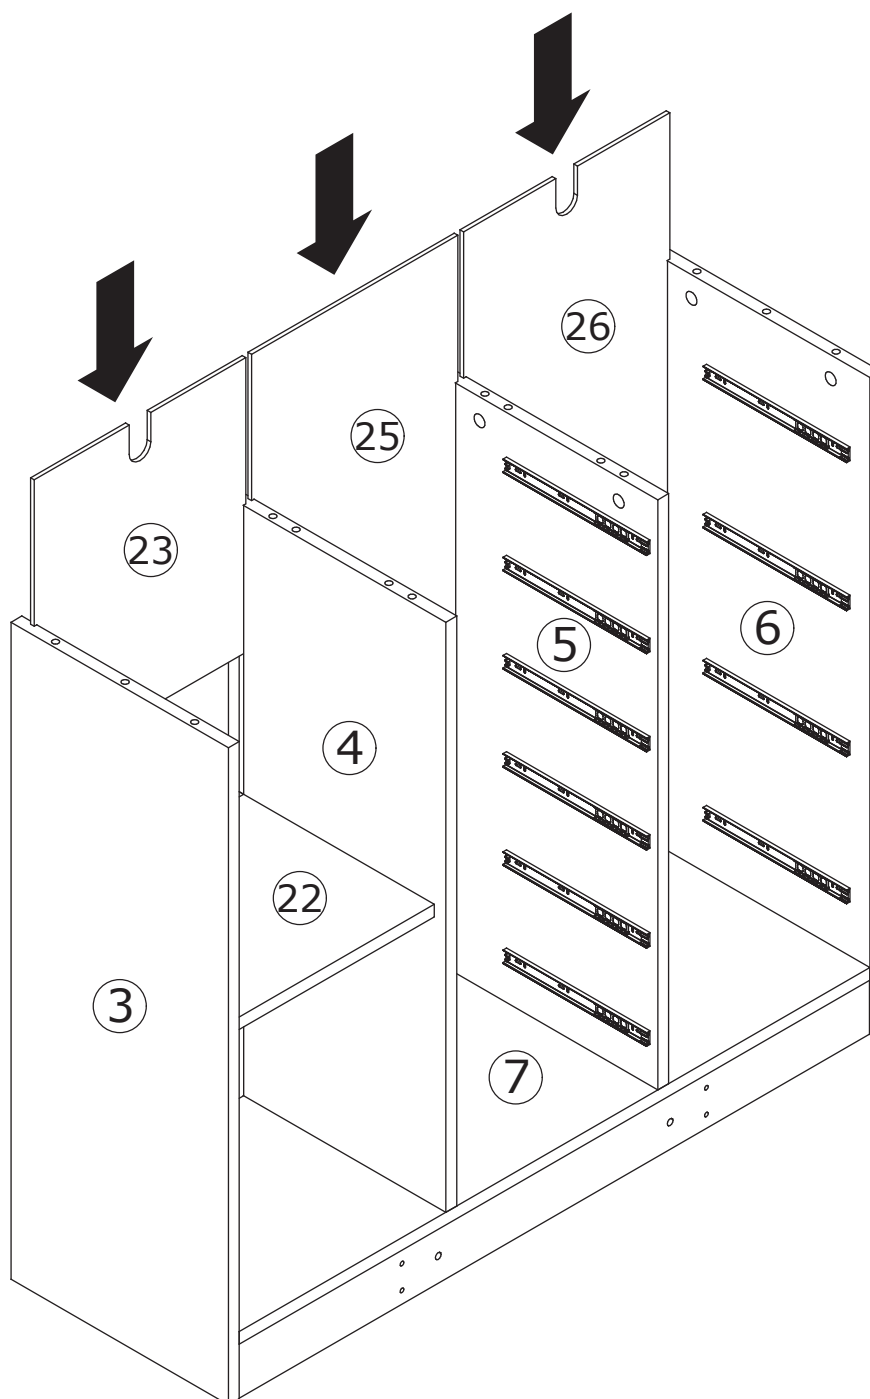

10

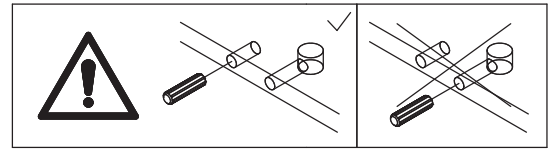 

 
Connect boards 8 and 21 using dowel (C), then secure them with screw (I).

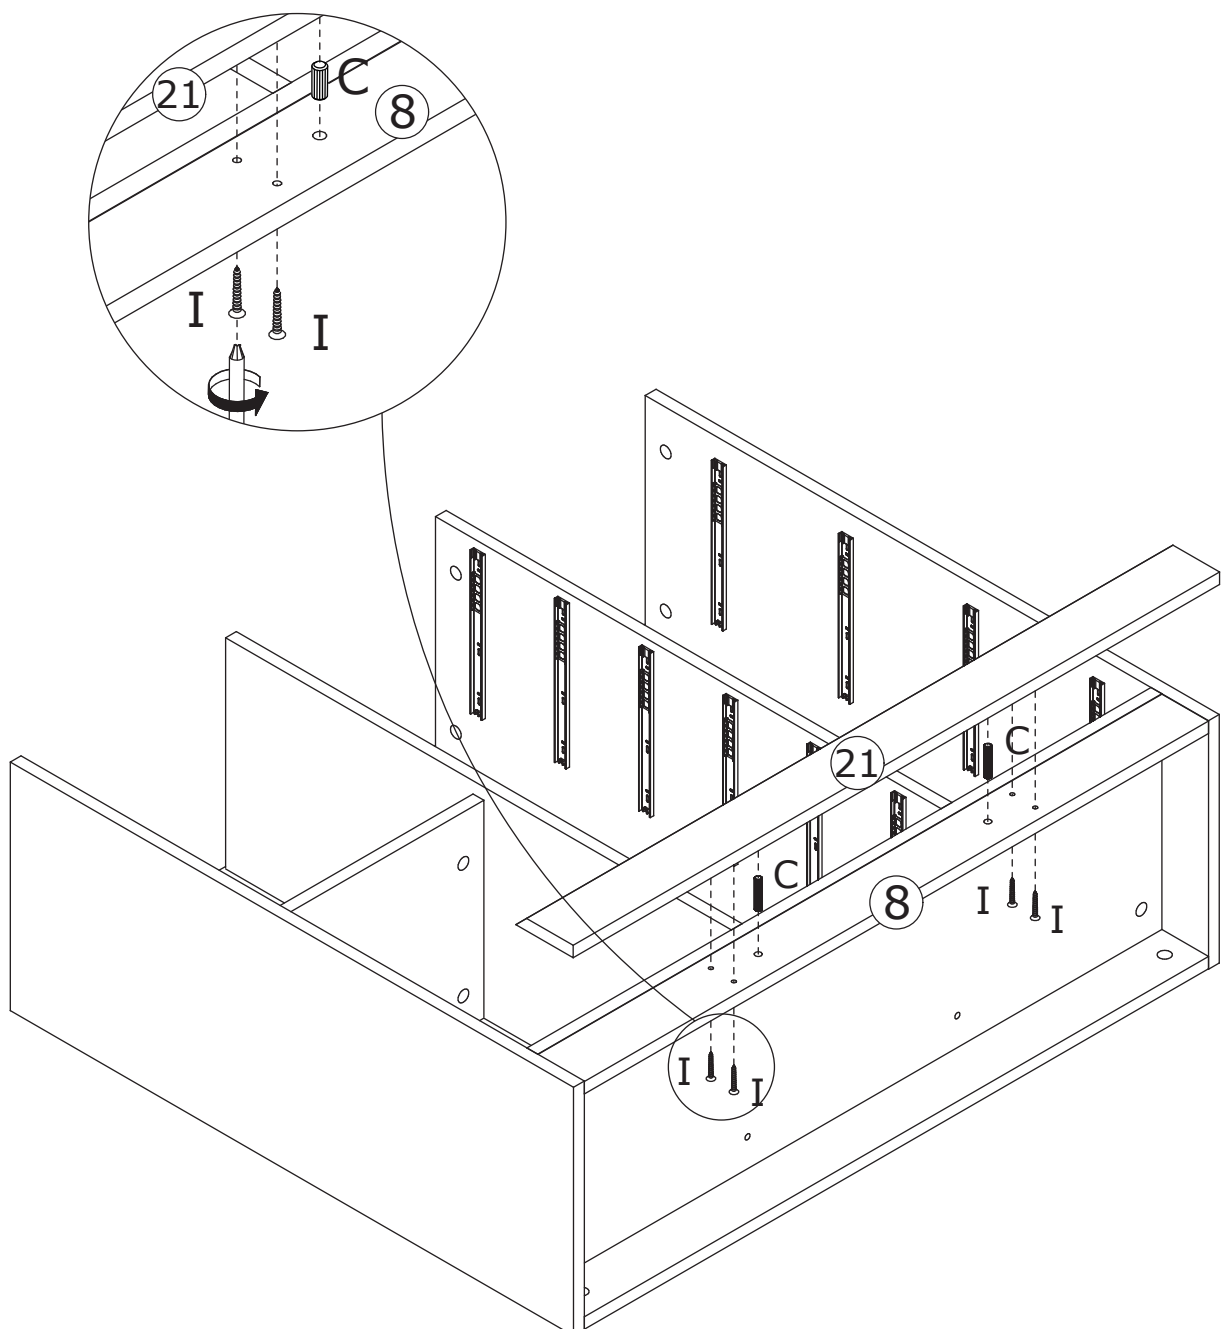



# 11

A x 10  
Ø6 x 40 mm



 
R x 2



  
Secure bracket (R) to board 2.  
Screw eccentric rod (A) onto **both sides** of board 2.

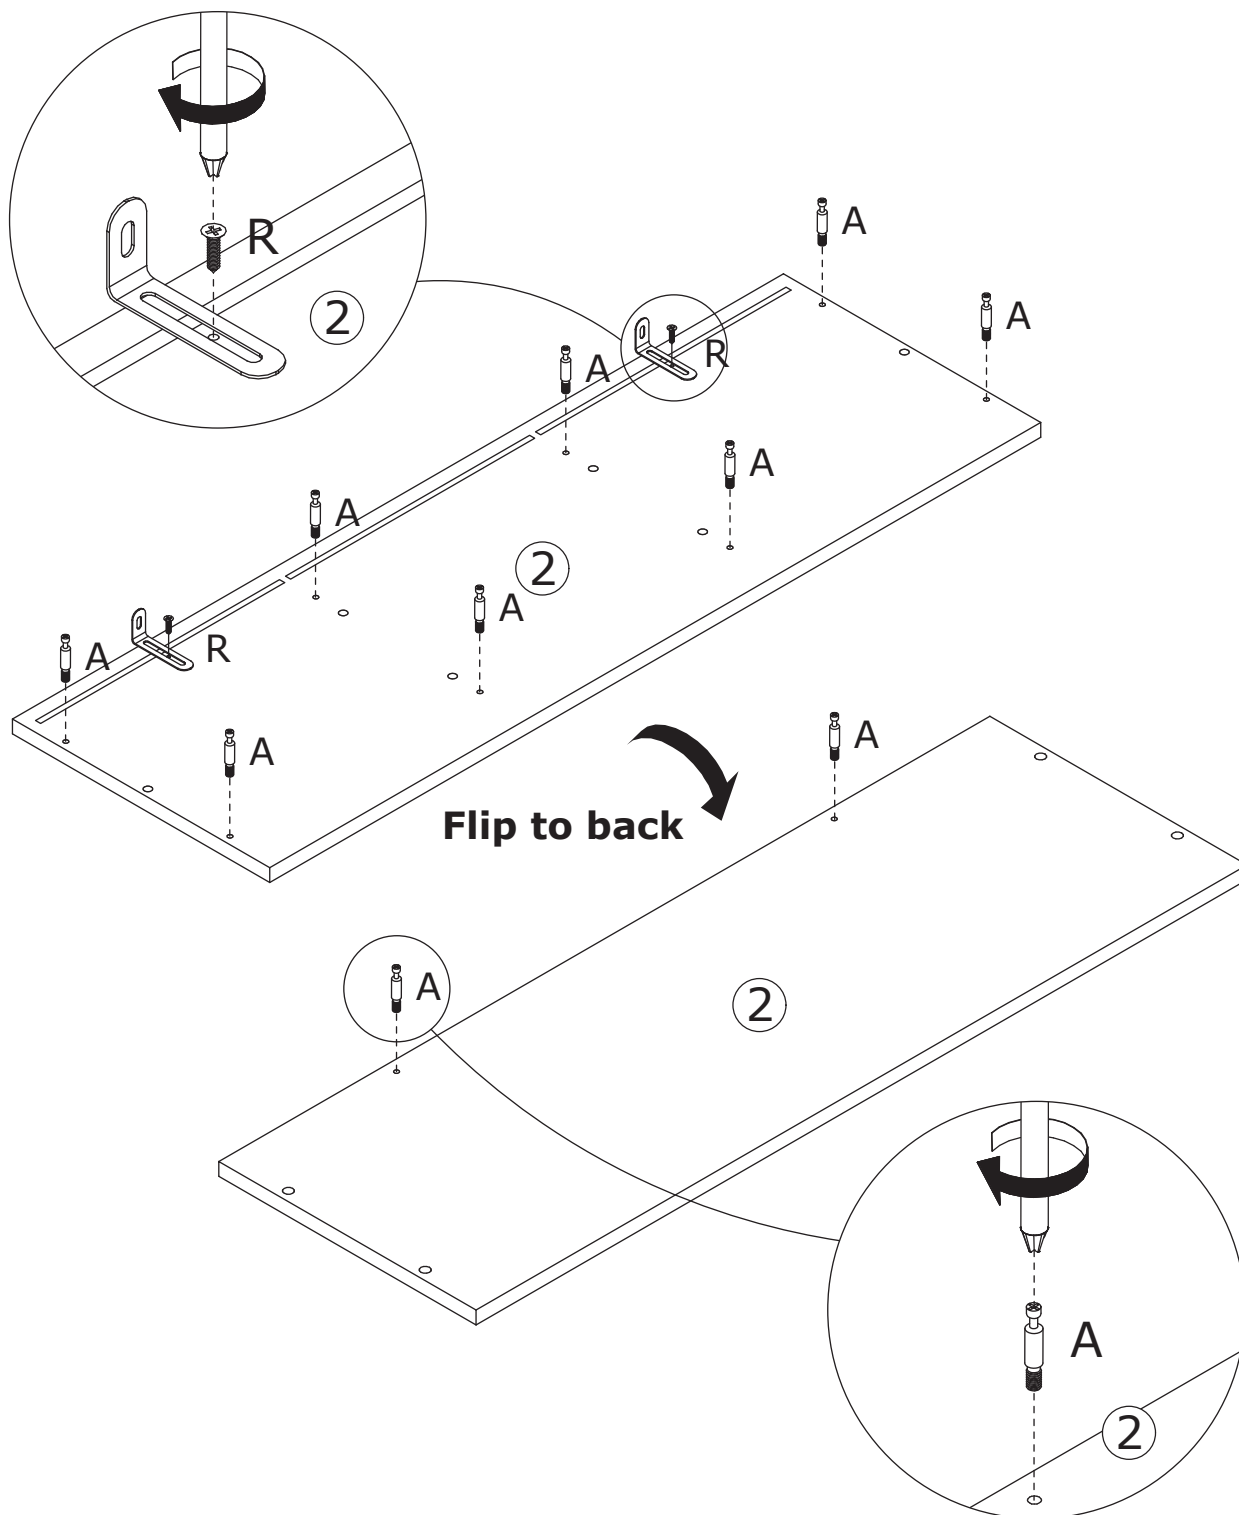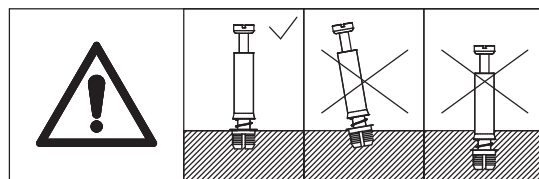

# 12

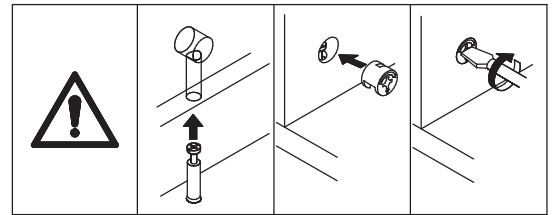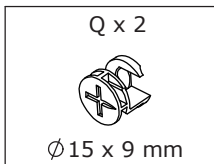   

 Connect board 2 to board 31, then tighten by turning eccentric cam (Q) clockwise.




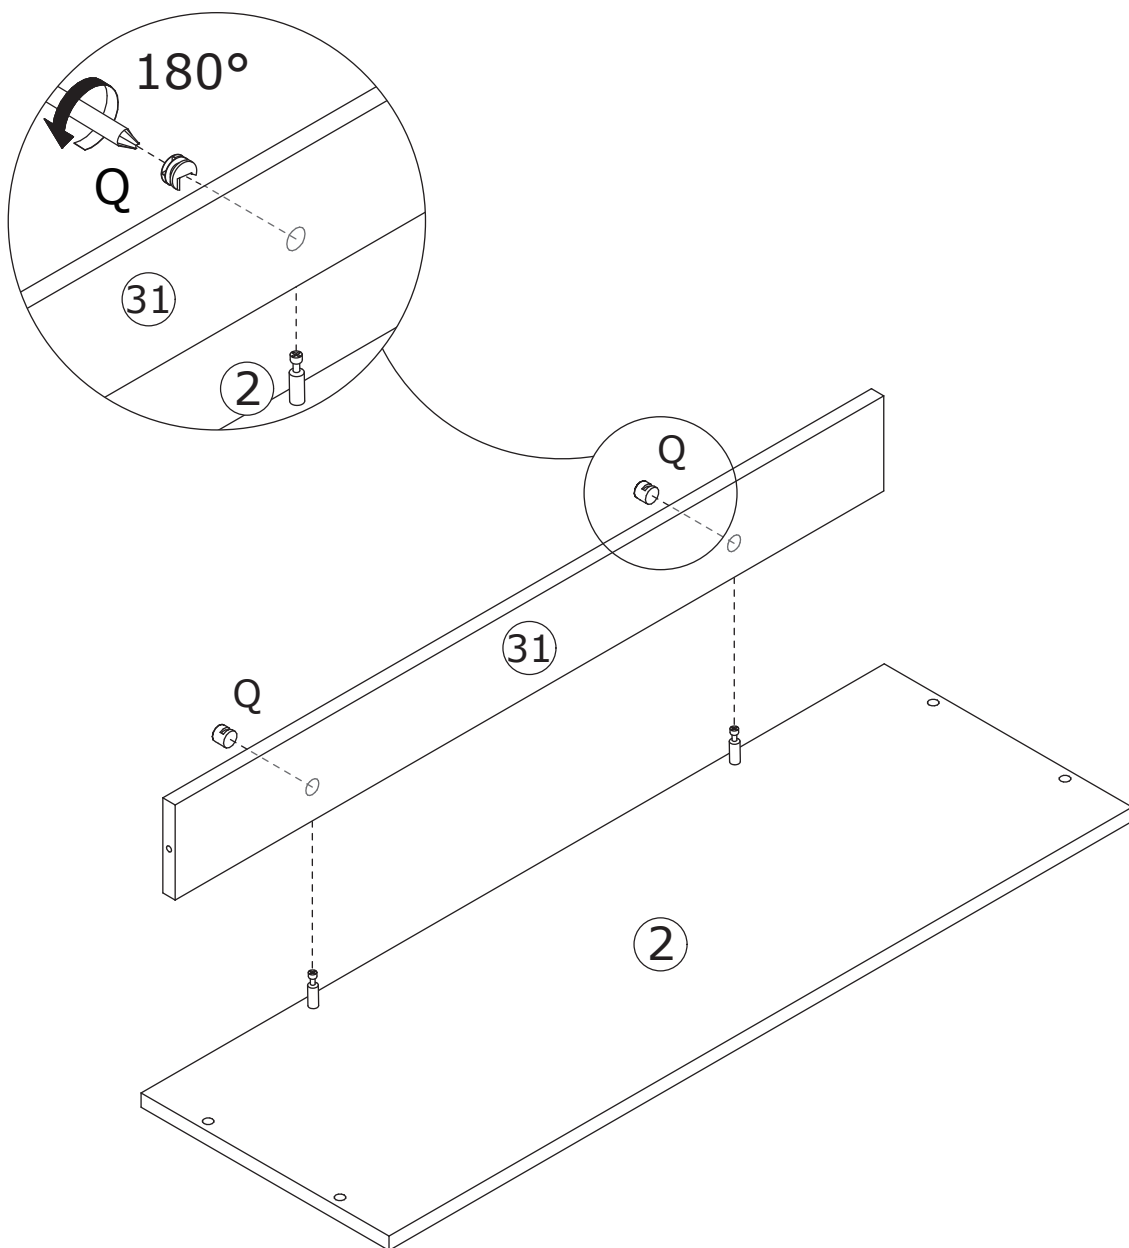


# 13


A x 4



    Q x 4

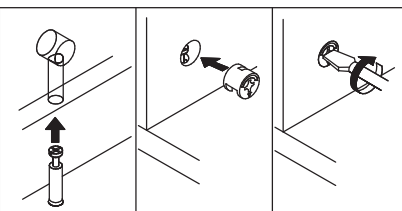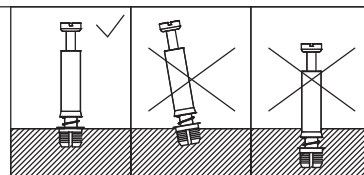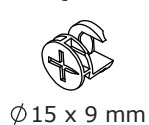

 Screw eccentric rod (A) onto board 30, then connect board 29 to board 30, then tighten by turning eccentric cam (Q) clockwise.

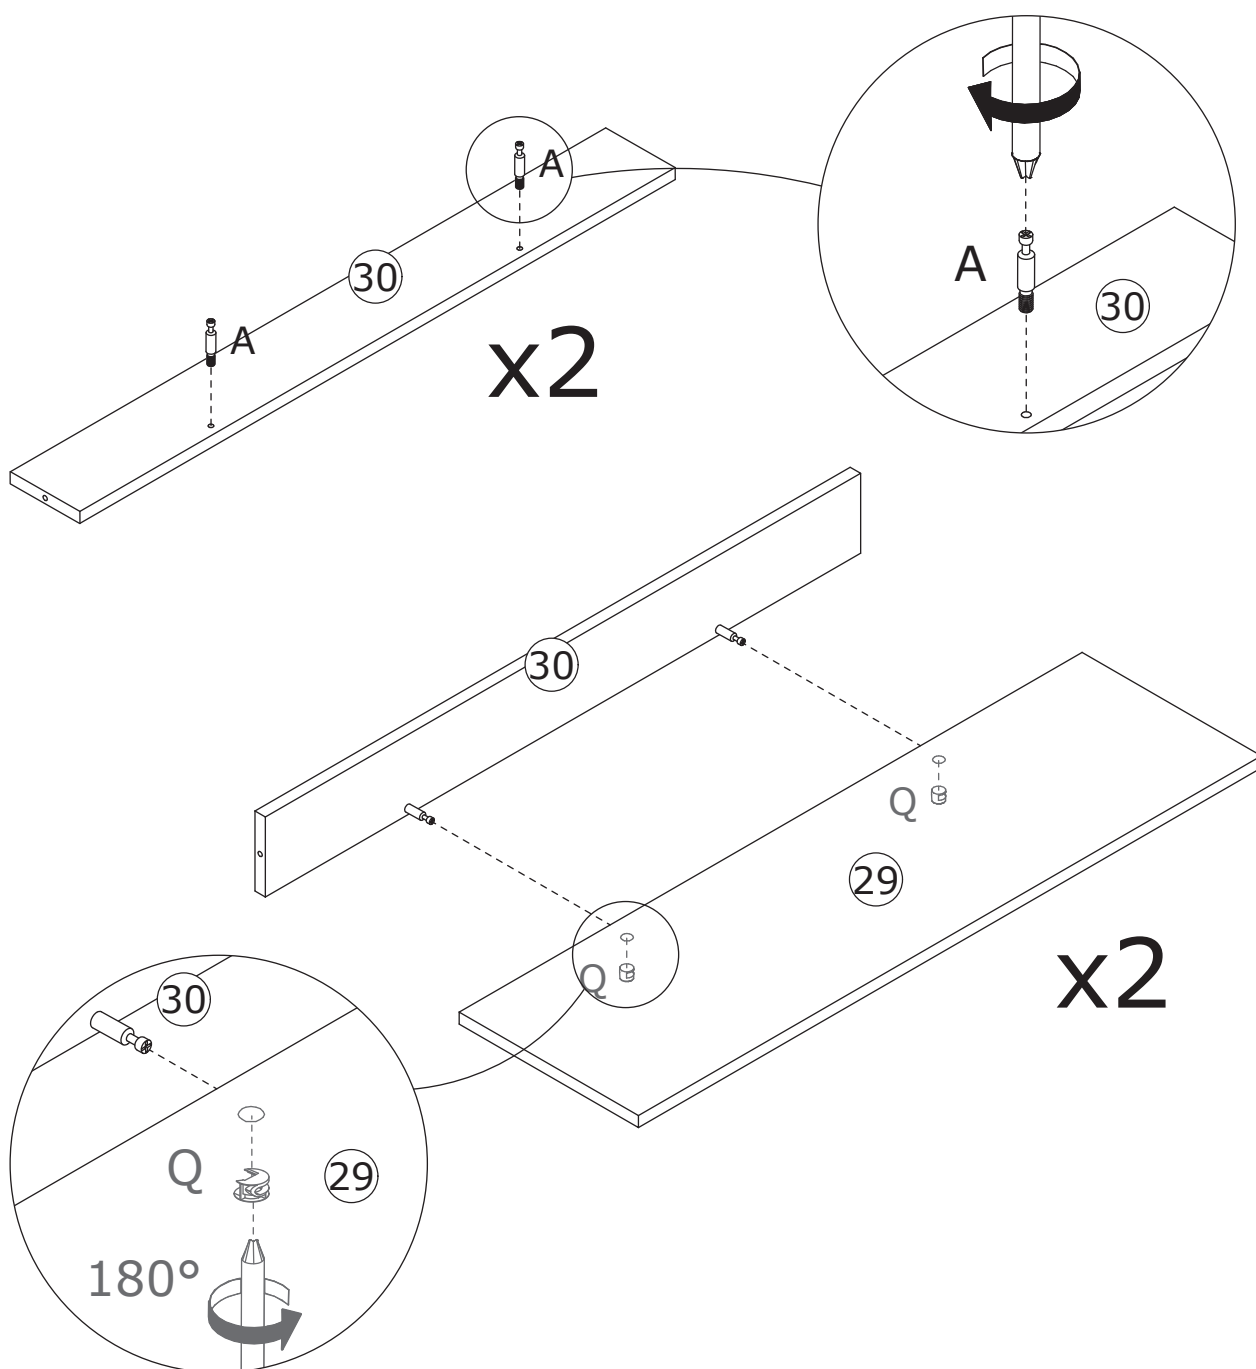


# 14


L x 4



 Ø6 x 35 mm



 Secure iron pipe 28 to iron frame 27 using screw (L).

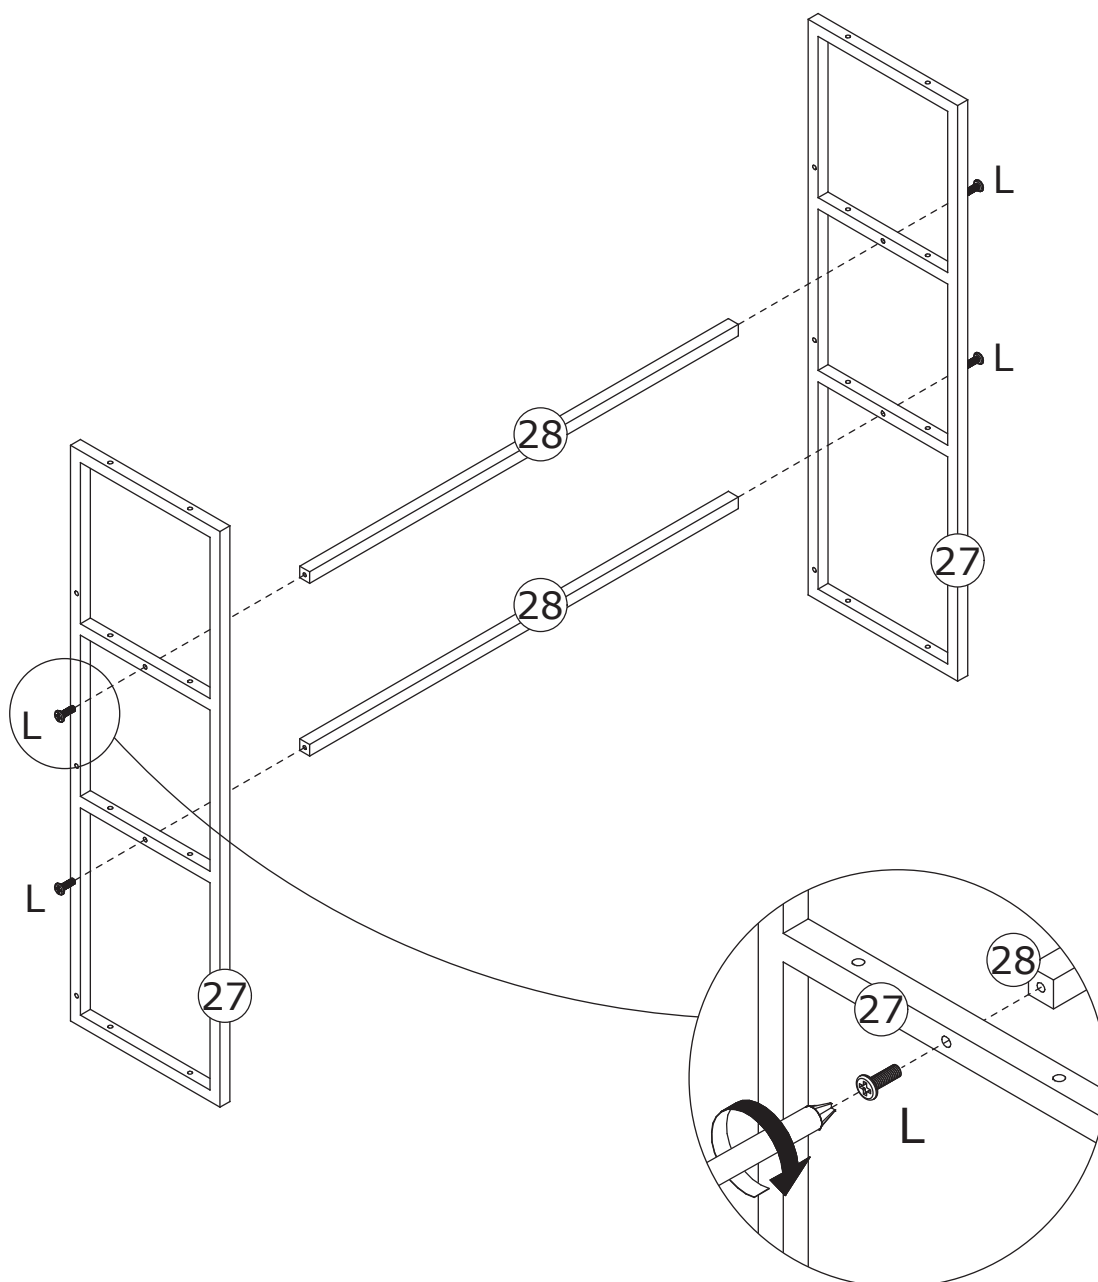


# 15

L x 16




Ø6 x 35 mm

 U x 6



Ø6 x 50 mm

 
V x 6






Secure boards 1, 2, and 29 to iron frame 27 using screw (L).

Insert nut (V) into the holes of boards 30 and 31, then secure the iron frame 27 to boards 30 and 31 using screw (U).

 STEP1

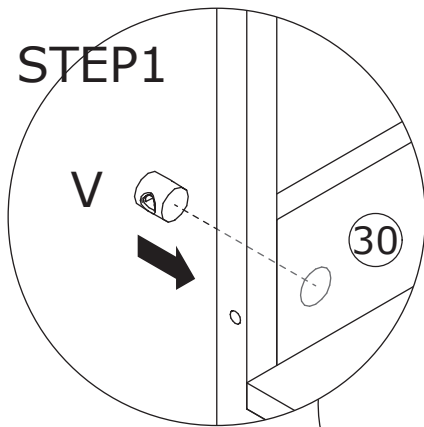


   STEP2

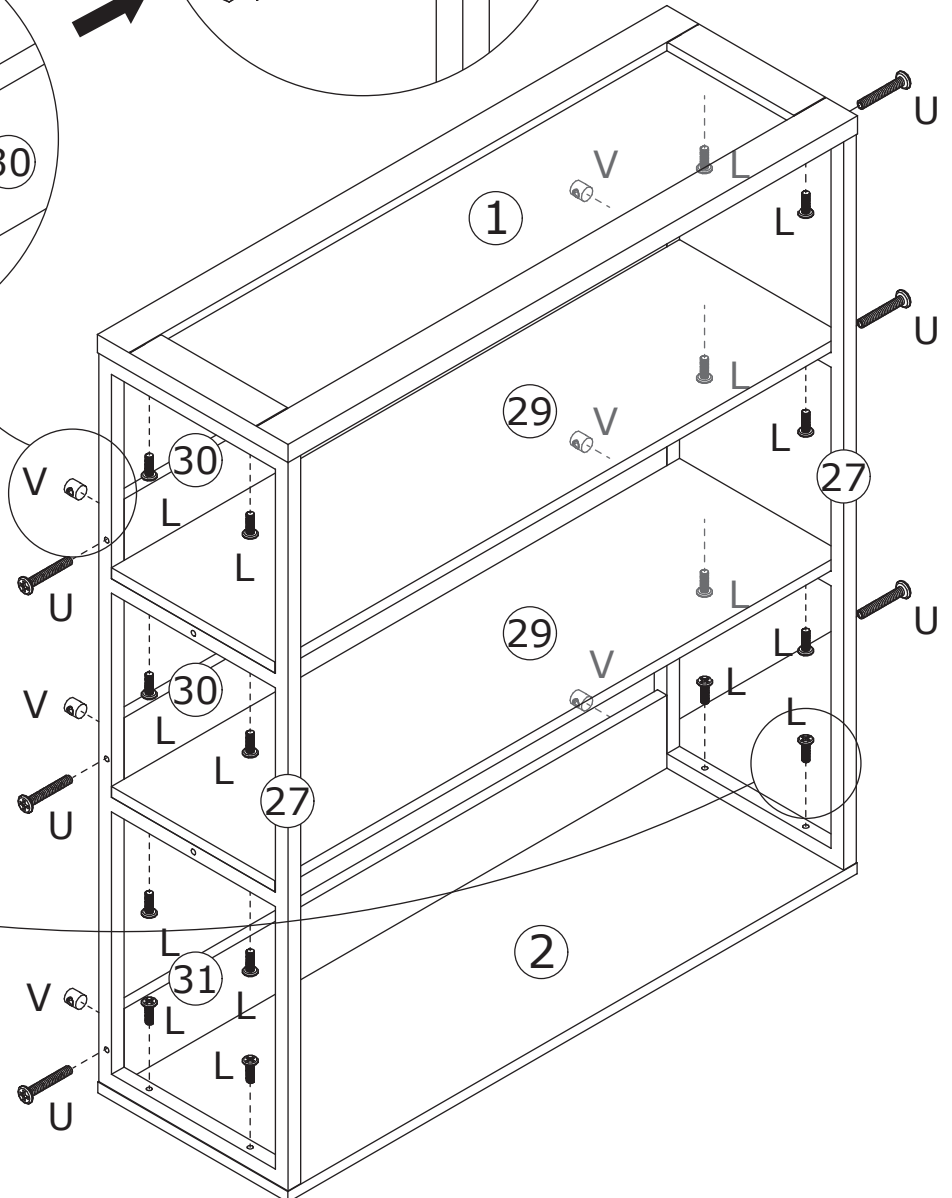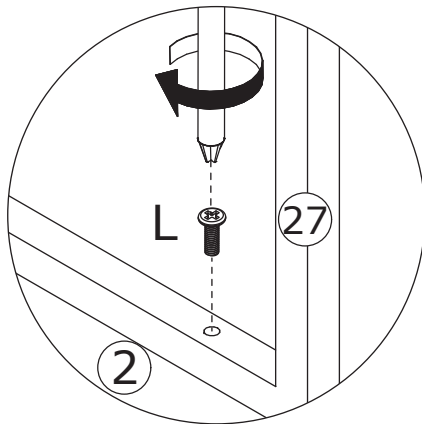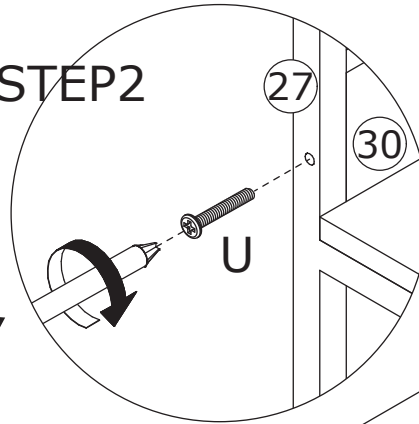

# 16

 B x 6




Ø8 x 40 mm








Q x 8



 Ø15 x 9 mm




       Connect board 2 to boards 3, 4, 5, and 6 using dowel (B), then tighten by turning eccentric cam (Q) clockwise.

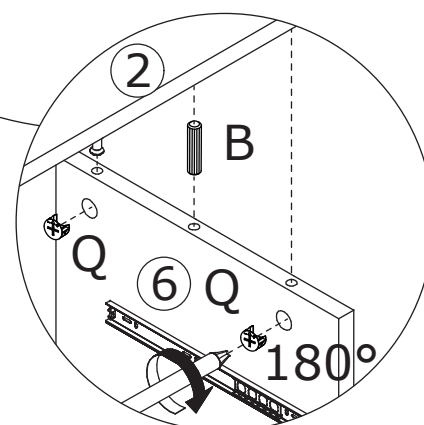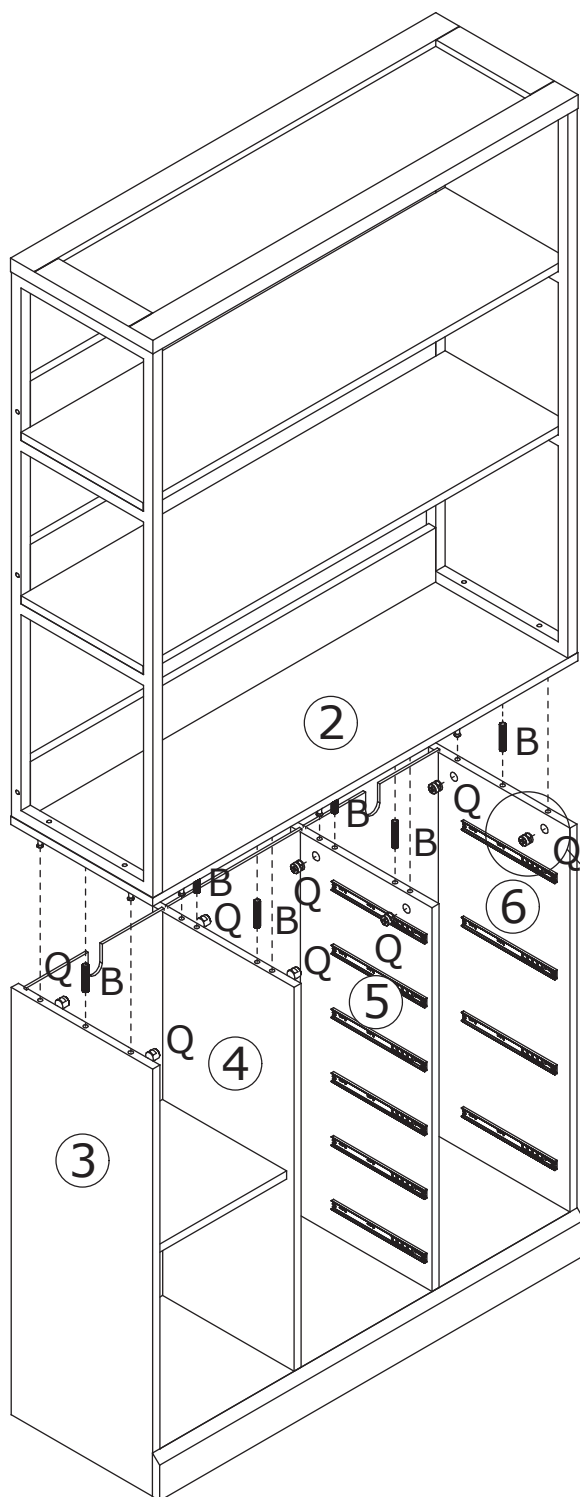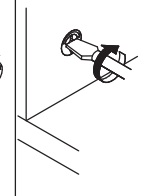




# 17



 
T x 18



  
 
Insert back panel clip (T) into slots and tighten using screws.

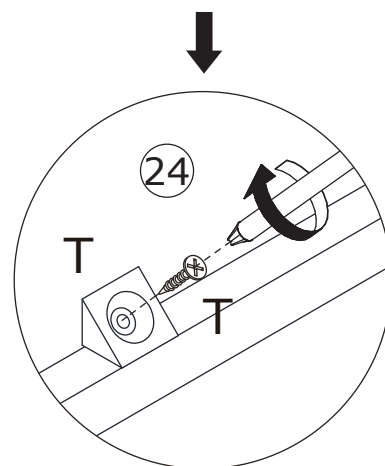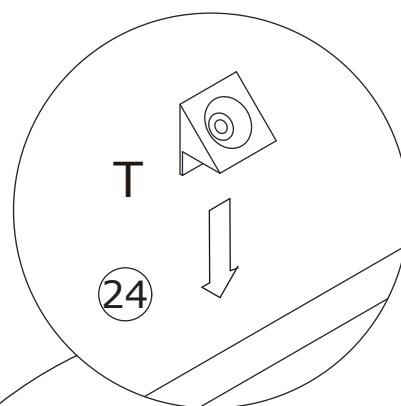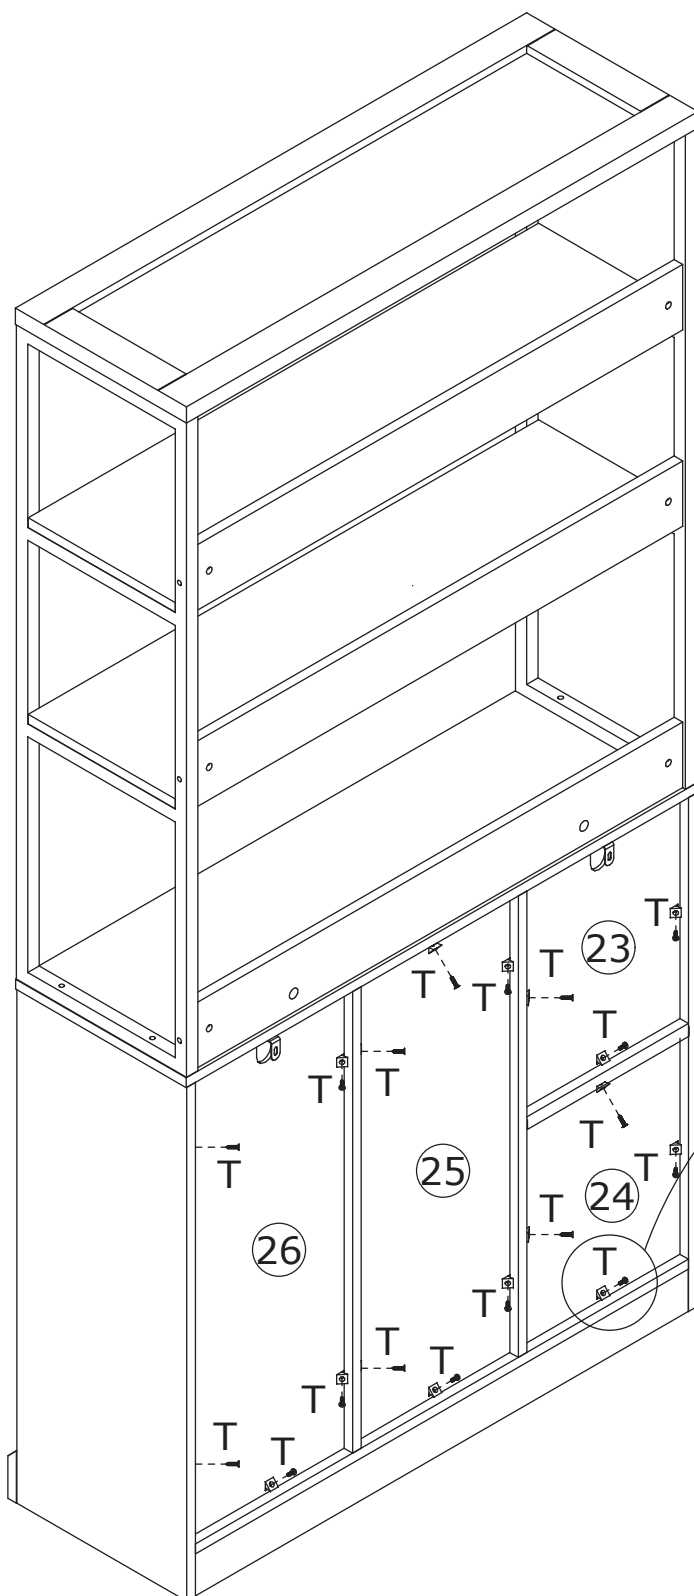

18

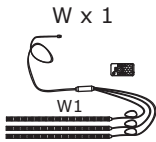   


  Remove the protective film from LED strip (W) and attach it under boards 1 and 29, then secure LED strip using buckle (X) as shown.

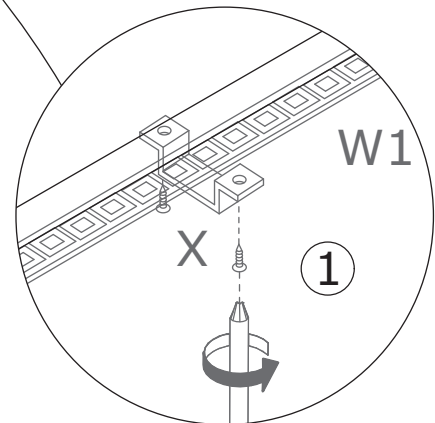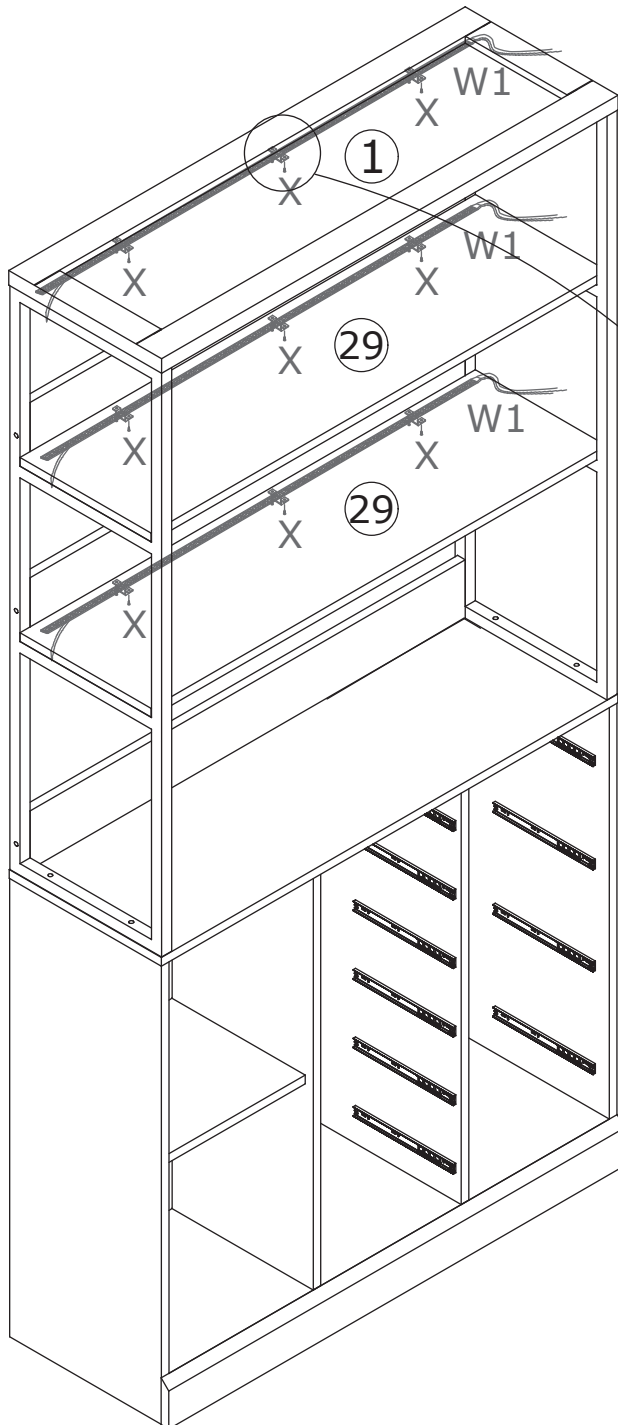


# 19

 R x 2

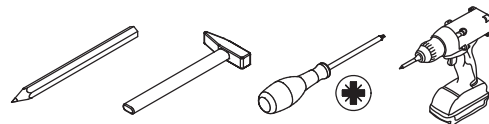


If wall mounting is required, install the anti-tipping device (R) as shown.

 
WALL

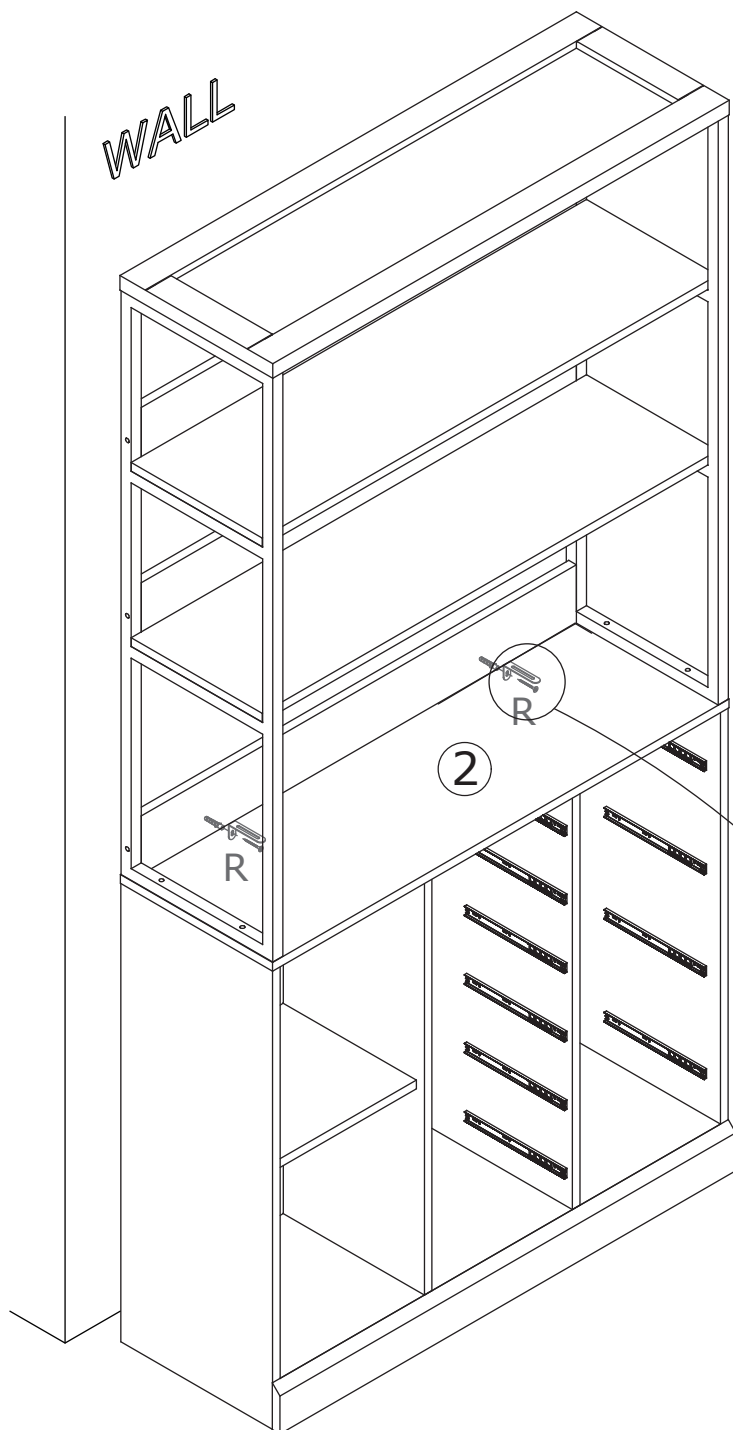

 
1.

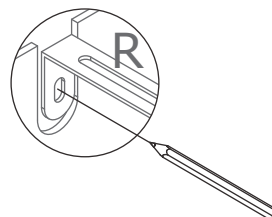


 
2.

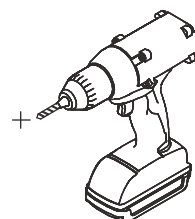


 
3.

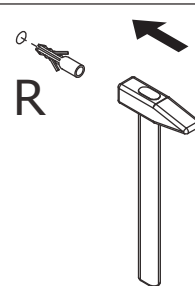

  
4.

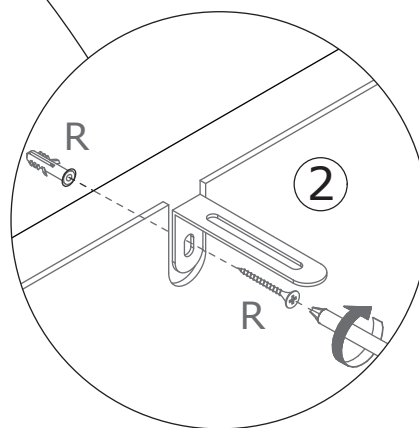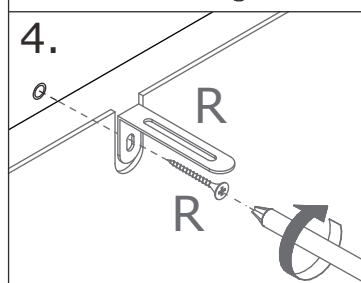

# 20
  
|                                                                                                |                                                                                                |                                                                                                                     |                                                                                                                    |                                                                                     |
|------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| <p>D x 4</p>  | <p>G x 2</p>  | <p>J x 8</p> <p>Ø 3.5 x 12 mm</p>  | <p>P x 2</p> <p>Ø 4 x 18 mm</p>  |  |
|------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|

 Secure hinge (D) to board 20 using screw (J),  
and secure knob (G) using screw (P).

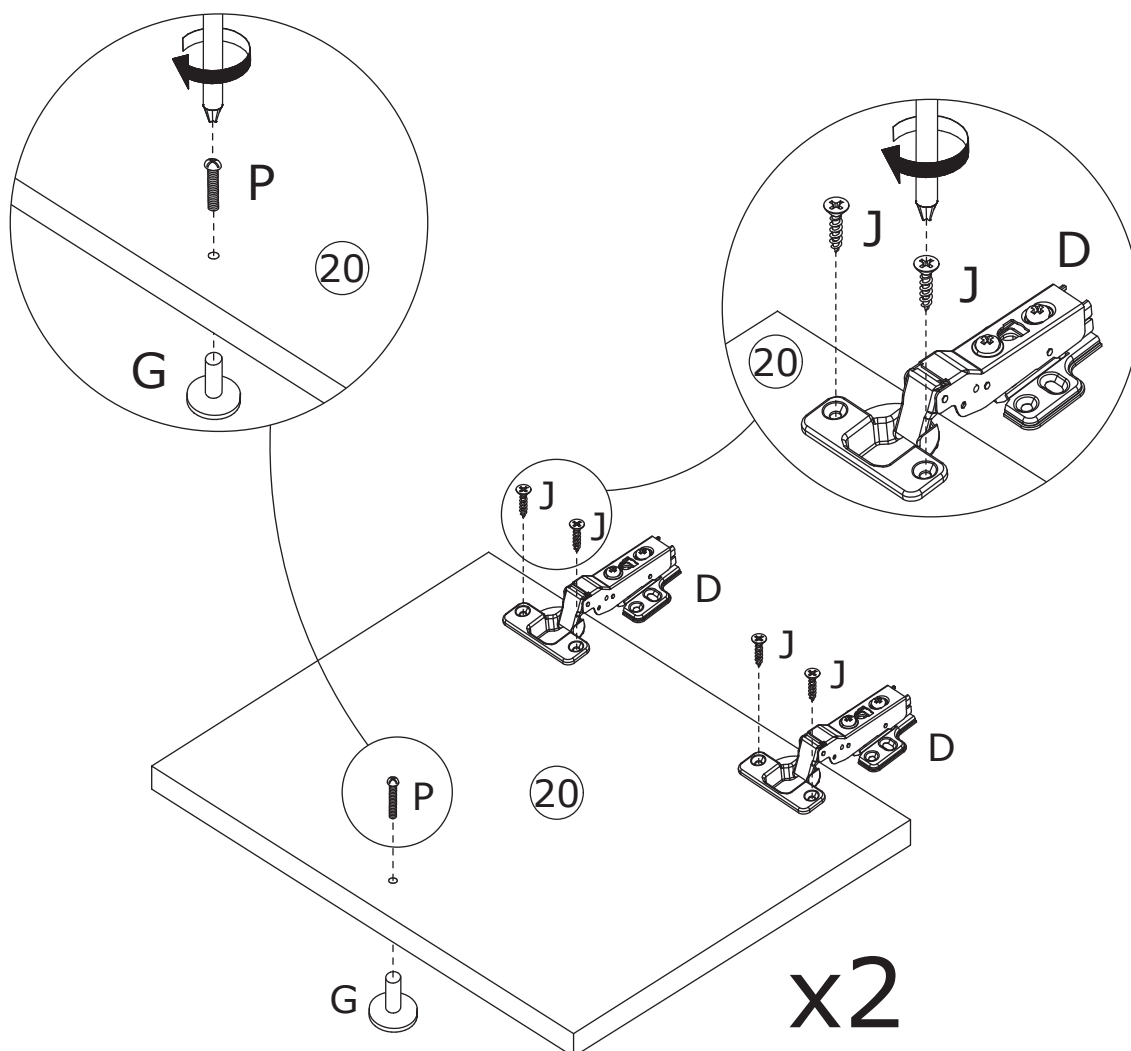


21


J x 16




 
Ø 3.5 x 12 mm



 
Secure board 20 to board 3 using screw (J).

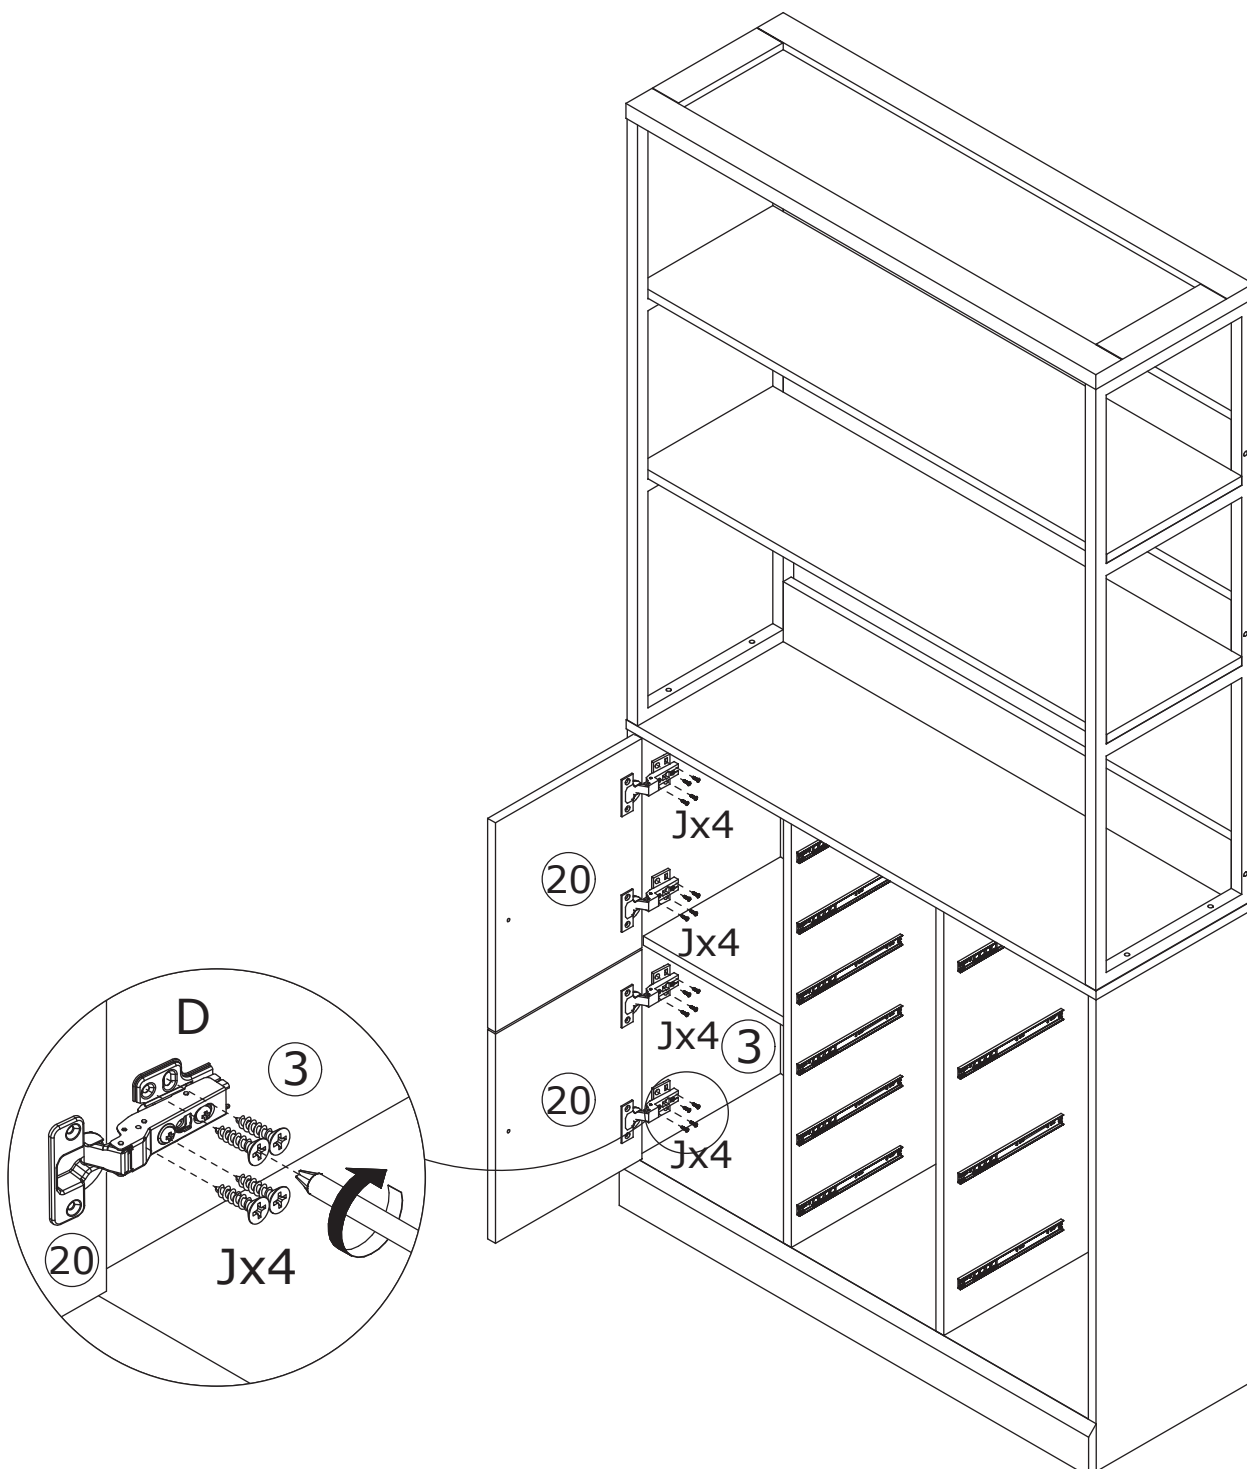

# 22

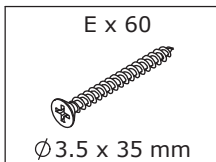  


 Secure board 14 to board 15 using screw (E),  
 then secure boards 12 and 13 to boards 14  
 and 15 using screw (E).

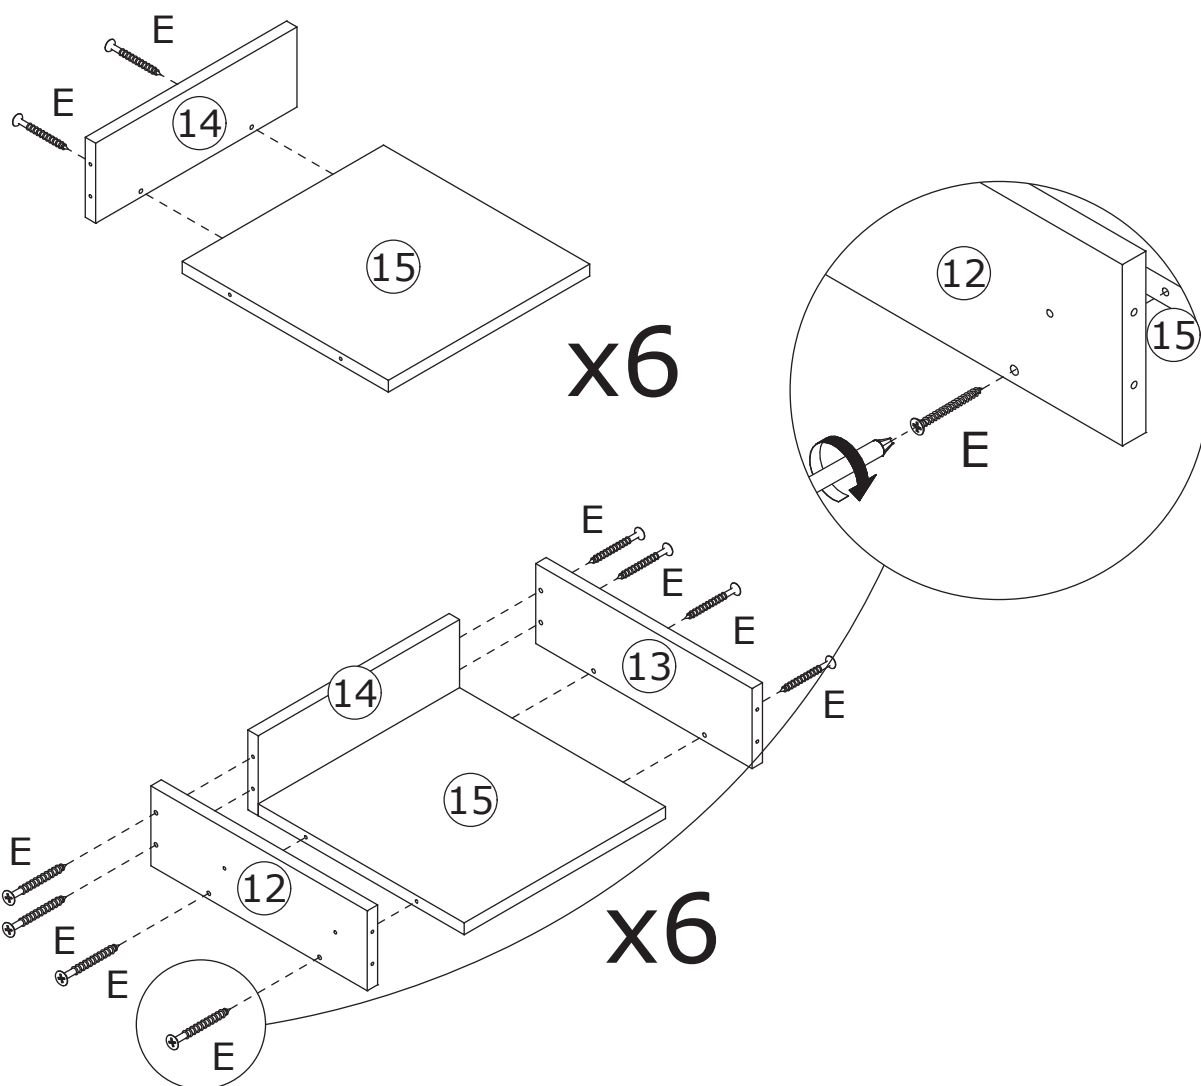


# 23

 
F x 24







 
Remove the protective film from both sides of acrylic board 10, then secure acrylic board 10 to boards 12 and 13 using hardware (F).

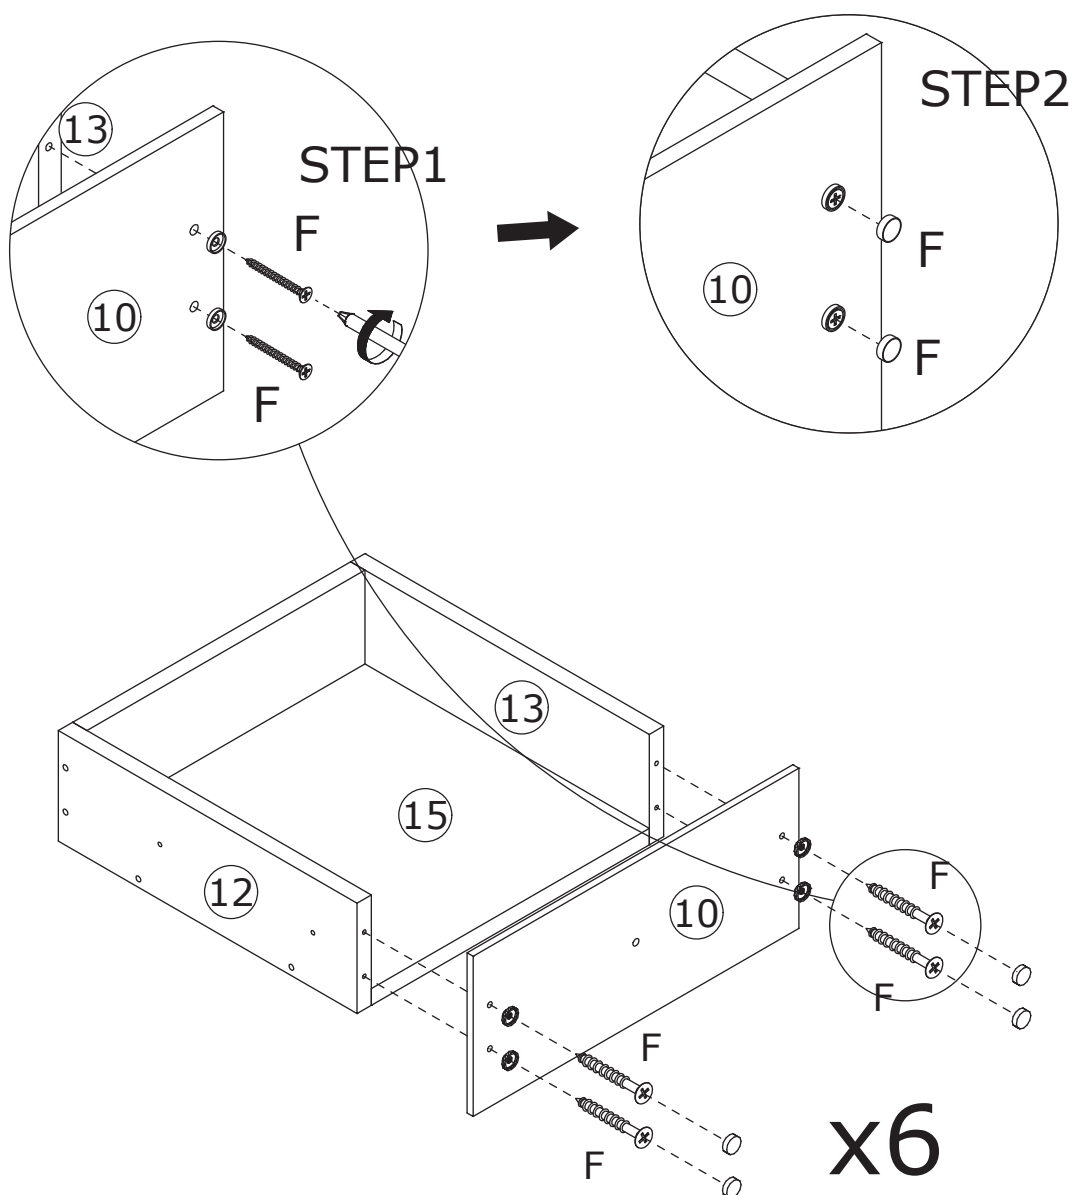

# 24

 
|                                                                                                                      |                                                                                                           |                                                                                                |                                                                                     |
|----------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| <p>J x 24</p>  <p>Ø 3.5 x 12 mm</p> | <p>M x 12</p>  <p>M2</p> | <p>N x 6</p>  |  |
| <p>O x 6</p>  <p>Ø 4 x 8 mm</p>     | <p>S x 6</p>             |                                                                                                |                                                                                     |

     Secure knob (N) to acrylic board 10 using screw (O) and washer (S).  
Secure slide rail (M2) to boards 12 and 13 using screw (J).

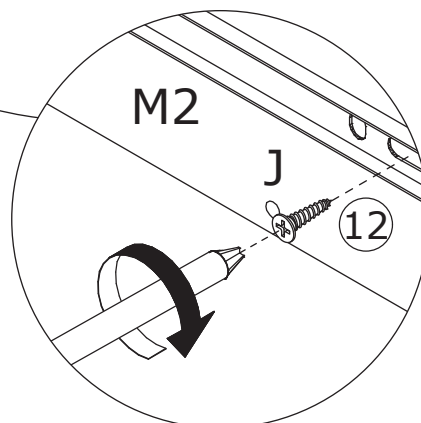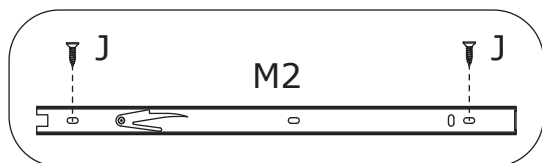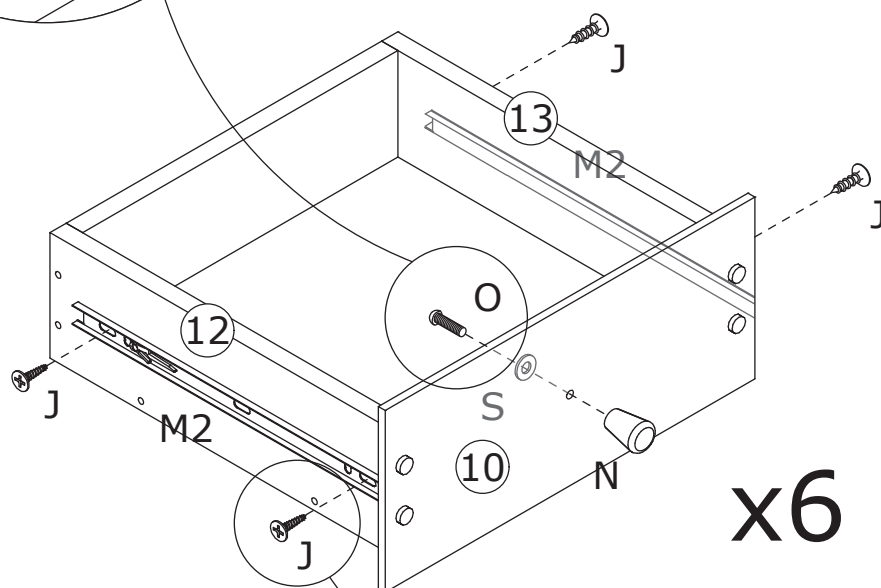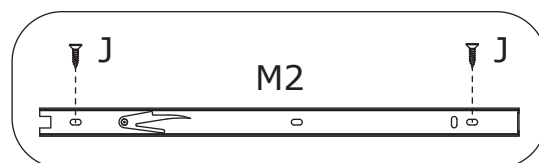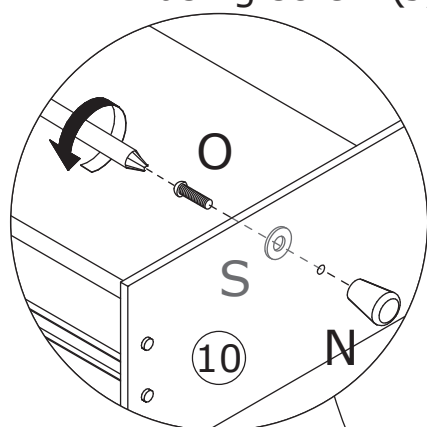


25

 E x 16  
Ø 3.5 x 35 mm




 Secure boards 16 and 17 to board 18 using screw (E).



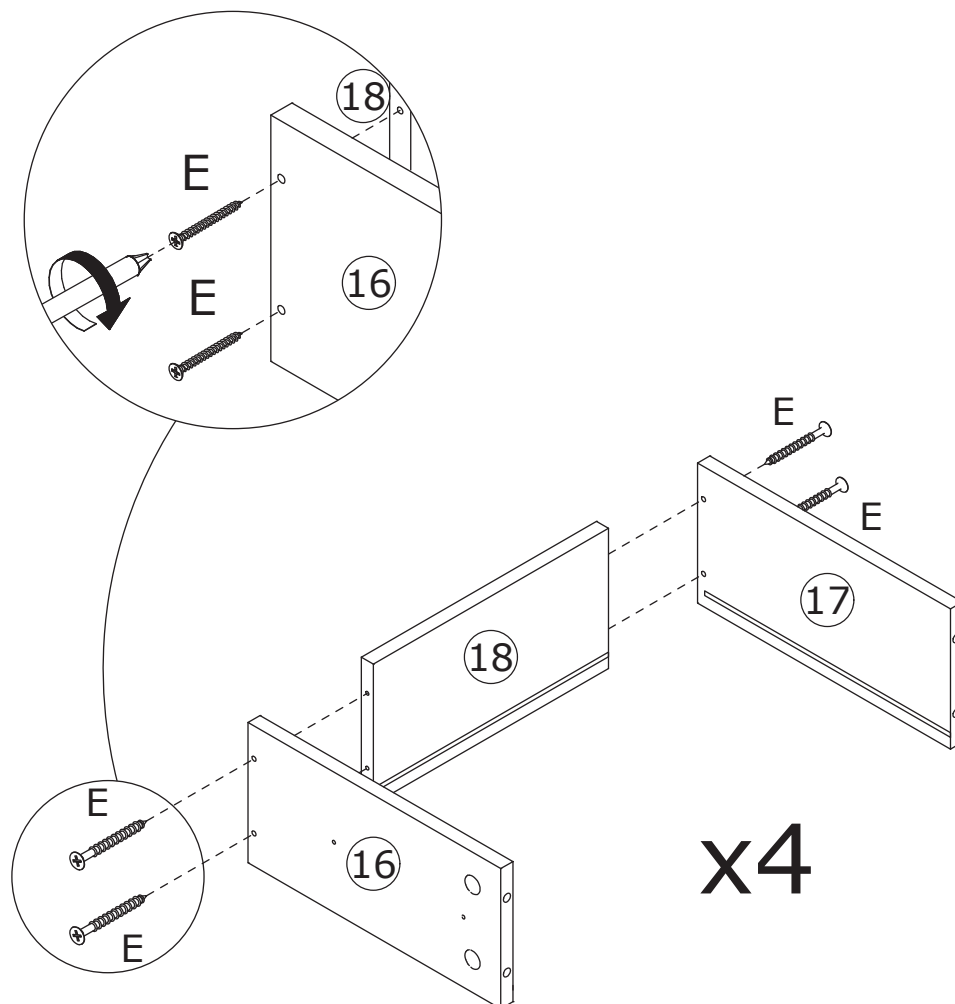


26

 
Insert board 19 into the slots.

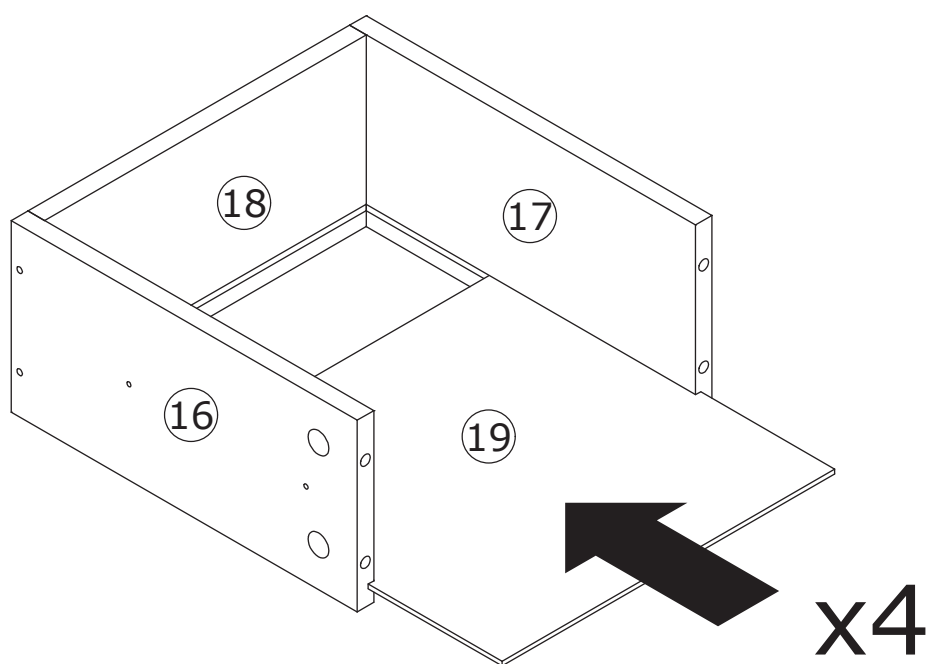

27

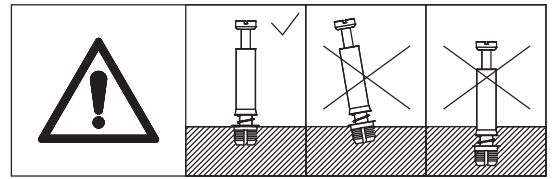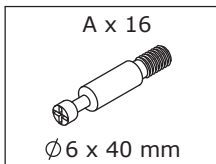   

Screw eccentric rod (A) onto board 11.


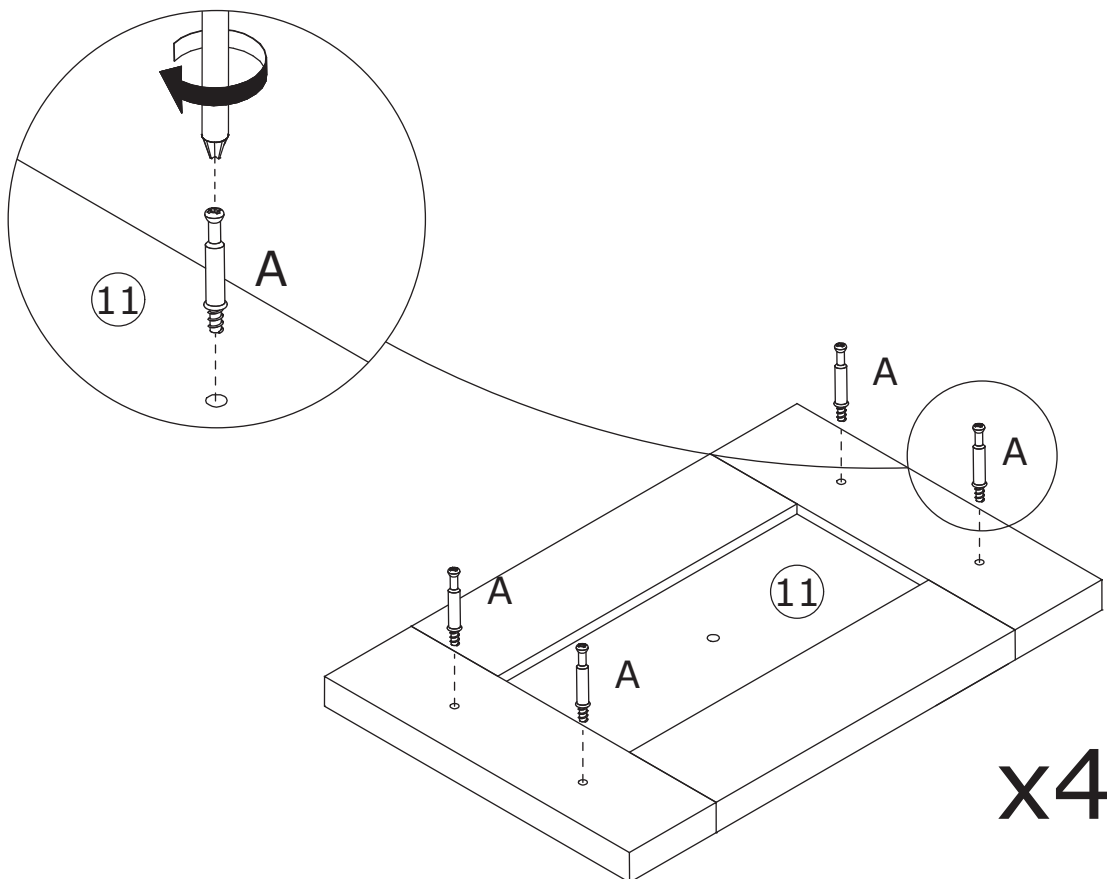 


# 28


Q x 16



  
Ø 15 x 9 mm

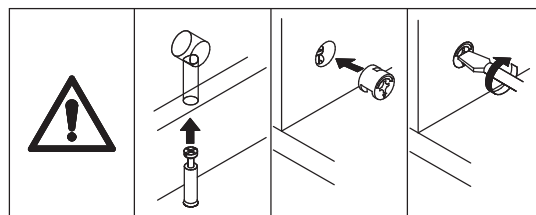

 Connect board 11 to boards 16 and 17,  
then tighten by turning eccentric cam (Q)  
clockwise.



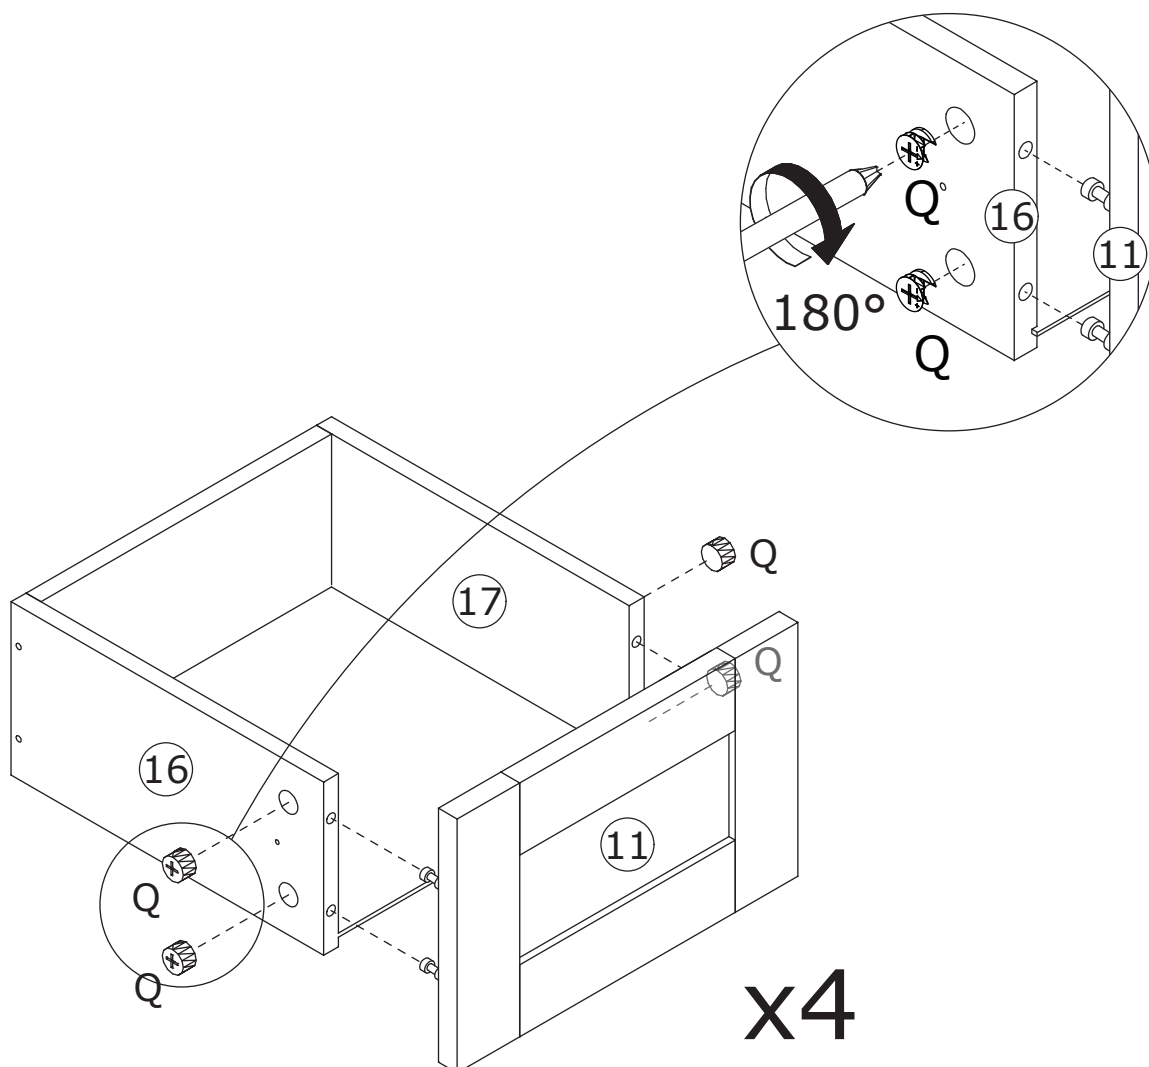


# 29


 
|                                                                                                                  |                                                                                                                      |                                                                                                          |                                                                                     |
|------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| <p>G x 4</p>                    | <p>J x 16</p>  <p>Ø 3.5 x 12 mm</p> | <p>M x 8</p>  <p>M2</p> |  |
| <p>O x 4</p>  <p>Ø 4 x 8 mm</p> | <p>S x 4</p>                        |                                                                                                          |                                                                                     |

Remove the protective film from both sides of the acrylic board 11, then secure knob (G) to the acrylic board using screw (O) and washer (S).

   Secure slide rail (M2) to boards 16 and 17 using screw (J).

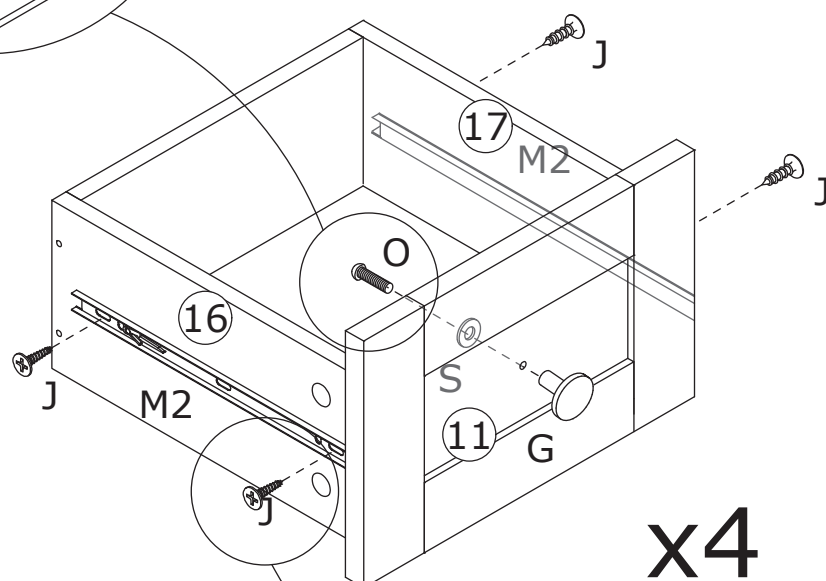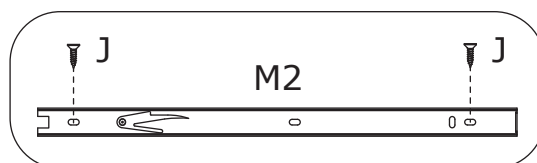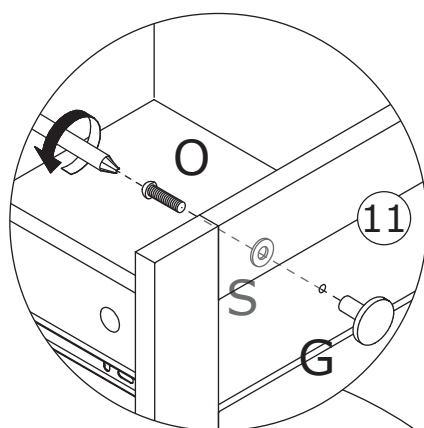


x4

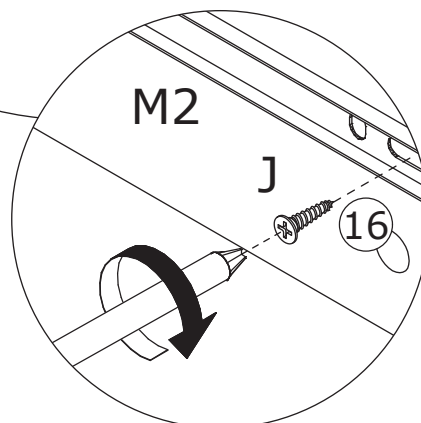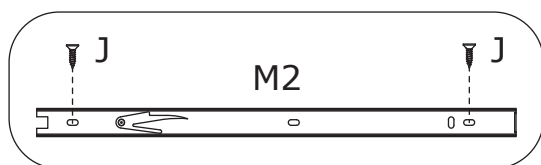  

30

 Insert the assembled drawers into the unit.

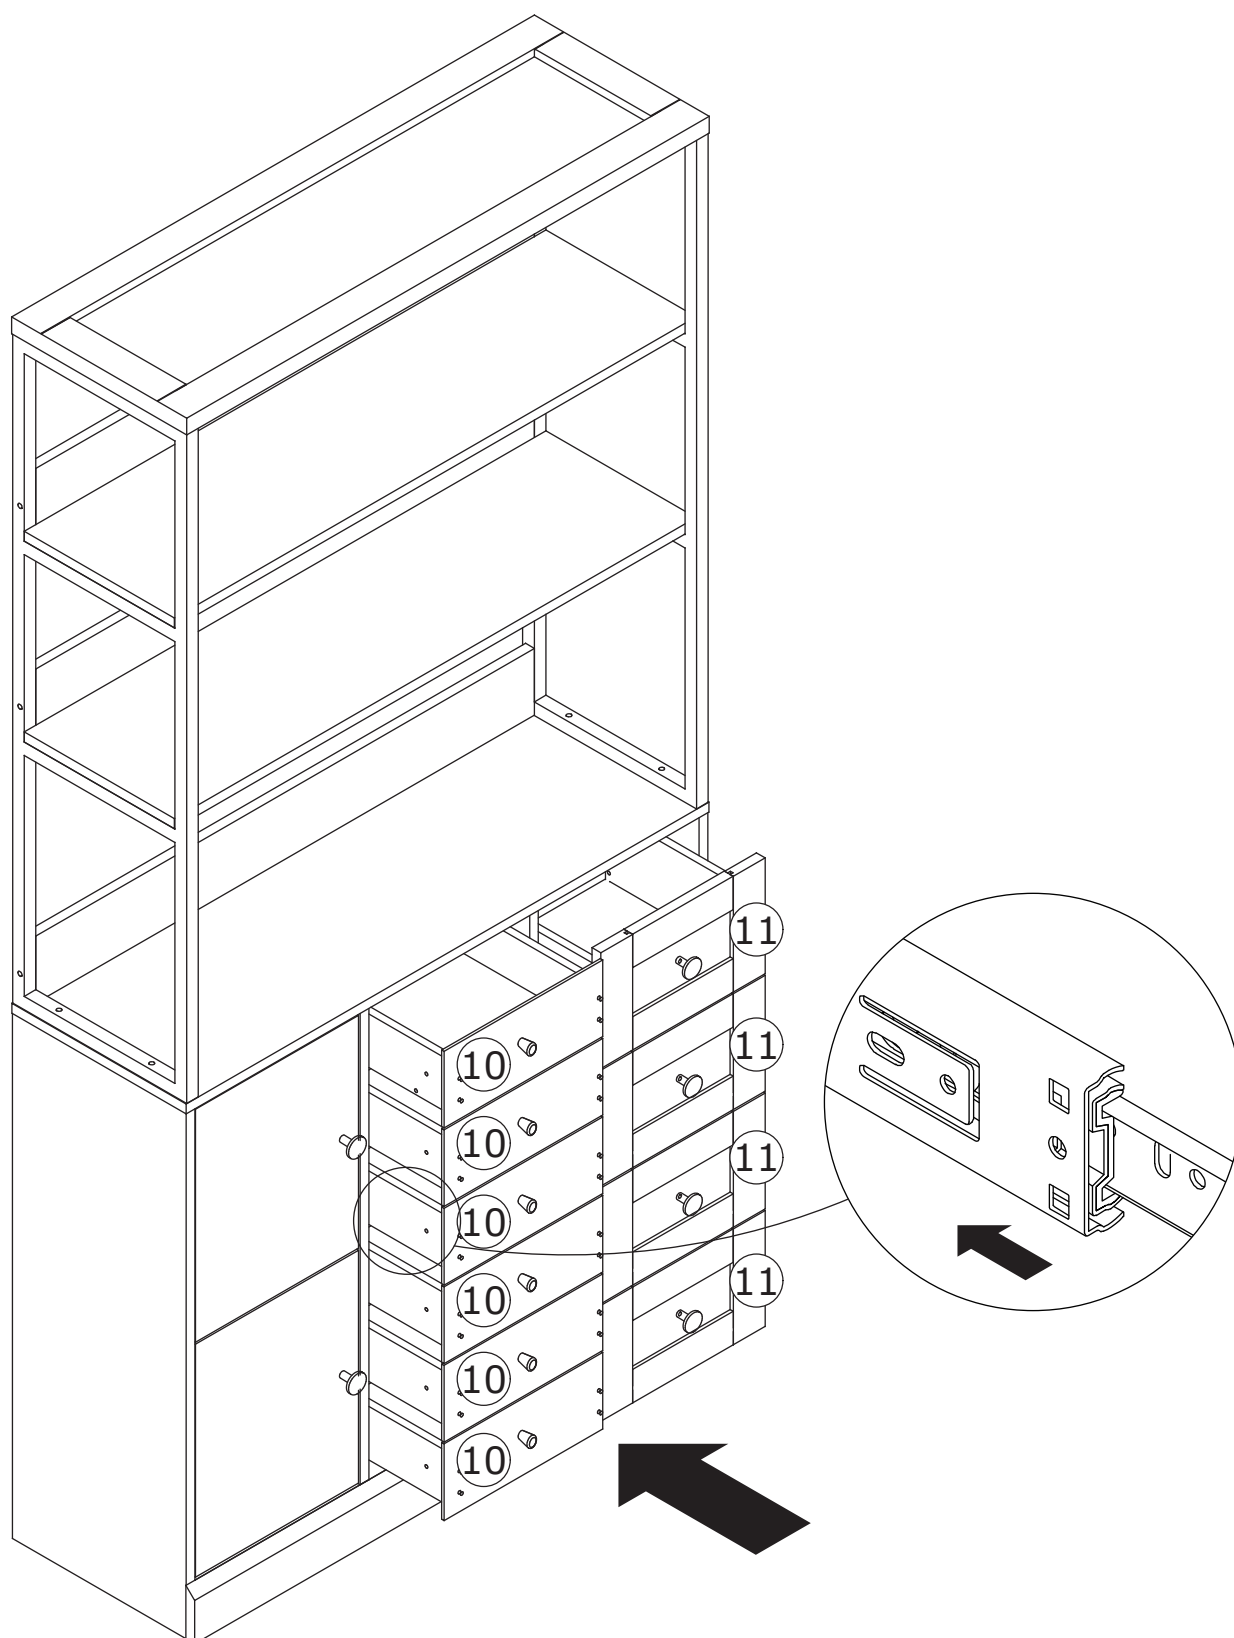

# 31

J x 8

 


Ø 3.5 x 12 mm

Y x 4







Z x 2




Secure iron plate (Z) to boards 2, 3, and 6 using screw (J).  
If necessary, use cable ties (Y) to manage the excess power cord of LED strip.

     Note: For safety and environmental reasons, the remote control for the LED strip does not come with batteries; users need to install batteries themselves.

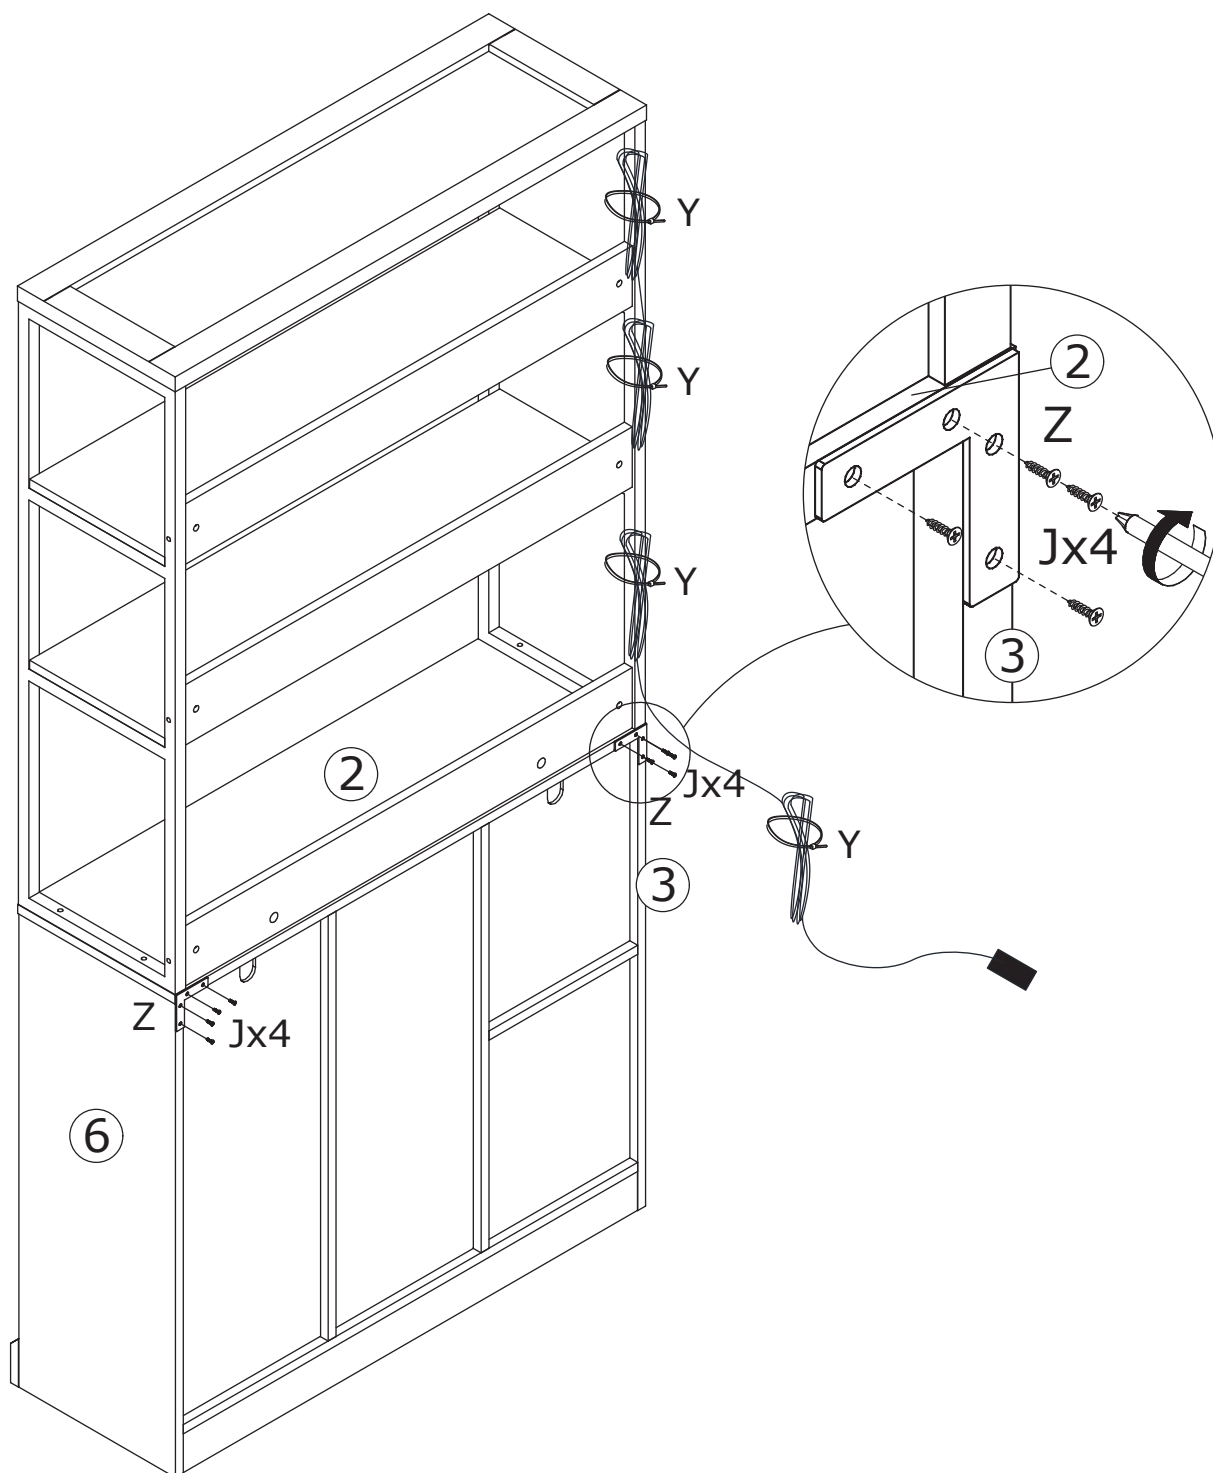

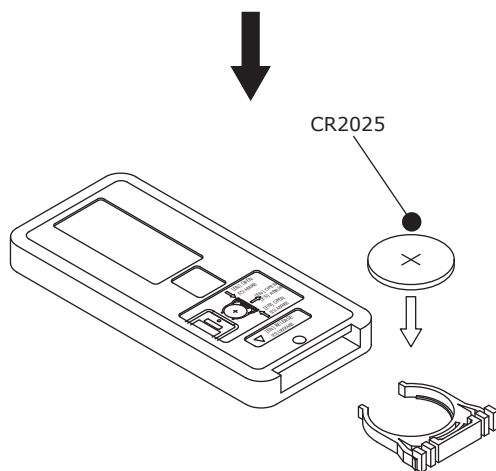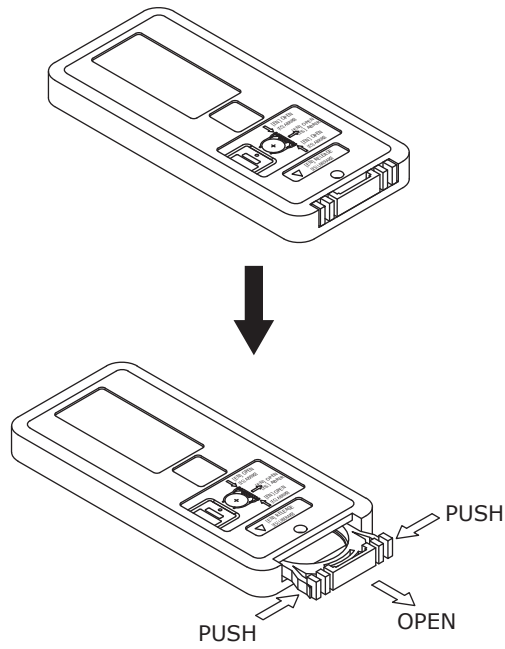
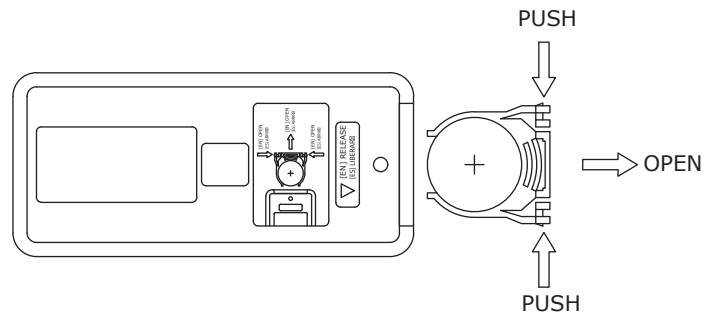





If the door panels are not aligned, please adjust the screws on the hinges according to the illustration.

Or you can search this link to view the teaching video.


 
 
<https://youtu.be/n0Lb36SoODM>

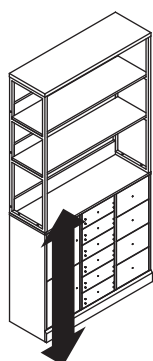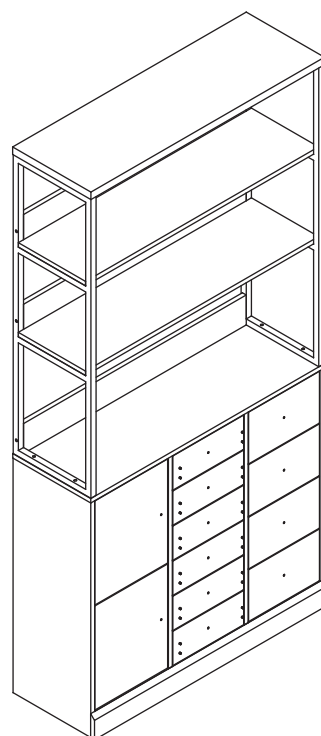


①

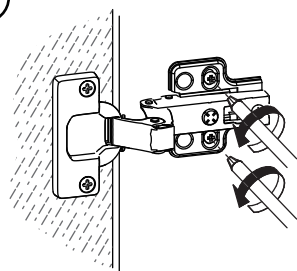 






②

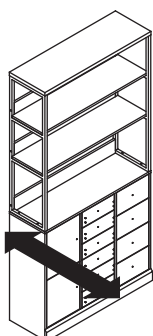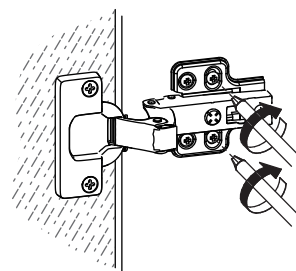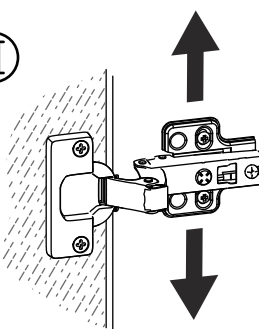   

①

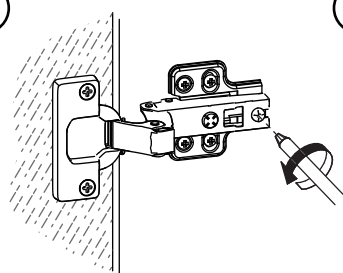 

②

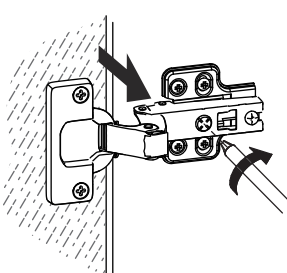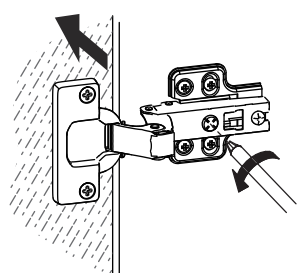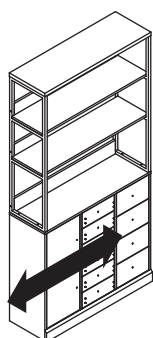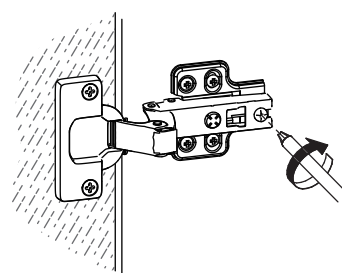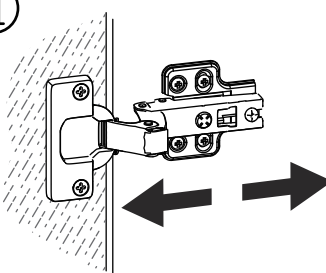     

# WARRANTY

## WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

## Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

## Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

## The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

# RETURNS

## CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

### PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

### DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

### DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.  
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

### AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068