 




Summer Credenza TV Stand

SKU WHIF2243

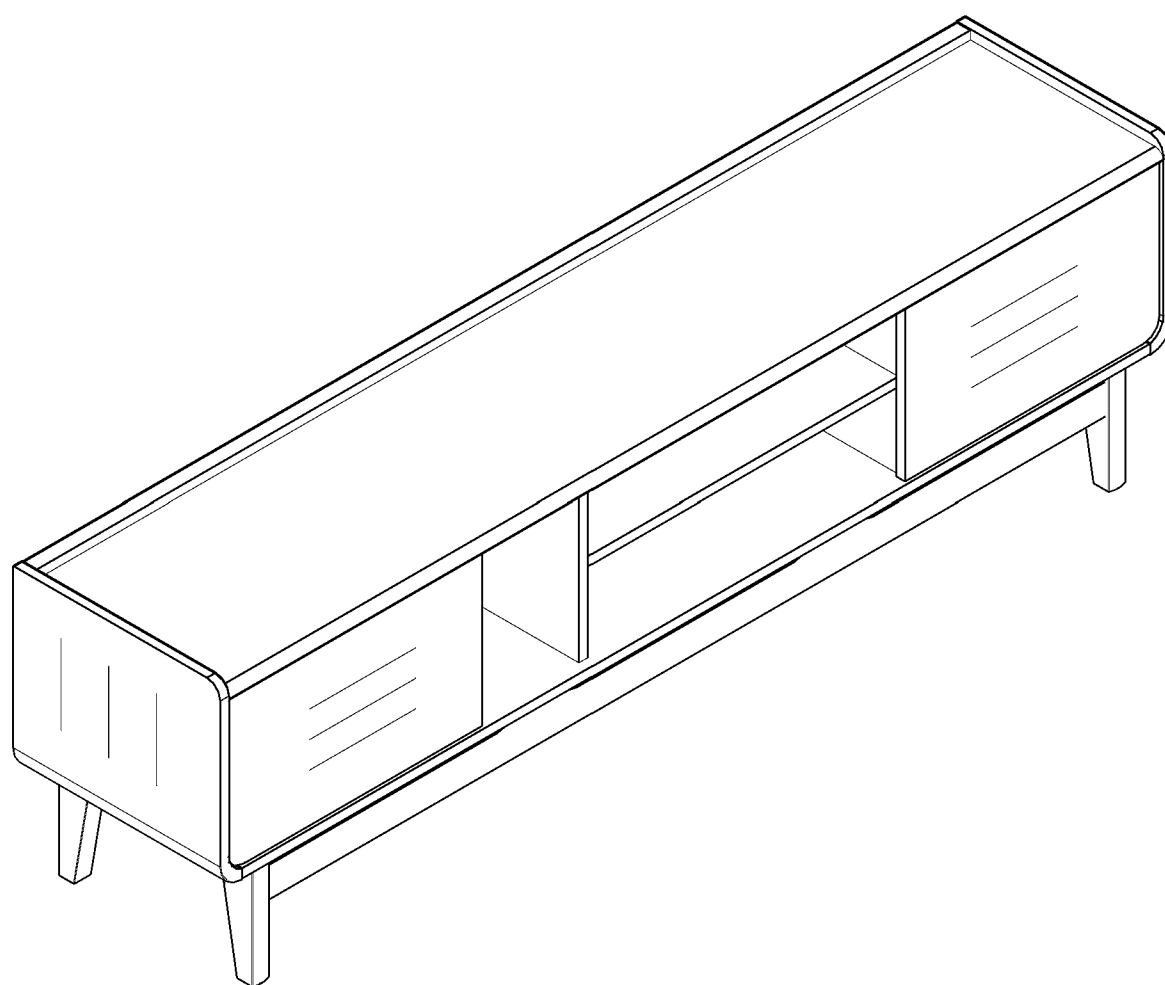

ASSEMBLY INSTRUCTIONS



60 min. assembly
2 person

* The estimated assembly time may vary depending on the individual.

Hey,there

Now is assembly time!

Deeeeep breathe.... and again....

Tools ready,
Easy peasy!

Estimated



60 min. assembly
2 person

Tools Required

- Allen Wrench (included)
- Phillips screwdriver (not included)
- Hammer (not included)

important:Cautious when you use power tools

Need Help?

Call us at +1 909 548 6688

Email customerservice@luxenhome.com

Submit a ticket on www.luxenhome.com/help

Thank you for purchasing this LuxenHome product. This product has been manufactured with the highest standards of safety and quality.

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY.

Unpack all parts from the packaging inside the carton to ensure there are no missing or damaged parts. Lay out all the cabinet parts on a clean, flat, and soft surface to prevent scratches. Refer to the steps provided as assembling guide.

Do not attempt to assemble or use the product if any parts are missing or damaged.

Please save this manual for future reference.

REMINDERS

SAFE USAGE IS KEY

 
Your well-being is our top priority when you use our product. Please prioritize your safety by diligently following the assembly guidelines and inspecting the product carefully both when it arrives and before each use. Please be aware that LuxenHome and Winsome House, Inc. cannot be held liable for any injuries or fatalities that occur due to not adhering to the provided instructions or misuse of the product.

DO NOT MODIFY


Our products undergo rigorous testing to ensure they meet established safety standards before being released for sale. Altering the product in any way can lead to serious safety concerns, for which LuxenHome cannot assume responsibility.

Furniture components:

- ① Top Panel x1
- ② Bottom Panel x1
- ③ Side Panel (L) x1
- ④ Side Panel (R) x1
- ⑤ Center Panel (L) x1
- ⑥ Center Panel (C) x1
- ⑦ Center Panel (R) x1
- ⑧ Back Mdf Board x1
- ⑨ Shelf Panel x1
- ⑩ Door Panel (L) x1
- ⑪ Door Panel (R) x1
- ⑫ Complete Leg Frame x2
- ⑬ Long Back Leg Frame x1
- ⑭ Long Front Leg Frame x1

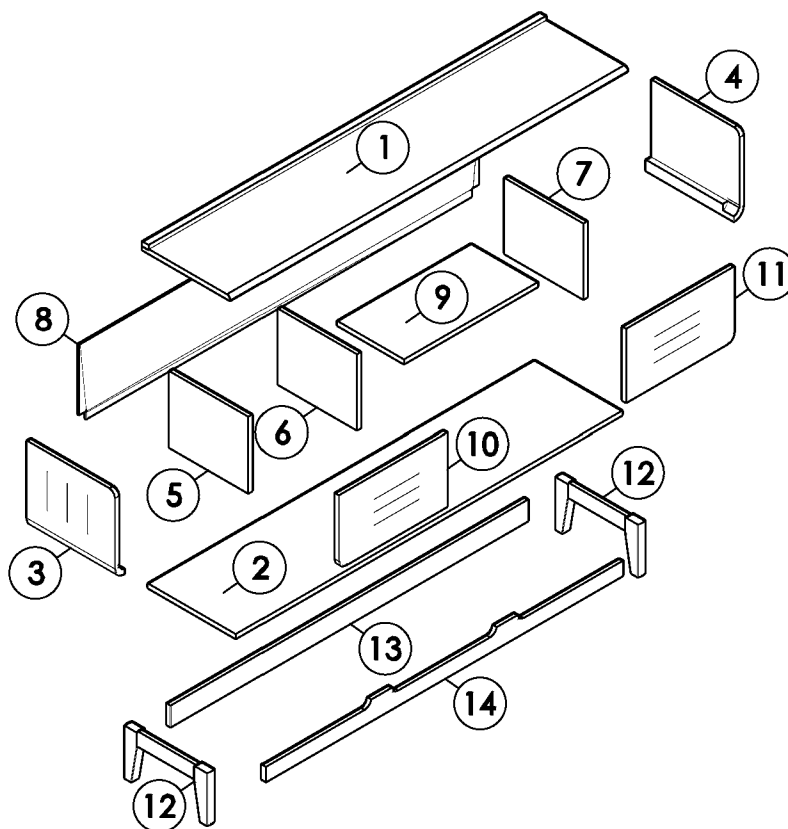

Provided hardware:

 -  **A** Cam Pin x22
-  **B** Cam Lock x22
-  **C** Wood Dowel M8x30MM x22
-  **D** Iron Shelf Support x4
-  **E** Screw M6x50MM x4
-  **F1** Hydraulic Hinges 7/8" x4
-  **F2** Screw 3.5X16MM x24
-  **G1** Furniture Leg x2
-  **G2** Screw M3.5x16MM x8
-  **H** White Leg Pin x4
-  **I** Screw M3.5x16 x6
-  **J** Allen Key x1

Step 1

 
HARDWARE :

- (A) Cam Pin x22
- (B) Cam Lock x8
- (C) Wood Dowel M8x30MM x10
- (G) Furniture Leg x2
- (G2) Screw M3.5x16MM x8
- (H) White Leg Pin x4


COMPONENTS :

- (1) Top Panel x1
- (2) Bottom Panel x1
- (3) Side Panel (L) x1
- (4) Side Panel (R) x1
- (12) Complete Leg Frame x2

Upper View:

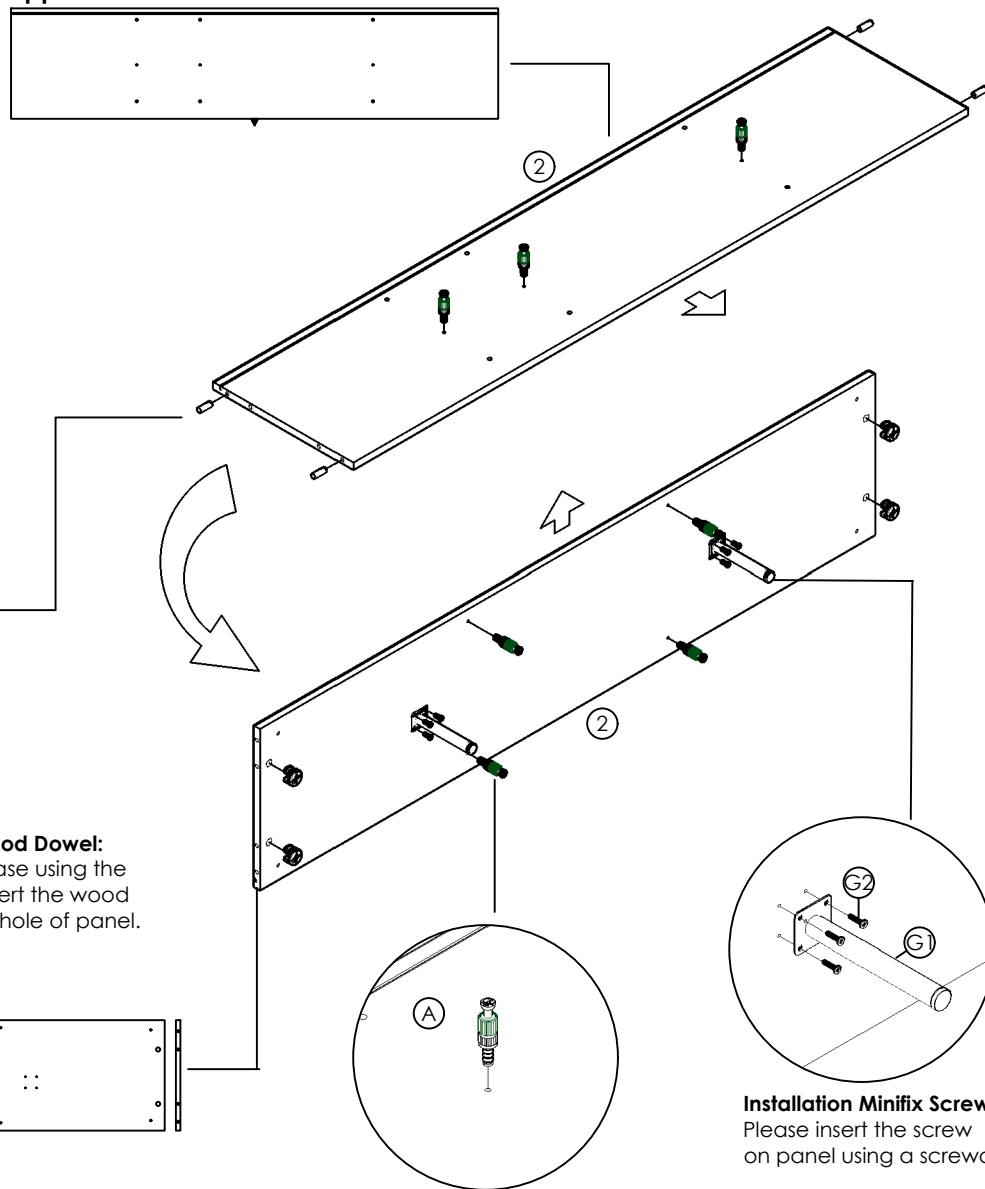

Under View:

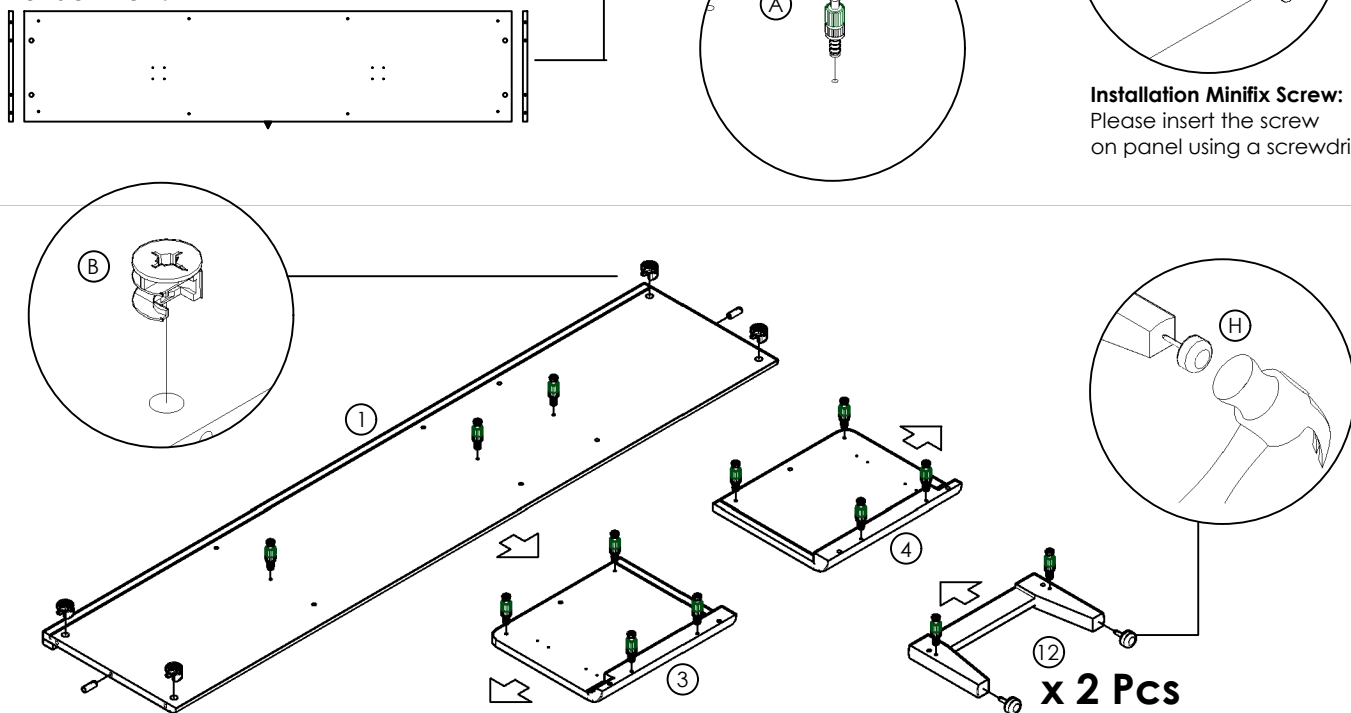 


Step 2

HARDWARE :



- (B) Cam Lock x10
- (C) Wood Dowel
M8x30MM x16
- (D) Iron Shelf Support x4

COMPONENTS :


 
- (5) Center Panel (L) x1
- (6) Center Panel (C) x1
- (7) Center Panel (R) x1
- (13) Long Back Leg Frame x1
- (14) Long Front Leg Frame x1

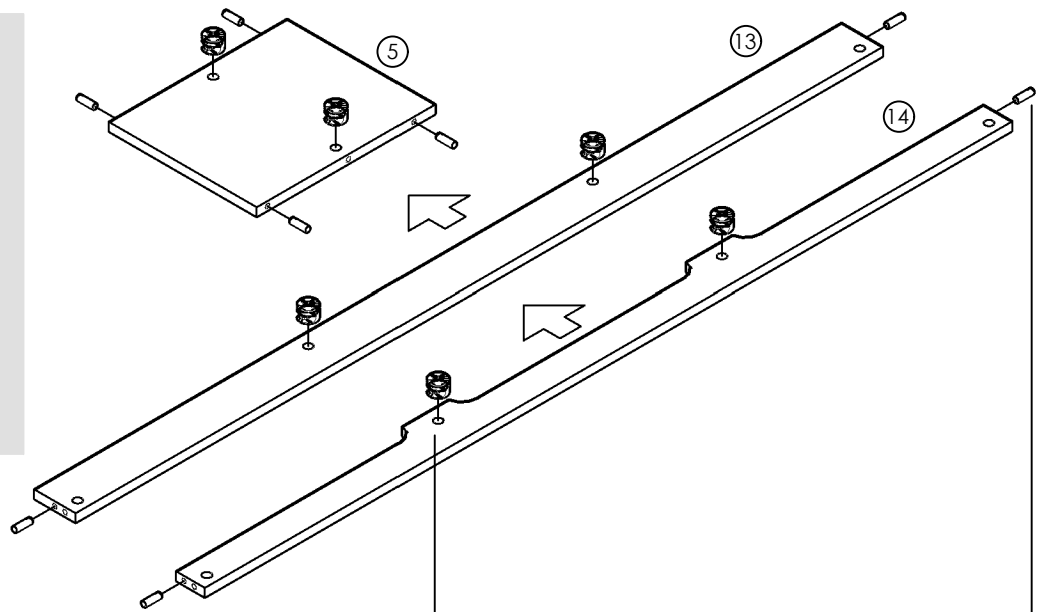

Left:

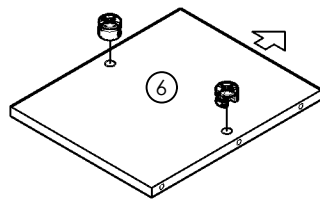 
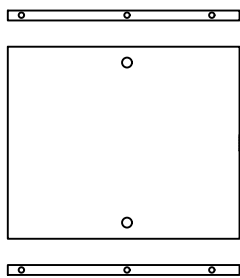 


Right:

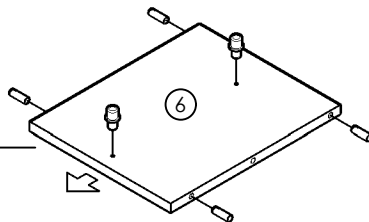 
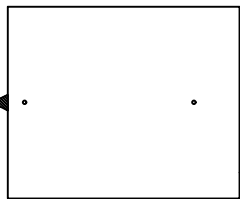 


Installation Wood Dowel:


 
 
As Shown, Please using the hammer to insert the wood dowel(C) into hole of panel.

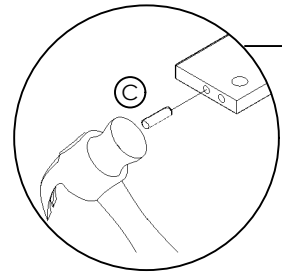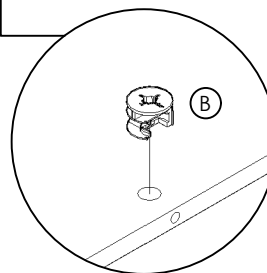

Right:

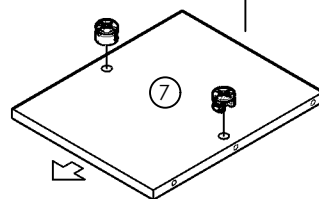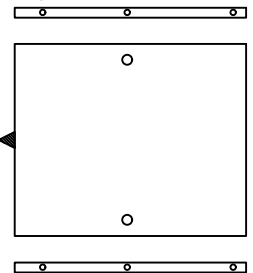  

Left:

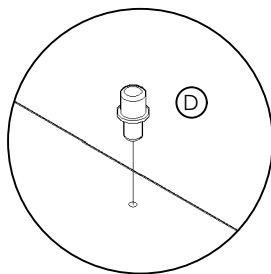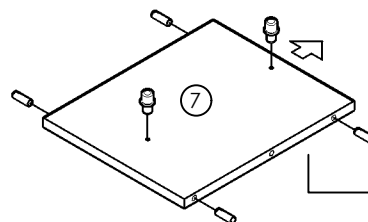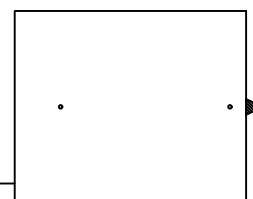   

Installation Wood Dowel:

As Shown, Please using the hammer to insert the iron shelf support (D) into hole of panel.

Step 3

HARDWARE :

 
(F1) Hydraulic Hinges 7/8"x4

(F2) Screw M3.5x16MM x8

COMPONENTS :

(10) Door Panel (L) x1

(11) Door Panel (R) x1

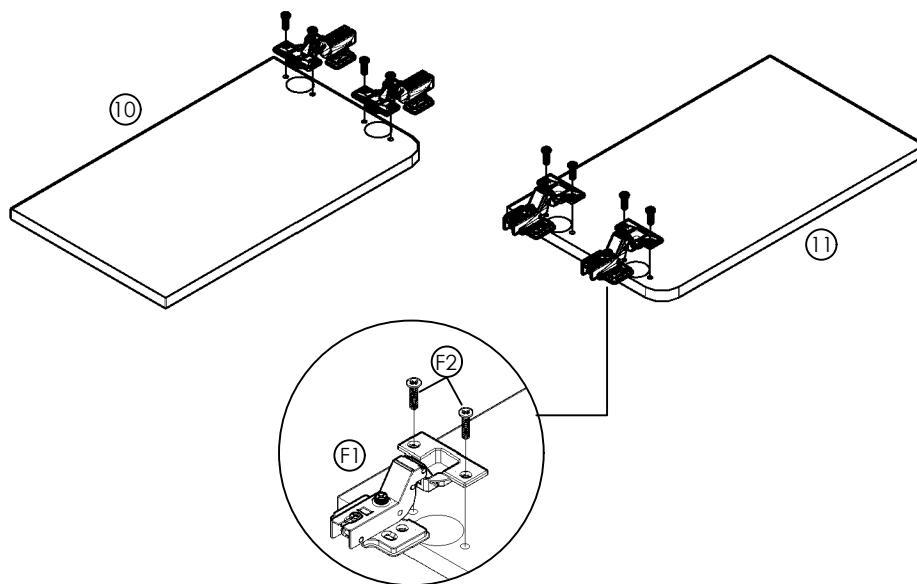

Installation Hinges:

Insert the screw into the hole of the Hinges with using the screwdriver.

Step 4

HARDWARE :

 
(J) Allen Key x1

COMPONENTS :

(12) Complete Leg Frame x2

(13) Long Back Leg Frame x1

(14) Long Front Leg Frame x1

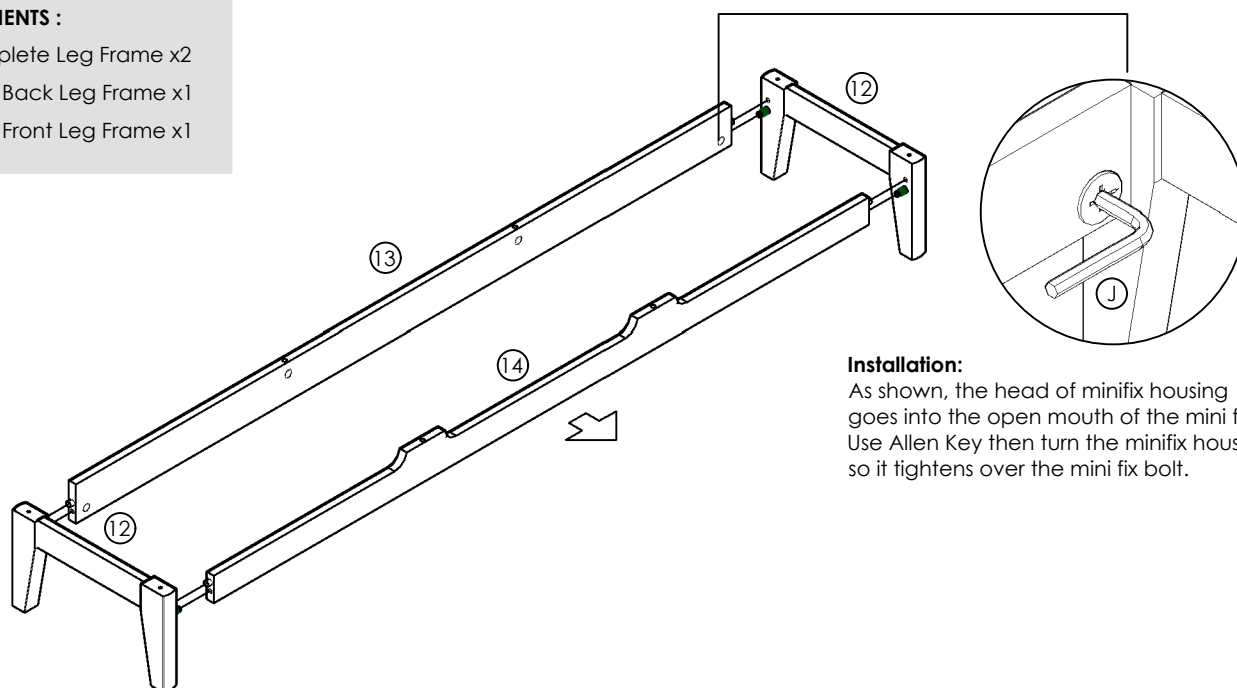

Installation:

As shown, the head of minifix housing goes into the open mouth of the mini fix bolt. Use Allen Key then turn the minifix housing so it tightens over the mini fix bolt.

 
Step 5

HARDWARE :

- (E) Screw M6x50MM x4
- (G1) Furniture Leg x2
- (G2) Screw M3.5x16MM x8
- (J) Allen Key x1



COMPONENTS :

- (2) Bottom Panel x1

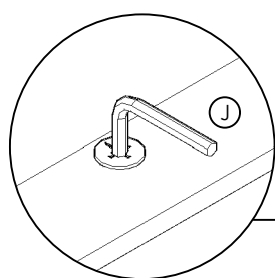


Installation:

  As shown, the head of minifix housing goes into the open mouth of the mini fix bolt. Use Allen Key then turn the minifix housing so it tightens over the mini fix bolt.

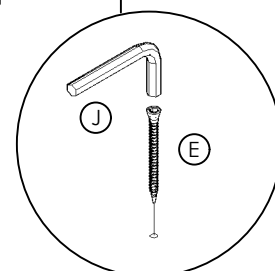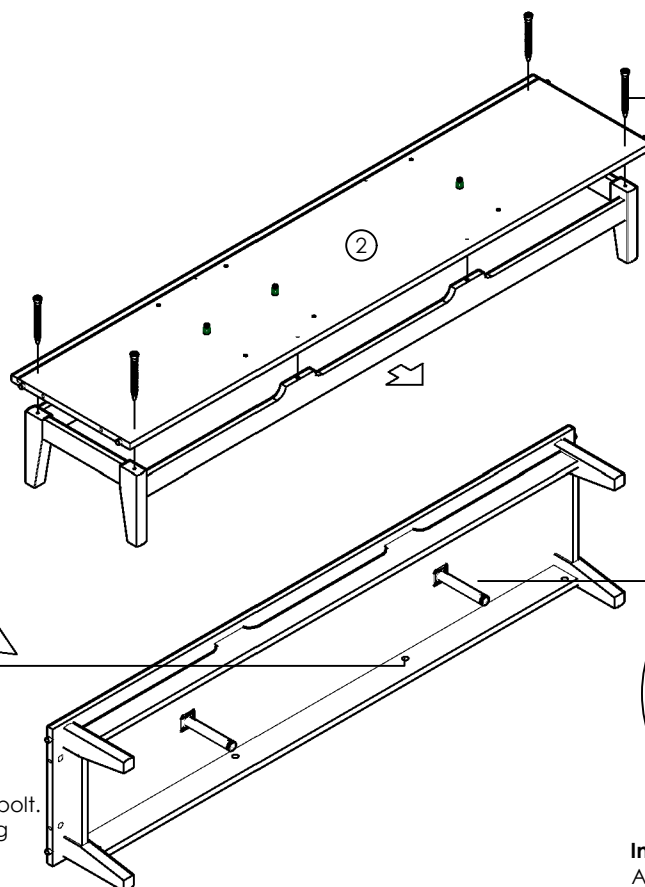

Installation Screw:

 Please insert the screw (E) on panel using a allen key.

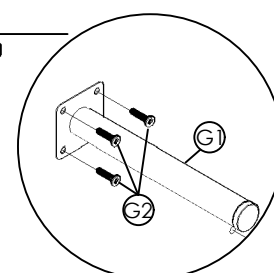

Installation Leg:

Align the hole leg with hole marking then insert the screw on panel using a screwdriver.

 
 
Step 6

HARDWARE :

- (J) Allen Key x1

COMPONENTS :

- (2) Bottom Panel x1
- (5) Center Panel (L) x1
- (6) Center Panel (C) x1
- (7) Center Panel (R) x1

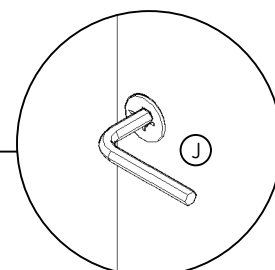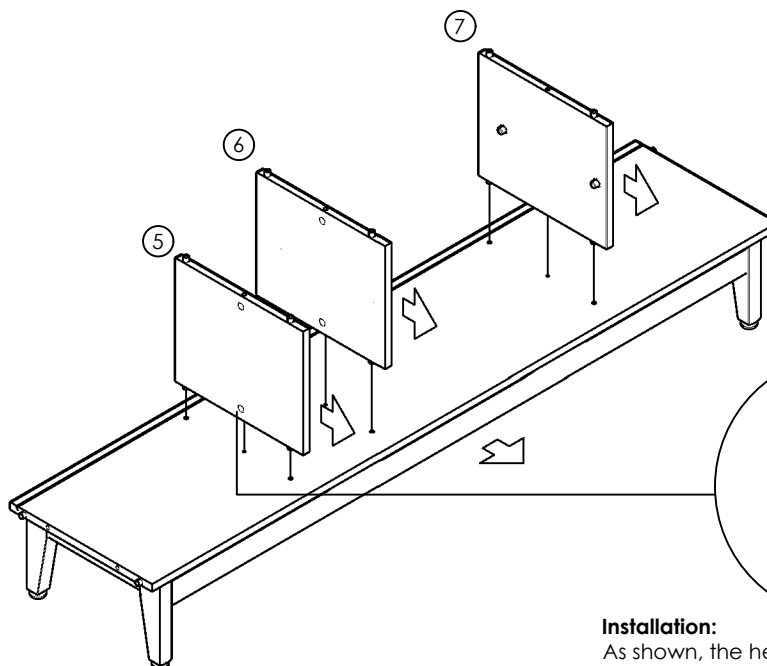

Installation:

As shown, the head of minifix housing goes into the open mouth of the mini fix bolt. Use Allen Key then turn the minifix housing so it tightens over the mini fix bolt.

 
Step 7

HARDWARE :

ⓐ Allen Key x1

COMPONENTS :

① Top Panel x1

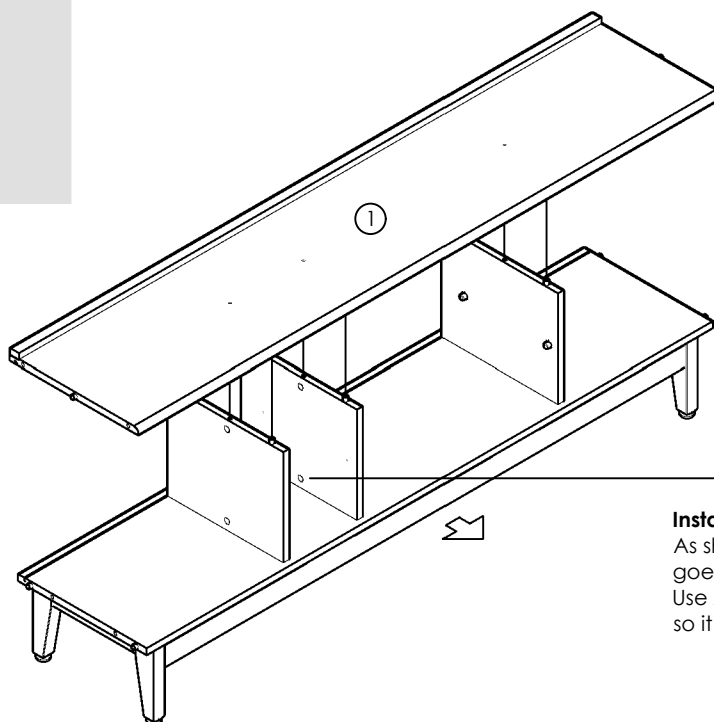

Installation:

As shown, the head of minifix housing goes into the open mouth of the mini fix bolt. Use Allen Key then turn the minifix housing so it tightens over the mini fix bolt.

 
Step 8

HARDWARE :

ⓐ Allen Key x1

COMPONENTS :

④ Side Panel (R) x1

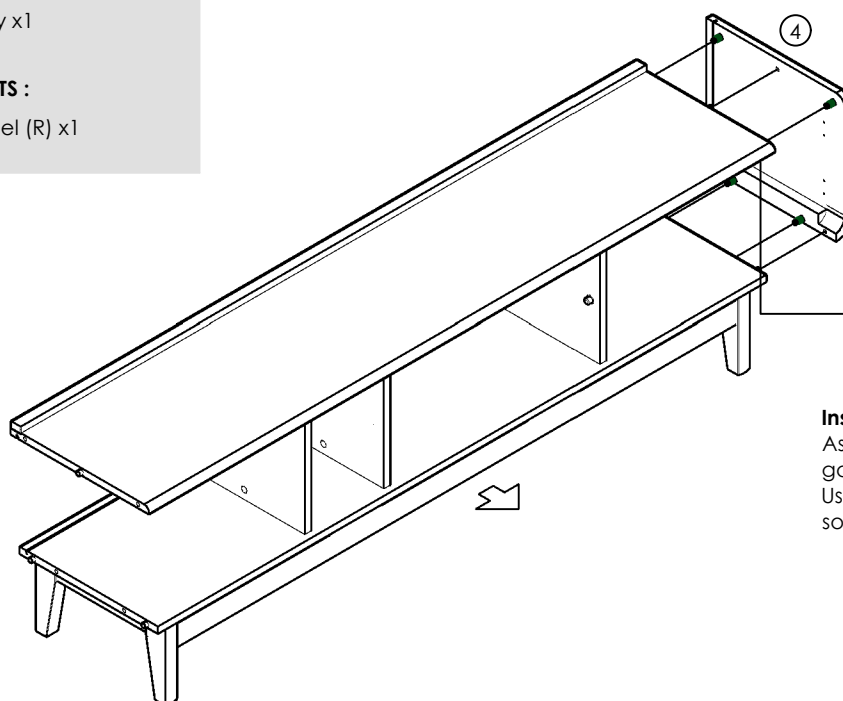

Installation:

As shown, the head of minifix housing goes into the open mouth of the mini fix bolt. Use Allen Key then turn the minifix housing so it tightens over the mini fix bolt.

 
Step 9

Hardware :

- ① Allen Key x1

COMPONENTS :


- ③ Side panel (left) x1
⑧ Back Mdf Board x1

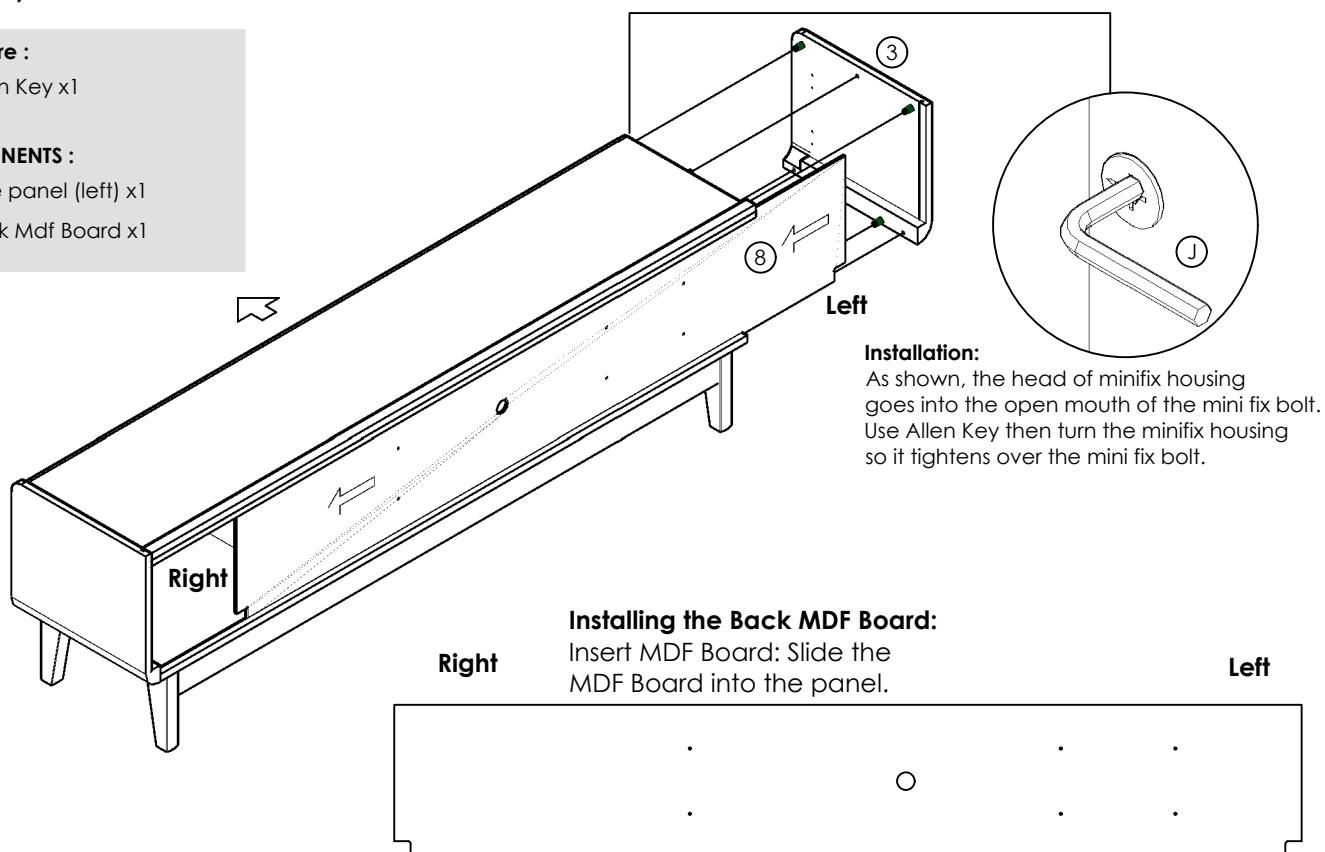

Step 10

COMPONENTS :

 
- ① Screw M3.5x16MM x6

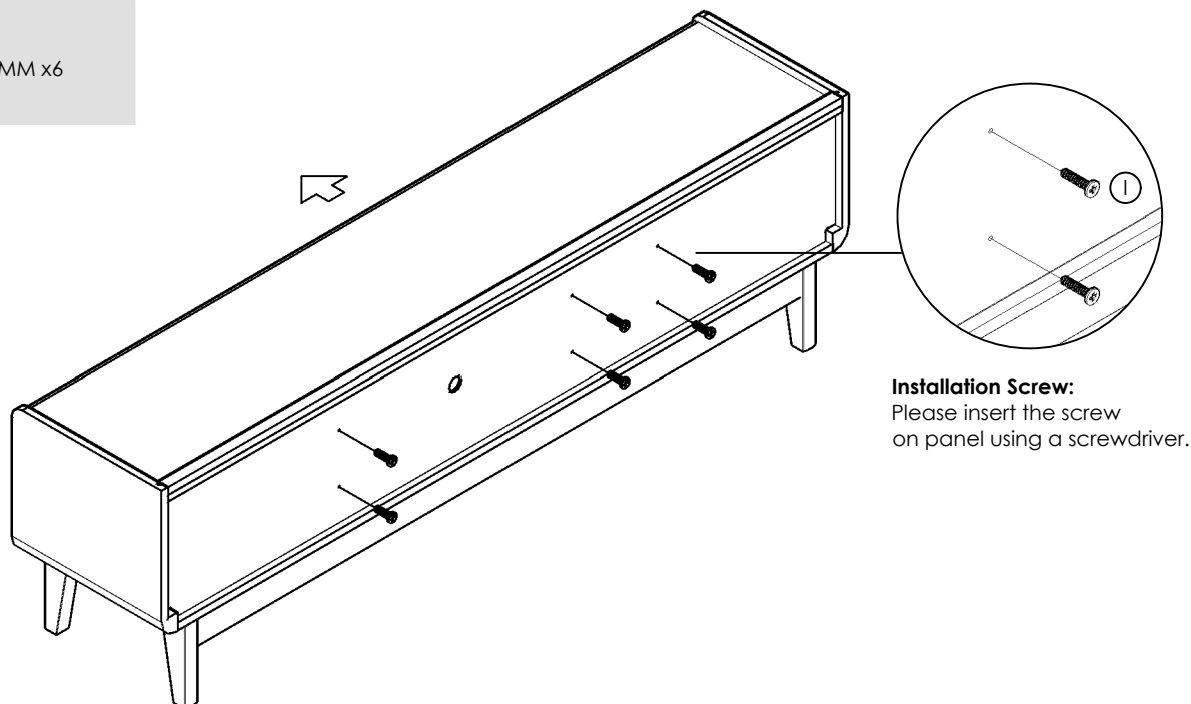

Step 11

COMPONENTS :

 - ⑨ Shelf Panel x1

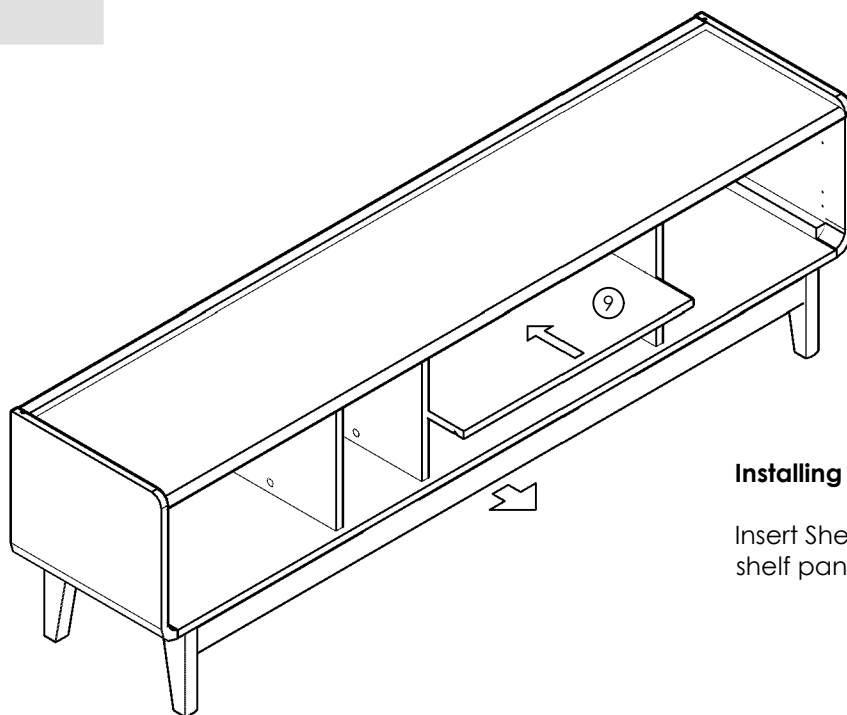

Installing the Shelf Panel

Insert Shelf Panel: Slide the shelf panel into the cabinet.

Step 12

HARDWARE :

 
 
- (F1) Hydraulic Hinges 7/8"x4

- (F2) Screw M3.5x16MM x16


COMPONENTS :

- ⑩ Door Panel (L) x1

- ⑪ Door Panel (R) x1

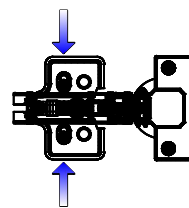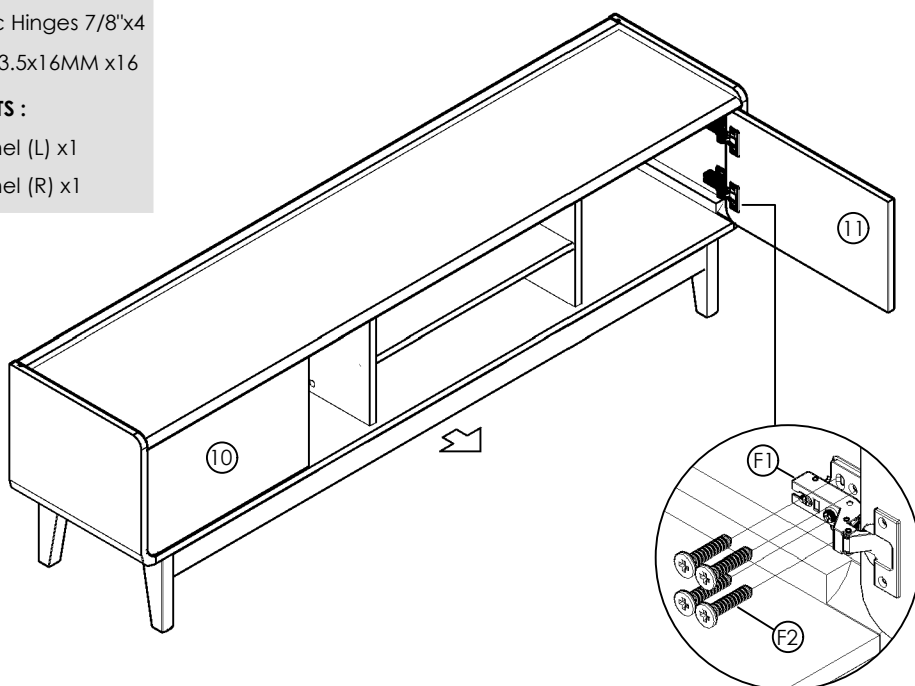


#Adjust the door by moving it up and down or left and right the tighten the screws

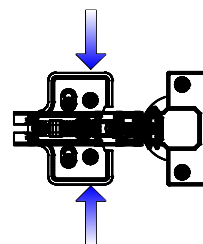 

VOILA!

 Now enjoy.

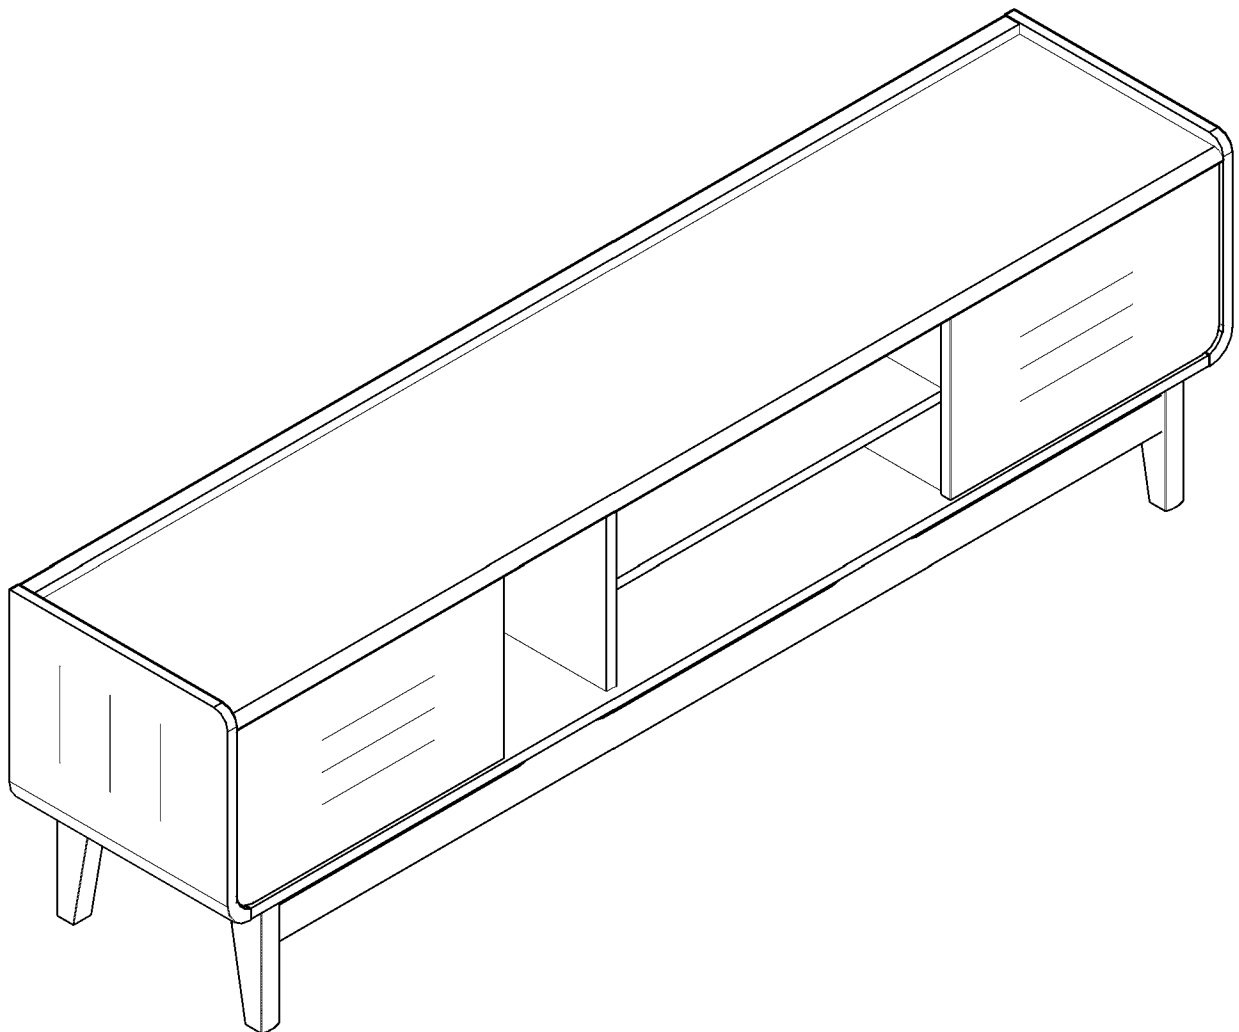

Warning !!!

DO NOT stand on the cabinet as this may damage the product and cause serious bodily injury.

Something not right?

We are always here to help.

We make mistakes like every human does. Though we always strive to provide the best possible products at competitive prices and the best service in the industry, it's not possible to completely eliminate mistakes. If you experience any dissatisfaction, feel free to contact us immediately. Our in-house customer care team will respond ASAP.

- customerservice@luxenhome.com
Get response within 24 hrs
- 909.548.6688
Mon-Fri 9am-5pm PST/PDT
- www.luxenhome.com/help
Submit a ticket on our website

Things to do to expedite the process

- Have your order# ready
- Take photos/videos to help us better identify the issues
- DO NOT throw away the packaging

Happy with our product?

Leave us a review

It really help us as a small business

Find the product you purchased on our website (tip: search by SKU) and leave us a review.

Alternatively, you can always return to the marketplace where you purchased it and leave a review there.

Share with others

Our customers look for REAL stuff

- Follow us on IG @luxen.home
- Share your #liveluxen moments

Please save this manual for future reference.

ANTI-TIP DEVICE INSTALLATION INSTRUCTION

IMPORTANT SAFETY INSTRUCTIONS

Read and follow all instructions when using the range to prevent the risk of personal injury or damage. This guide does not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand.



This is the safety alert symbol. This symbol alerts you to potential hazards that can result in property damage and/or serious bodily harm or death. All safety messages will follow the safety alert symbol and either the word **WARNING** or **CAUTION**. These words means:



WARNING - Indicates a hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION - Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

ANTI-TIP DEVICE



WARNING

- **TO REDUCE THE RISK OF TIPPING, THE APPLIANCE MUST BE SECURED BY A PROPERLY INSTALLED ANTI-TIP DEVICE, TO CHECK IF THE DEVICE IS INSTALLED PROPERLY, VERIFY THAT ANTI-TIP DEVICE IS ENGAGED. OR GRASP THE TOP REAR EDGE OF THE RANGE BACK GROUND AND CAREFULLY ATTEMPTED TO TILT IT FORWARD.** Refer to the installation section for instructions.
- A child or adult can tip the range and be killed.
- Install the anti-tip device to the structure and/or the range. Verify the anti-tip device has been properly installed and engaged following the instructions on the anti-tip bracket template.
- Engage the range to the anti-tip device following the instructions on the anti-tip bracket template. Ensure the anti-tip device is re-engaged when the range is moved by following the instruction on the anti-tip bracket template.
- Re-engage the anti-tip device if the range is moved. Do not operate the range without the anti-tip device in place and engaged.
- See installation instruction for details.
- Failure to do so can result in death or serious injury to children or adults.
- Never remove the dresser/chest of drawer legs. The range will not be secured to the anti-tip bracket if the legs are removed.
- Do not step or sit on drawers. The range could be tipped and injury might result.
- Do not rest large heavy items on the open drawer. The range could tip forward and cause injury.
- Re-engage the anti-tip device after pulling the range out for moving or any other reason.
- Failure to follow these instructions can result in serious injury or death to children or adults.

 ANTI-TIP	 WITH ANTI-TIP	 WITHOUT ANTI-TIP
--------------	-------------------	----------------------

Installation Instruction :

A tip restraint must be attached to a wall stud using the 2" screw enclosed.

1. Attach a strap to the back top rail or back top edge of the furniture using the 5/8" screw provided.
2. Locate the strap on the wall over a wall stud and 2 inches below the mounting strap secured to the back of your unit. Attach to the wall stud using the 2" screw provided, through the smaller hole.
3. Place the furniture into position so both mounting strap are vertically in line.
4. Lace the end of the restraint strap through the larger hole in each mounting strap. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Confirm that the strap is securely laced and locked.

Part Include :

