 


ASSEMBLY INSTRUCTIONS

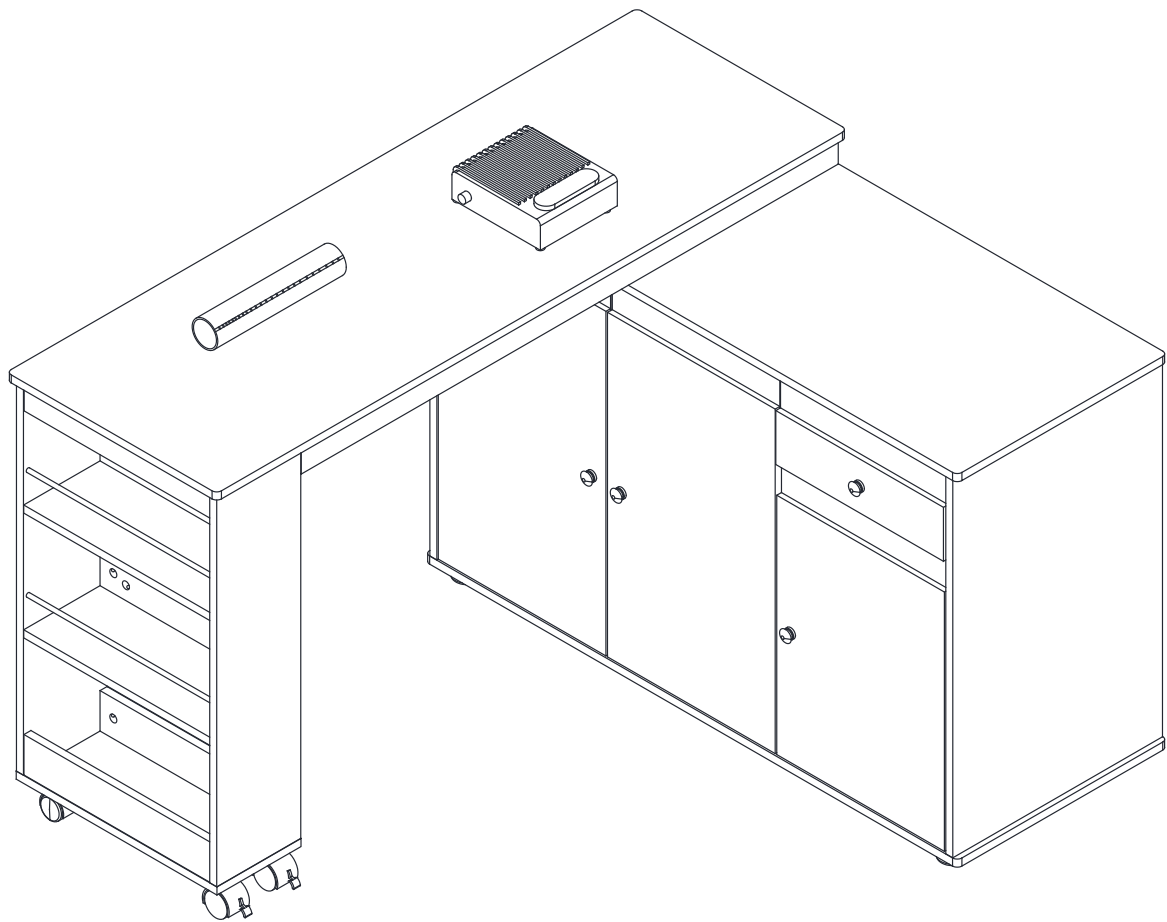

1. Thank you for choosing *our products*.

2. Return Policy



DO NOT RETURN TO THE STORE! Skip the process of returning your product and contact us directly for a replacement

If you find that parts of your order are missing or damaged, we will gladly ship any needed replacement parts free of charge.

If your product's quality does not meet your expectations or you have found any sort of defect, please contact our customer service department and let us know the details of your order and any issues encountered, we will try our best to provide you with a solution. Feel free to also directly contact our manufacturer concerning needed replacement parts and they will be happy to help provide you with a solution or answer any questions you may have.

Recommendations Before Beginning Assembly



- Read instructions, cover to cover



- Have 2-4 adults on hand for assembly depending on product size



- Do not assemble directly on flooring or carpet



- Assemble on a clean non-marring surface (example: packing foam)



- Save all packaging until finished

3. Assembly Notice:

- ☒ If you encounter any problems during assembly and find that you cannot continue, rest assured we will help you solve the situation as soon as possible. Simply keep all of the

parts of the product stored in a safe place and contact us immediately so we may assist you further.

 
- ☒ Once you have opened your package, remove all inner hardware packages and take the parts out. One by one, Place the parts out neatly in front of you, then refer to the instructions to ensure no parts are missing. If any pieces are found missing, please carefully look in the box first, as the hardware packaging might have torn making the hardware spill in the box.
- ☒ Some key parts of your product may be stored and hidden inside of other parts. Please open any zippered or hook & loop storage compartments to remove all parts. (example: cushions and legs being stored in the underside of a sofa)
- ☒ **IMPORTANT:** When setting up your product, **DO NOT INSTALL THE SCREWS ALL THE WAY IN THE BEGINNING.** Place each screw into their proper hole and use your hand to twist the screw halfway. Twist all the screws in halfway to ensure the holes will match up properly and the product is level on the ground. When everything seems fitted, then tighten the screws.
- ☒ When you have completed assembly, we suggest you have more than one person to assist you with lifting and placing the product.

Care & Maintenance


- ☒  ● Do not put hot items directly on furniture surface
- ☒  ● Do not clean furniture with harsh cleansers or polish
- ☒  ● Children should not climb or jump on the furniture
- ☒  ● Dust and pick-up spills using a clean, non-colored, lint-free cloth














Caution

- This product contains small components. Please ensure that they are kept away from small children.
- Do not use power tools to assemble your furniture. Power tools may strip or damage the parts.

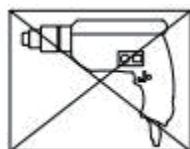


Assembly Instructions

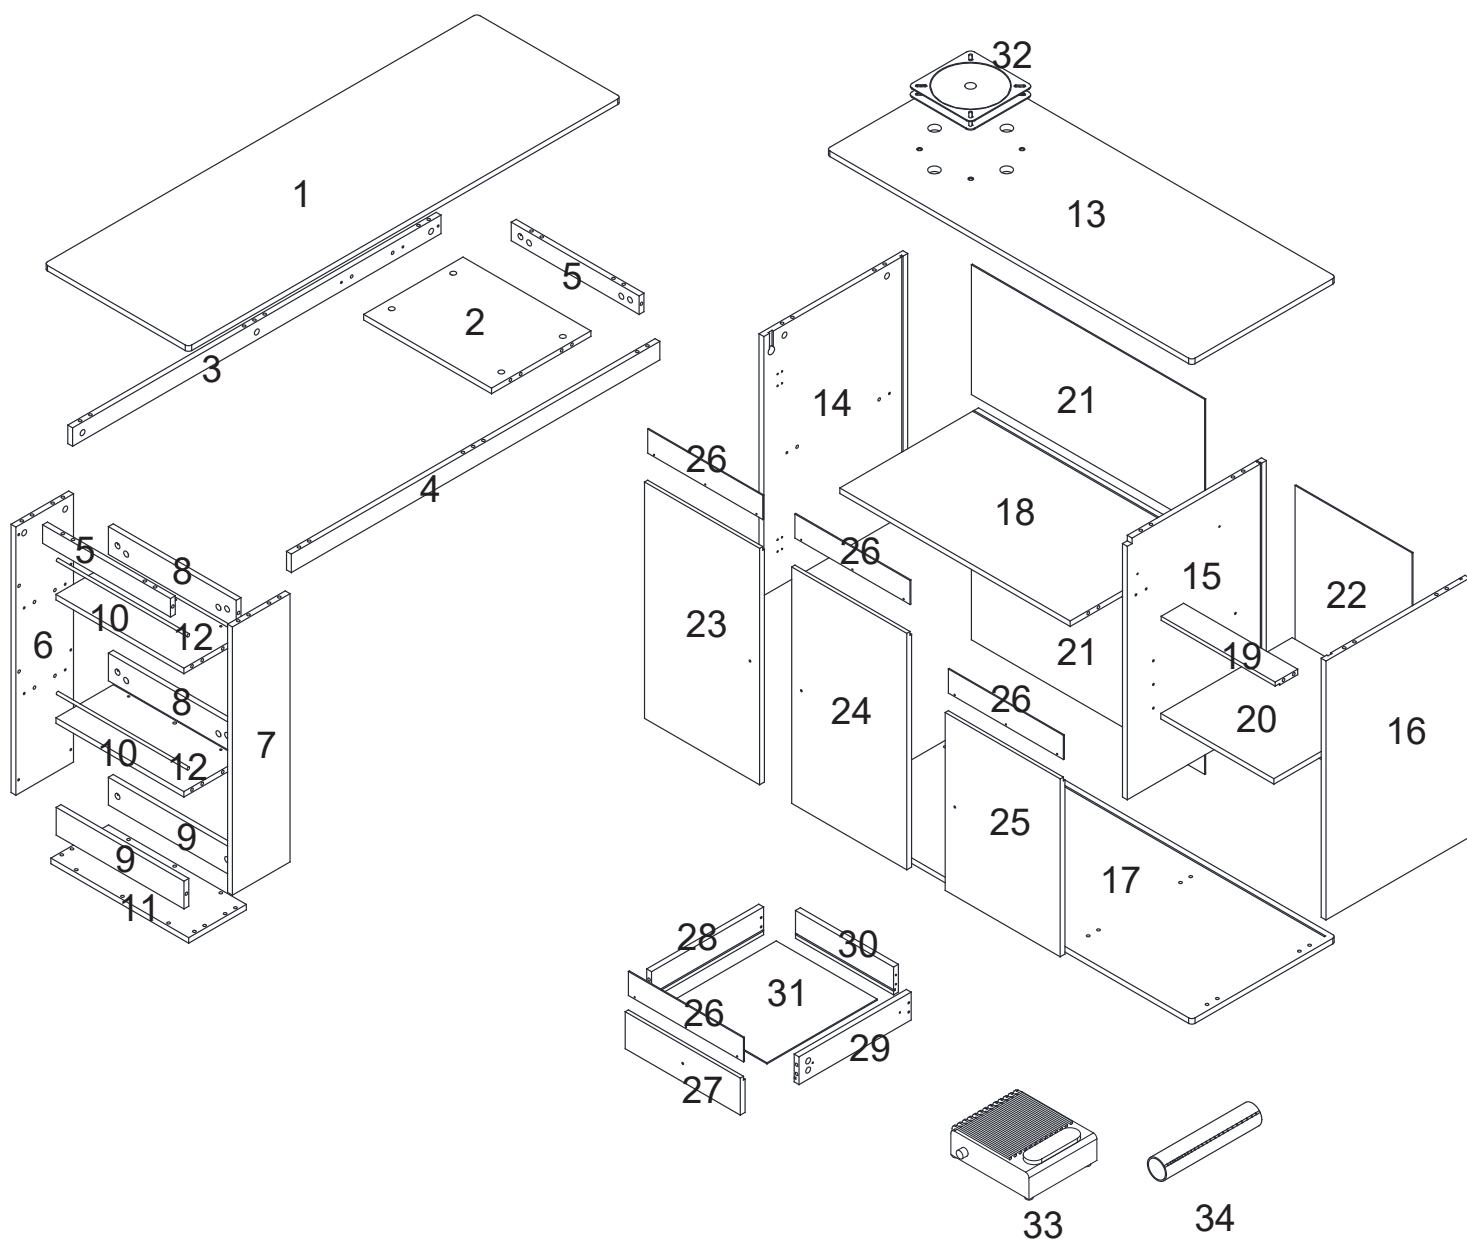 


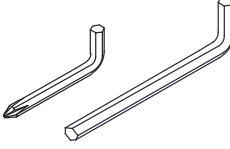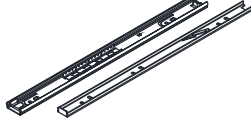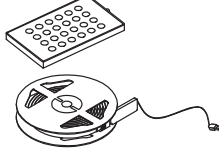             A  Cam Bolt x 60+2	B  Cam Lock x 60+2	C  8*30mm Dowel x 52+2	D  7*38mm Screw x 14+1
E  4*12mm Screw x 16+2	F  3.5*12mm Screw x 20+2	G  3*14mm Screw x 18+2	H  4*30mm Screw x 4+1
I  Backboard buckle x18+2	J  6*12mm Screw x 8+1	K  4*14mm Screw x 36+2	L  4*18mm Screw x 4
M  Shake Hands x 4	N  Activity Layer x4+1	O  wrench x2	P  Coil x 1
Q  Anchor x 5	R  hinge x4	S  hinge x2	T  Slide Rail x2
U  Universal Wheelx 2	V  Universal Wheelx 2	W  With Lampx 1	X  Screw x 8

 1.

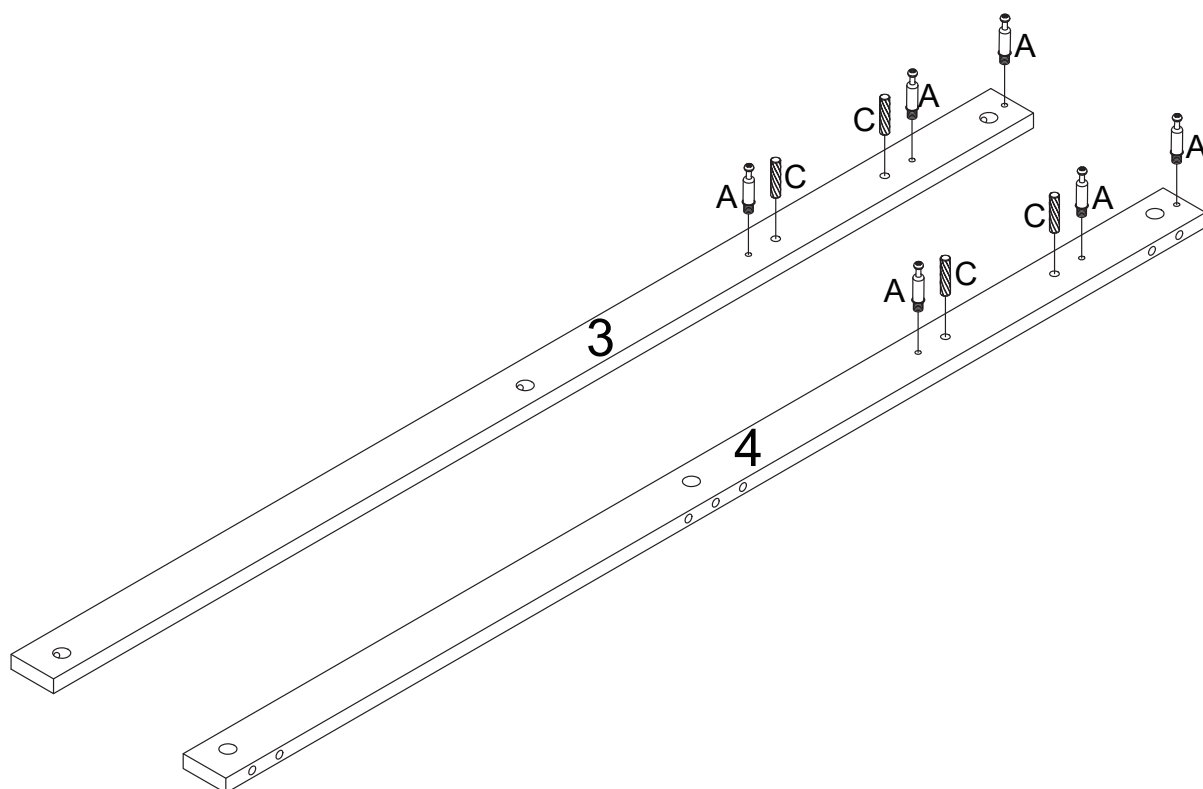


Ax6

 

Cx4



 
2.

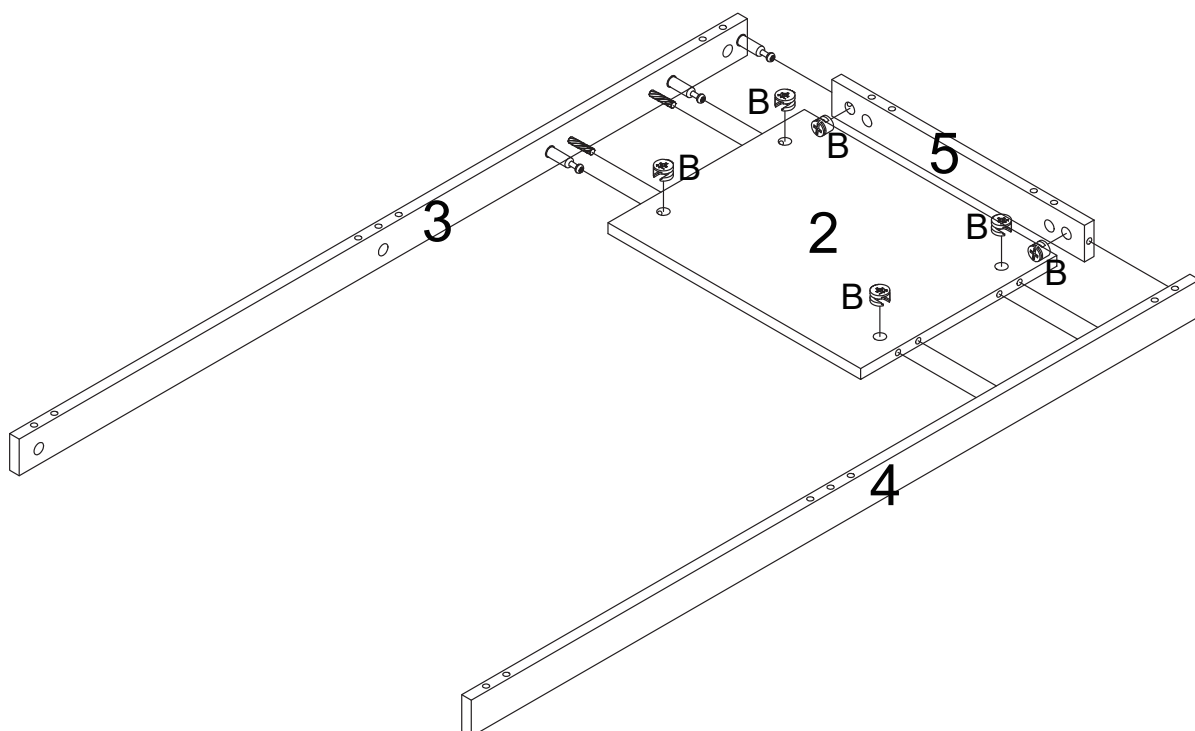


Bx6



 3.

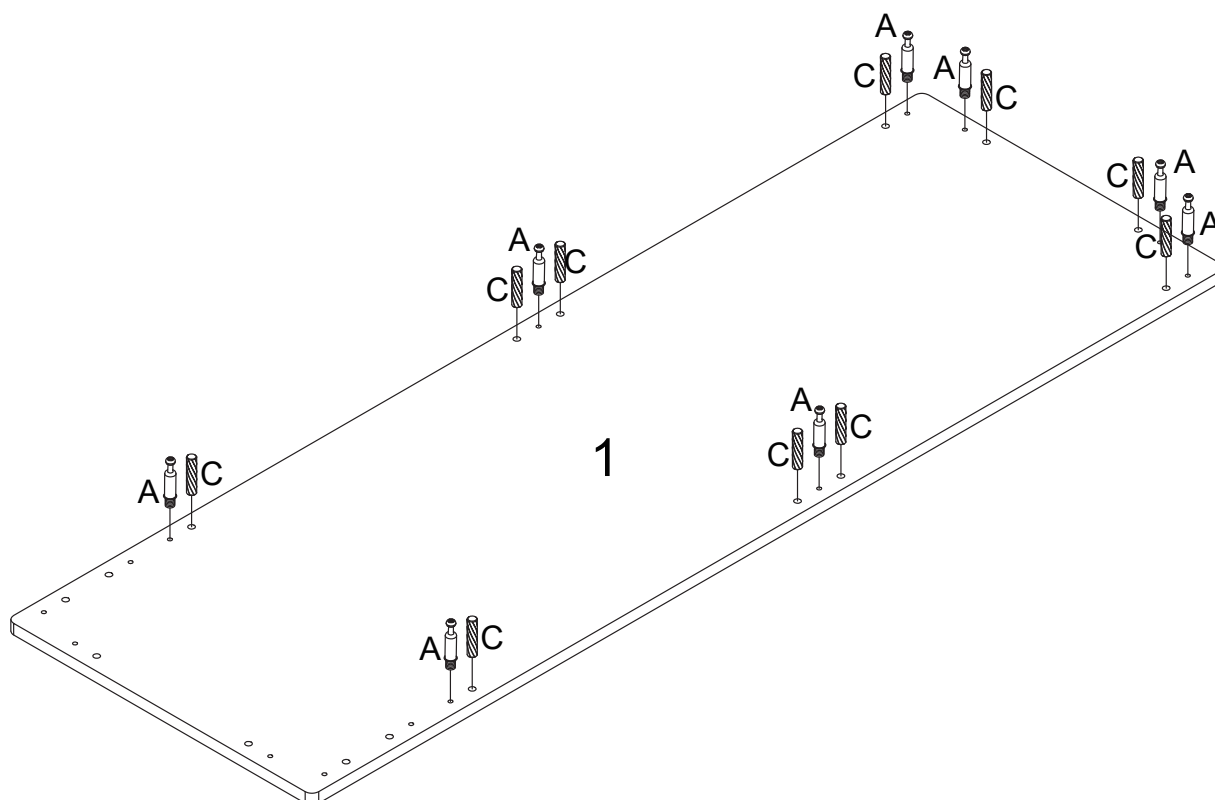


Ax8

 

Cx10



 
4.

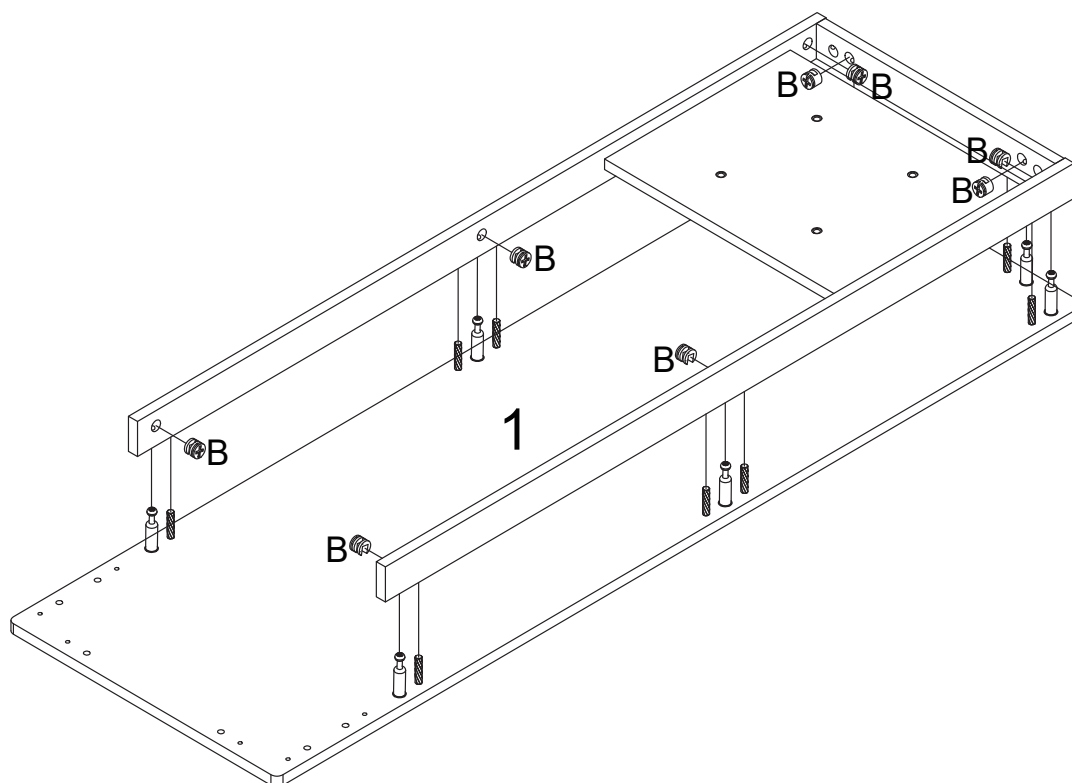

Bx8



 5.

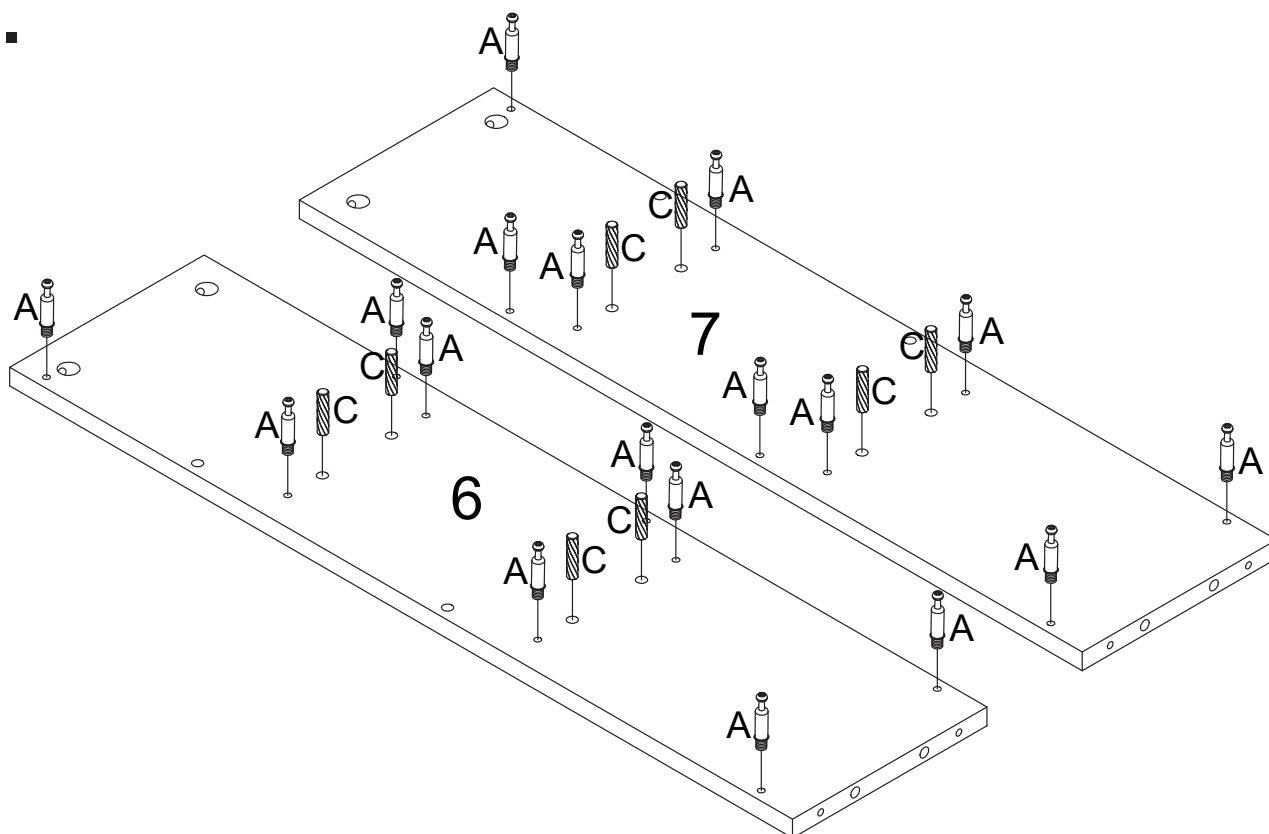


Ax18




Cx8



 6.

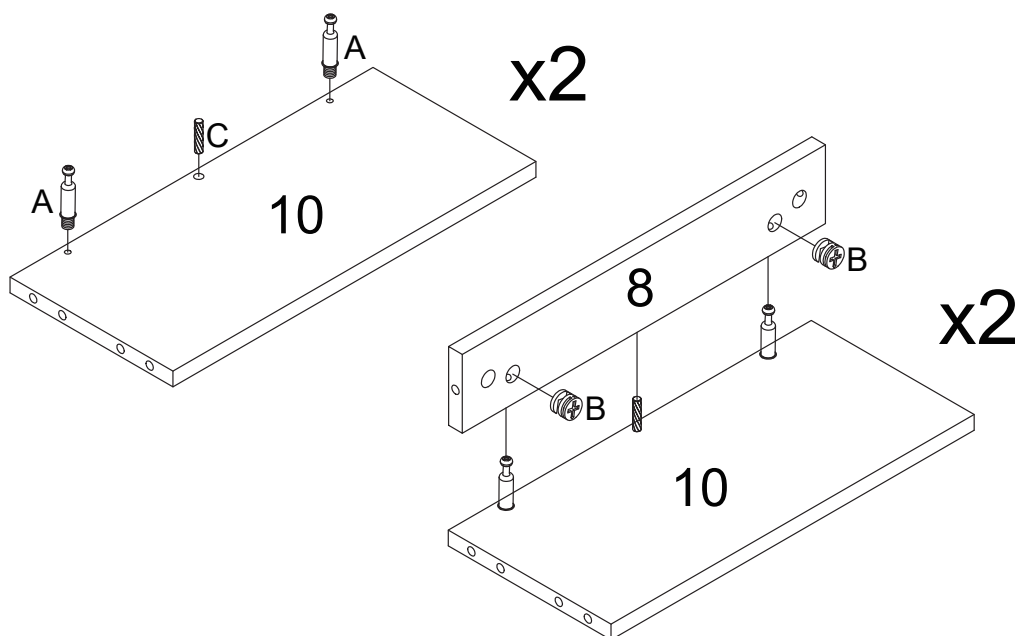

Ax4

 


Bx4



Cx2



 
7.

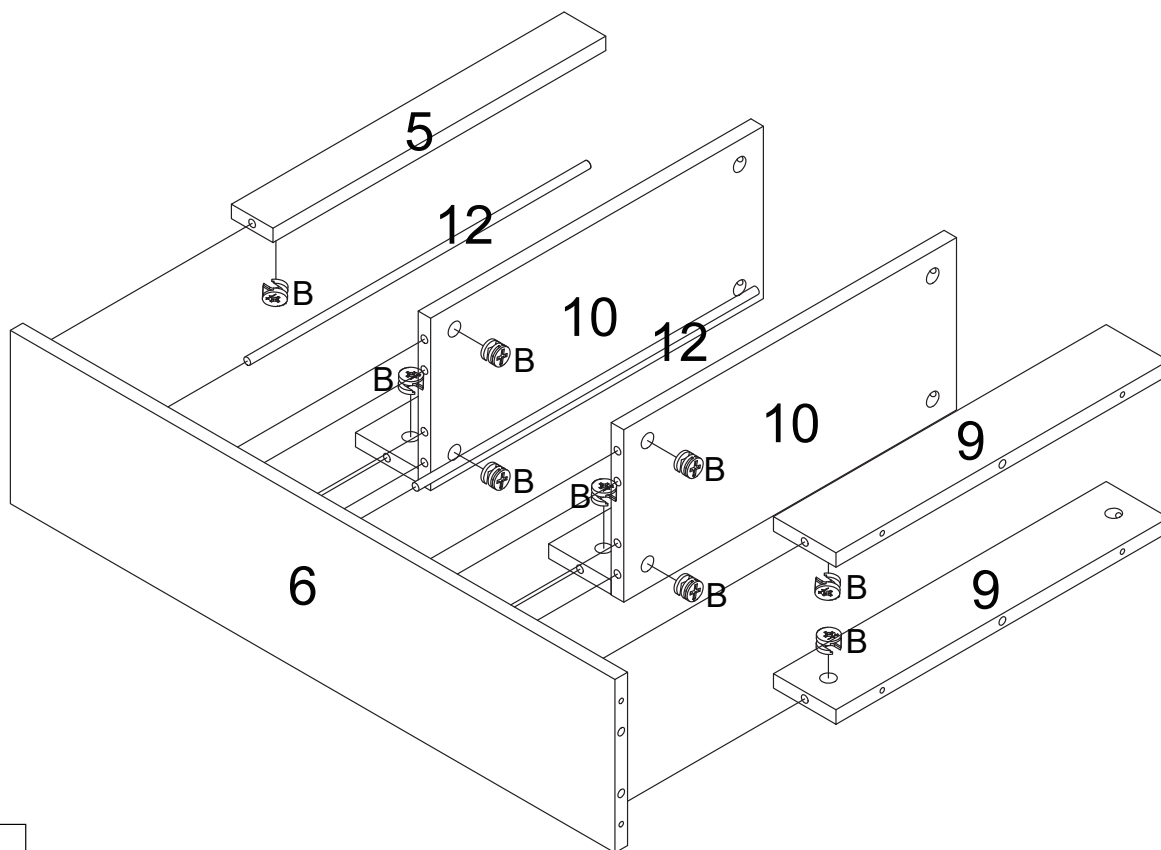

Bx9



 
8.

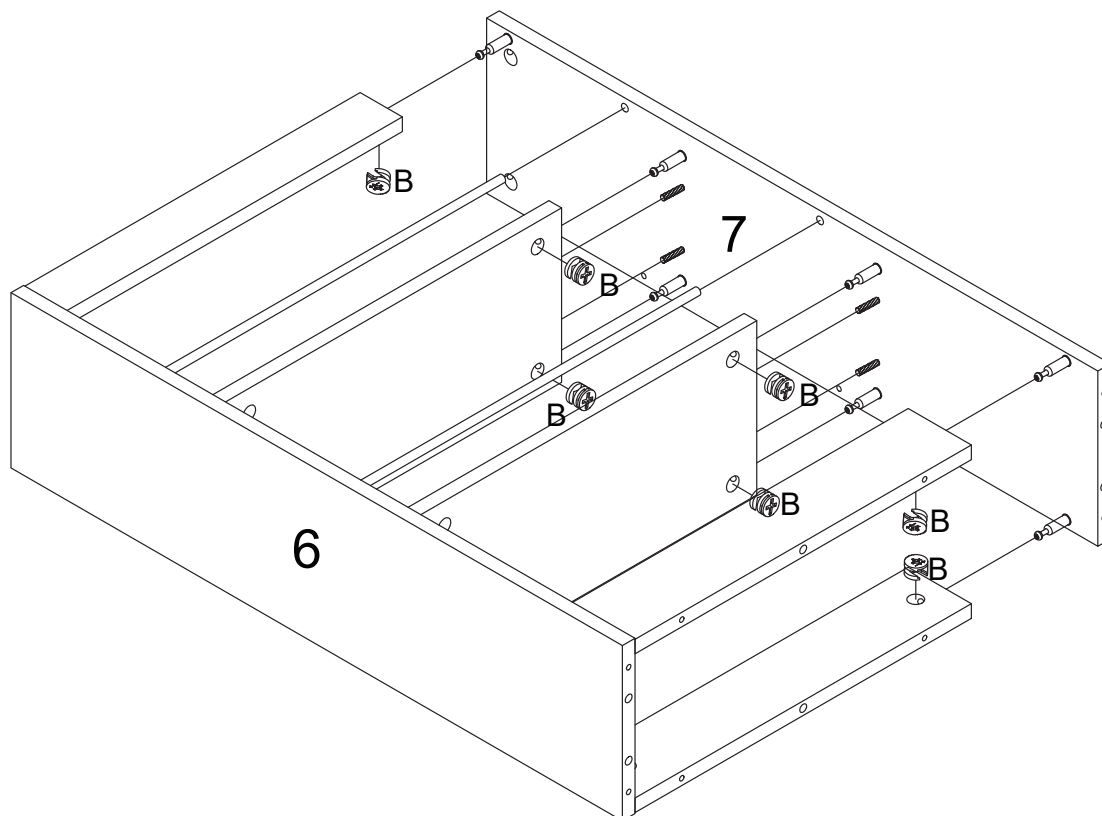

Bx9



 9.

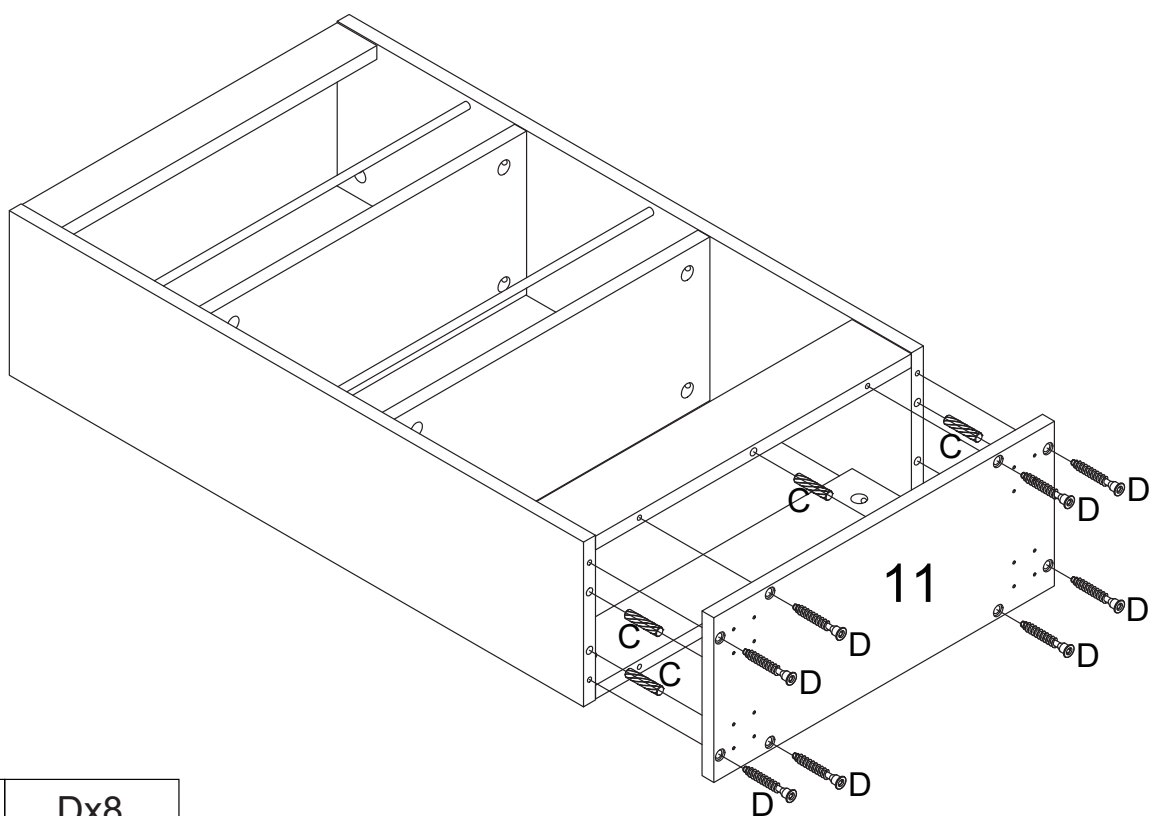


Cx6




Dx8



 10.

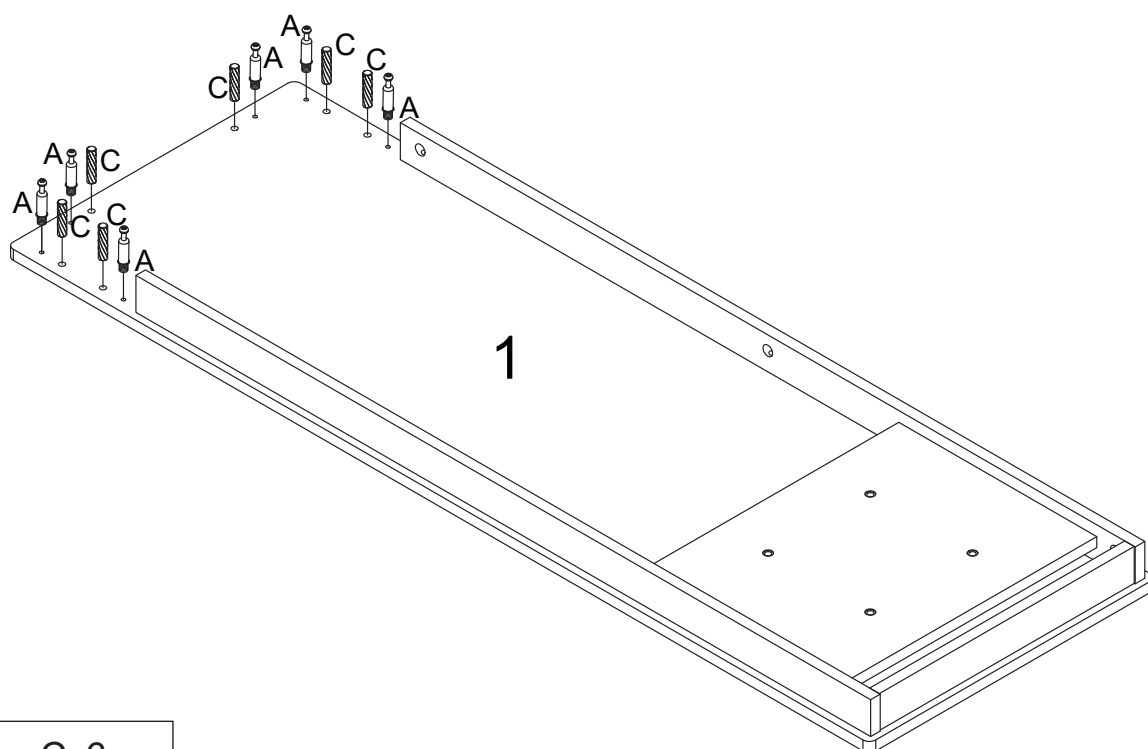


Ax6

 

Cx6



 
11.

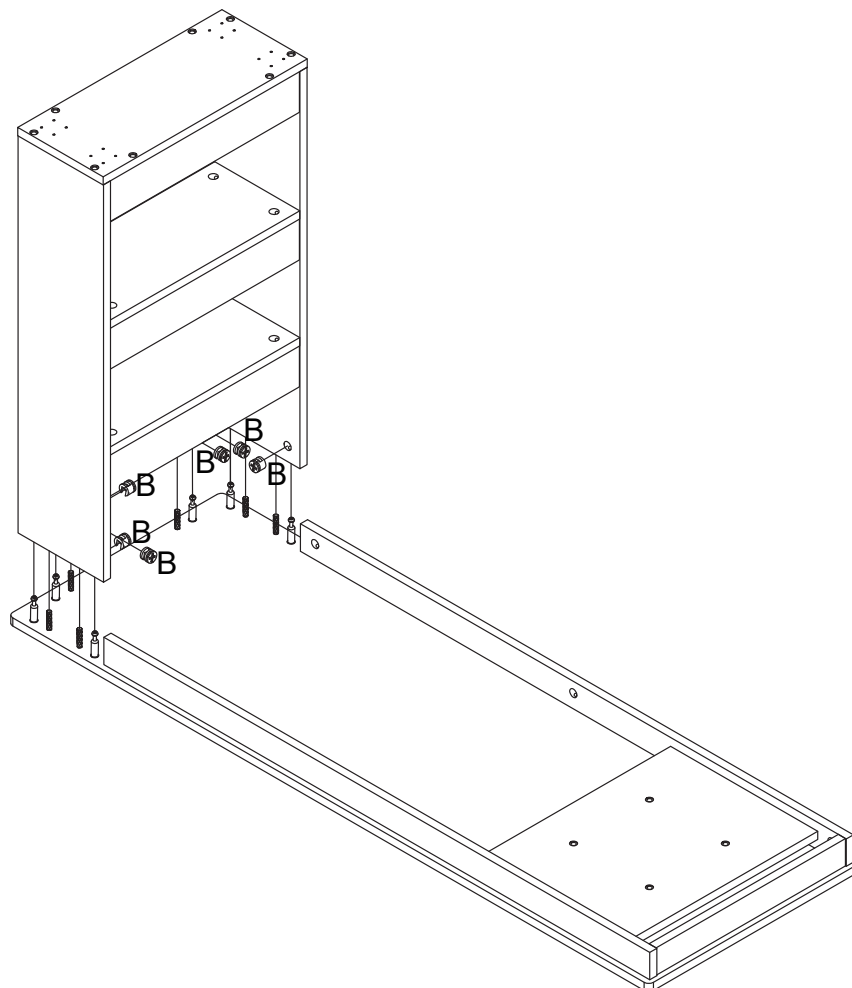

Bx6



 12.

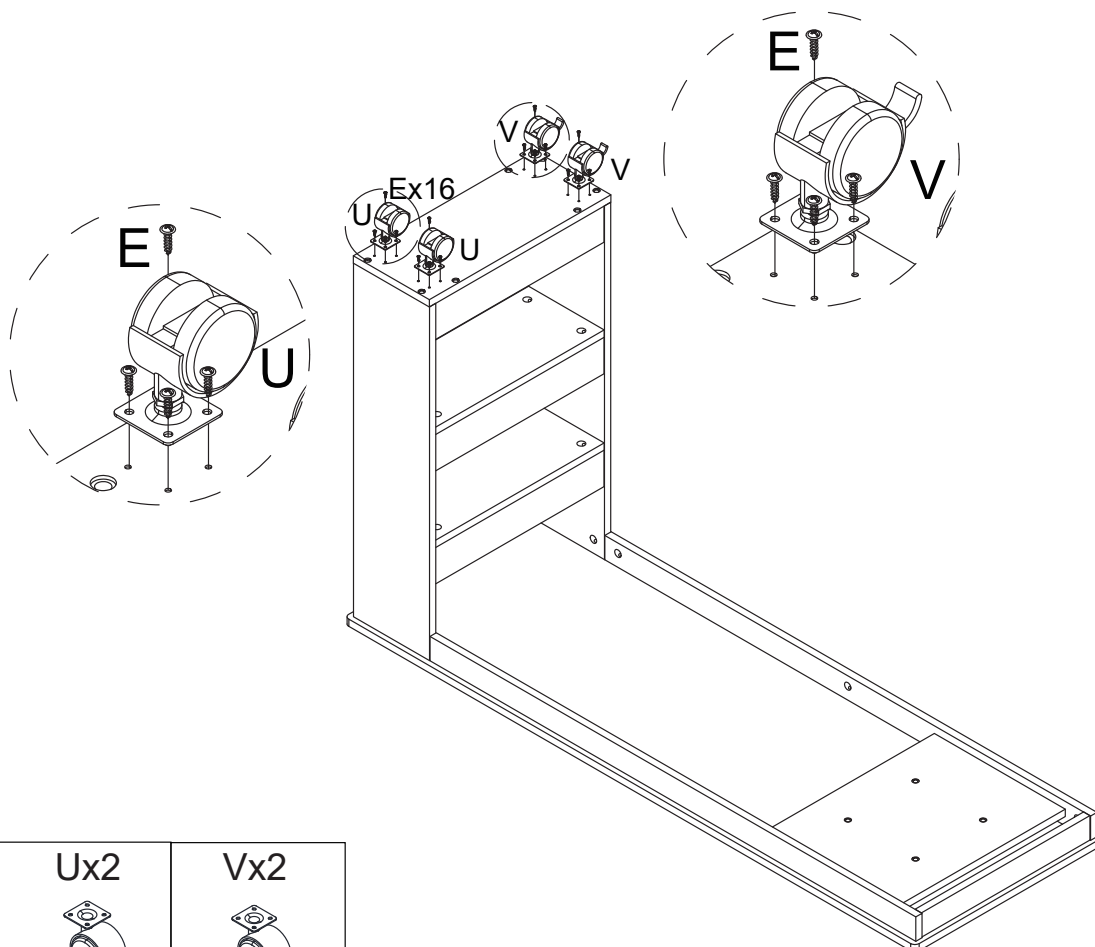

Ex16







Ux2




Vx2



    13.

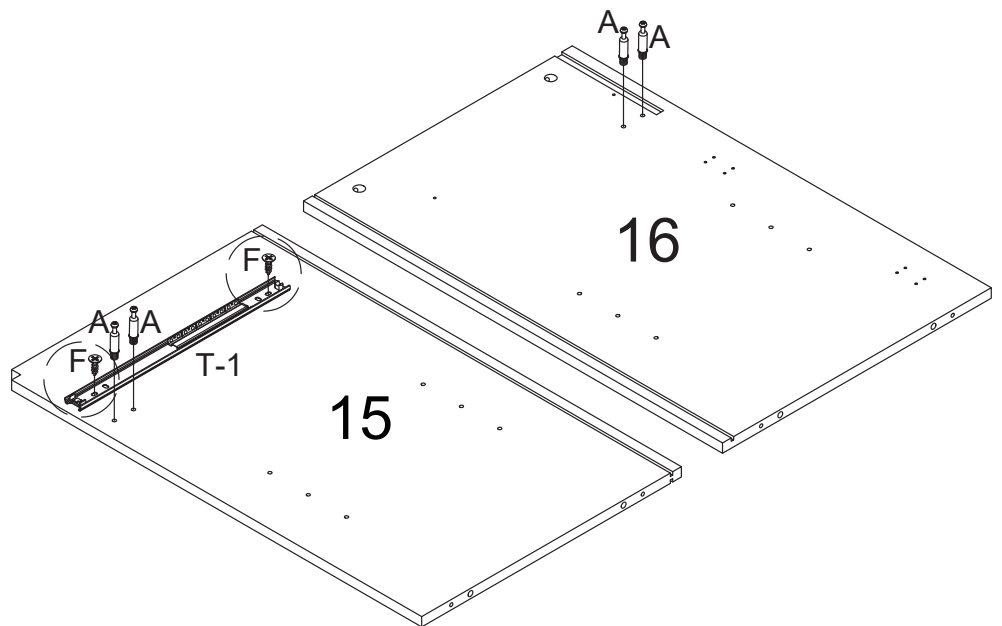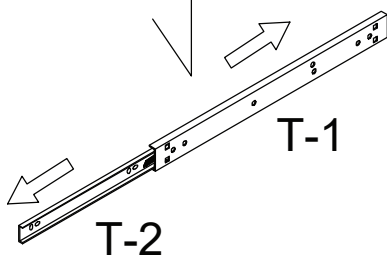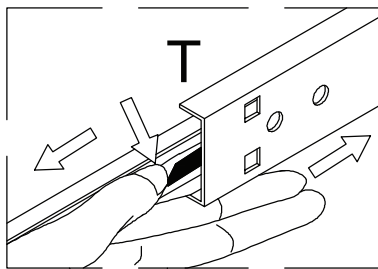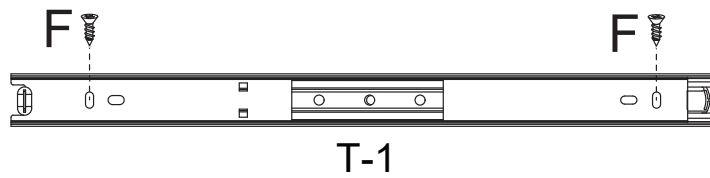


Ax4

 


Fx2



 Tx1



 
14.

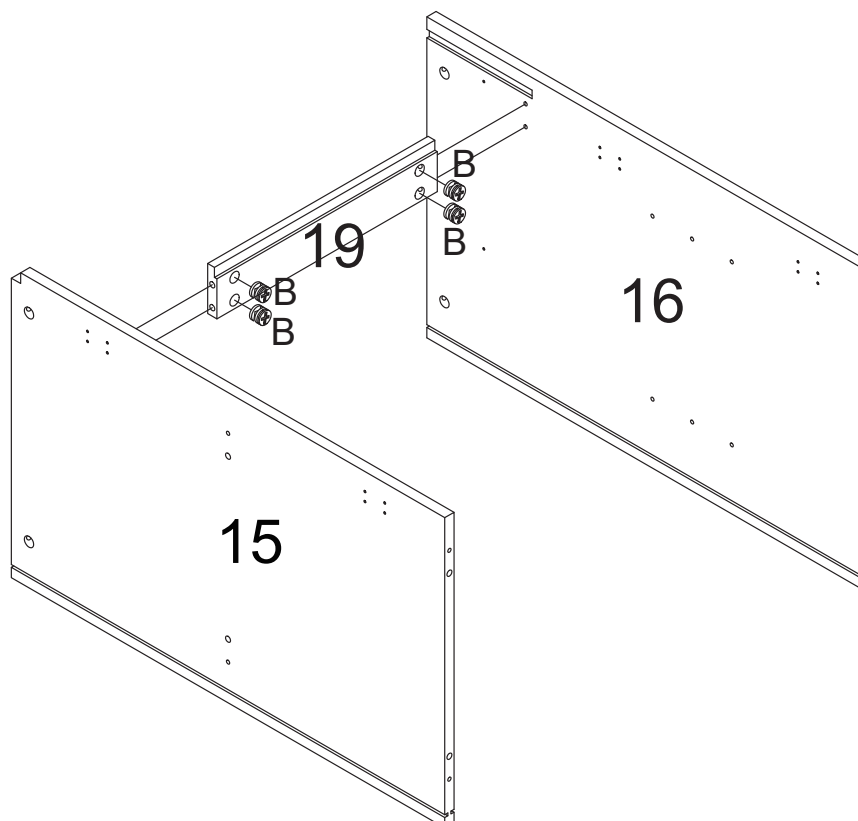


Bx4



 15.

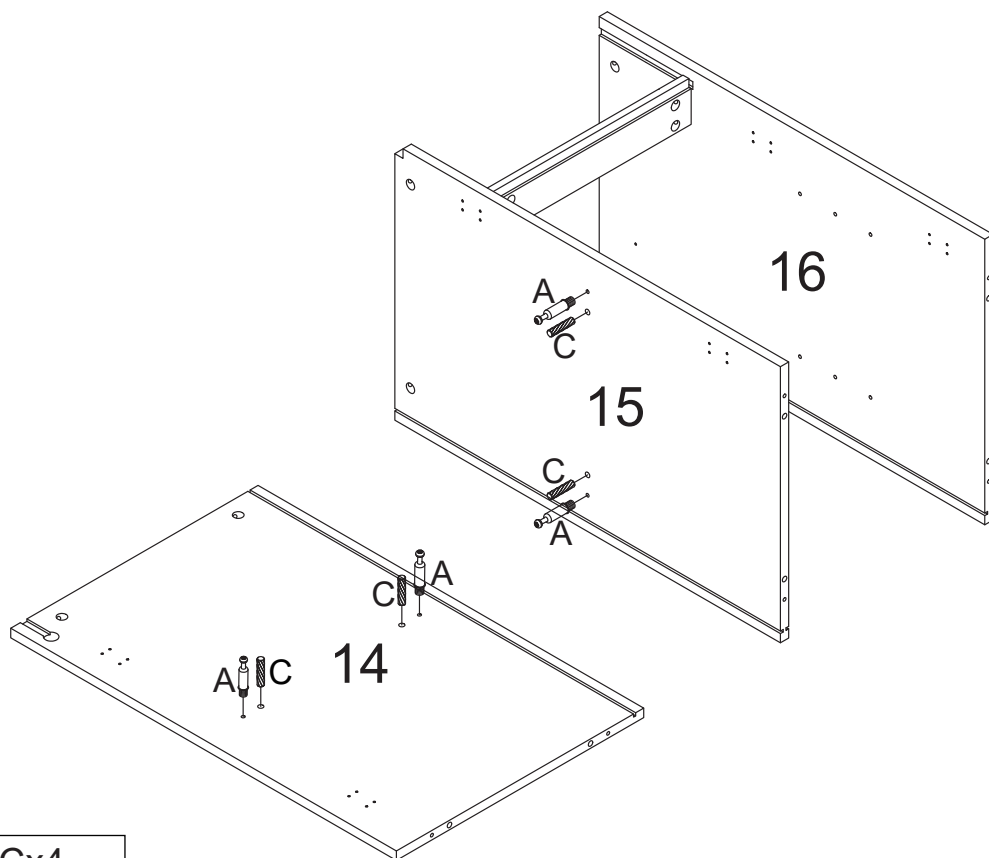


Ax4

 

Cx4



 
16.

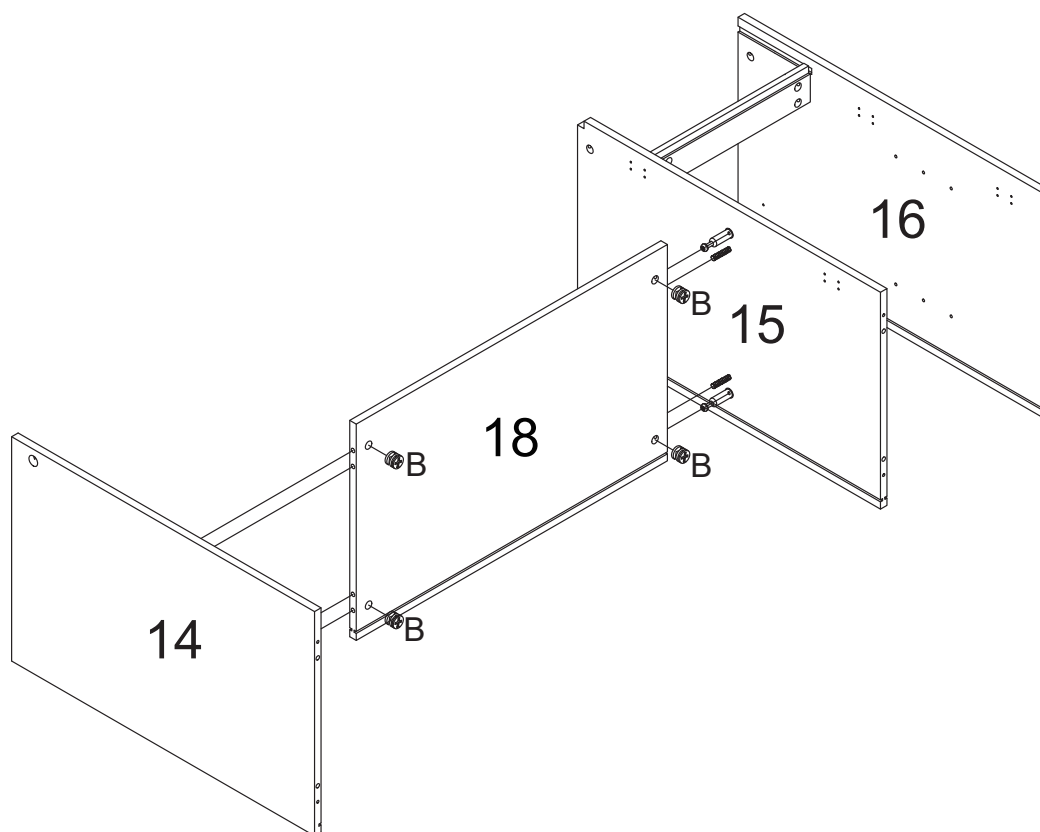


Bx4



 17.

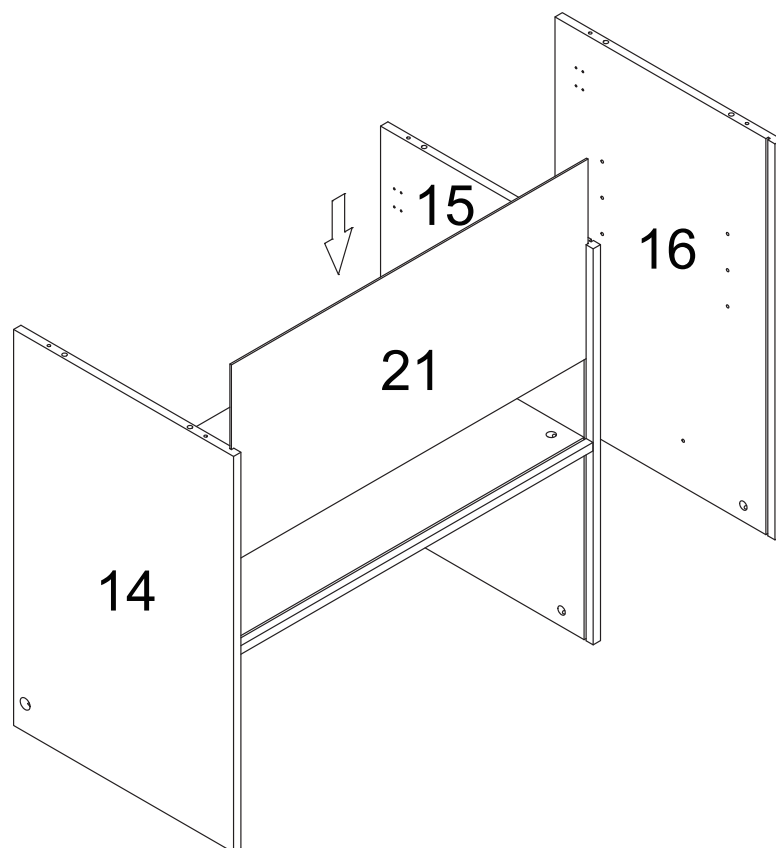

 18.

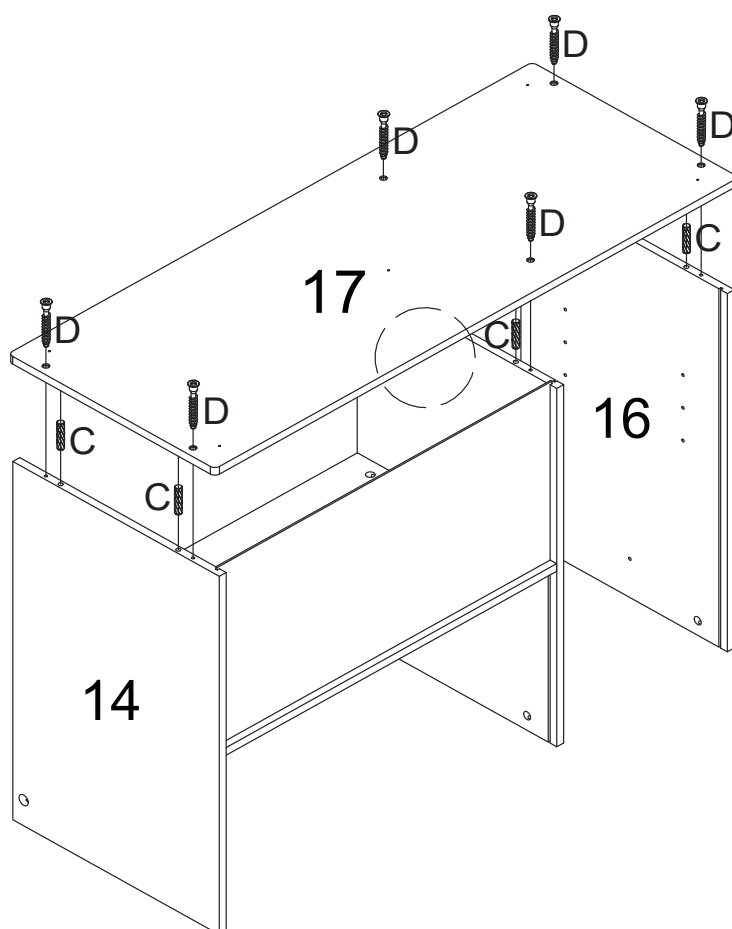


Cx6



Dx6



 
19.

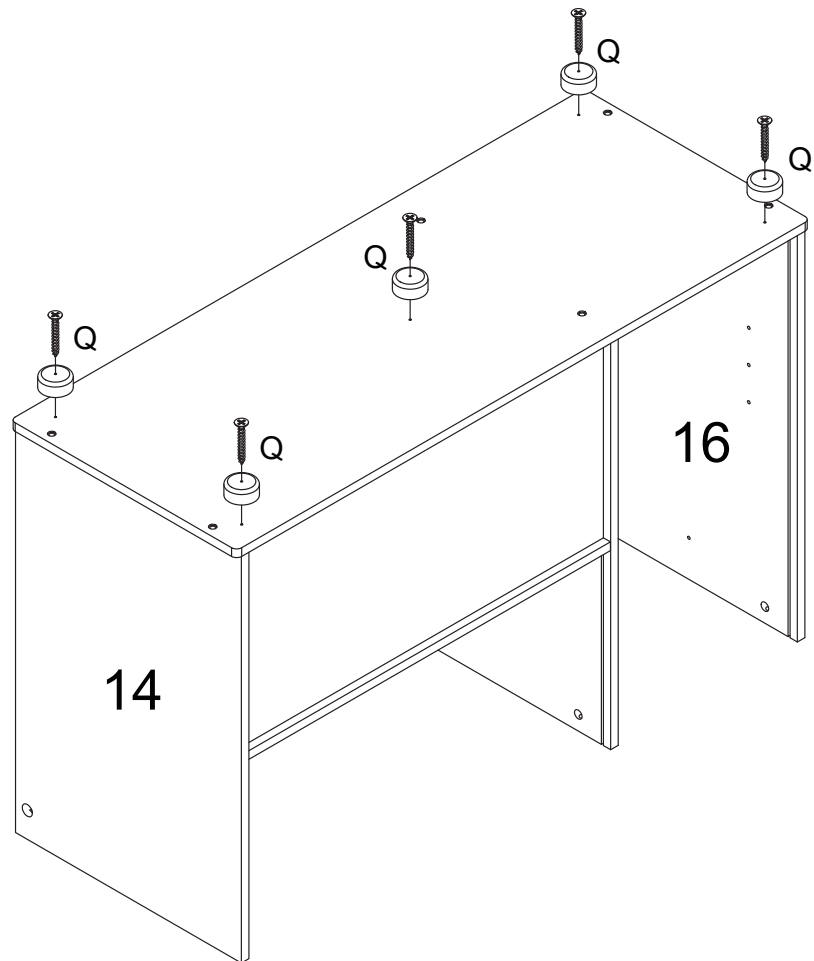


Qx5



 
20.

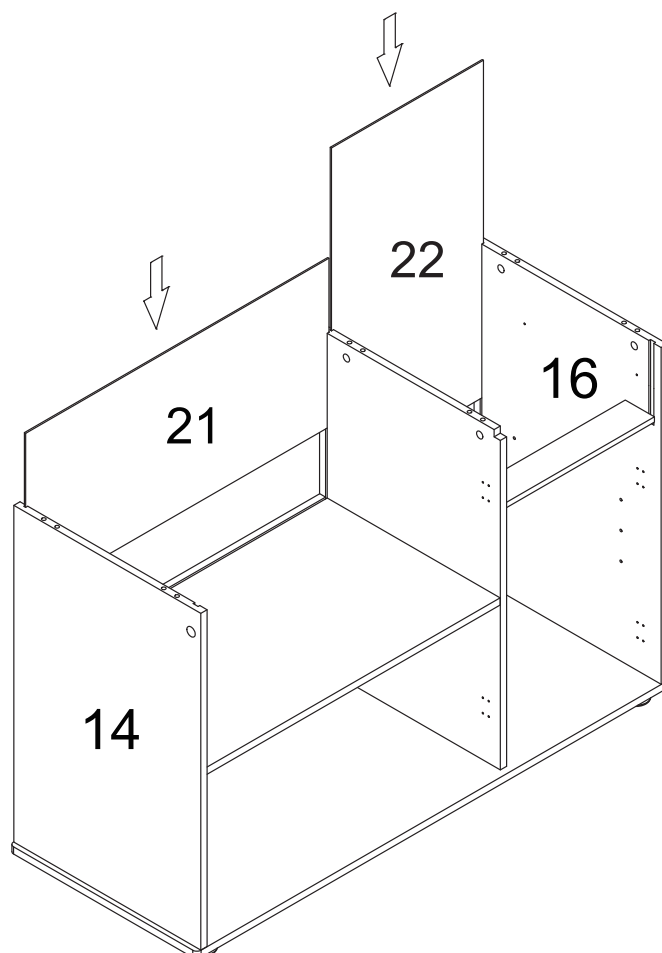

 21.

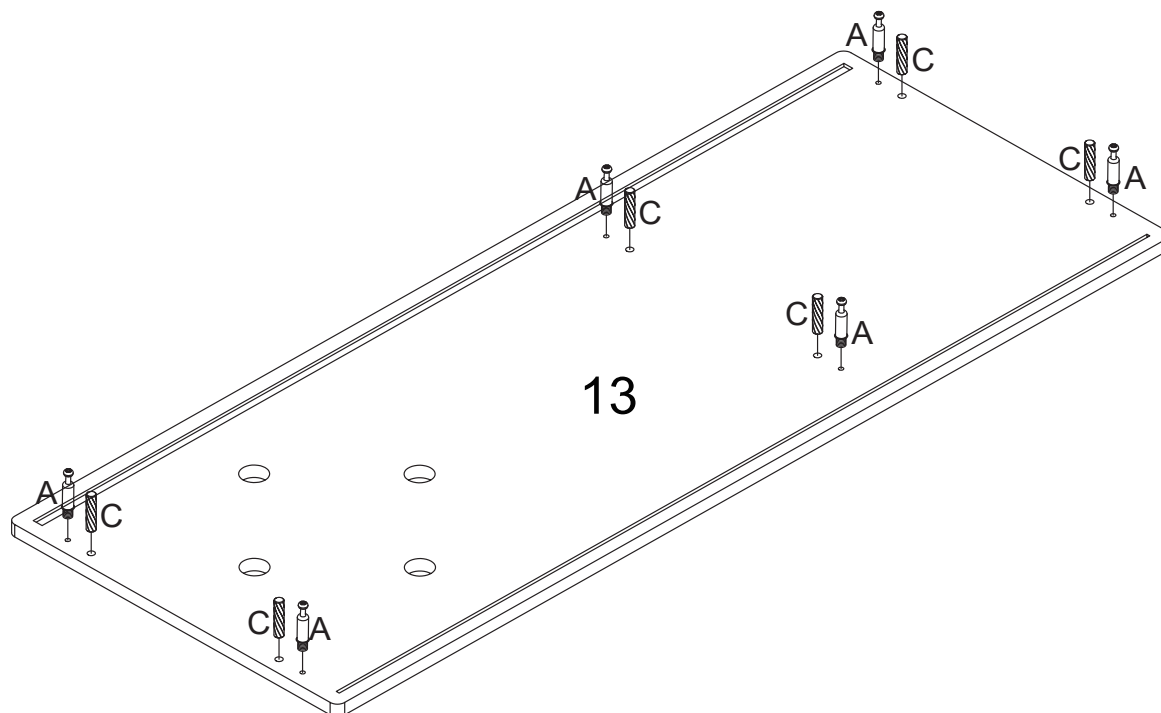


Ax6

 

Cx6



 22.

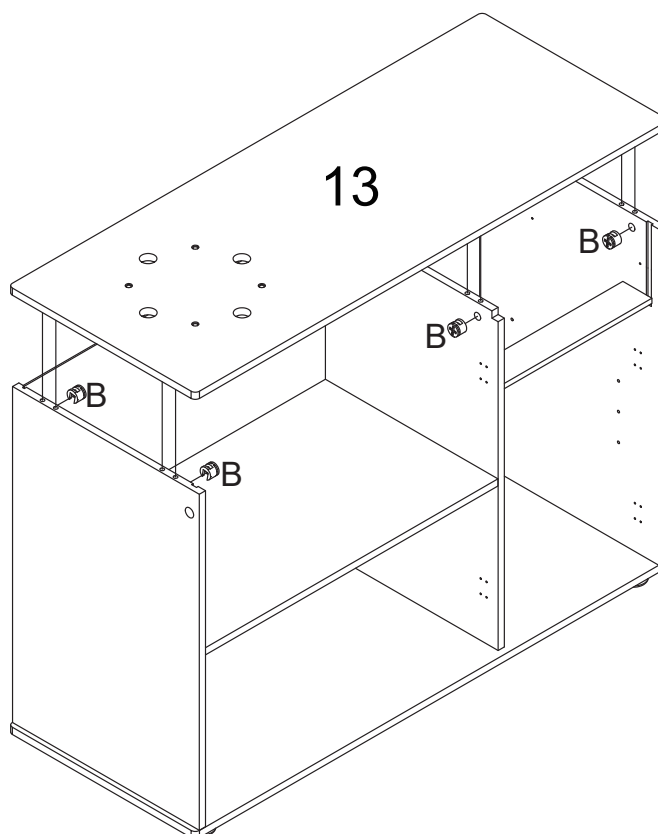


Bx6



23.

 The backboard buckle is installed inside the cabinet

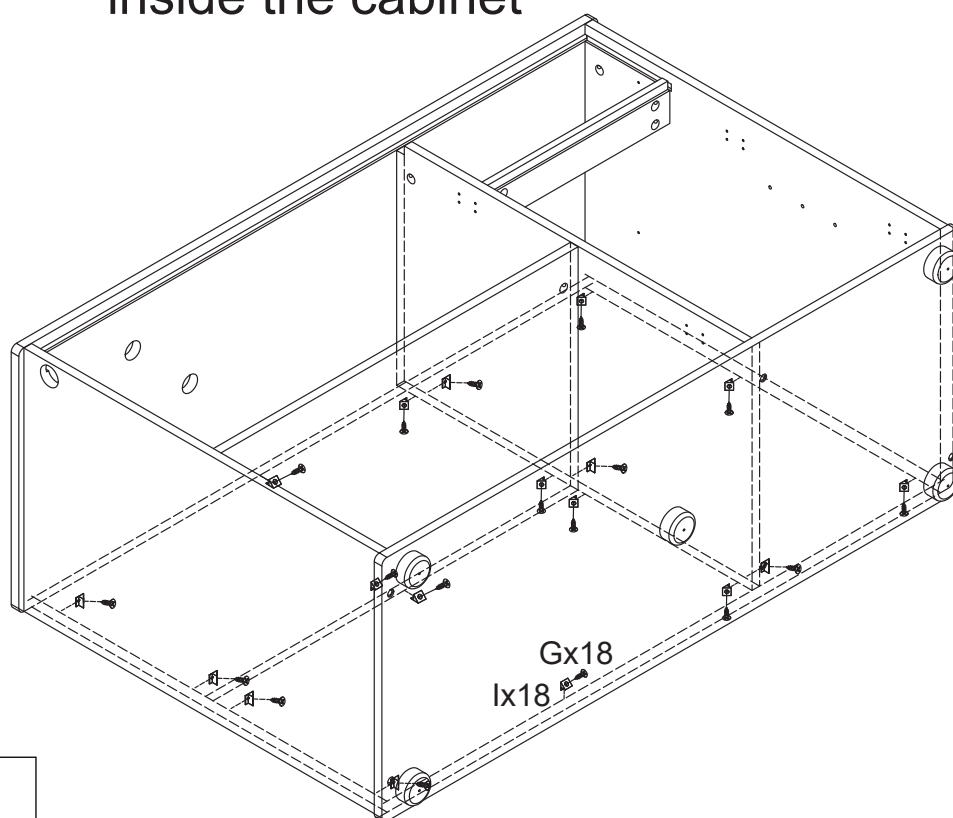


Gx18



Ix18



 
24.

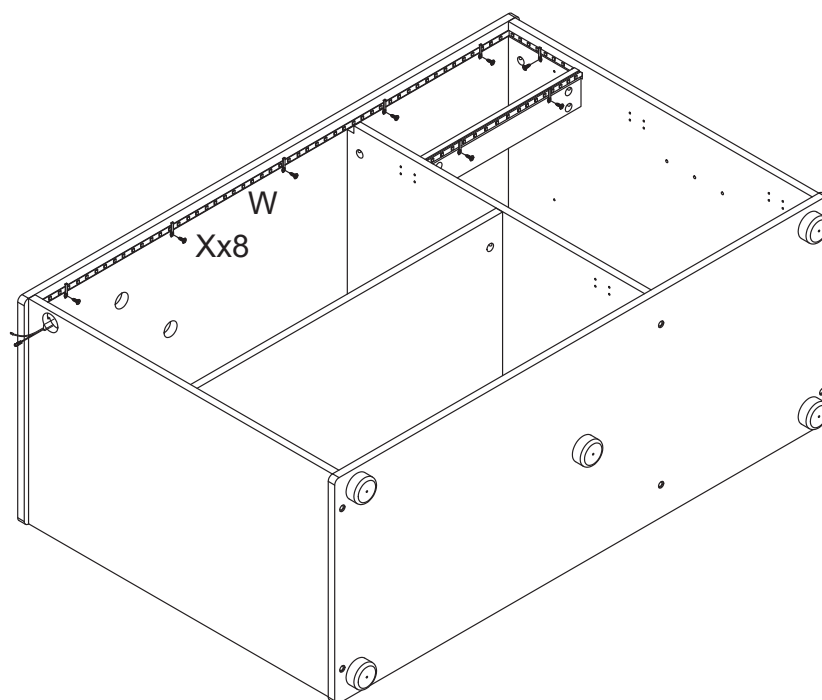

Wx1



 
Xx8

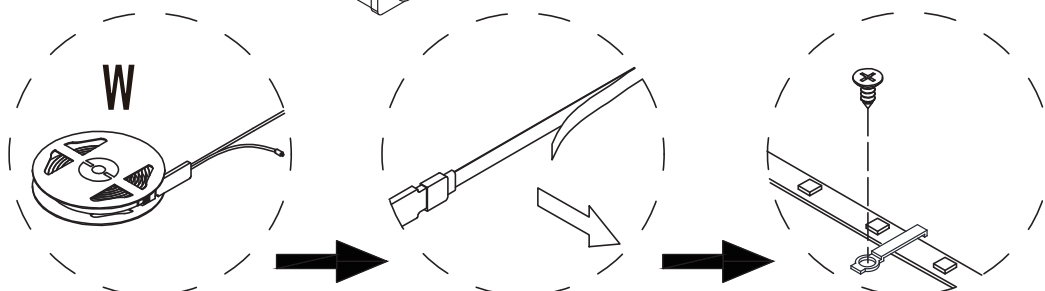

25.



 T-1

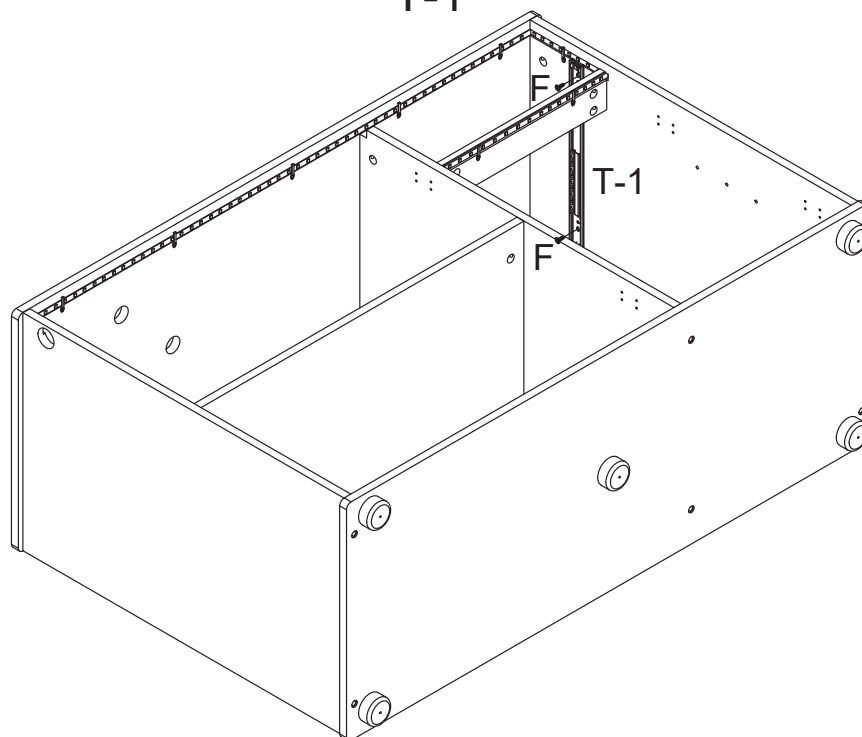


Fx2

Tx1



 26.

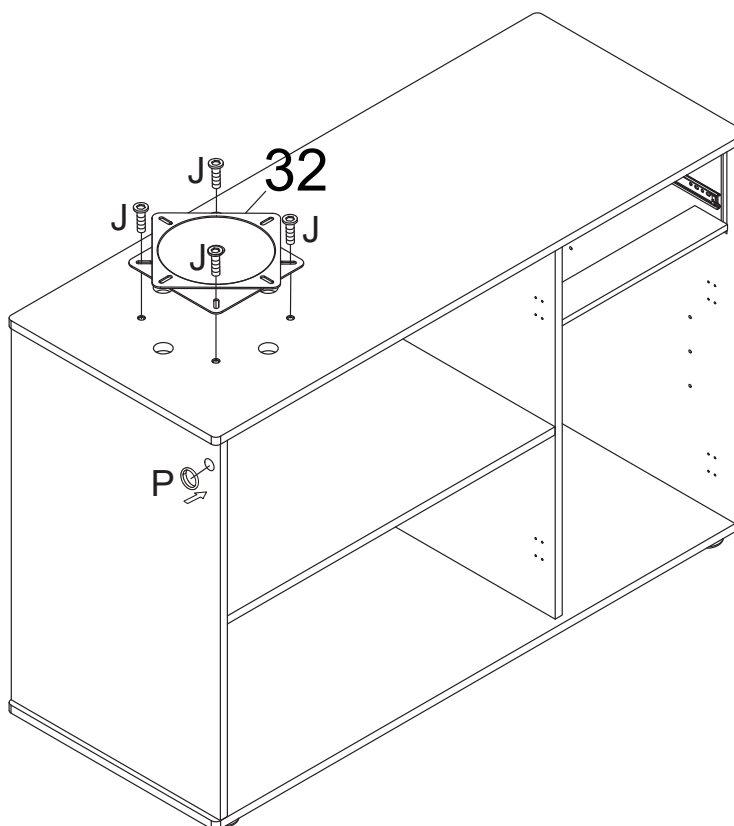


Jx4

Px1



27.

 When assembling the upper half of section 1 with the lower half of section 13, be sure to align the four through holes of plate 13 with the turntable holes and the pre embedded holes of the upper half before assembling

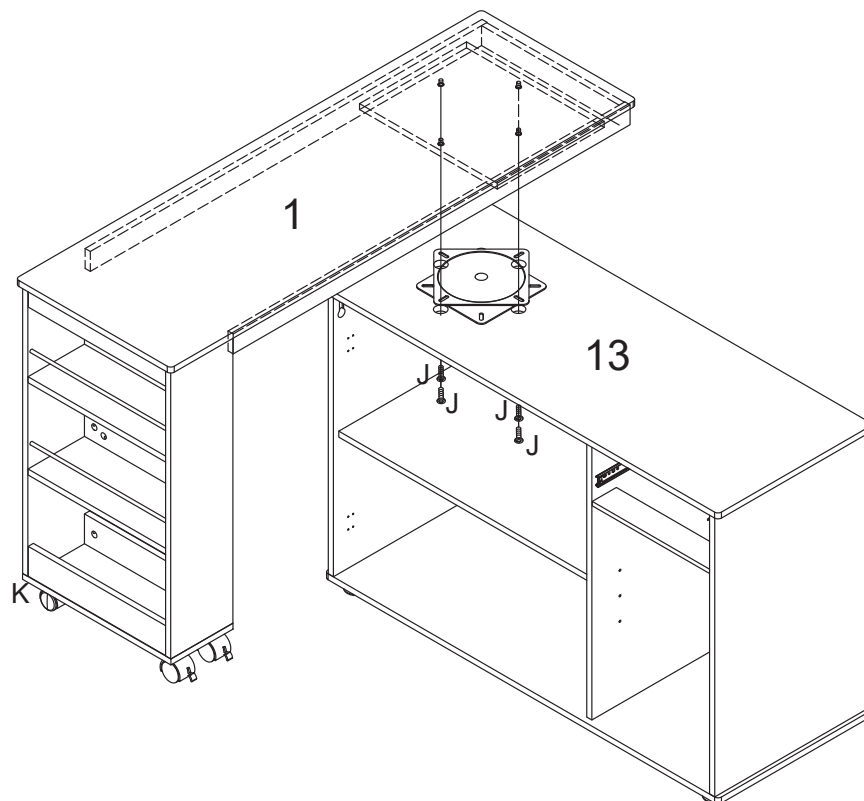


Jx4



28.

 Please remove the film covering component #26 before assembly

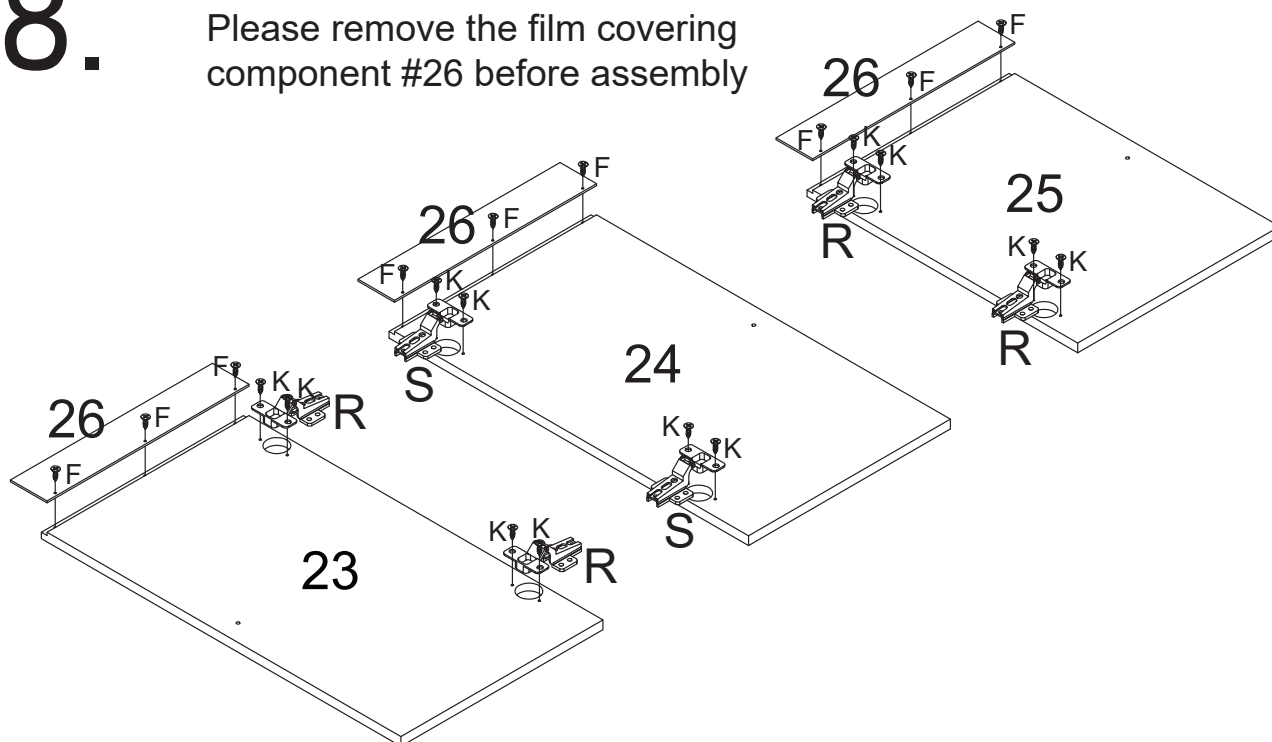

Fx9



Kx12




Rx4



Sx2



 
29.

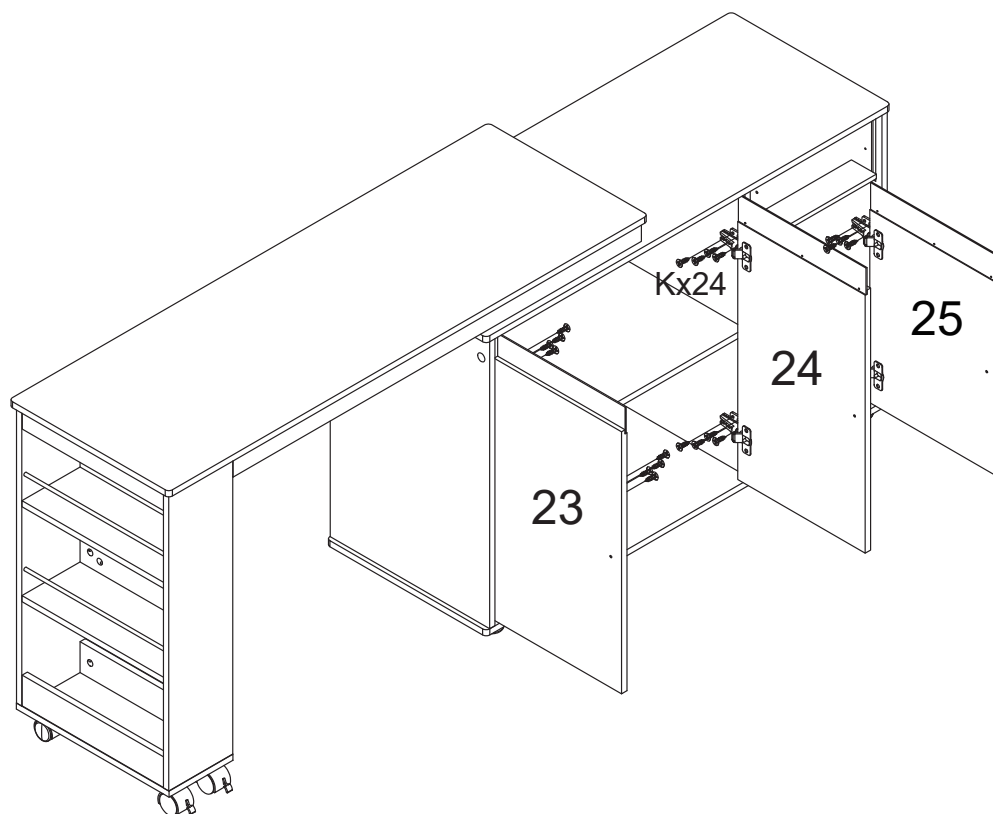

Kx24



 30.

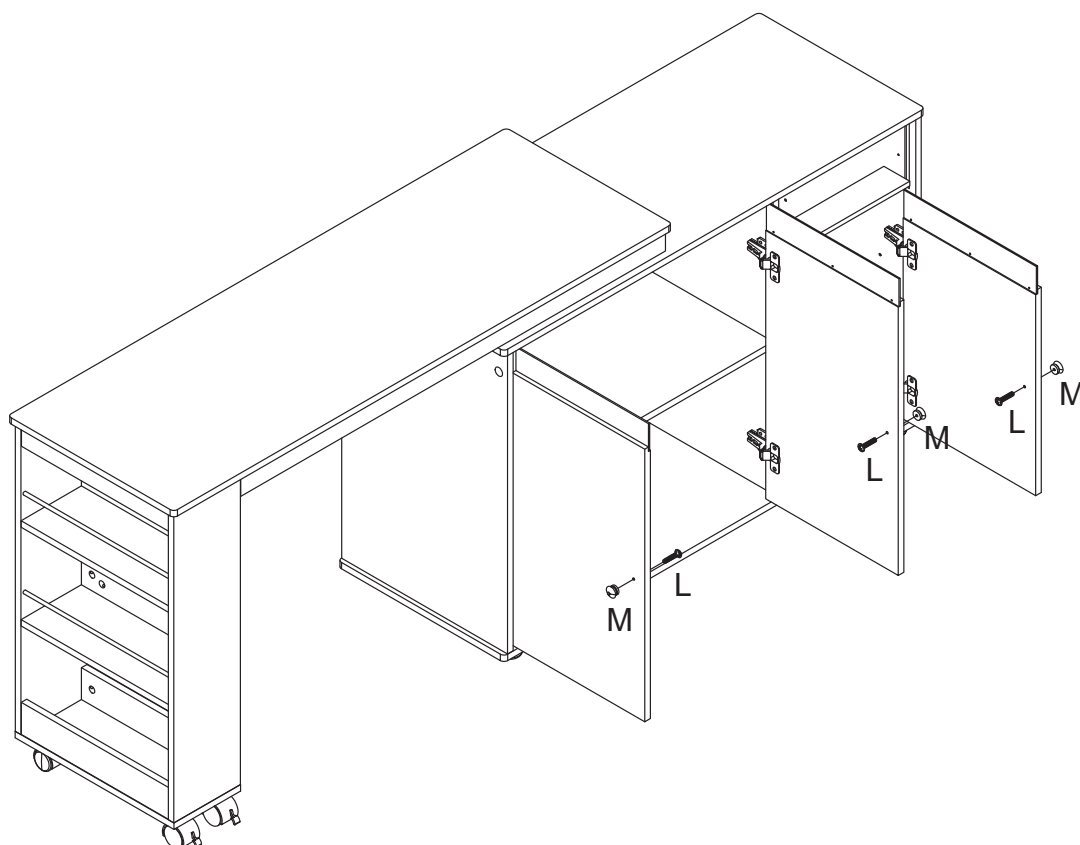


Lx3



Mx3



 
31.

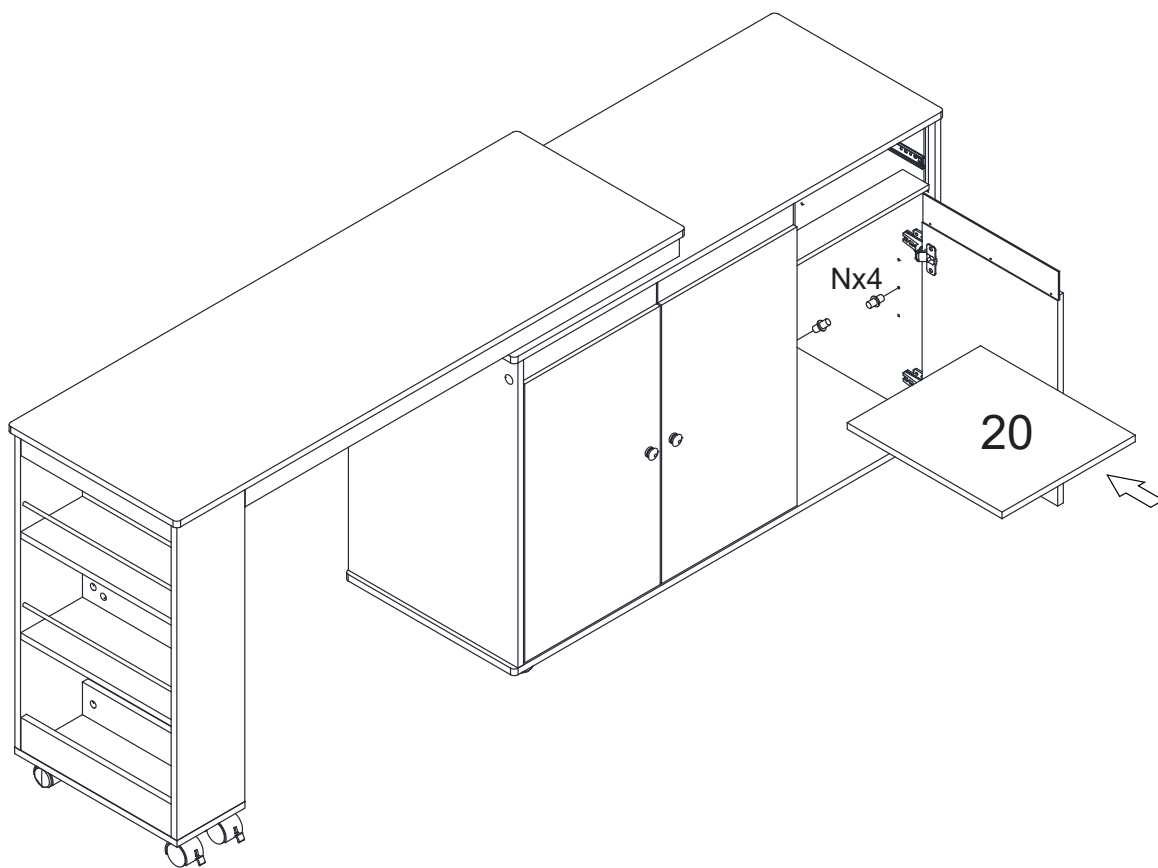

Nx4



 32.

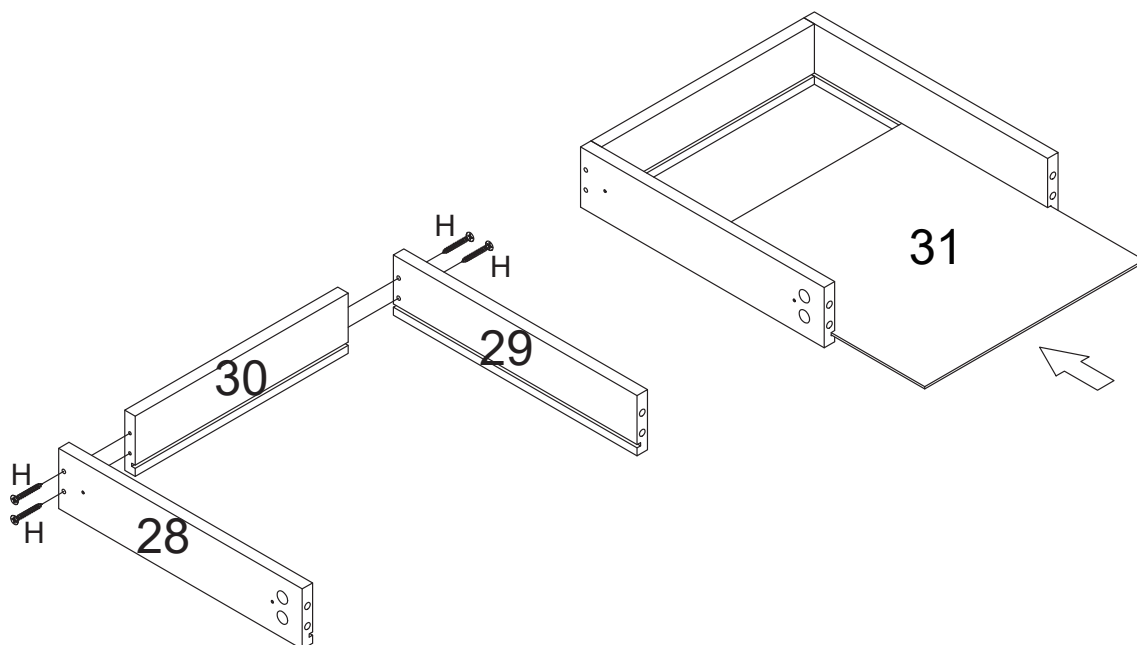


Hx4




33.

 Please remove the film covering component #26 before assembly

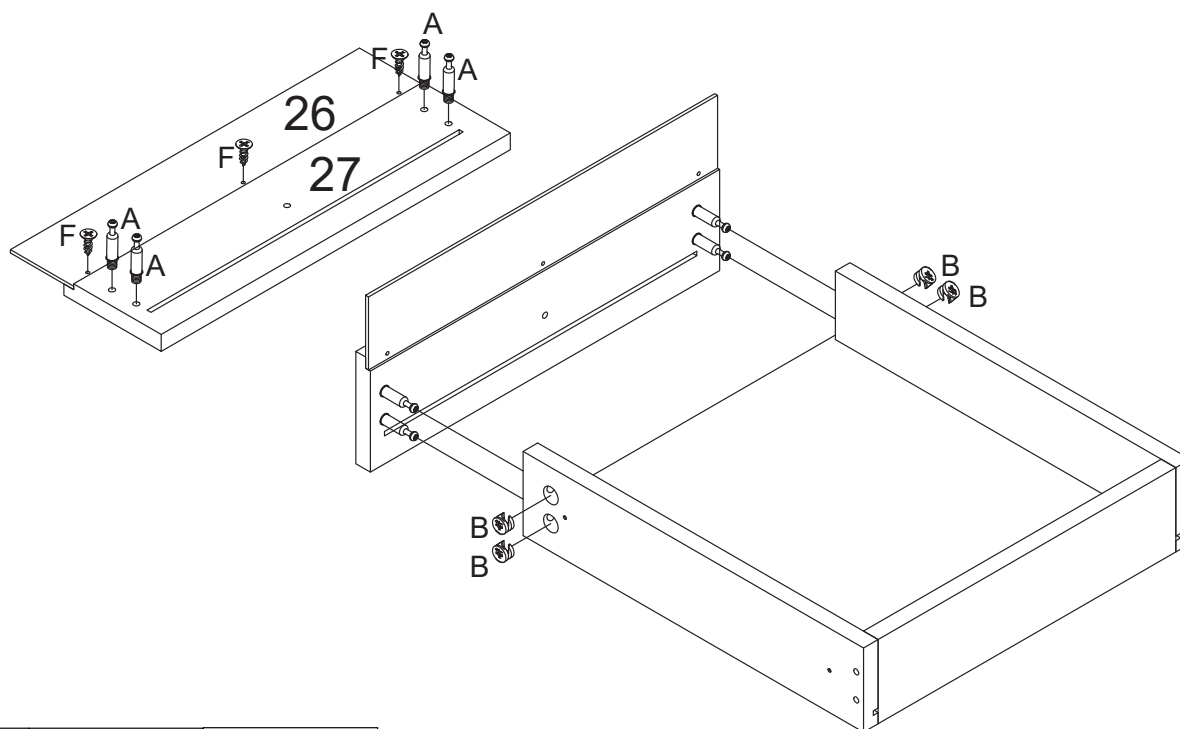

Ax4

 


Bx4



Fx3



 34.

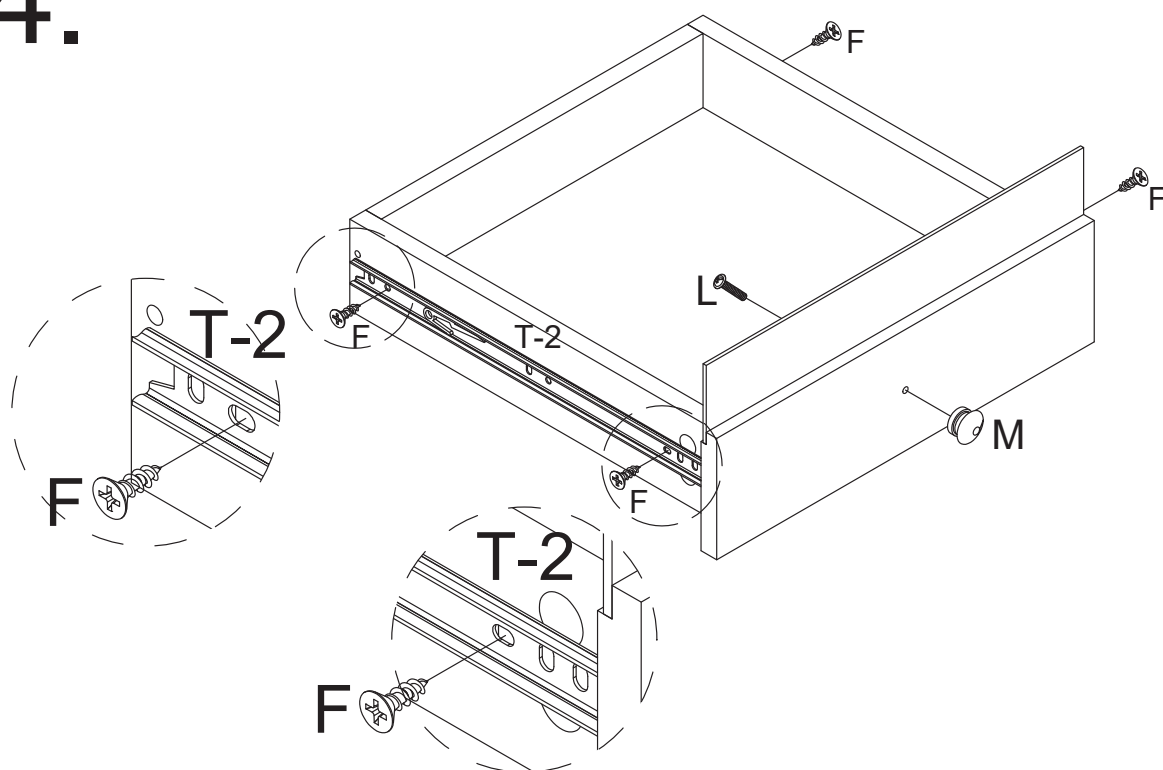

Fx4



Lx1




Mx1




Tx2




 
35.

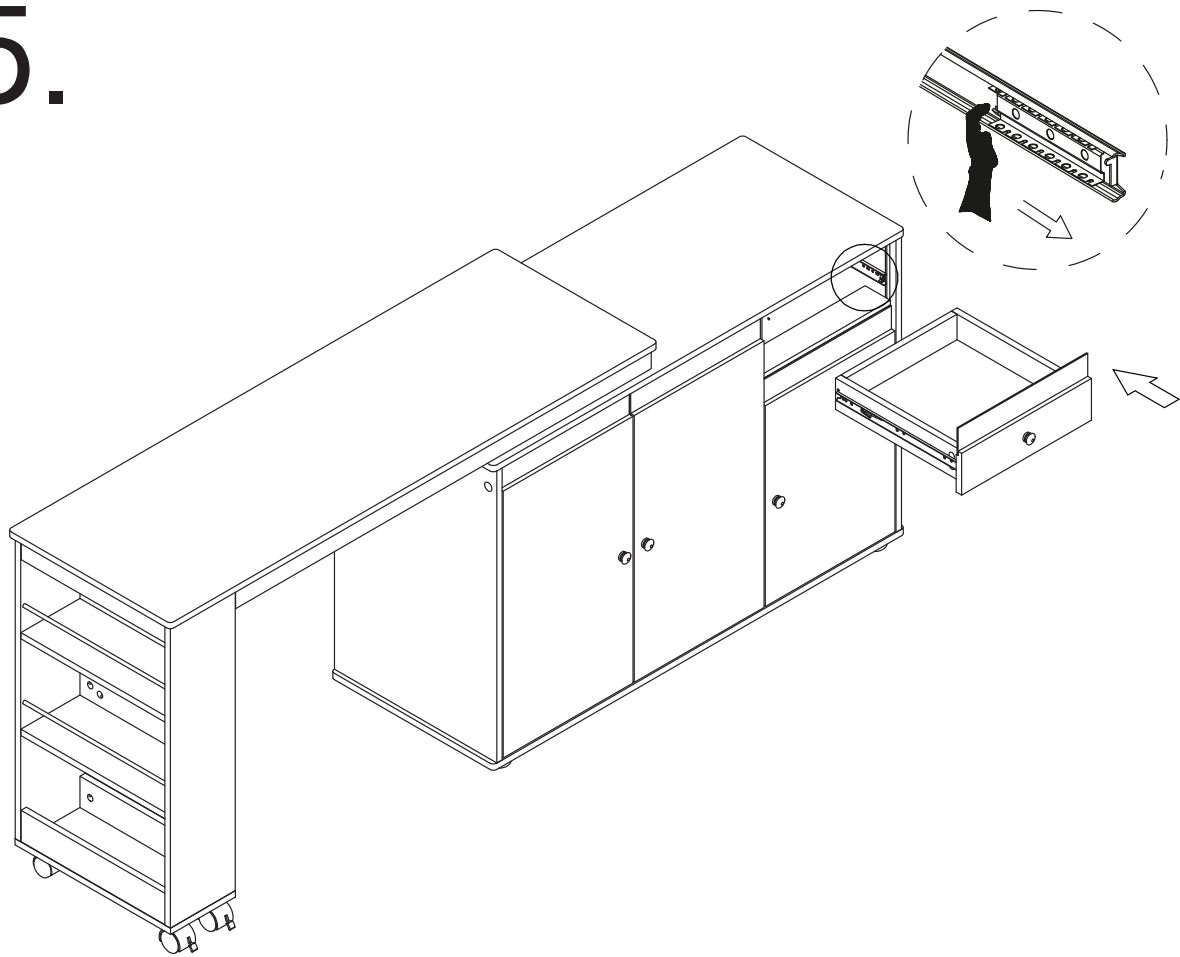

 
36.

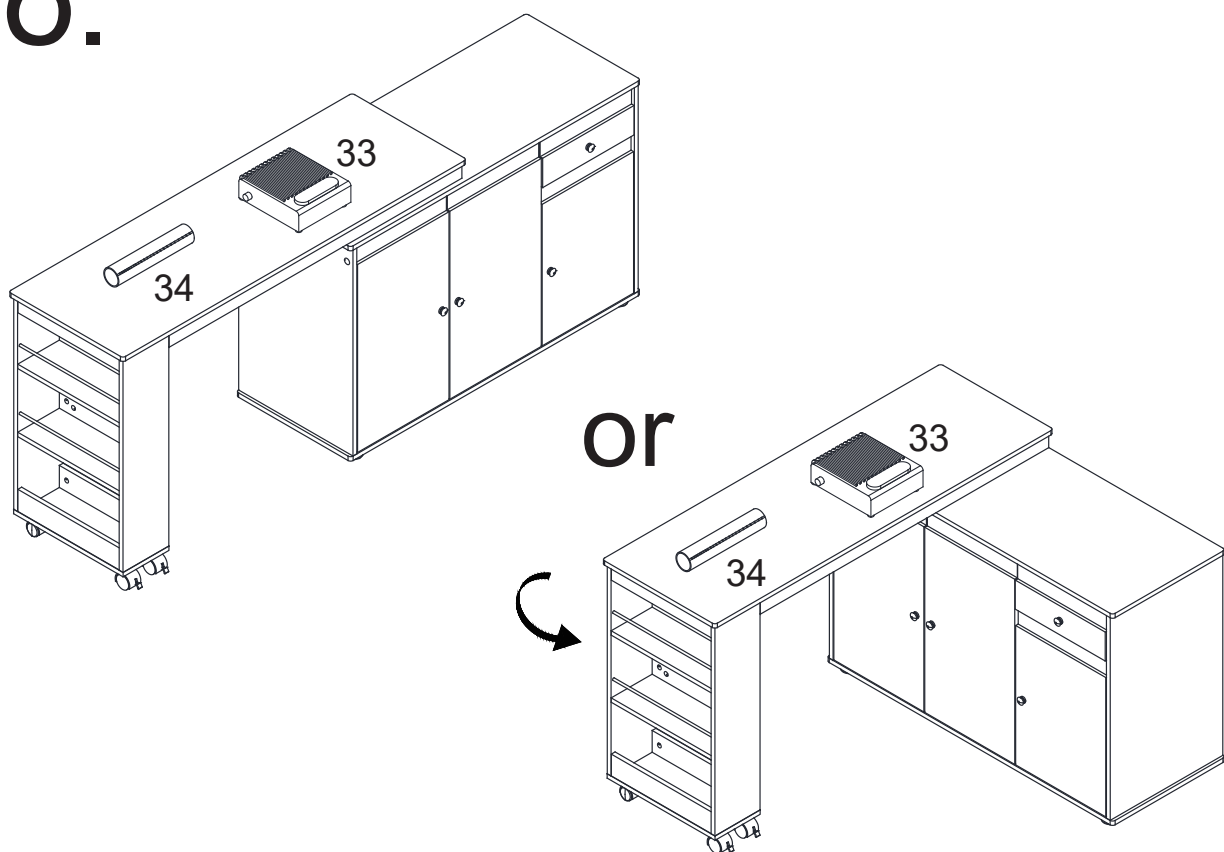

  - Connected power adapter to the RGB control box as below.
 - Specifications of battery:cr2025 3v
 - LED lamp with effective remote control distance of 5 meters
-

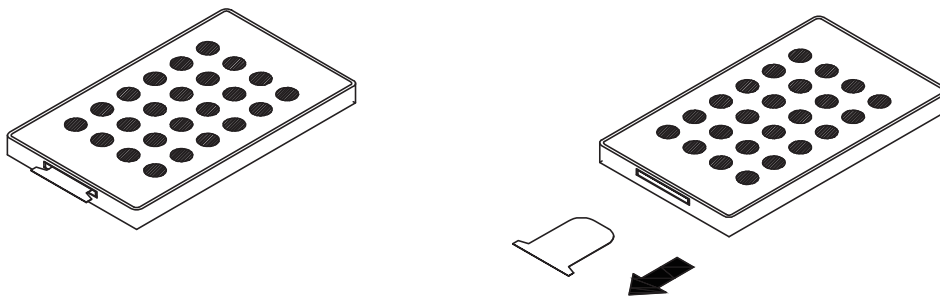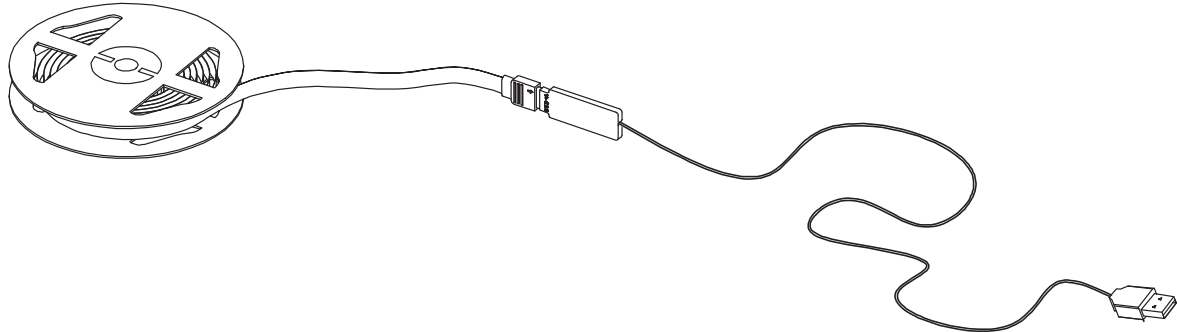

 
2.Take out the remote control gasket

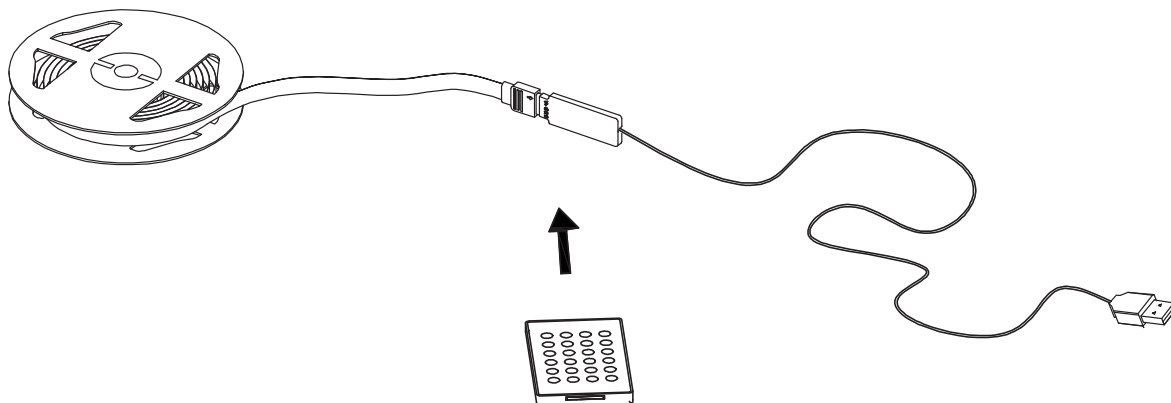

3.Align remote controller to the RGB Control box to adjust the color mode

Step 1

 
Open the door.

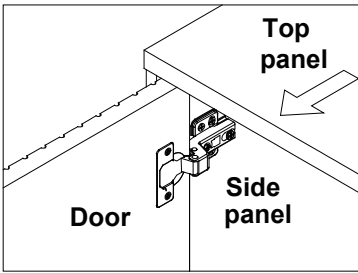

ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).



Step 2

 Adjust the door panel to be flush with side panel and top panel edge.

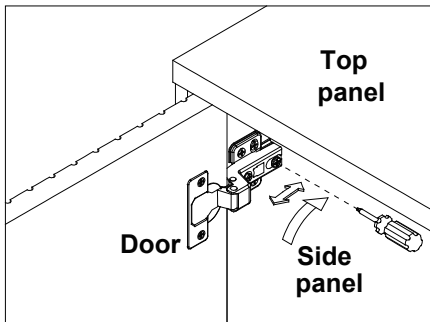



Loosen the screw indicated a little, adjust the hinge to the right position (see step 2a & 2b), then tighten the screw.

  Step 2a MOVE DOOR OUT

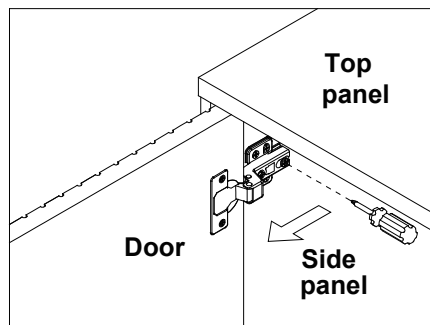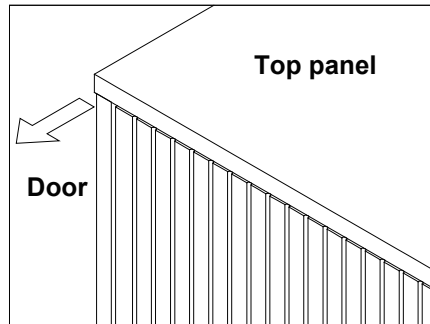

Pull the hinge forward a little.

  
Step 2b MOVE DOOR IN

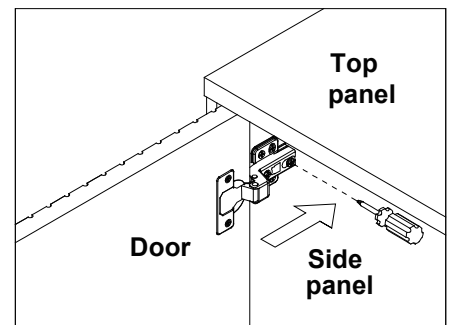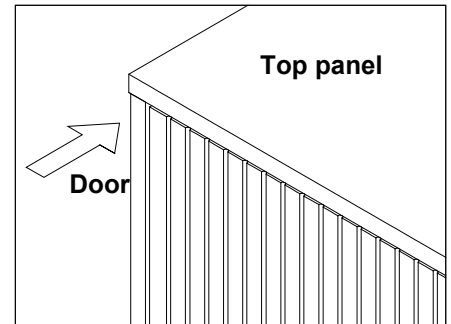

Push the hinge back a little.



Step 3

 Adjust the gap between the door panel and the side panel.

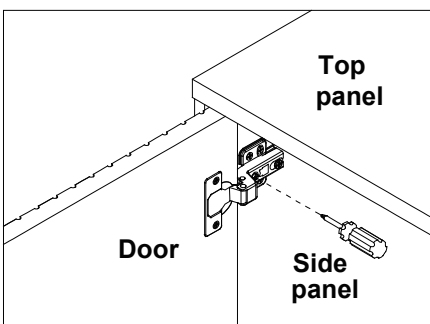



Loosen or tighten the screw indicated a little to adjust the gap between the door panels, adjust the hinge to the right position (see step 3a & 3b).

  Step 3a MOVE DOOR LEFT

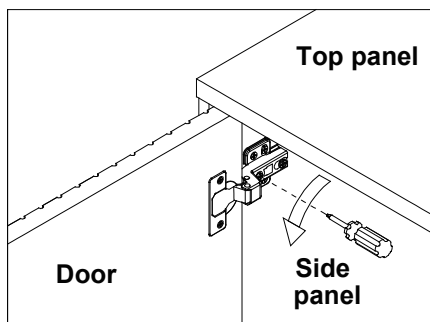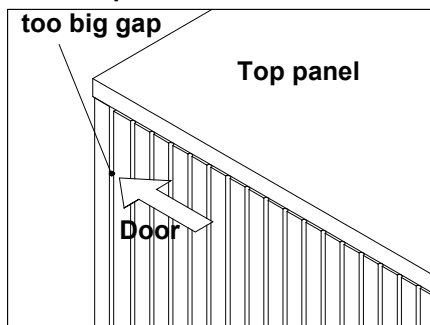

Turn the screw clockwise a little as shown to make the gap smaller

  Step 3b MOVE DOOR RIGHT

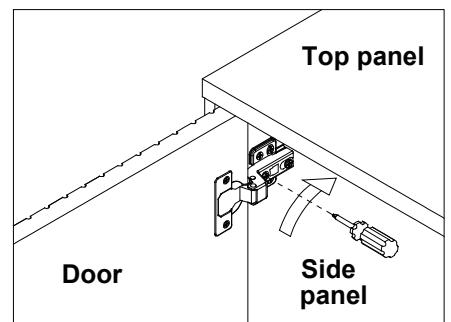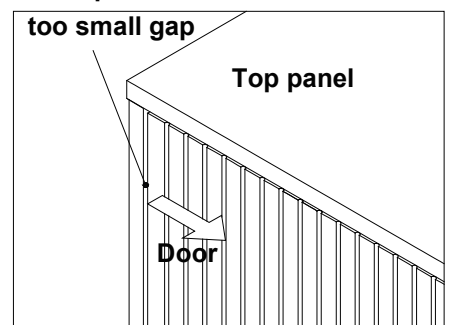

Turn the screw counterclockwise a little as shown to make the gap bigger