 




**4.2Qt MECHANICAL CONTROL AIR FRYER**  
**USER MANUAL**

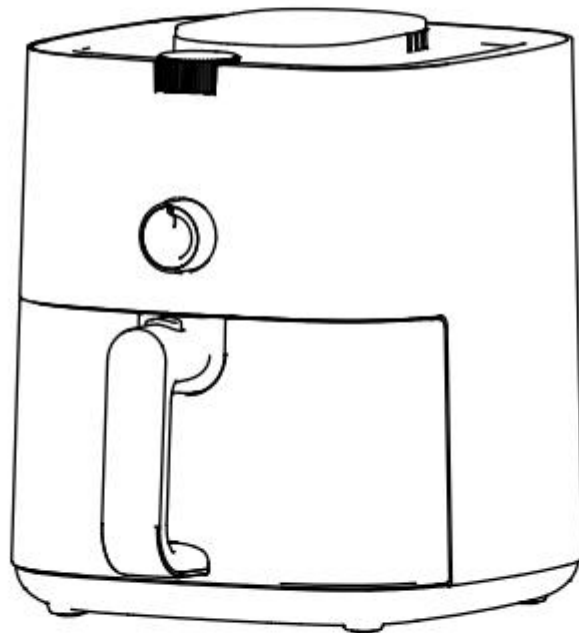

Model No.: AFM04005

## Contents

IMPORTANT SAFETY INSTRUCTIONS .....	2
ADDITIONAL IMPORTANT SAFEGUARDS .....	3
Notes on the plug .....	4
Notes on the cord .....	4
Plasticizer warning .....	4
Electric power .....	4
Overheating protection .....	4
Automatic switch-off .....	4
Features .....	5
Package contents .....	5
Product overview .....	5
Before using your fryer for the first time .....	5
Using your air fryer .....	6
Preparing your food .....	8
Food preparation temperatures and times .....	9
Removing the basket .....	9
Cleaning your air fryer .....	9
Storing your air fryer .....	9
Troubleshooting .....	10
Specifications .....	11

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs. Use oven mitts or potholders.
3. To protect against electric shock do not immerse the cord, plugs, or appliance in water or other liquid.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
5. Children should be supervised to ensure that they do not play with the appliance.
6. Unplug the fryer from the outlet when not in use and before cleaning. Allow it to cool before putting on or taking off parts, and before cleaning the appliance.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Bring it to a qualified technician for examination, repair, or electrical or mechanical adjustment.
8. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
9. Do not use outdoors.
10. Do not let the cord hang over the edge of the table or counter, or touch hot surfaces.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
13. To disconnect, turn both the timer dial and temperature dial to OFF. Then remove the plug from the wall outlet.
14. Do not use the appliance for purposes other than its intended use.
15. Make sure that the frying basket drawer is locked into the front of the fryer - both frying basket handle tabs must be fully inserted into the notches on the top of the pan.
16. Always make sure that the frying basket drawer is fully closed, with the frying basket handle locked securely in the pan, while the air fryer is in operation.



The air fryer will not operate unless the frying basket drawer is fully closed



After hot air frying, the frying basket, the pan, and the cooked foods are hot. Extreme caution must be used when handling the hot air fryer basket and pan.

FOR HOUSEHOLD USE ONLY

**SAVE THESE INSTRUCTIONS**

**ADDITIONAL IMPORTANT SAFEGUARDS**



**CAUTION HOT SURFACES**

This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires, or other injury to persons or damage property.



**CAUTION**

This appliance is hot during operation and retains heat for some time after turning off. Always use oven mitts when handling hot materials and allow metal parts to cool before cleaning. Do not place anything on top of the appliance while it is operating or while it is hot.

1. All users of this appliance must read and understand this instruction manual before operating or cleaning this appliance.
2. The cord to this appliance should be plugged into a 120V AC electrical outlet only.
3. If this appliance begins to malfunction during use, immediately unplug the cord. Do not use or attempt to repair the malfunctioning appliance.
4. Do not leave this appliance unattended during use.
5. Do not immerse the power cord in any liquid. If the power cord to this appliance is damaged, it must be replaced by contacting Customer Service.
6. Keep the cord out of the reach of children and infants to avoid the risk of electric shock and choking.
7. Place the air fryer on a flat, heat-resistant work area.
8. Do not obstruct the air outlet or air inlets on the back and sides of the air fryer, with any objects. Avoid escaping steam from the air outlet during air frying.
9. Keep the fryer at least 4 in. (10.2 cm) away from walls or other objects during operation.
10. Always use the handle to open the frying basket drawer.
11. Do not replace the empty pan (without the frying basket) into the air fryer body. Check to make sure that the frying basket is locked in position in the pan.
12. Never move a hot air fryer or an air fryer containing hot food. Allow it to cool before moving.



**WARNING**

After air frying, make sure that you place the frying basket and pan on a flat, heat-resistant surface before pressing the basket release button.



**WARNING**

Under or over-filling the frying basket may damage the air fryer and could result in serious personal injury.

**Notes on the plug**

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug fits in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in anyway.

**Notes on the cord**

The provided short power-supply cord should be used to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord is not recommended for use with this product. Always plug directly into a wall outlet or receptacle.

**Plasticizer warning**

CAUTION: To prevent plasticizers from migrating to the finish of the counter top or table top or other furniture, place NON-PLASTIC coasters or place mats between the appliance and the finish of the counter top or table top. Failure to do so may cause the finish to darken. Permanent blemishes may occur or stains can appear.

**Electric power**

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

**Overheating protection**

The fryer has an overheating protection system. If the inner temperature control system is invalid, the overheating protection is automatically turned on, and the fryer is no longer ready to be used. Unplug the power cord, let the fryer cool down, and send it to an authorized service center for repair.

**Automatic switch-off**

This fryer is equipped with a timer. When the timer has counted down to 0, the fryer produces a bell sound and switches off automatically.

Note: If the pan is pulled out during cooking, your fryer switches off automatically.

 
## Features

- Fryer circulates hot air to cook with little to no oil
- Temperature range from 180 ~ 400 °F to fry, roast, or bake your favorite foods
- 4.2 Qt Basket holds 2-4 servings of food
- Timer with auto shutoff lets you cook your food from 0 to 60 minutes
- Mechanical controls provide an easy, tactile way to adjust settings
- Dishwasher-safe basket and pan make clean up easy

## Package contents

- Air fryer
- USER MANUAL

## Product overview

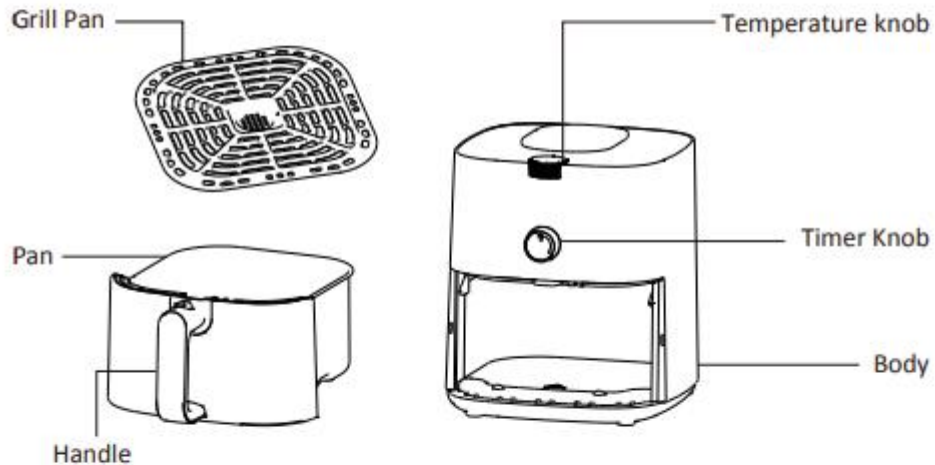

## Before using your fryer for the first time

1. Remove all packaging material, stickers, and labels from your air fryer.
2. Clean the basket and pan with hot water, dish soap, and a non-abrasive sponge.
3. Wipe the inside and outside of your fryer with a moist cloth.

## Using your air fryer

 


- Your air fryer works with hot air. Do not fill the pan with oil or any liquid.
- Do not place anything next to the air outlet on the back of your air fryer or on the air inlet on top of your air fryer.

1. Place your air fryer on a level, heat-resistant surface and plug the power cord into a wall outlet.
2. Pull the pan out of your air fryer, place your food in the basket, then replace the pan.




**Note:** See food preparation temperatures and times on page 9 for more information.

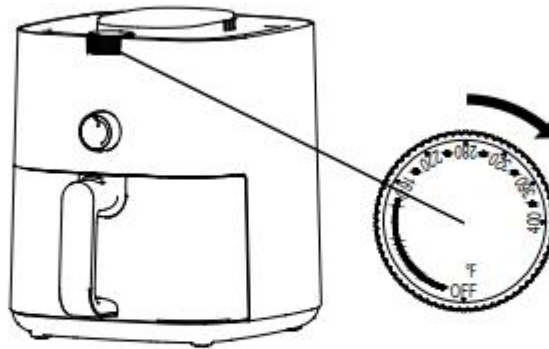

3. Turn the temperature knob to set the temperature from 180 to 400 °F.

 4. Turn the timer knob to set the cook time (from 0-60 minutes) and start heating. The power and heat indicators light and the timer starts counting down from the set cooktime.

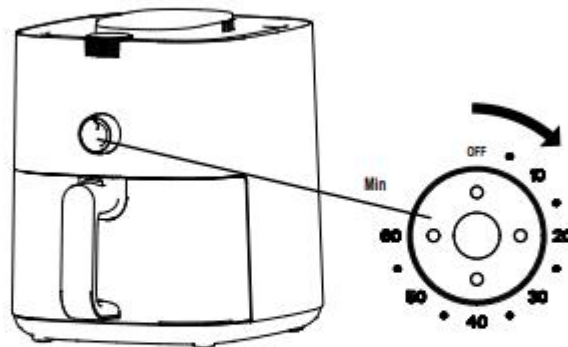

**Notes:**

- If you want to preheat your air fryer, add three minutes to your cook time. You can also preheat without any food in your fryer.
- The heat indicator may turn on and off while cooking because the heating element turns on and off to maintain the correct temperature.
- You can pull out the pan at any time to check your food. Your air fryer pauses automatically and resumes heating after you slide the pan back into your air fryer.

5. If you are cooking a large amount of food, remove the pan and shake its contents halfway through the cook time. Your air fryer continues heating when the pan is replaced (the timer does not stop counting down).

**Notes:**

- Your fryer doesn't beep at the half way point.
- Remove the basket to reduce the weight while shaking. See Removing the basket on page 10 for more information.

6. When your air fryer beeps, the cook time is finished. Pull the pan out of your air fryer and place it on a heat-resistant surface.

7. Make sure that your food is done. If it's not finished, slide the pan back into your air fryer, then set the timer for a few extra minutes.

8. Empty your food into a bowl or onto a plate. DO NOT turn the pan upside down as excess oil collects on the bottom.

- To remove small food, press the basket release button and lift the basket out of the pan.
- To remove large or fragile food, use a pair of tongs to lift the ingredients out of the basket.

## Preparing your food

### Food preparation temperatures and times

Because ingredients differ in origin, size, shape, and brand, you may need to adjust the cook times and temperatures in this table to suit your food.

FOOD	TEMP	TIME	AMOUNT	NOTES
<b>Potatoes &amp; fries</b>				
Thin frozen fries	400°F	9-16 min.	11-25 oz. (300-700 g)	Shake halfway
Thick frozen fries	400°F	11-20 min.	11-25 oz. (300-700 g)	Shake halfway
Homemade fries (8x8 mm)	400°F	16-20 min.	11-28 oz. (300-800 g)	Add 1/2 tbsp oil Shake halfway
Homemade potato wedges	360°F	18-22 min.	11-28 oz. (300-800 g)	Add 1/2 tbsp oil Shake halfway
Homemade potato cubes	360°F	12-18 min.	9 oz. (250 g)	Add 1/2 tbsp oil Shake halfway
Rosti	360°F	15-18 min.	18 oz. (500 g)	Shake halfway
Potato gratin	400°F	15-18 min.	18 oz. (500 g)	Shake halfway
<b>Meat &amp; poultry</b>				
Steak	400°F	8-12 min.	6-18 oz. (100-500 g)	
Pork chops	360°F	10-14 min.	6-18 oz. (100-500 g)	
Hamburger	360°F	7-14 min.	6-18 oz. (100-500 g)	
Sausage roll	360°F	13-15 min.	6-18 oz. (100-500 g)	
Drumsticks	360°F	18-22 min.	6-18 oz. (100-500 g)	
Chicken breast	360°F	10-15 min.	6-18 oz. (100-500 g)	
Bacon	400°F	6-10 min.	11 oz. (300 g)	
Fish	360°F	10-14 min.	18-28 oz. (500-800 g)	
<b>Snacks</b>				
Spring rolls	400°F	8-10 min.	4-14 oz. (100-400 g)	Shake halfway
Frozen chicken nuggets	400°F	6-10 min.	6-18 oz. (100-500 g)	Shake halfway
Frozen fish fingers	400°F	6-10 min.	4-14 oz. (100-400 g)	
Frozen cheese curds	360°F	8-10 min.	4-14 oz. (100-400 g)	
Stuffed vegetables	300°F	10 min.	4-14 oz. (100-400 g)	
<b>Baking</b>				
Cake	320°F	20-25 min.	11 oz. (300 g)	
Quiche	360°F	20-22 min.	14 oz. (400 g)	
Muffins	400°F	15-18 min.	11 oz. (300 g)	
Sweet snacks	320°F	20 min.	14 oz. (400 g)	
Bread	360°F	15-18 min.	11-18 oz. (300-500 g)	

## Removing the basket

1. Pull your air fryer's handle out to slide the pan out.
2. Set the pan on a countertop.
3. Slide the release button cover forward to expose the red release button.
4. Press the release button and lift the basket out of the pan.
5. To replace the basket, place it in the pan and press down until the basket locks into place, then slide the safety tab back over the release button.

## Cleaning your air fryer

Clean your air fryer after every use.

**Notes:**

Do not use abrasive cleaning materials to clean the pan and basket because they may damage the non-stick coating.

1. Unplug your air fryer from the wall outlet and wait for it to cool.

**Note:** Remove the pan to let your air fryer cool down more quickly.

2. Wipe the outside of your air fryer with a moist cloth.
3. Clean the pan and the basket with hot water, dish soap, and a non-abrasive sponge. Use a degreasing liquid to remove any remaining residue.

**Notes:**

• For tough-to-remove residue, fill the pan with hot water and dish soap, then place the basket in the pan and soak for approximately ten minutes.

• You can also wash the pan and basket in the dishwasher.

4. Clean the inside of your air fryer with hot water and a non-abrasive sponge.
5. Clean the heating element with a cleaning brush to remove any food residue.

## Storing your air fryer

1. Unplug your air fryer and let it cool down.
2. Make sure that all parts are clean and dry.
3. Put your air fryer in a clean and dry place.

## Troubleshooting

1. Pull your air fryer's handle out to slide the pan out.
2. Set the pan on a countertop.
3. Slide the release button cover forward to expose the red release button.
4. Press the release button and lift the basket out of the pan.
5. To replace the basket, place it in the pan and press down until the basket locks into place, then slide the safety tab back over the release button.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Your air fryer doesn't work.	Your fryer isn't plugged in.	Plug the power cord into a grounded wall outlet.
	You haven't set the timer.	Turn the timer knob to the required preparation time to turn on your fryer.
	The pan isn't put into your fryer correctly.	Slide the pan into your fryer correctly.
You smell a burnt food odor when you turn on your fryer for the first time.	Manufacturing residue is in your fryer.	Before using your fryer for the first time, we recommend that you heat it for five minutes to eliminate any manufacturing residue that may remain after shipping.
The food fried in your air fryer isn't done.	There's too much food in your air fryer.	Put smaller batches of ingredients in the basket. Smaller batches are fried more evenly.
	The set temperature is too low.	Increase your air fryer's temperature.
	The preparation time is too short.	Cook your food longer.
The ingredients are fried unevenly in your air fryer.	Certain types of ingredients need to be shaken halfway through the preparation time.	Shake foods that lie on top of or across each other (such as fries) halfway through the preparation time.
Fried snacks aren't crispy when they come out of your air fryer.	You used a type of snacks meant to be prepared in a traditional deep fryer.	Use oven snacks or lightly brush some oil onto the snacks for a crispier result.
I can't slide the pan into my fryer correctly.	There's too much food in the basket.	Do not fill the basket beyond the MAX indication.
	The basket isn't placed in the pan correctly.	Push the basket down into the pan until you hear a click.

<b>PROBLEM</b>	<b>POSSIBLE CAUSE</b>	<b>SOLUTION</b>
White smoke comes out of your air fryer.	You're preparing greasy ingredients.	When you fry greasy ingredients in your air fryer, a large amount of oil leaks into the pan. The oil produces white smoke and the pan may heat up more than usual. This does not affect your fryer or the end result.
	The pan still has grease residue from a previous use.	White smoke is caused by grease heating up in the pan. Make sure that you clean the pan correctly after each use.
White smoke comes out of your air fryer.	You didn't use the right potato type.	Use fresh potatoes to make sure that they stay firm during frying.
	You didn't rinse the fries correctly before you fried them.	Rinse the fries correctly to remove starch from the outside of the sticks.
Fresh fries aren't crispy when they come out of your air fryer.	The crispiness of the fries depends on the amount of oil and water in the fries.	Make sure that you dry the potato sticks correctly before you add the oil.
		Cut the potato sticks smaller for a crispier result.
		Add slightly more oil for a crispier result.

## Removing the basket

Power requirements	1500W
Current	120V~60Hz
Cooking temperature	180-400 °F
Cord length	3.3 ft. (1.0 m)

### **Technical Support**

Whenever possible, please consult the troubleshooting steps provided in the manual first, or visit our website as normally they have abundant information to troubleshoot the problem you might have.

If all else fails, and you believe the product is faulty, please contact us for details.

For technical questions, information about our products and to order spare parts, our service team is at your disposal as follows:

Service time: Monday to Friday from 9 a.m. to 6 p.m.

E-Mail: [service@uten.com](mailto:service@uten.com)

URL: <http://www.uten.com>

### **Please make sure that you have the following information on hand.**

- Operation manual
- Model number (this can be found on the cover of this manual)
- Description of the accessories
- Accessory number
- Proof of purchase with date of purchase
- Order number

### **Important NOTE:**

Please do not send your product to our address without a request from our service team. The costs and the risk of loss for unsolicited mailings are borne by the sender. We reserve the right to refuse to accept unsolicited consignments or to return the relevant goods to the sender freight collect or at the sender's expense.



**Manufacturer:** SHENZHEN RBU TECHNOLOGY GROUP CO., LTD

**Address:** 9 Tengfei Road, Longcheng Sub-District, Longgang District, Shenzhen, China

**Distributor:** AGM USA, LLC

**Address:** 1521 E Francis St, unit a Ontario, CA 91767, United States

For more information please contact us at: [service@uten.com](mailto:service@uten.com)



MADE IN CHINA