 


# Multi Storage Wall Media Center

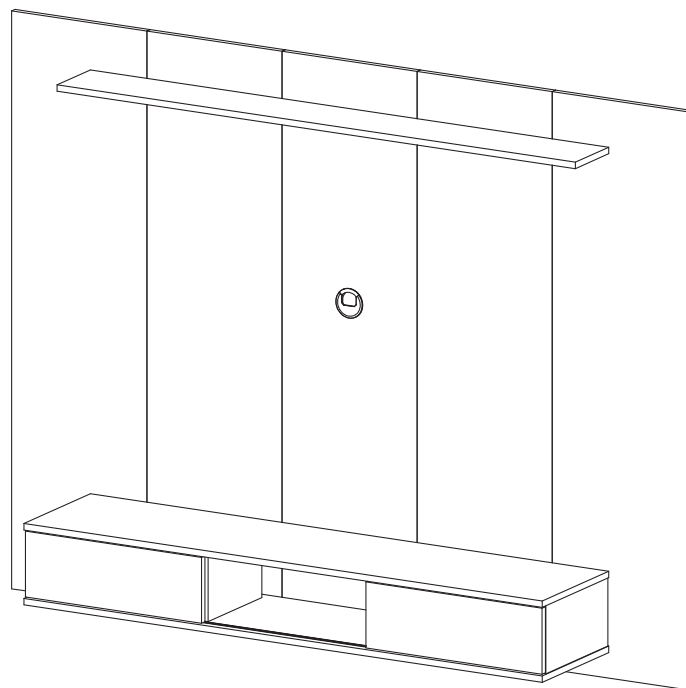

## Assembly Instructions

Product Dimensions:  
69 1/4" L x 13" D x 53 1/8" H

Please take a moment to read through the entire instruction booklet before assembly to familiarize yourself with this product. Once you feel ready to start, follow the instructions step by step and this should make this process as easy as we could make it for you.

If you need help or have damaged or missing parts, contact customer service

# WARNING CAUTION

## ADULT ASSEMBLY REQUIRED

### CHOKING HAZARD

- This product includes small parts, sharp points and sharp edges in its unassembled state. Keep unassembled parts away from children under 3 years of age, and animals.

### STRANGULATION HAZARD

- Never attach or hang items to any part of the Wall Entertainment Center that is not designed for use with the bed; for example, but not limited to hooks, belts, and jump ropes.

### SAFETY WARNINGS

- Follow the information on the warnings appearing on the Wall Entertainment Center end structure and on the carton.
- Do not allow children under 3 years of age to use the Wall Entertainment Center.
- Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.

### FURNITURE TIP-OVER HAZARD

#### Children have died from furniture tip-over.

To reduce the risk of furniture tip-over:

- ALWAYS install tip-over restraint especially if used by a wall or in the open.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- ALWAYS place heaviest items in lowest drawers.



### PARENTAL SUPERVISION IS REQUIRED

- Parents or Guardians should supervise use under the intended age specifically regarding children that may have access to it and climb on the unit. Do not allow horseplay on, under, or behind the unit and prohibit jumping on the Wall Entertainment Center.
- If used improperly, your Wall Entertainment Center may be pulled over or fall, creating risk of injury or damage. Children should not be permitted to climb or pull on the Wall Entertainment Center.

### USE, MAINTENANCE & ASSEMBLY

- Periodically check and ensure that the components are in their proper position, free from damage, and that all connectors are tight.
- Use on level surfaces only. Assemble on a soft level surface to avoid damage to unit or floor.
- Do not use this item if any components are missing or damaged.
- Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.
- Only clean using damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- Check you have all components and tools listed on page 4
- Do not stand or put weight on this product during assembly, this could cause damage.
- Remove all hardware from the plastic bags and separate them into groups.
- Assemble the item as close to its final position (in the same room) as possible.
- Certain assembly steps may be easier with 2 people.
- Dispose of all packaging carefully and responsibly.
- We do not recommend power screwdrivers. Only use hand screwdrivers to prevent damage to unit.

#### Enfants morts suite au basculement d'un meuble.

Afin de limiter le risque de basculement de meuble:

- TOUJOURS utiliser les fixations anti-basculement.
- NE JAMAIS laisser d'enfants se tenir debout sur les tiroirs, portes ou étagères, y grimper ou s'y suspendre.
- NE JAMAIS ouvrir plus d'un tiroir à la fois.
- TOUJOURS placer les choses les plus lourdes dans les tiroirs du bas.

#### Han muerto niños por el vuelco de muebles.

Para limitar el riesgo de vuelco de los muebles:

 
- Utilizar SIEMPRE las fijaciones antivuelco que suministran.
- NUNCA permitir que los niños se pongan de pie, trepen o se cuelguen de los cajones, puertas o baldas.
- NUNCA abrir más de un cajón a la vez.
- Colocar los objetos más pesados en los cajones inferiores.

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

# ASSEMBLY AT A GLANCE

Please take a moment to read through the whole instruction booklet before assembly to familiarize yourself with this product. Once you feel ready to start, follow the instructions step by step and this should make this process as easy as we could make it for you.

Due to the number of parts involved assembly can take a few hours so set aside between 2 and 3 hours to assemble this without rushing.

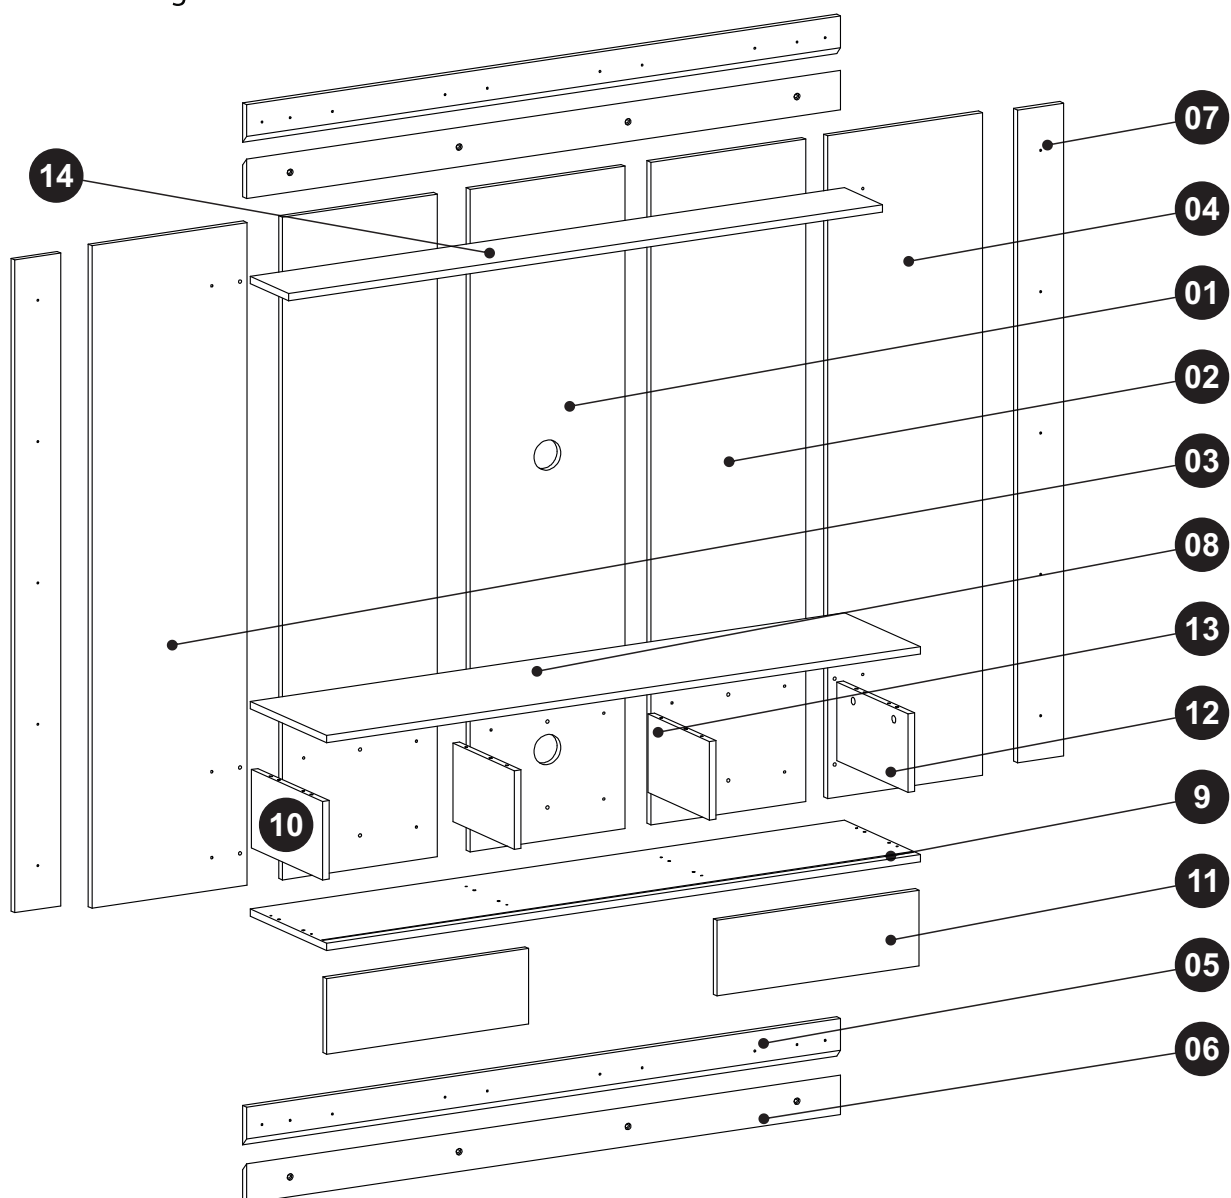


This drawing is to give you an overall idea only of how this assembly will go together and does not replace the assembly instructions.


# COMPONENT PARTS

 Please check that you have all the parts listed below

1. Central Panel x1
2. Intermediary Panel x2
3. Left Panel x1
4. Right Panel x1
5. Panel Ruler x2
6. Wall Ruler x2
7. Side Tray x2
8. Top x1
9. Middle Top x1
10. Left Side x1
11. Door x2
12. Right Side x1
13. Division x2
14. Shelf x1

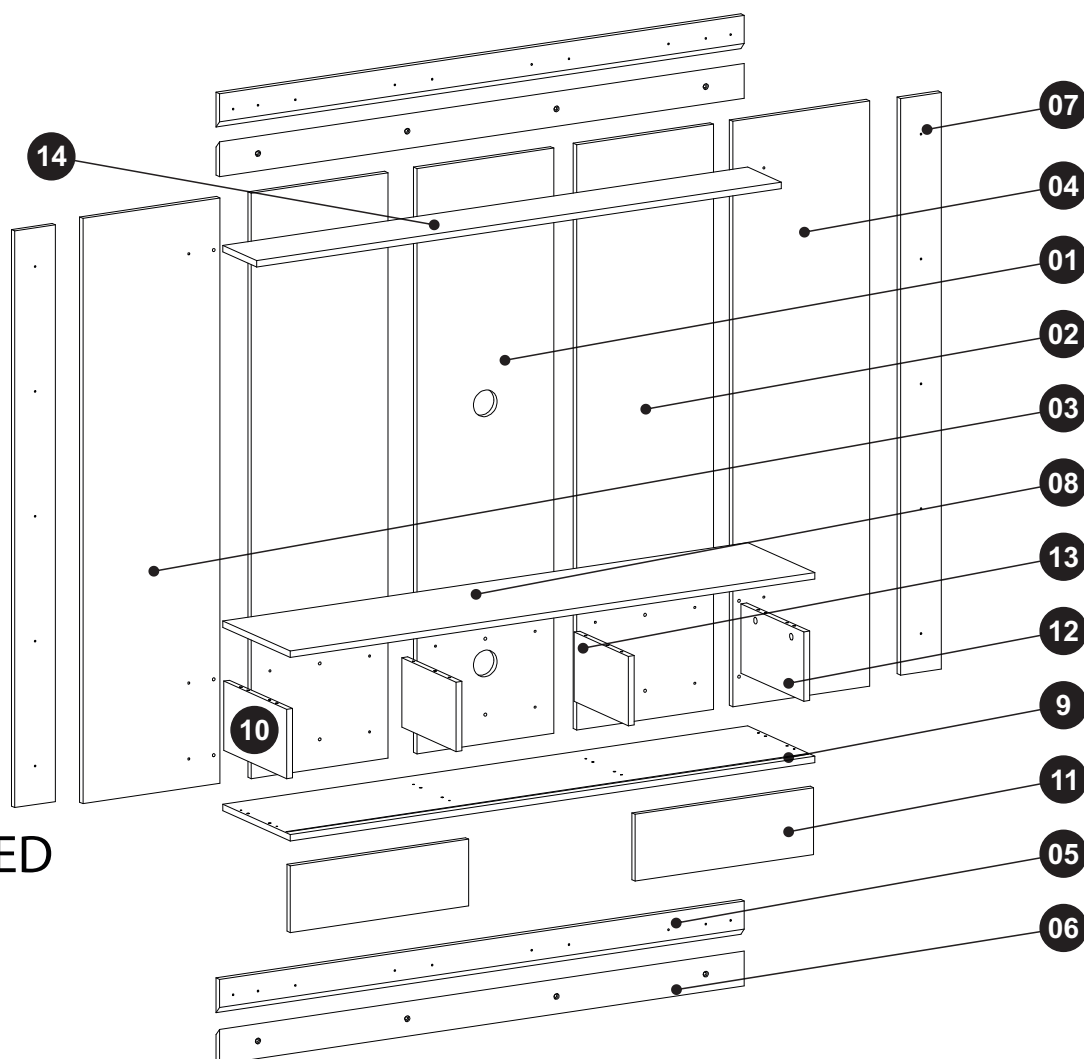


## TOOLS REQUIRED

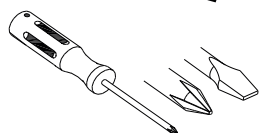 


Phillips Screwdriver  
(Medium)

## ASSEMBLY HARDWARE

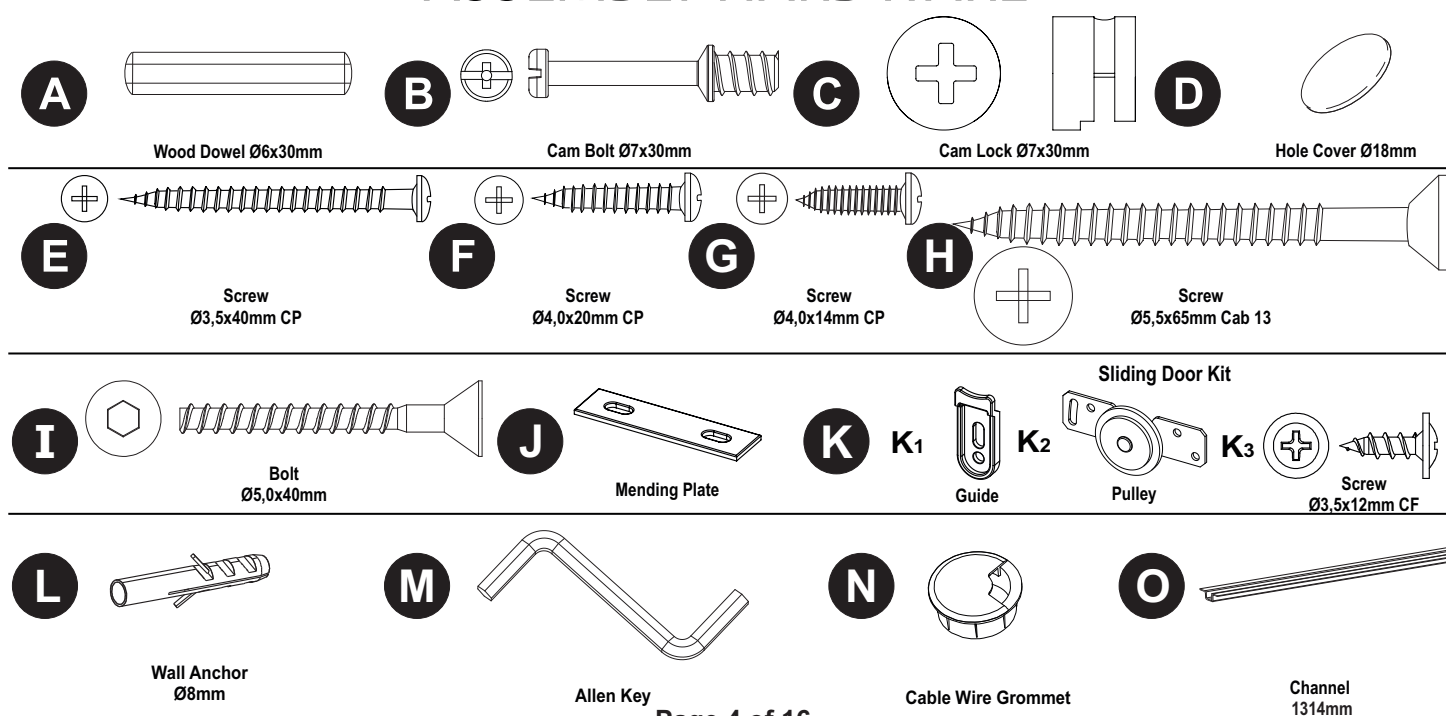 


# ASSEMBLY INSTRUCTIONS

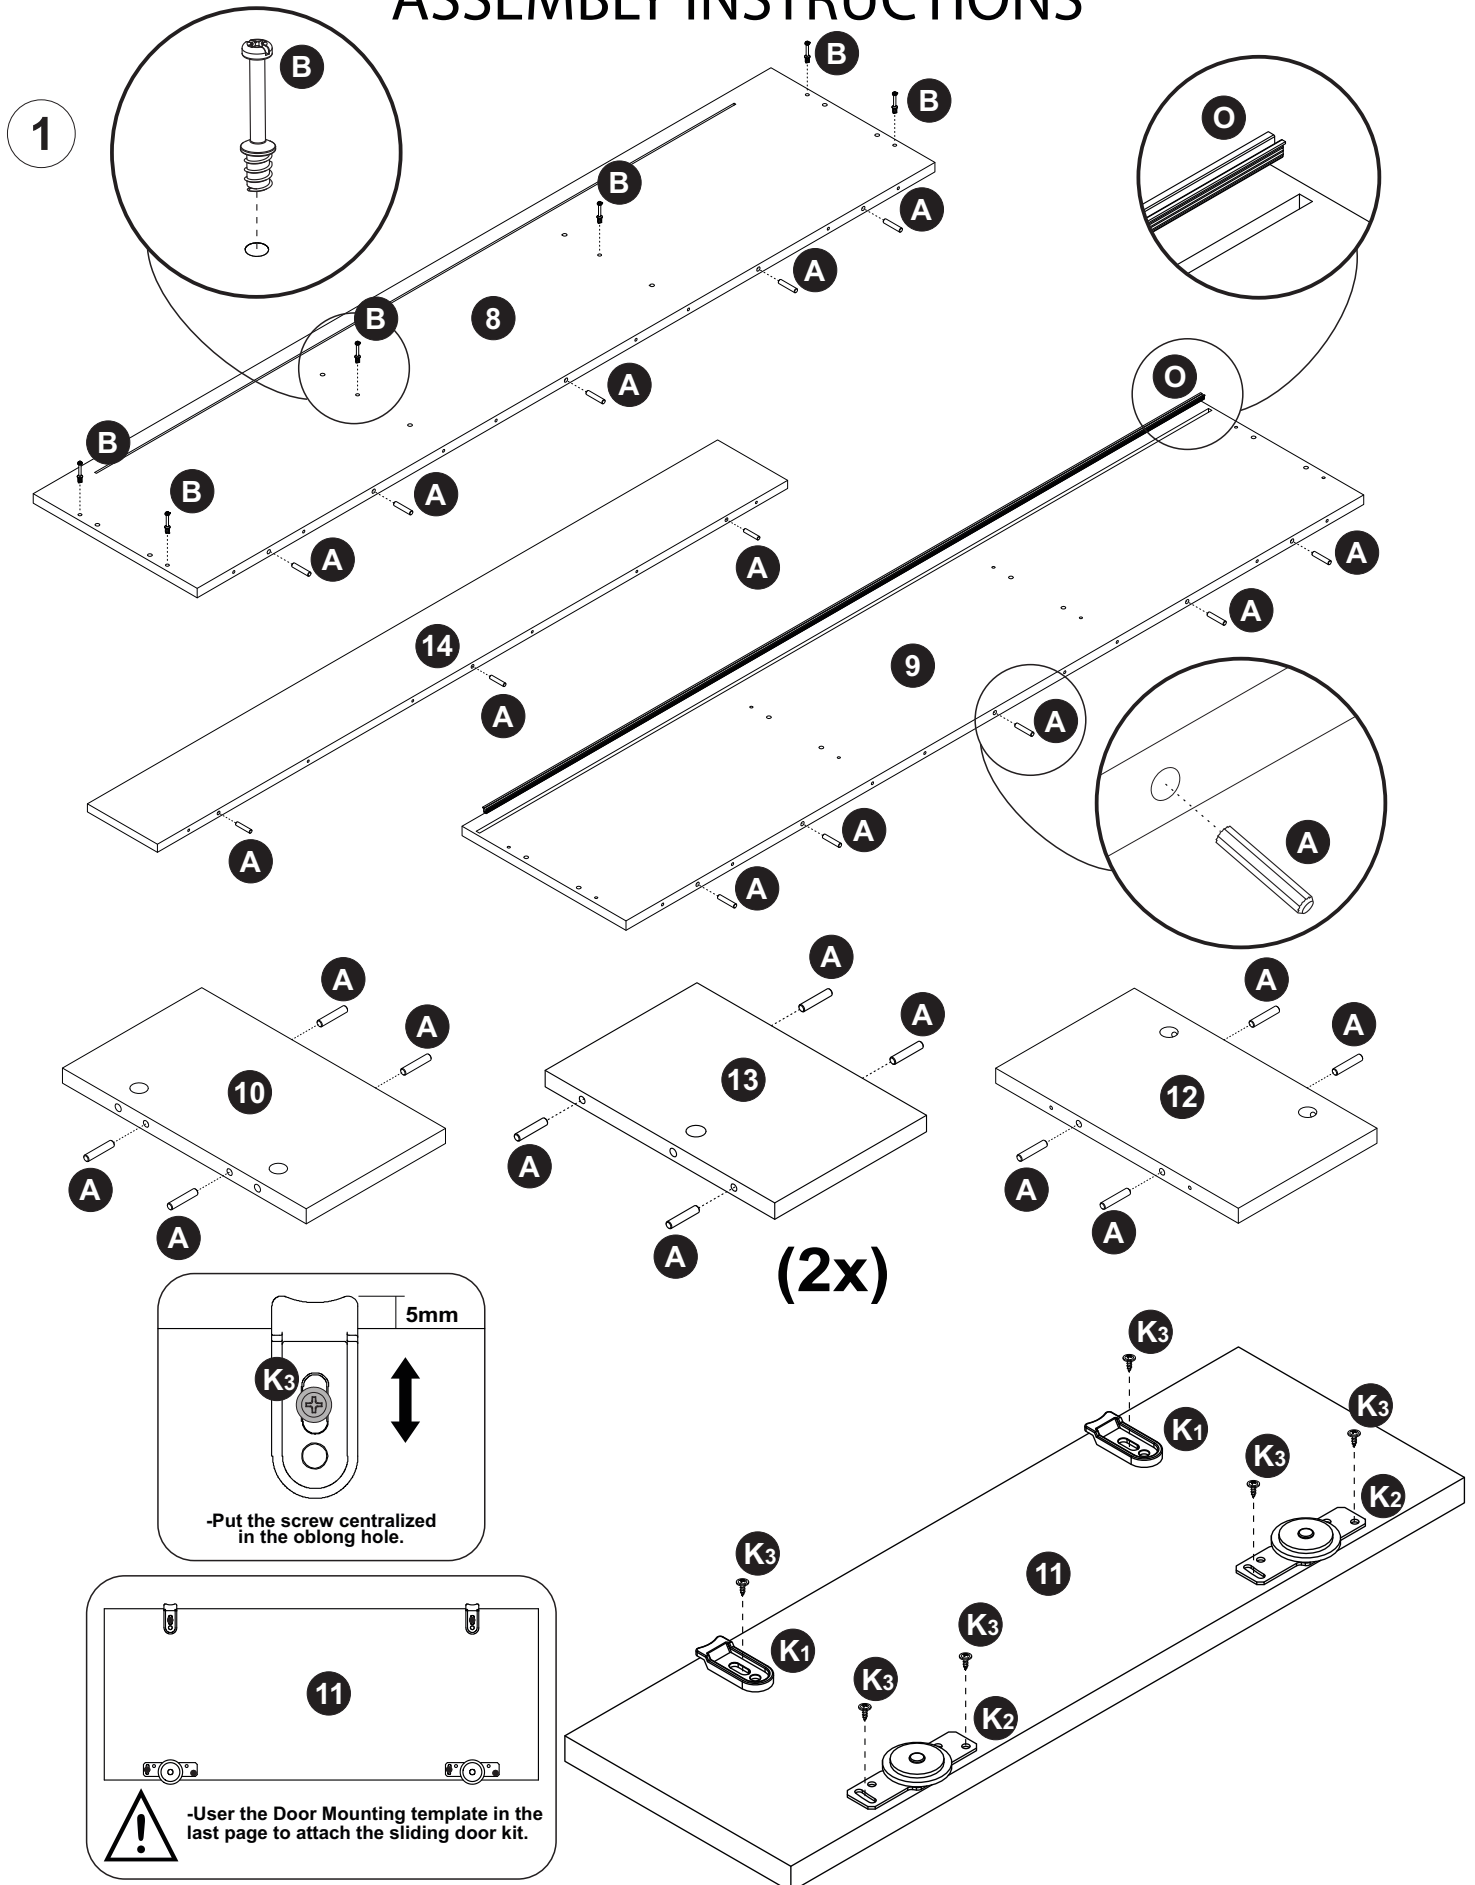 


# ASSEMBLY INSTRUCTIONS


 
2

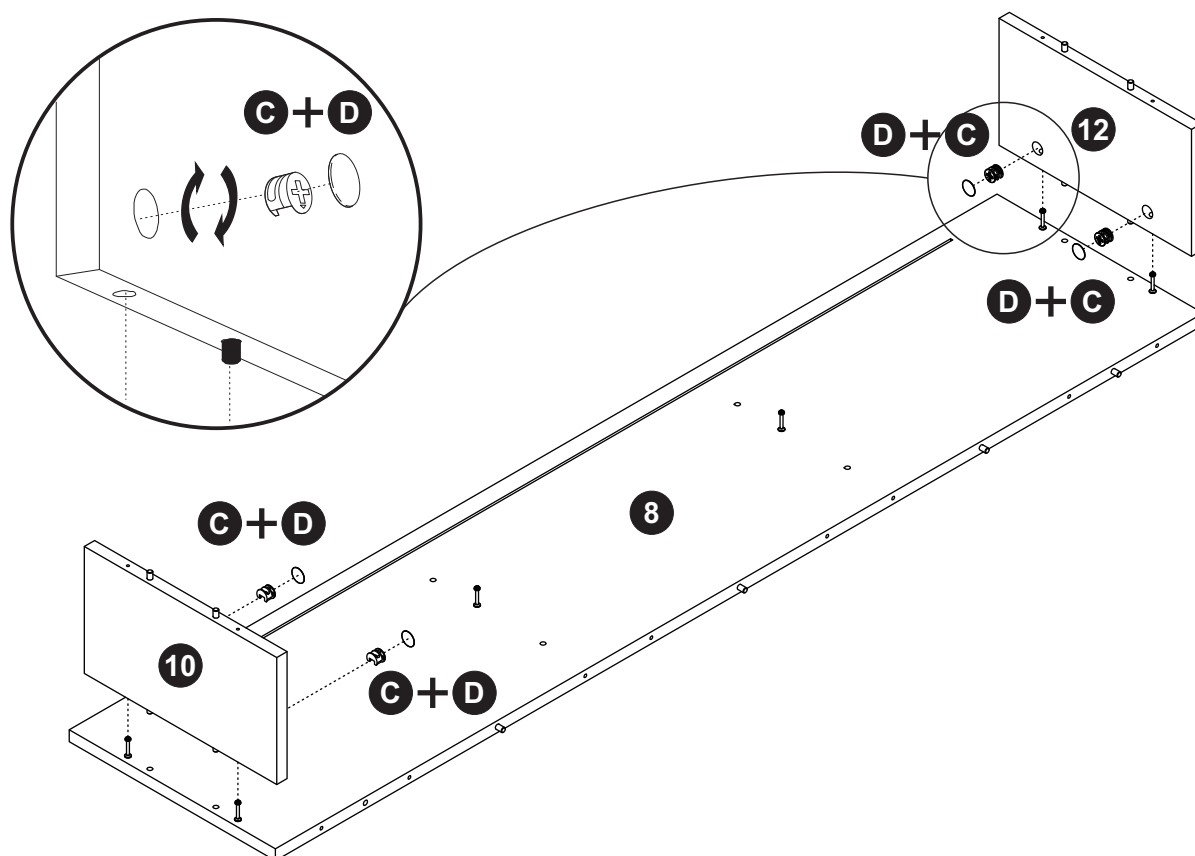



3

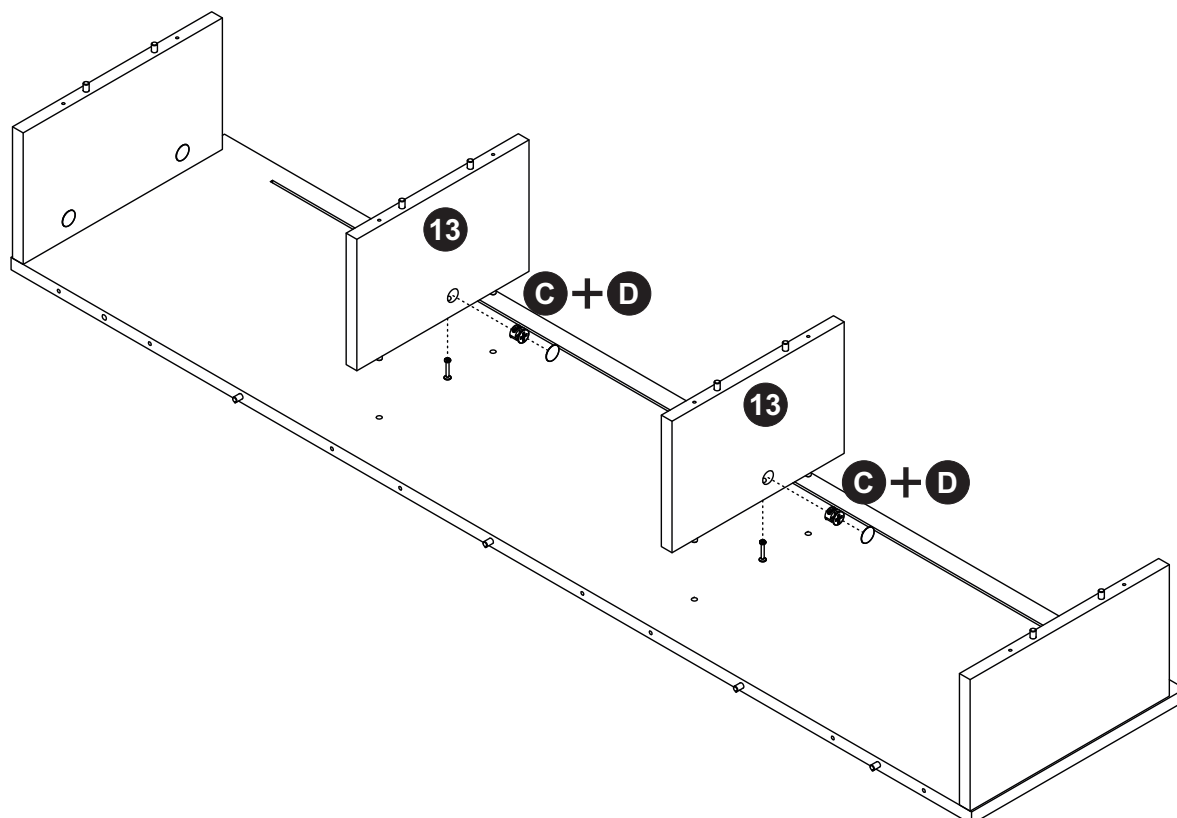 

# ASSEMBLY INSTRUCTIONS

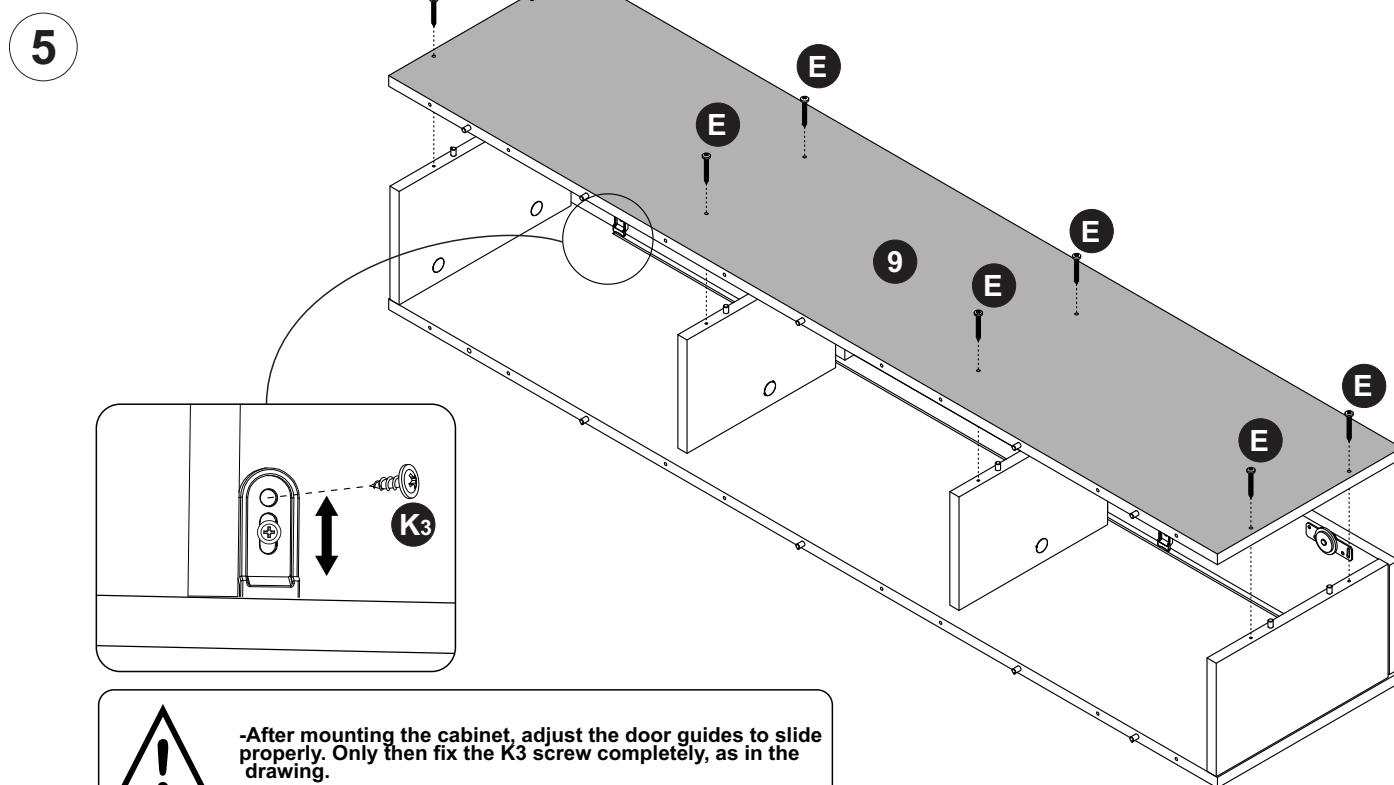 
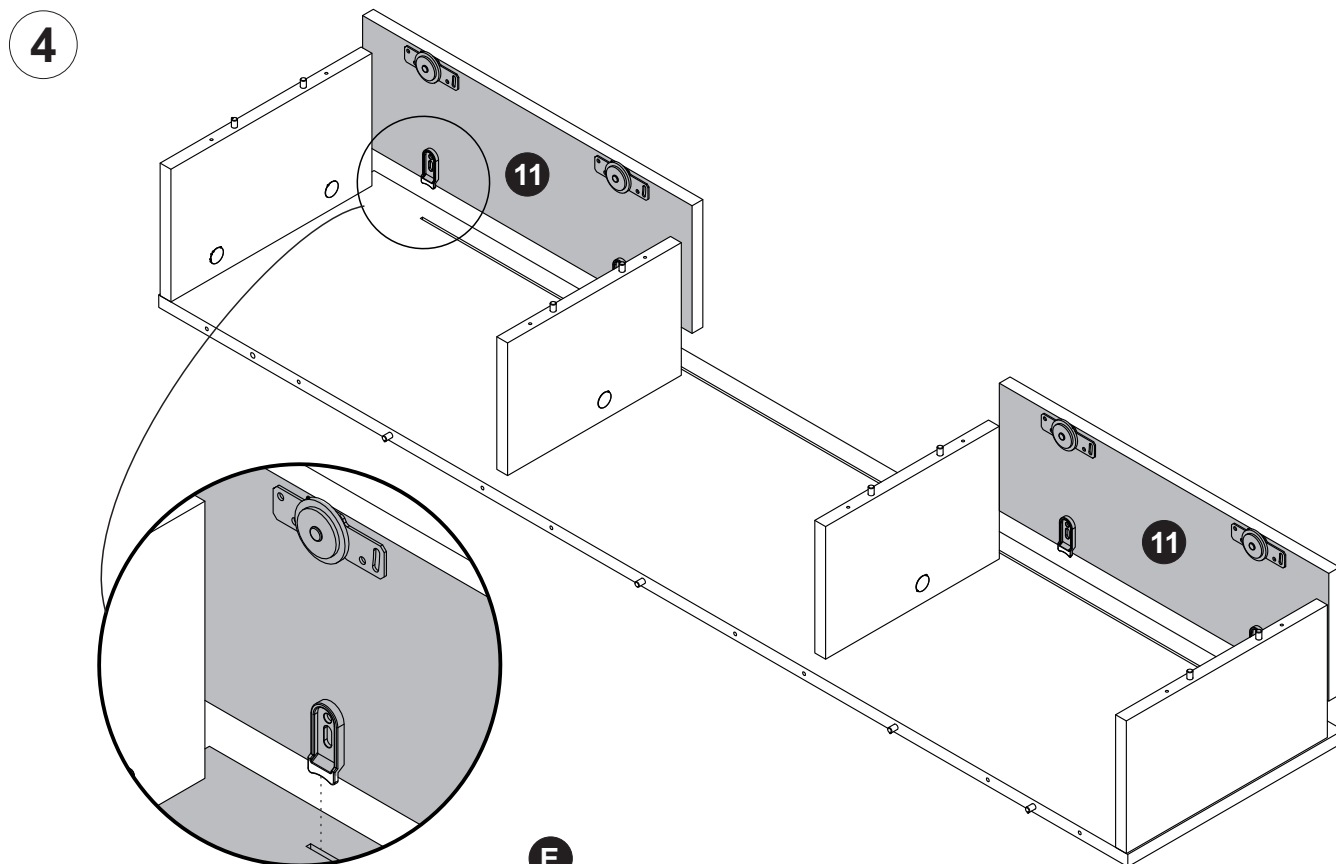 


# ASSEMBLY INSTRUCTIONS

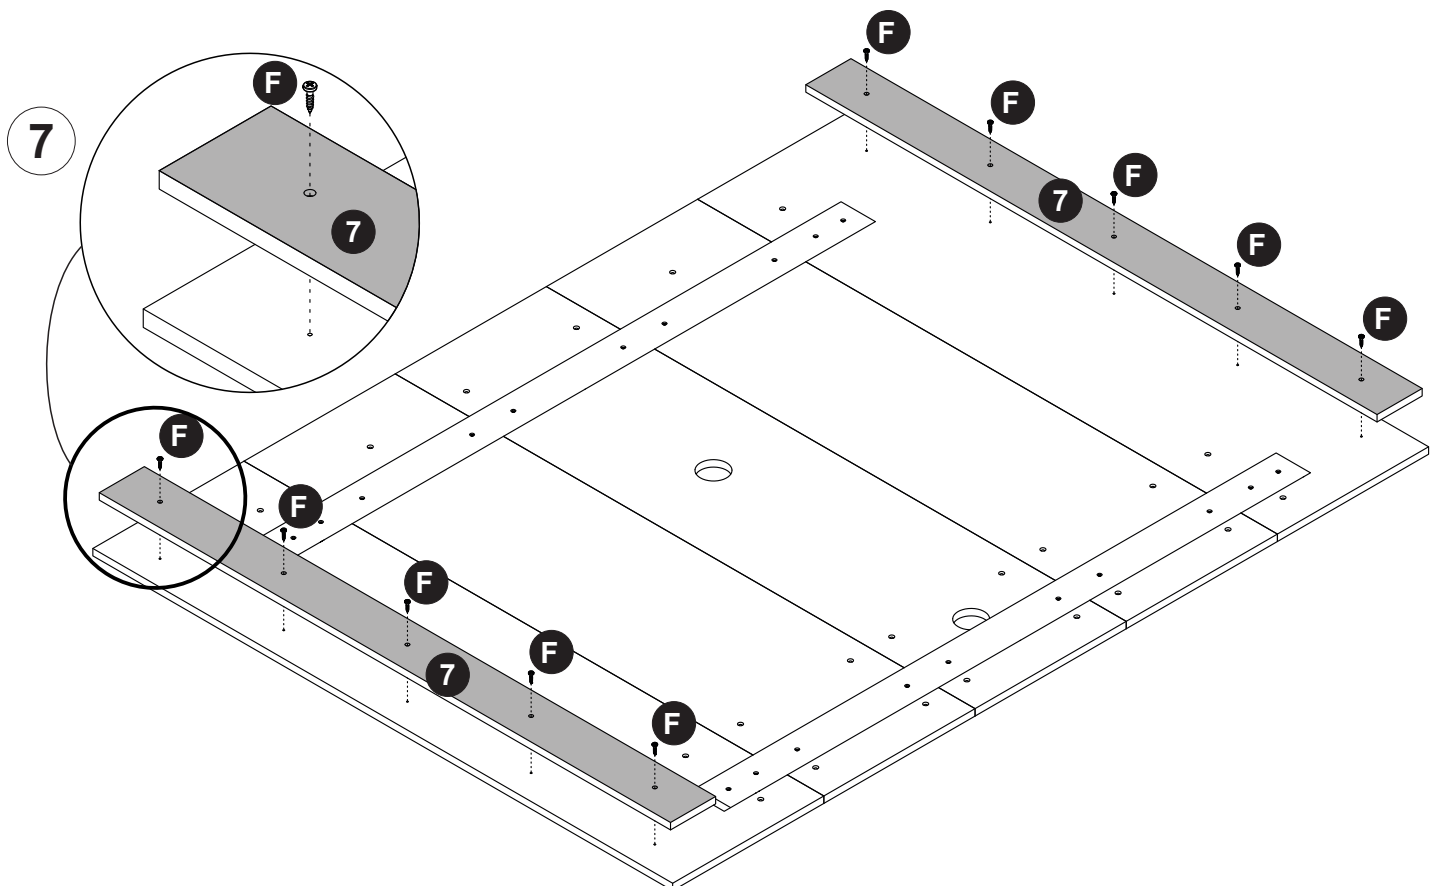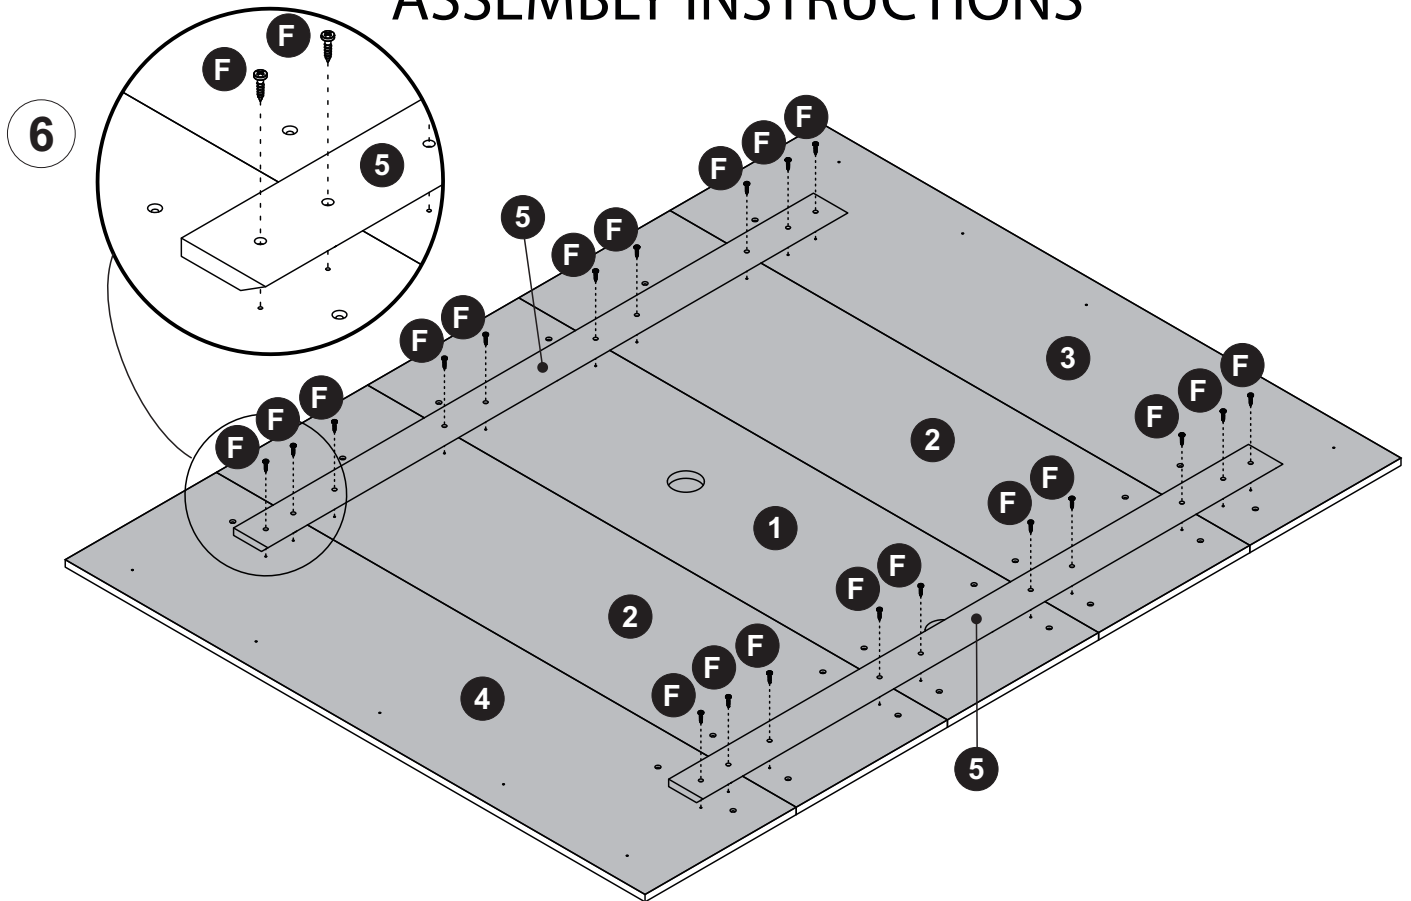  



# ASSEMBLY INSTRUCTIONS

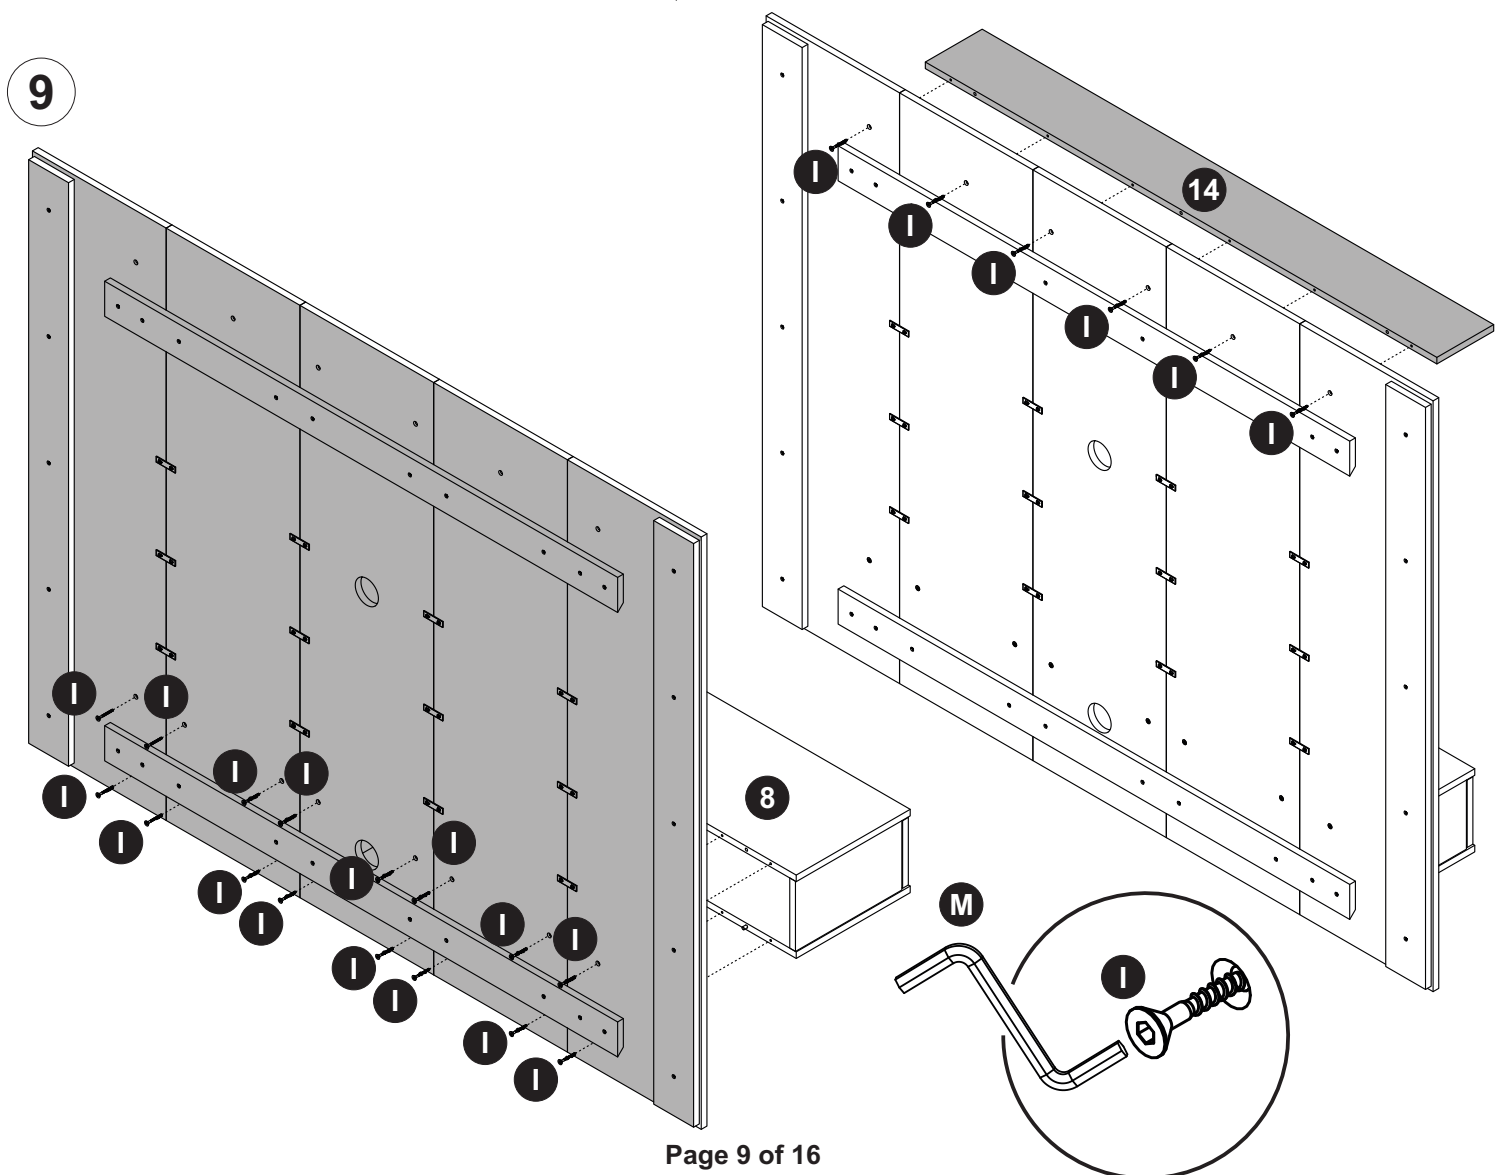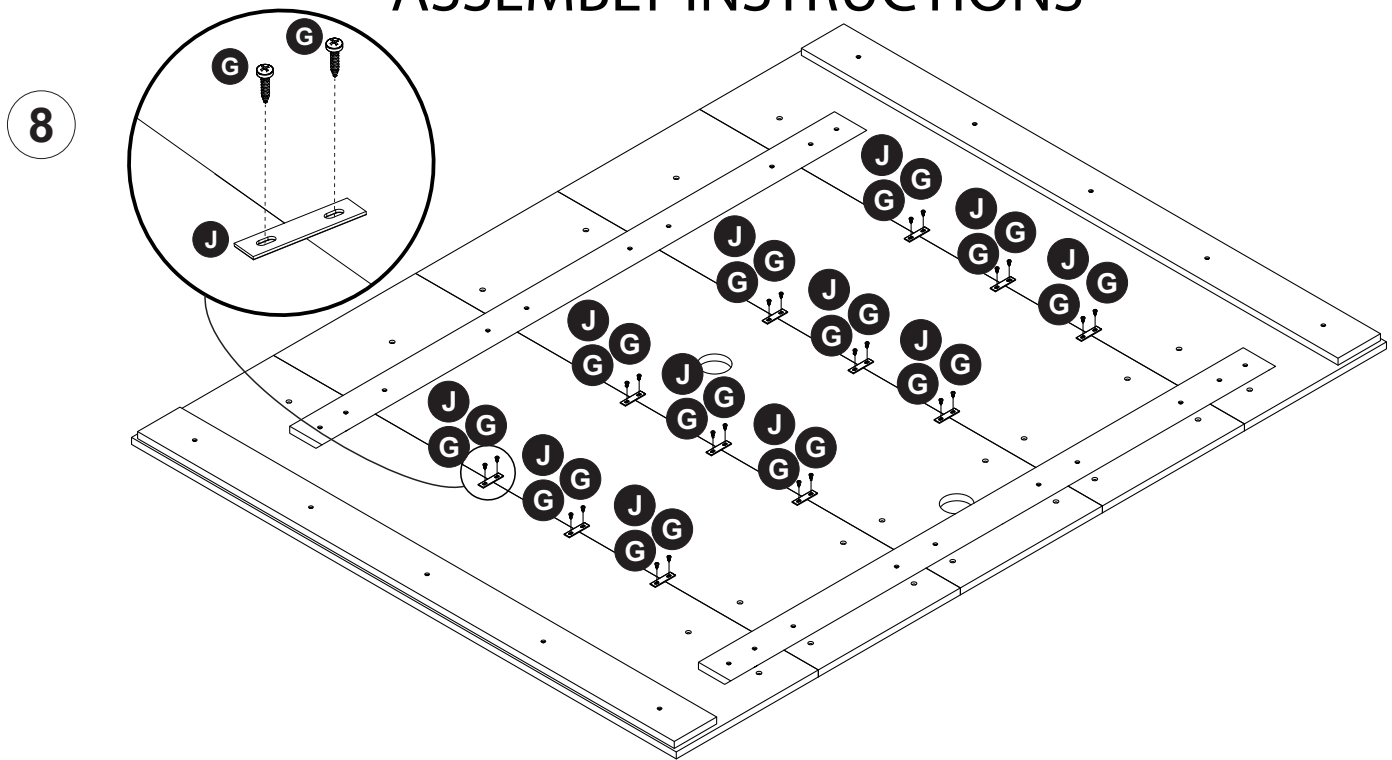  


# ASSEMBLY INSTRUCTIONS

## Wall drilling Scheme

-8 holes with  
8mm drill.

 wall

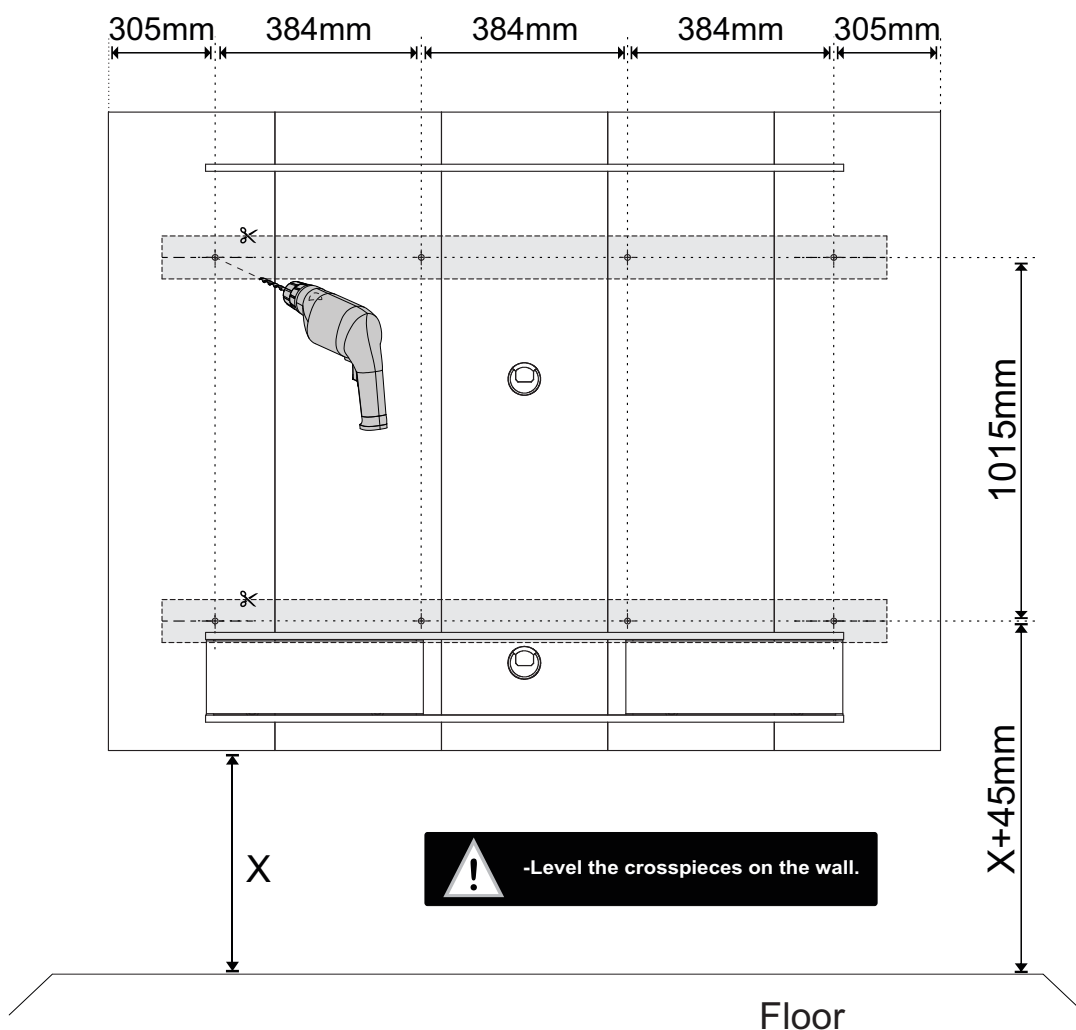

**X = Height from the floor**

 
Example:

If you want the panel to be 500mm from the floor:  
Height of the first hole line =  $500+45=545\text{mm}$   
Height of second hole line =  $545+1015=1560\text{mm}$ .



**Ex.**

500mm

Fije la plantilla a la pared con cinta adhesiva.

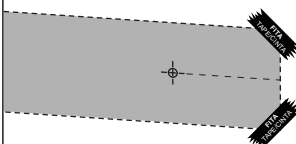


  Taladre la pared de acuerdo con la plantilla.

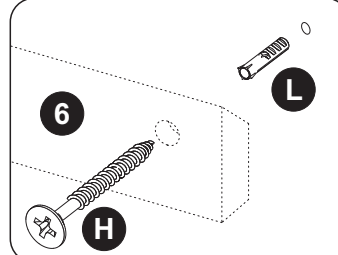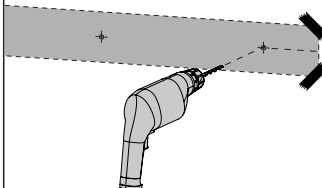






# ASSEMBLY INSTRUCTIONS

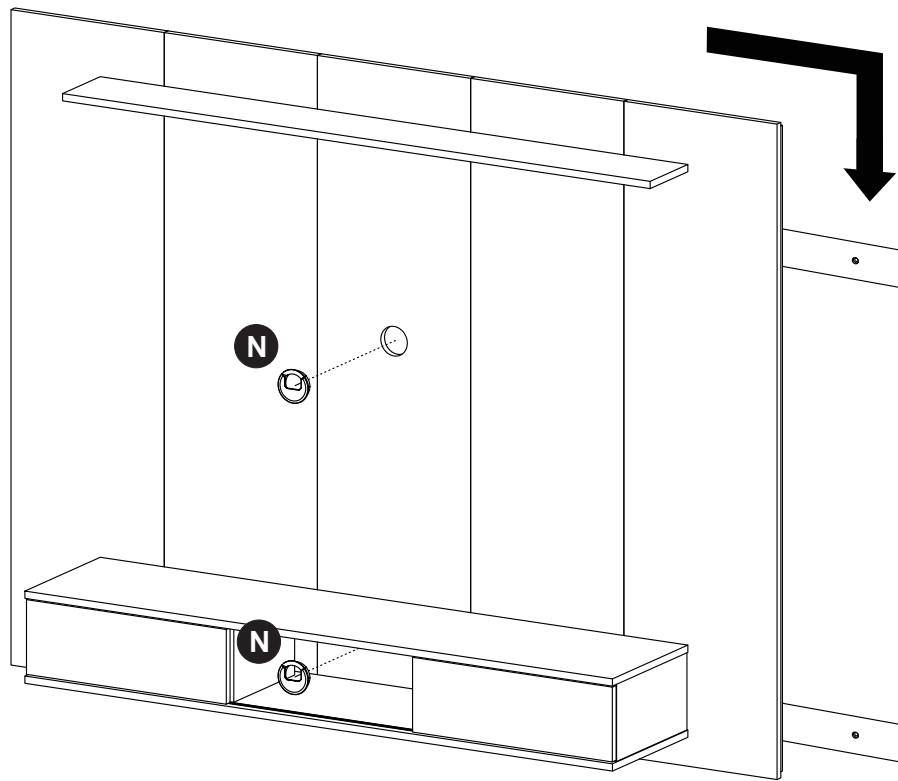 11



   12

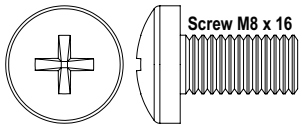
TV Support Kit			
P			
	<b>P1</b> 35x77mm	<b>P2</b> 48x28mm	<b>P3</b> 100x56mm
	<b>2</b>		
	<b>P6</b>		<b>4</b>
	<b>P7</b>		<b>4</b>



-To make it easier to attach the TV support, we send 2 screw models that match the most commonly used TVs. If neither model fits your TV properly, purchase the compatible screw from any hardware store. To prevent damage to your TV, do not over tighten the screws.

# ASSEMBLY INSTRUCTIONS

 13

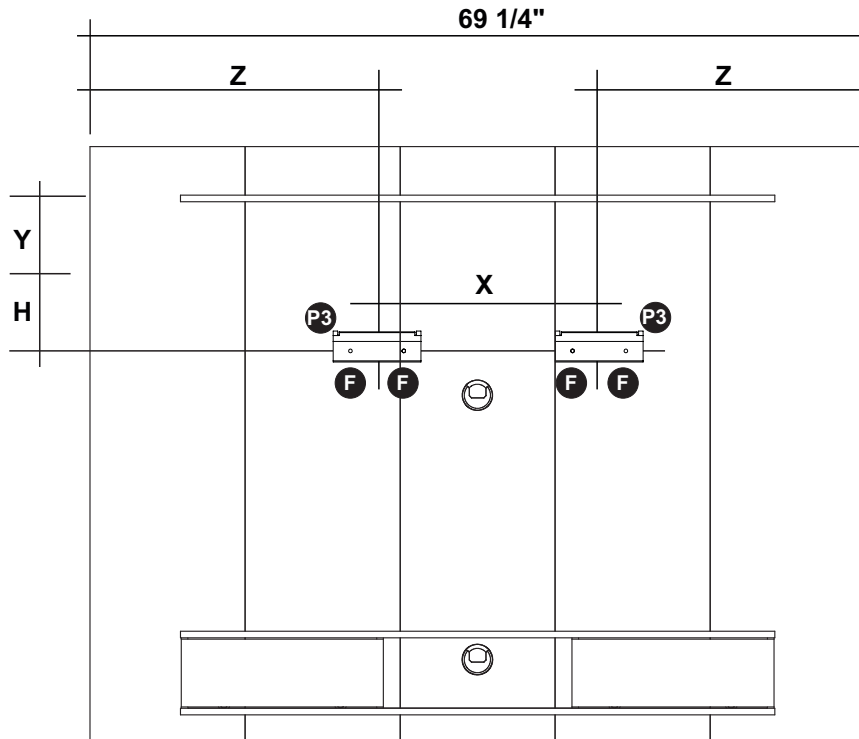

**Y = Useful height above the TV.**

 
 
**H = Distance from the TV holes to the TV border.**

**X = Distance between the TV holes.**

14


## Upper Support

Use the screw indicated  
in the TV manual  
P6 / P7(VESA).

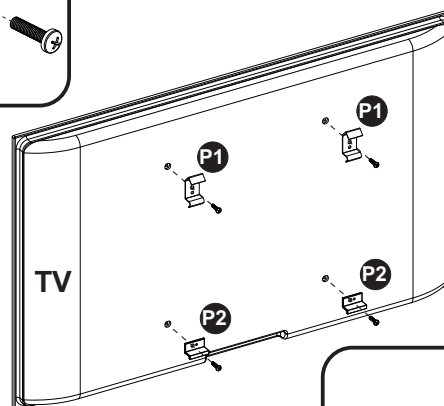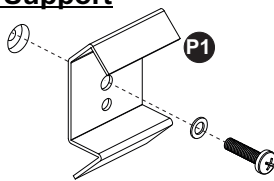


## Lower Support

 Use the screw indicated  
in the TV manual  
P6 / P7(VESA).

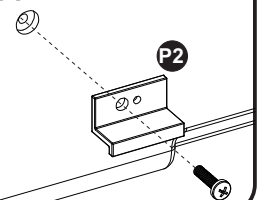

# ASSEMBLY INSTRUCTIONS

 15

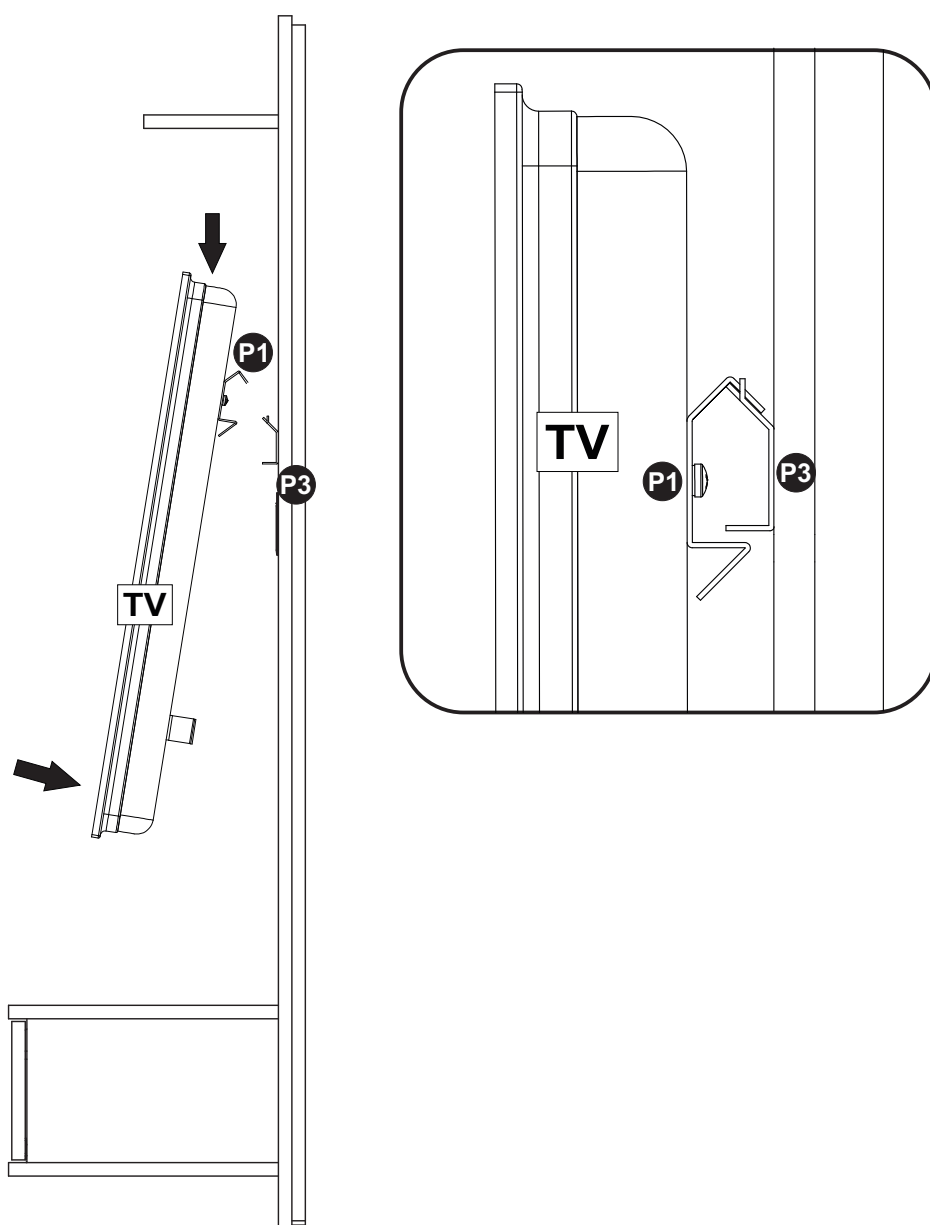



To make it easier to attach the TV support, we send 2 screw models that match the most commonly used TVs.

If neither model fits your TV properly, purchase the compatible screw from any hardware store. To prevent damage to your TV, do not over tighten the screws.

**Always take out the TV from the panel in the following situations:**

- You are moving the wall panel;
- You are handling the cables;
- You are passing new cables.



 
**Attention!**

If the power plug is behind the panel, be sure that the cables are not forcing the panel forward.

## Steps to remove the TV from the wall panel:


**1**

There are safety locks in the support that keep the TV in its place. You can not take out the TV moving it to the sides.

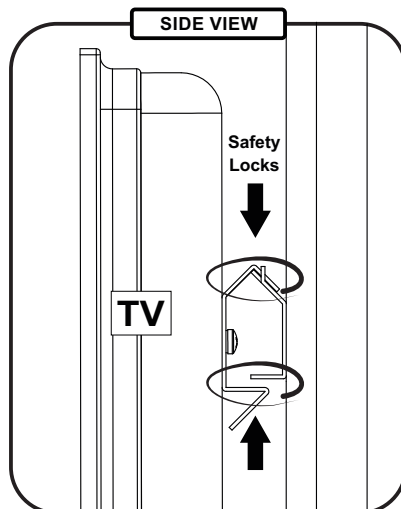


**2**

 Incline the bottom part of the TV so that it passes the lower safety lock.

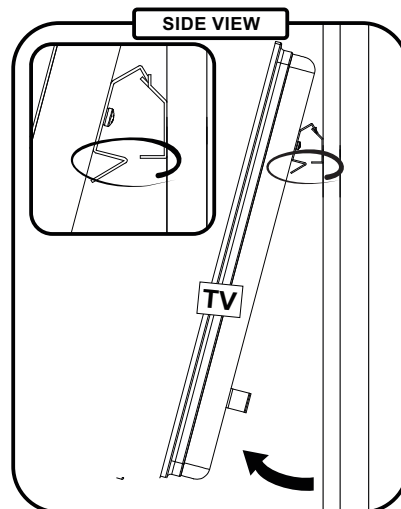


**3**

 Lift the TV, removing it completely from the support.

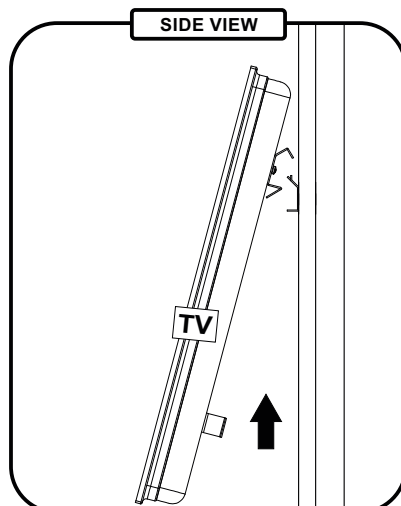


**4**

 Disconnect all the TV cables and remove the TV safely.

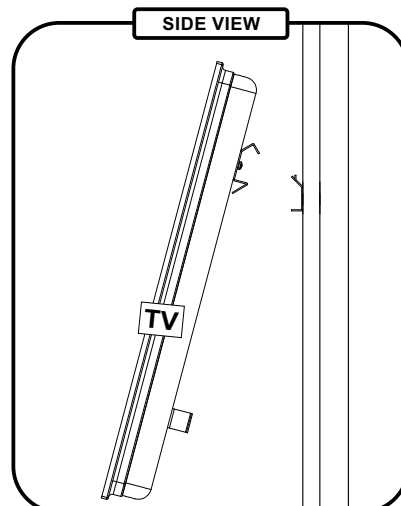

We are not responsible for TV damage caused by inappropriate handling.

# ASSEMBLY COMPLETE

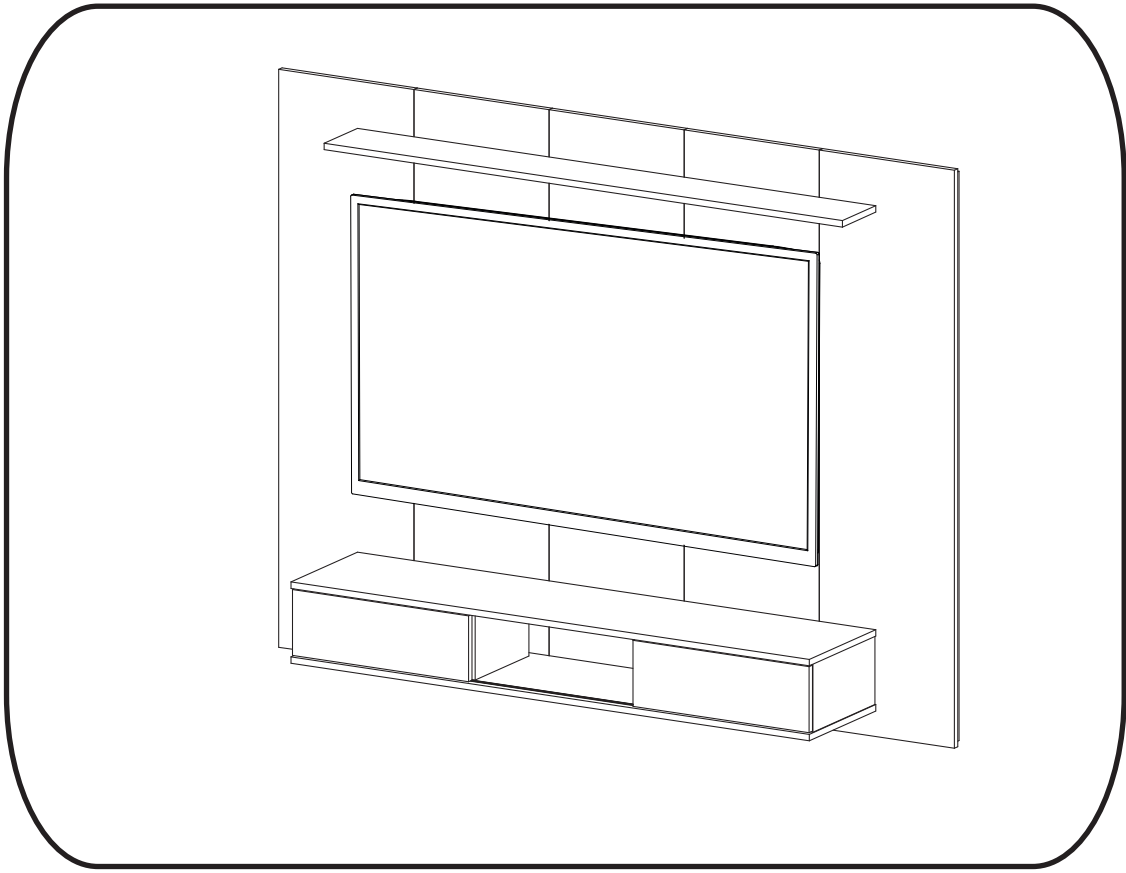 

**CONGRATULATIONS, YOUR  
MULTI STORAGE WALL MEDIA CENTER IS COMPLETE**

## Product Packaging Information

Model #: Multi Storage Wall Media Center

Color: Natural/White - White - Black

Shipment Ref. #: \_\_\_\_\_

Date: \_\_\_\_\_

# Door Mounting Template

