


Instruction Manual

Contents
Make sure that the package contains the following parts:

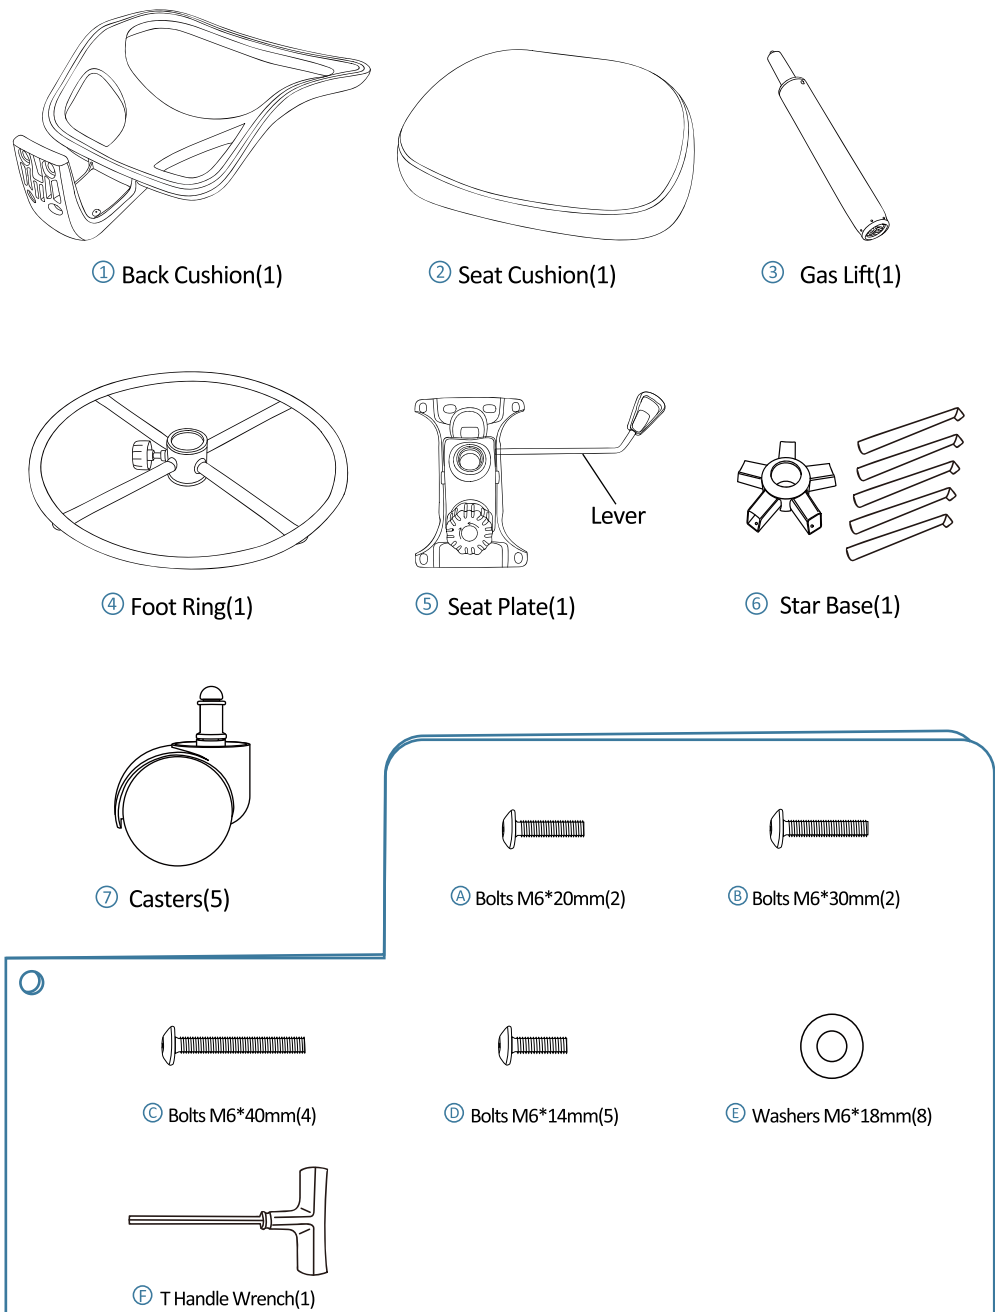

Assembly Instructions

Step 1: Attach the seat plate to the seat cushion using B bolts (2 Pcs) at Front, A bolts (2 Pcs) at Back and F (4 Pcs) Washers. Tighten all the bolts with the wrench (G), being careful not to miss-thread the bolts or damage the seat.

⑧ Bolts M6*30mm
⑨ Washers M6*18mm
⑩ Bolts M6*20mm
⑫ Washers M6*18mm

Step 2: Attach the back cushion to the seat cushion using C bolts(4 Pcs), E washers (4 Pcs). Align all the holes, put all the bolts into the holes, then tighten them with the wrench (F) in turn.

⑩ Bolts M6*40mm
⑫ Washers M6*18mm

Step 3: Turn the Star Base upside down, insert 5 detachable feet in turn to the Star Base, align all the holes and fix the feet with D Bolts(5 Pcs).

Step 4: Press Rolling Casters (5 Pcs) into the hole at the end of each base leg. Lastly, insert the Gas Lift into the Central hole as shown. Slide the foot ring around the gas lift and tighten into place by turning the tension knob to the right.

Lever

Step 5: Attach the seat cushion down onto the gas lift firmly until the connection is secure

Adjustment

Adjusting the seat height
To raise your seat, lean forward to lift your body weight from the seat, then pull up the lever. To lower the seat, pull up the lever while you're seated

To operate the rocking function
To let your chair rocking, pull the lever out. To stop your chair from rocking, push the lever in

Adjusting the seat tension
Turn the tilt knob clock wise to make it easier to rock your chair backwards
Turn the tilt knob counter-clockwise to make it harder to rock your chair backwards

Adjusting the foot ring
Turn the tilt knob on the foot ring counter-clockwise, then the foot ring can be raised up or down to your desired height