





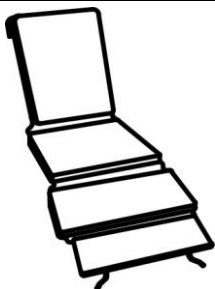
Assembly Instructions

Caution : You must read this before you proceed


Recliner

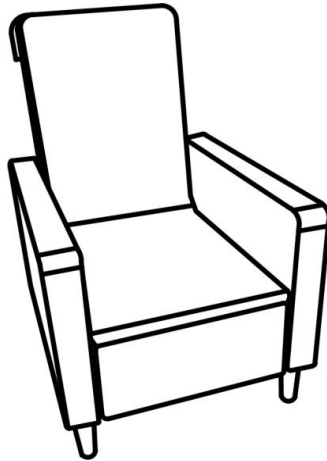

Parts List

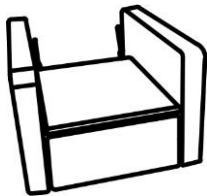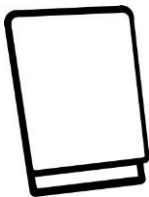
Label	Picture	Description	QTY
A		Chair Base Body	1
B		Chair Backrest	1
C		Leg	4
D		Cushion	1

Hardware

Label	Picture	Description	QTY
①		Pre-installed Leveller	1

Assembly Preparation

Before Beginning Assembly:

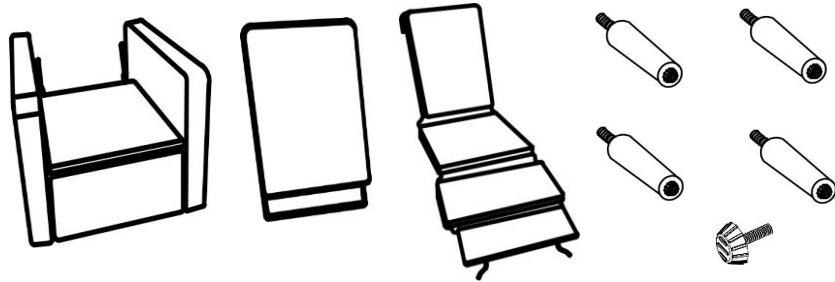

• Read instructions, cover to cover-



• Have 2 adults on hand for assembly-



• Do not assemble on flooring or carpet-




• Assemble on a clean non-marring surface (packing foam)-



• Save all packaging until finished-


Assembly Steps

OVERVIEW

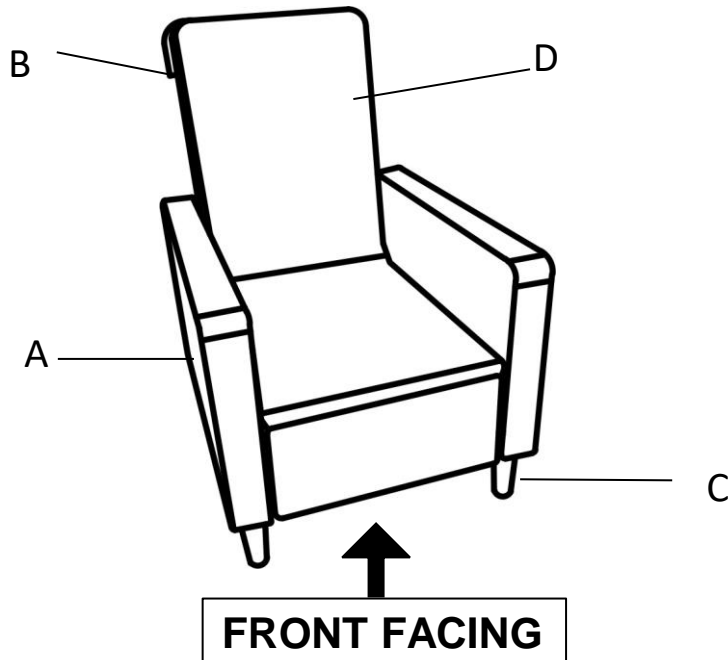

This Reclining Chair has multiple parts and may require up to some 30 minutes to assemble. To give you an overview of the Reclining Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions here below to familiarise yourself with the parts and steps before assembly.

Step 1

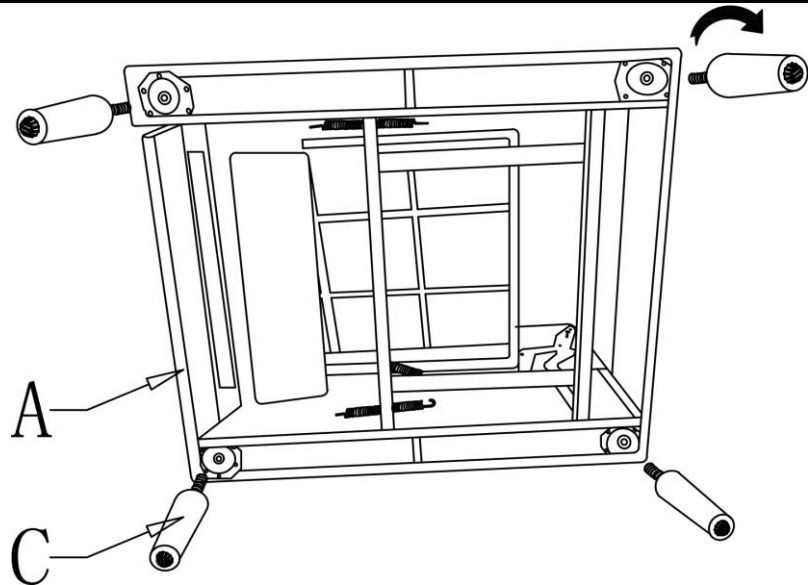

Position the Chair on its back, as shown.

(Preferably on a surface that won't scratch the upholstery.)

Open the inner bag and take out the 4 legs (C) provided, then remove the plastic covers of Legs.


First, install one of the Legs (C) onto the bottom of the Chair.

Then insert threaded stem into the threaded mounting position at the corner of the Chair.

Tighten by turning the Leg clockwise, DO NOT OVER TIGHTEN.

Repeat the same step to install the other remaining three Legs (C)

Step 2

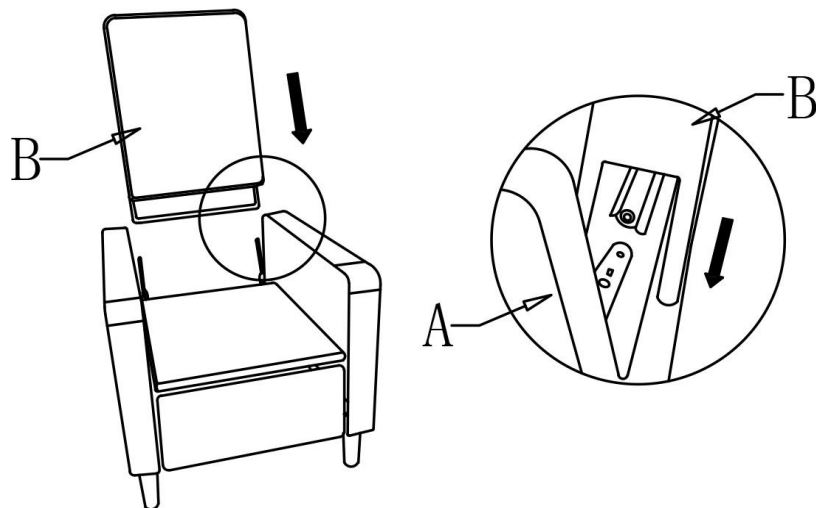


With assistance from your adult partner, hold up the fully assembled Backrest (B), stand behind the Chair.

Insert the pre-attached Metal Bracket on the sides of the Chair Backrest (B) into the pre-attached slide lock gadget on the Chair Base (A) as shown above.


Firmly but gently, push the Chair Backrest (B) downwards until the Backrest (B) is fully slotted and locked into position.

Step 3

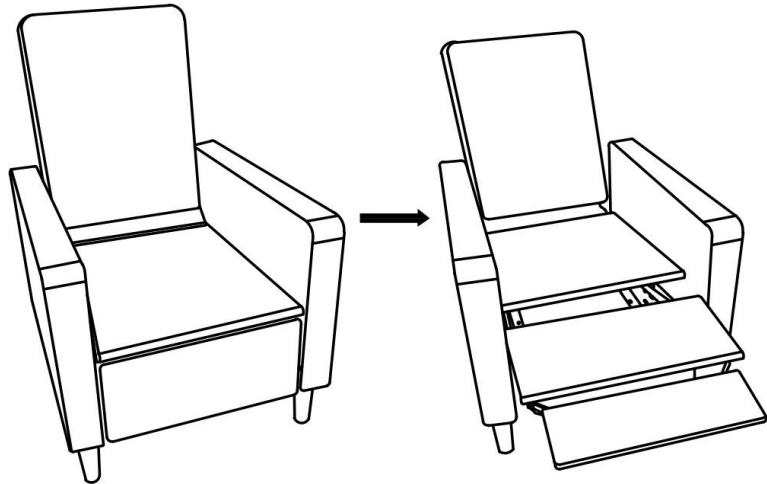


Push back the Chair Backrest (B) as shown.

Step 4

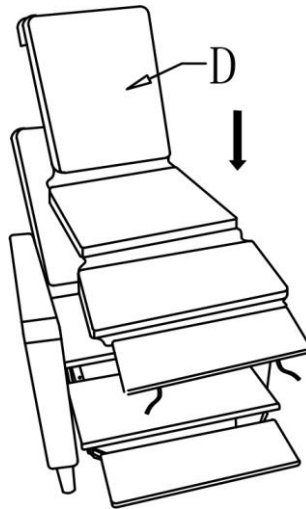


Place the Cushion (D) on the VBase Body (A) and Backrest (B).

Step 5

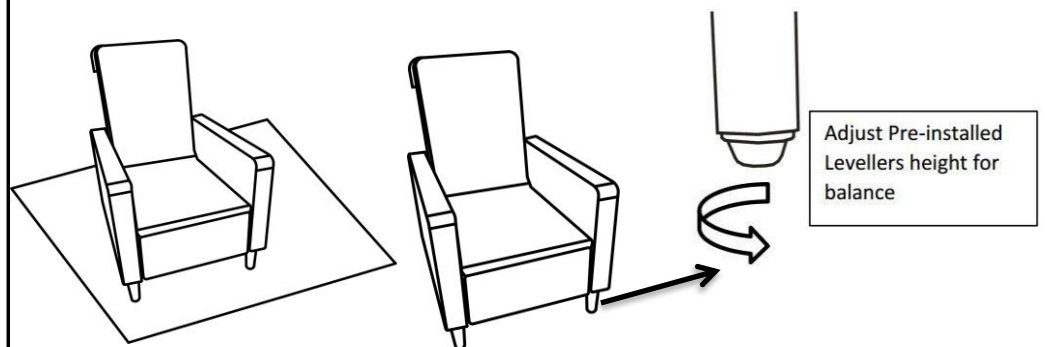


Place the Chair on a LEVEL SURFACE to check for wobbles.
If it wobbles, adjust the Legs' Pre-installed Levellers until the chair is level with the ground.

Step 6

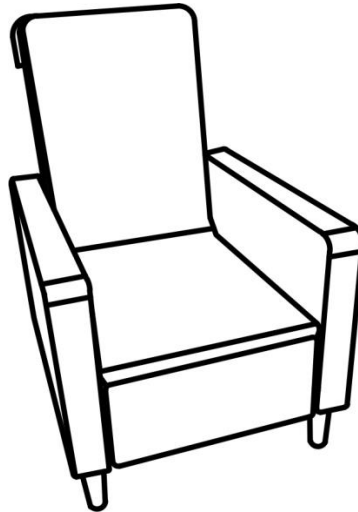

Your Recliner is ready for use.
This Recliner can only be used on a flat, level surface.

Disassembly

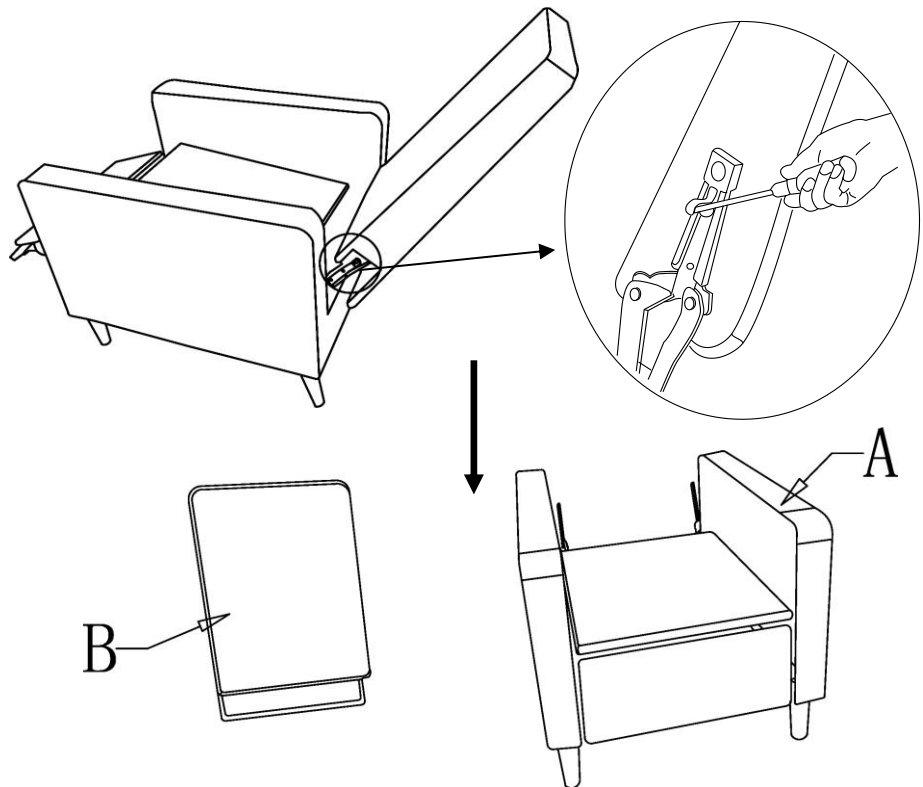

Disassembly Note: Open the flap on the Chair Backrest (B), use a screwdriver (Don't use fingers) pressing outward on the metal ear on the pre-attached Metal Bracket on one side of the Chair Backrest (B).

With assistance of you adult partner to keep the Chair Base (A) in place, pull out the Chair Backrest (B) upward at the same time, repeat the same step for another side.

Then the Chair Backrest (B) can be taken out.

User Instructions.

Recliner Chair

Please read the Instruction Manual below carefully before use.

This is a Recliner Chair. At anytime in a reclined seat position or in the upright position, you may enjoy the rocking motion by using your body weight in a back-front rocking motion.

Supervise children, when using of this Recliner.

To get into a reclined posture - To Recline backrest


Sit into the seat.

Place your feet apart .

Place your left and right arm onto the armrest.

Synchronise a backward push with your arms.

Use your body weight and push backwards into the seat into a fully reclined position.

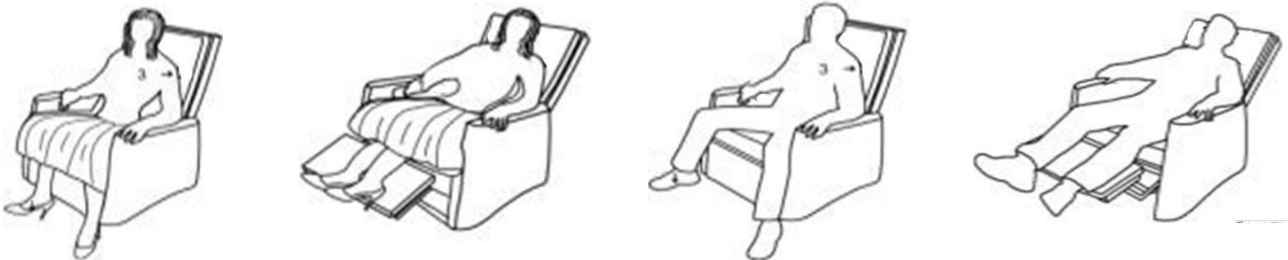

To get out of chair - move Seatback into Upright Position





















Tilt your body weight slightly forward and upwards.

The seat back will come up to an upright position.

Where necessary, use your arms to help lift - push yourself out of the seat.



Care & Maintenance

-   ● Do not put hot items directly on furniture surface
 -   ● Do not clean furniture with harsh cleansers or polish.
 -   ● To obtain the longest lifespan of your outdoor products, minimizing exposure to direct sunlight is recommended.
 -   ● Children should not climb or jump on the furniture.
 -   ● Do not write on furniture without a padded barrier to protect the surface.
 -   ● To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.
 -   ● Not for commercial use. For residential use only .
 -   ● Stains may be removed with mild soap solution and damp cloth.
 -   ● Keep away from sources of ignition.
-
-   ● Dust and pick-up spills using a clean, non-colored, lint-free cloth.