

● Please check your product packaging to make sure the included accessories are in the "list of standard accessories". If any parts are missing, please contact your local dealer immediately



● Do not allow any sharp objects to come in contact with the cabinet, as it will scratch the surface

● Continuous and prolonged exposure to direct sunlight may cause discoloration to the wood.


● Continuous and prolonged exposure to direct sunlight may cause discoloration to the wood.

● Please avoid using cleaning products that contain bleach or ammonia.


● Wood surface should only be cleaned with wood care products such as soapy water or furniture polish.

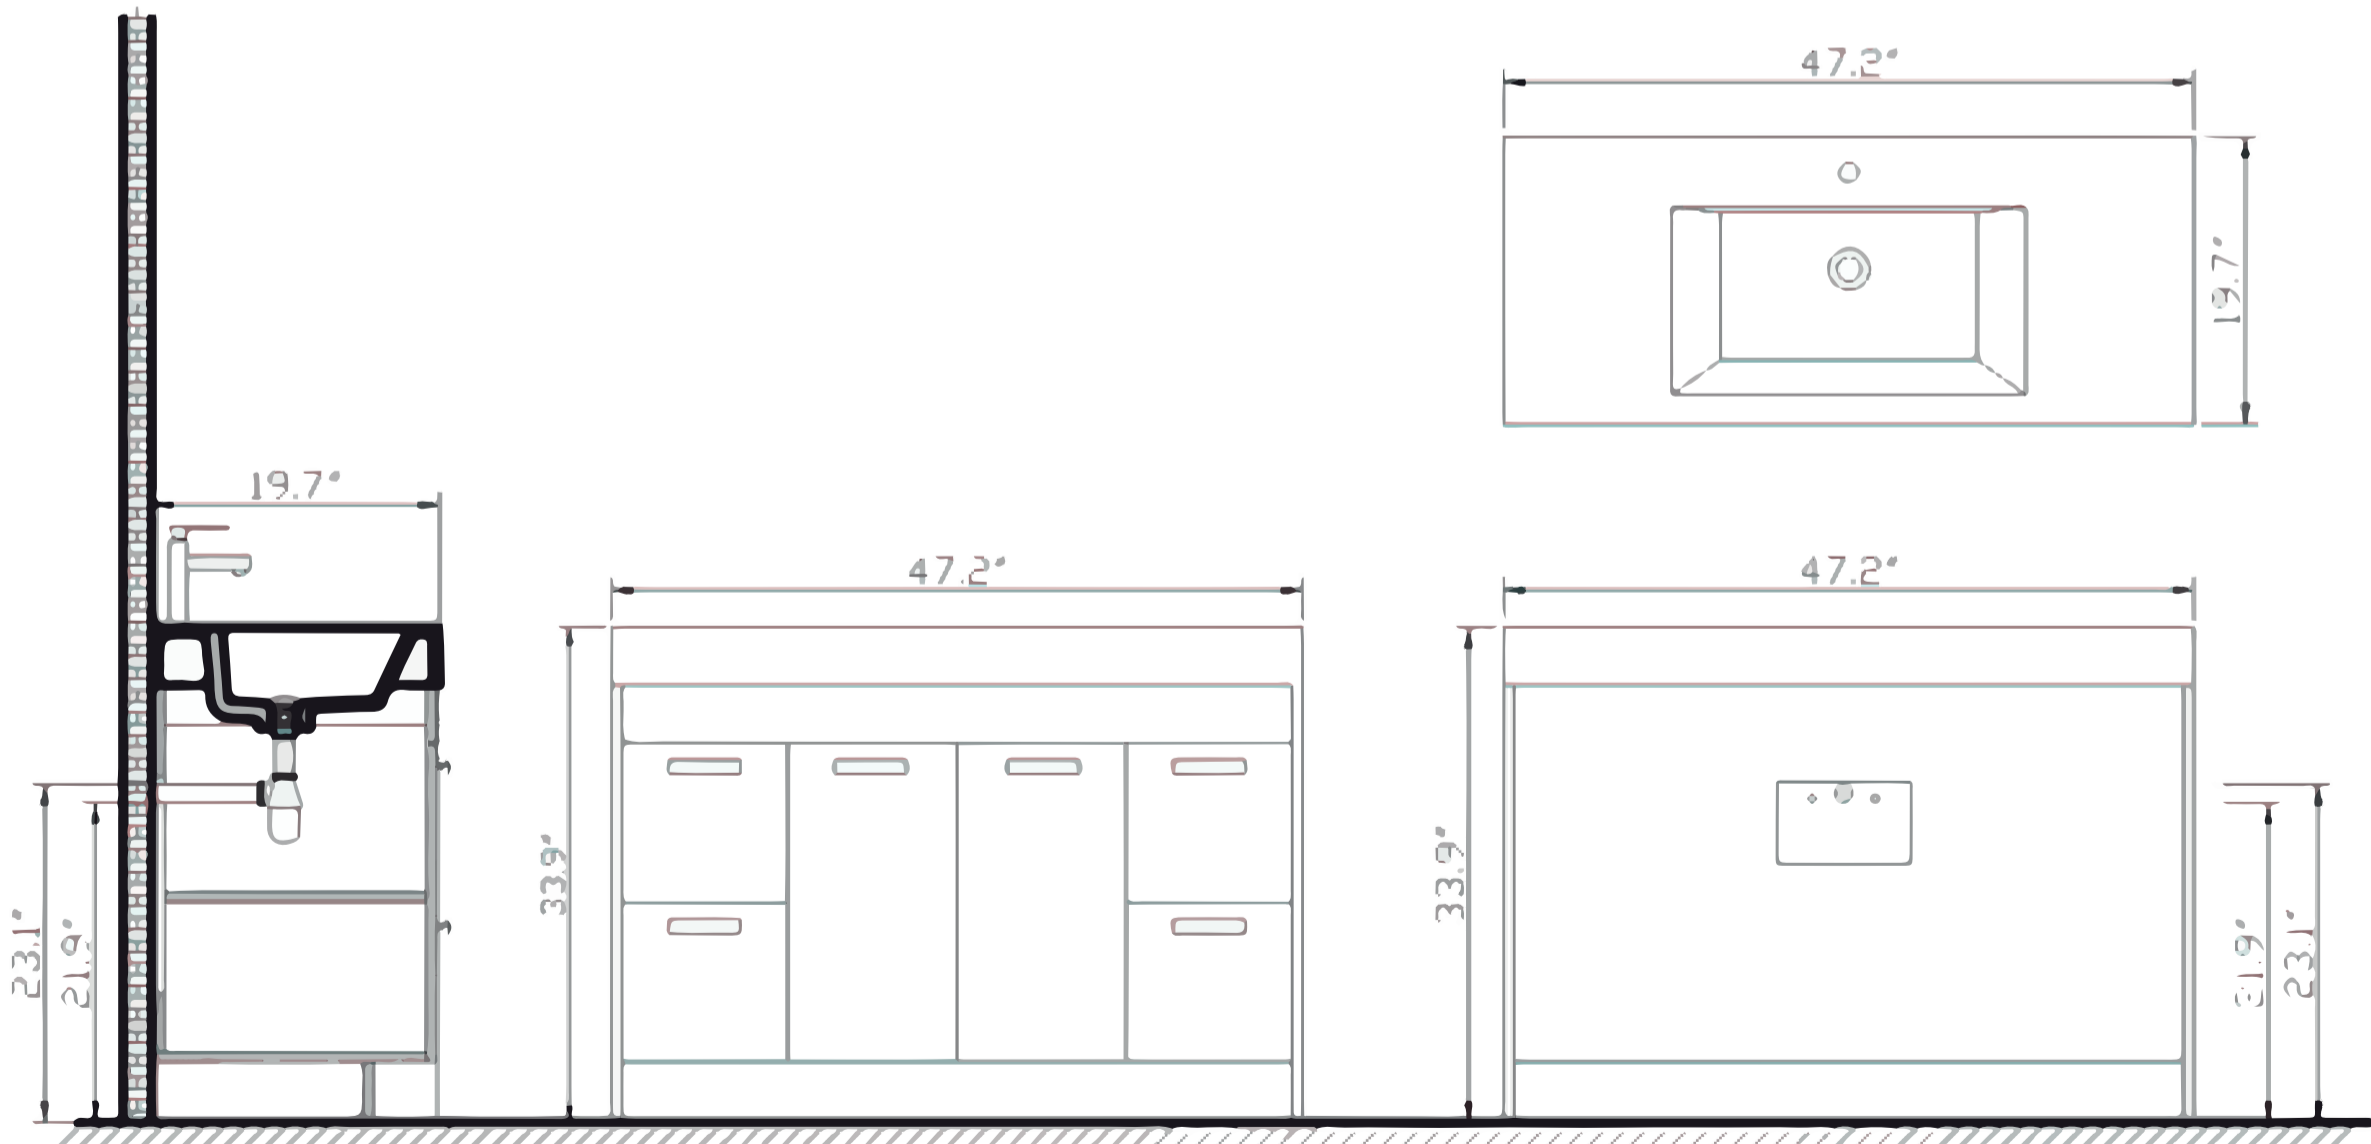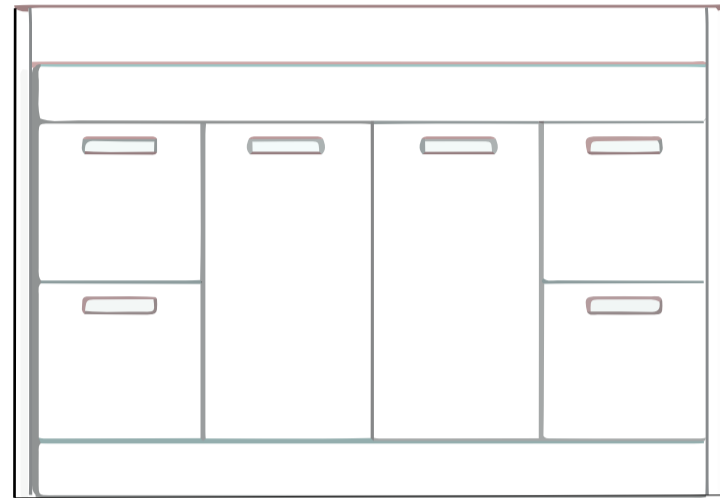

ERECTING TOOL

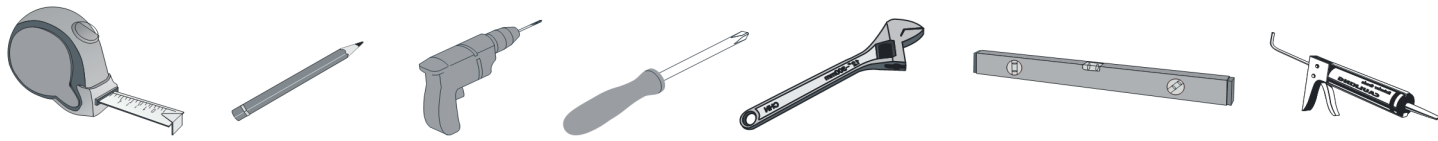

DRAWER'S ADJUST

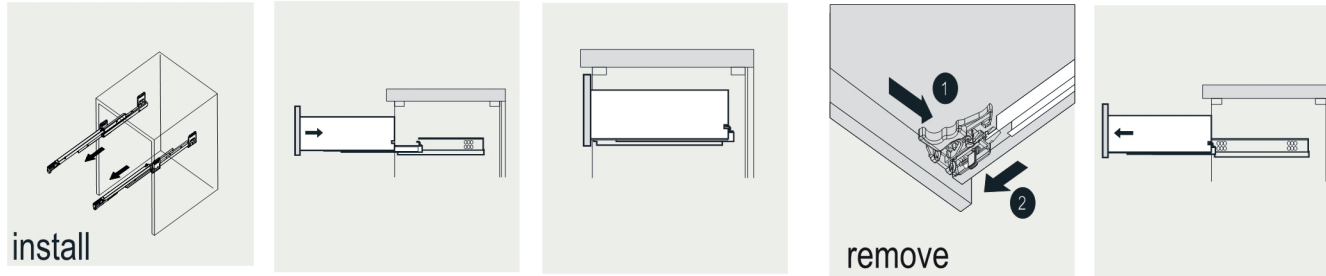

INSTALLATION INSTRUCTIONS

