



4' Prelit Carolina Porch Tree

Item # HD999032



ASSEMBLY

Step 1: Connect top to bottom of the tree (lights are already connected). Insert bottom of tree into the weighted pot.

Step 2: Shape branches. Shift branches to fill any gaps, lightly upsweep all branch tips for a uniform look.

Step 3: Open lid of the battery box by releasing the locks. Insert 4 AA batteries (not included) into the compartment, making sure that the batteries are in the correct orientation. Close the lid with the locks. Your tree is now ready to be decorated. Replace batteries when the lights become dim. Remove batteries from unit when it is not in use.

OPERATION

Press the button on the battery box once for timer mode, again to turn the lights on, and a third time to turn the lights off or reset the timer. The built-in timer mode causes the lights to turn on and off in a cycle: on for 6 hours then off for 18. The user should initially turn on the lights at a specific time of their choice, and then the lights will turn on every day at approximately the same time.

TROUBLESHOOTING

If Lights Do Not Work:

1. In extreme cold temperatures, lithium AA batteries are recommended. Otherwise, the lifespan of the batteries may be reduced.
2. Ensure the batteries are new and are inserted correctly into the battery box.

STORAGE

DO NOT STORE TREE IN A DAMP AREA OR IN AN AREA WHERE THE TEMPERATURE EXCEEDS 100°F (40°C).

WARNING – Risk of Fire and Electric Shock

- Read all instructions included with this tree.
- For indoor use and outdoor use if under a cover to protect from the elements.
- Do not place near gas or electric heaters, radiators, fireplaces, candles or other heat sources.
- Place on a level, hard, flat surface; do not place where tree is likely to wobble due to uneven floors or thick carpeting.
- Do not use candles on tree.
- After assembling the tree and adding decorations, make sure the tree is stable. If tree is not stable, shift the weight of the decorations, and use support wires to walls and/or window frames (make sure they are secure also).
- Do not install near fountains, bathtubs, sinks, pools or other areas of standing water.
- Do not place in uncovered area where there is prolonged exposure to sunlight or where rain/snow may accumulate in pot or on the tree.
- Replace batteries when the lights become dim. Remove batteries from unit when it is not used.

BATTERY WARNING

- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Non-rechargeable batteries are not to be recharged.
- Do not mix different types of batteries such as alkaline, carbon-zinc or rechargeable batteries.
- Do not mix old and new batteries.
- Make sure to insert batteries with the correct polarity.
- Remove exhausted batteries from product.
- **DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY EXPLODE OR LEAK.**
- Improper handling/disposal of batteries may cause batteries to explode or leak.
- Please recycle or dispose of batteries according to the local laws and regulations of your region.

Note: For occasional use only - not intended for consecutive use over 90 days each season.

**SAVE THESE INSTRUCTIONS
FOR FUTURE USE
MADE IN CHINA
©2021 Haute Decor**

THANK YOU FOR YOUR PURCHASE
Comments or questions?
Call us at 1-877-359-0115 or contact
us at customerservice@haute-decor.com

Haute Decor
PO Box 1594
Allen, TX 75013

