



# ASSEMBLY INSTRUCTION

MODEL : TV 834180

DESCRIPTION : TV CABINET

HARDWARE	<b>A</b> WOOD DOWEL 8 X 25 1X20	<b>B</b> CB SCREW M3.5X16MM 1X56	<b>C</b> CB SCREW M4X38MM 1X12	<b>D</b> CB SCREW M4X65MM 1X8	<b>E</b> N#4.5R 1X30	<b>F</b> ALLEN KEY 1X1	<b>G</b> G1 MINIFIX 5654+5546 6 SETS	<b>G2</b> G2 QUICKFIT CAP 6 SETS	<b>G3</b> G3 6 SETS	<b>H</b> METAL SHELF SUPPORT 5X16 1X8	<b>I</b> MIRROR BRACKET 1X8	<b>J</b> J1 K465 ROLLER 4 SETS	<b>J2</b> J2 4 SETS	<b>K</b> HANDLE BK-118-35 (METAL) 1X1	<b>L</b> L1 DRAWER SLIDE 12" 1 SET	<b>L2</b> L2 1 SET	<b>M</b> 2.5" PVC LEG 1X5
----------	--	---	---	--	----------------------------	------------------------------	--	--	---------------------------	--	--------------------------------------	--	---------------------------	---	---	--------------------------	------------------------------------

