

Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance



- Not for commercial use. For residential use only.



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Stains may be removed with mild soap solution and damp cloth.

 


- Children should not climb or jump on the furniture.





- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Club Chair

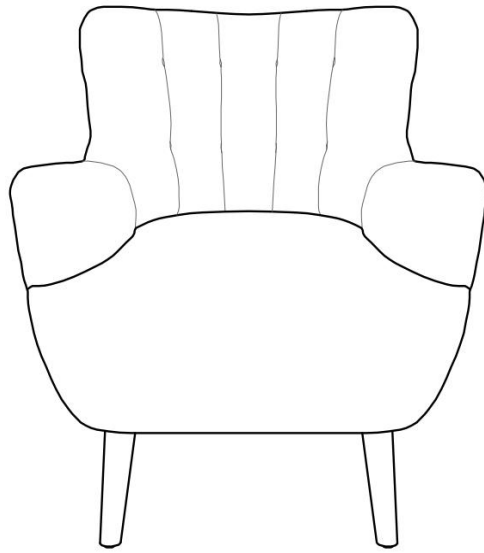


Parts List

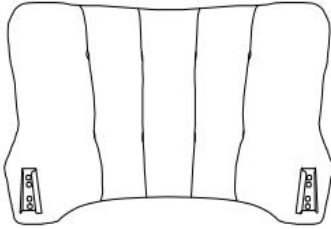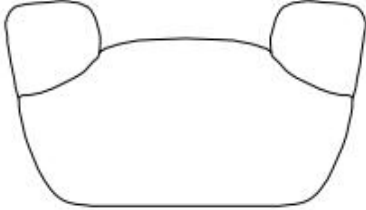  Label	Picture	Description	QTY
A		Backrest	1
B		Chair Seat	1
C		Leg	4


Hardware

Label	Picture	Description	QTY
①		Allen Wrench	1

 
②		Bolt (M8*45MM)	3
③		Spring Washer (M8)	3
④		Washer (M8*20)	3
⑤		Gasket	5

Assembly Preparation

 Before Beginning Assembly:

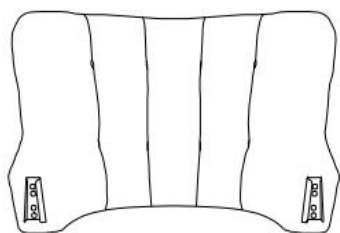

A

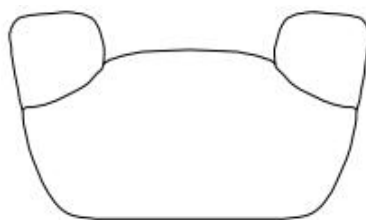 


B



Cx4



 ①x1



②x3



③x3



④x3



⑤x5



- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


Assembly Steps

Overview

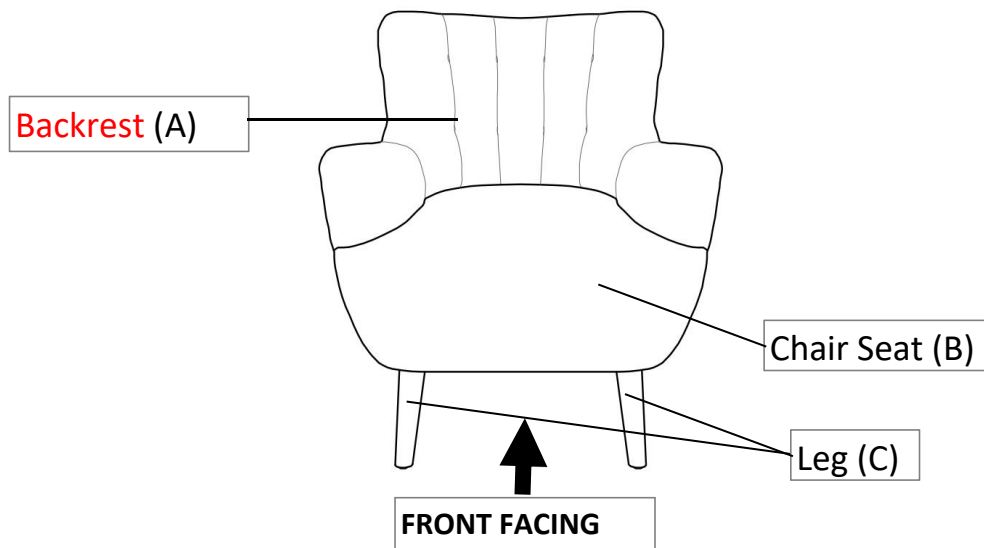


This Club Chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Club Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions herebelow to familiarise yourself with the parts and steps before assembly.

Step 1

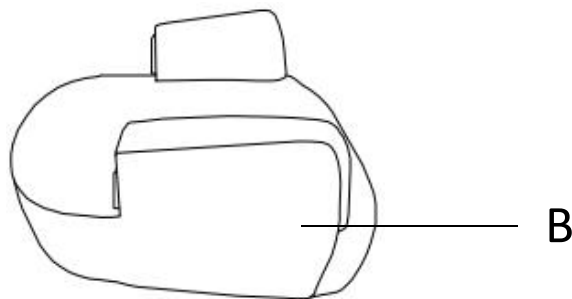

Open the carton and place all the parts onto a clean, non-marring surface. Place Chair Seat (B) on the ground, as shown in picture above.

Step 2

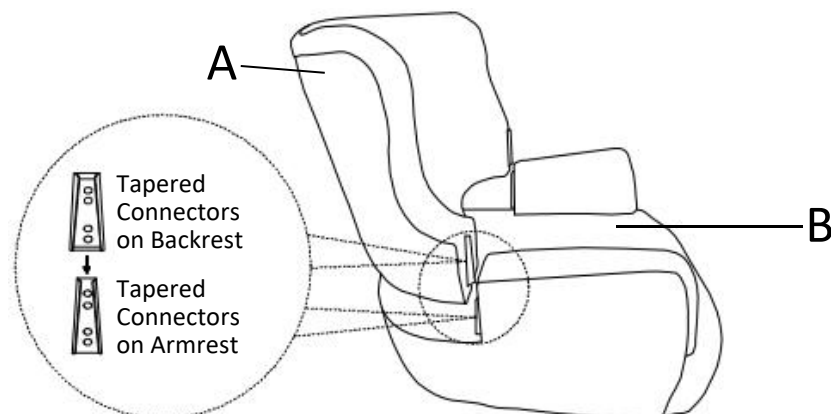


With assistance from an adult partner, lift the Backrest(A) up. Align the Tapered Connectors on the Backrest(A) and the Chair Seat(B).

Push down on the Backrest (A) until it is fully locked into the Tapered Connectors.

Note: Make sure the Tapered Connectors on the Backrest(A) lock into the Tapered Connectors on Armrest(B) .

Fully locked position: Check and assess that the base of the Backrest(A) and Chair Seat(B) are aligned and level.

Step 3

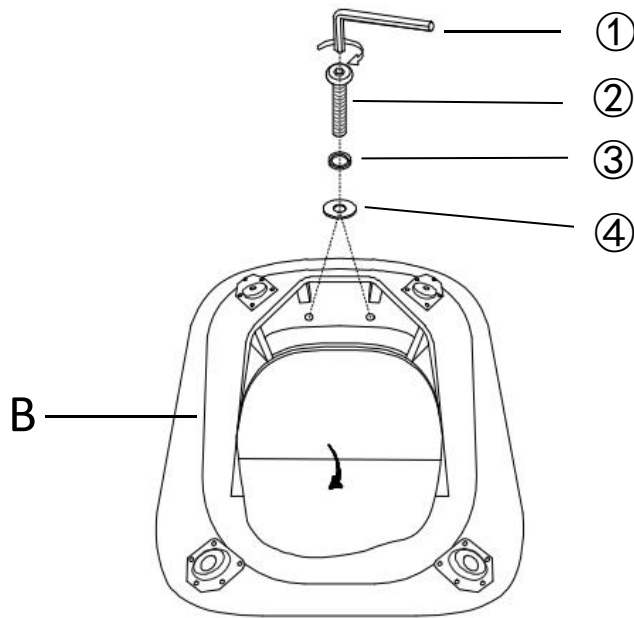

Attach Chair Seat (B) to Backrest (A) using Bolts(②) and Washer(③)and Washer(④) with Allen Wrench(①).


Unzip the bottom zipper prior to assembly, Please zip up after assembly is complete.

DO NOT fully tighten a Bolt in one go and then move on to the next.

Rather, In a sequential manner, gradually tighten each Bolt until all Bolts are evenly secured.

This methodology will ensure maximum evenness once all Bolts are fully tightened.


Step 4

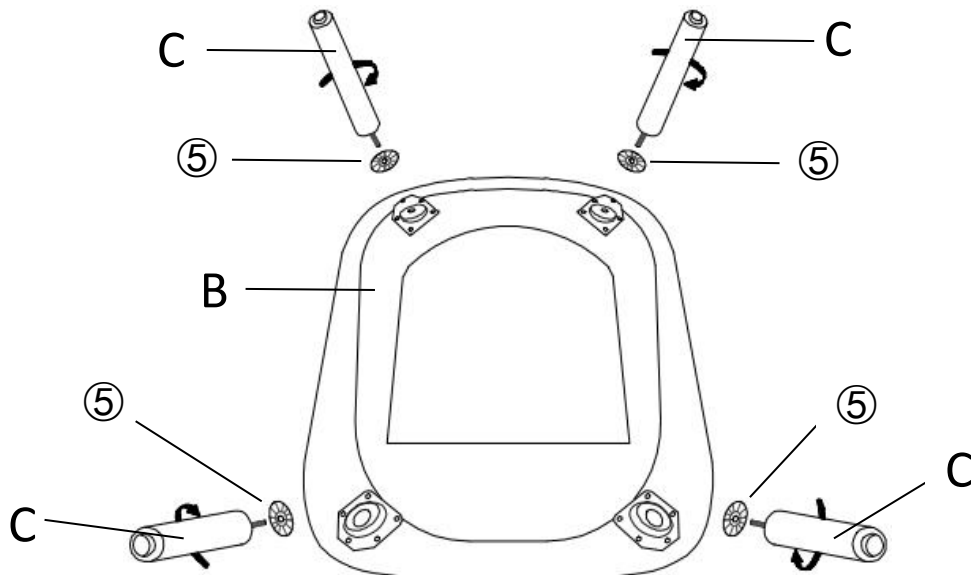

Attach the Legs (C) to Chair Seat(B) using Gasket(⑤).

Note: The use of Gaskets are OPTIONAL and are especially useful to help alleviate slight wobble. Some Legs may need more than one whilst some legs may not need any.

Step 5

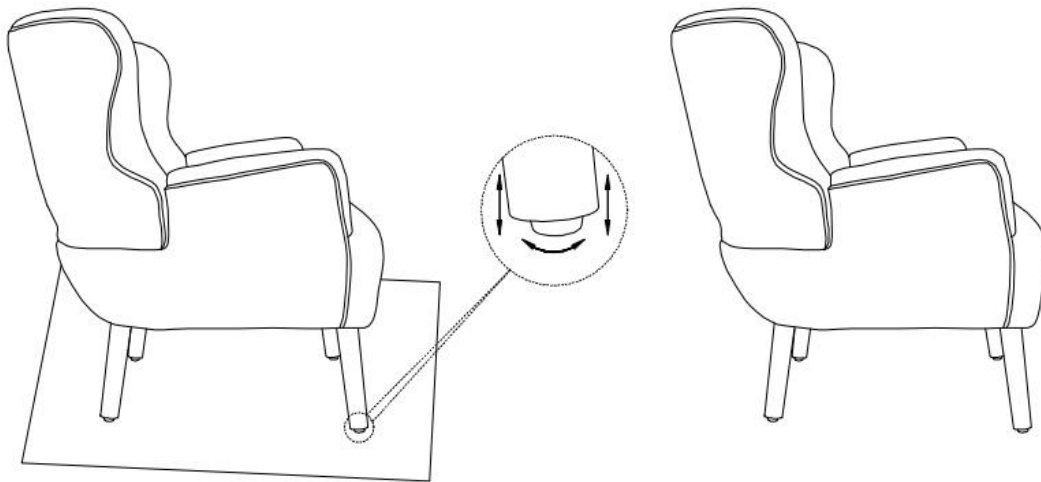


Place the Club Chair on a LEVEL SURFACE to check for wobbles.

If it wobbles, please use the adjustable leveller.

WARNING!! IF Club Chair IS NOT STABLE, IT COULD LEAD TO DAMAGING THE PRODUCT.

Step 6

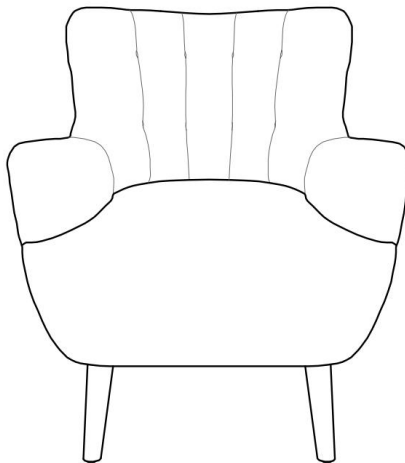

Your Club Chair is ready for use.

The chair can only be used on a flat, level surface.