

## ASSEMBLY INSTRUCTIONS:

1. Carefully unpack parts from carton, remove covering from parts and check that all parts are included as shown in the illustration.
2. Screw the neck (G) on the body (H).
3. Install the bulb into the socket (B).
4. Place the harp (C) onto the saddle (A), then place the shade (D) onto the harp (C).
5. Put on the lamp screen (F) and secure it with the finial (E).

**Use a 150W (Maximum) Incandescent 3-WAY A Type Bulb or 25W 3-Way CFL Type Bulb.**

## IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug.

## ATTENTION:

POUR PRÉVENIR LES CHOC ÉLECTRIQUES, NE PAS UTILISER CETTE FICHE POLARISÉE AVEC UN PROLONGATEUR, UNE PRISE DÉCOURANT OU UNE AUTRE SORTIE DE COURANT, SAUF SI LES LAMES PEUVENT ÊTRE INSÉRÉES À FOND SANS EN LAISSER AUCUNE PARTIE À DÉCOUVERT.

※PLEASE INFORM YOUR DEALER IMMEDIATELY IN CASE OF ANY PARTS SHORTAGE.

※SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

