

 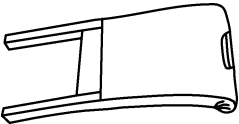


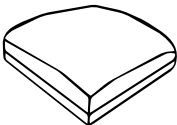




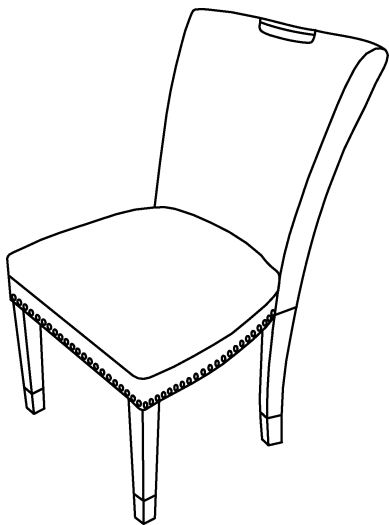


ASSEMBLY INSTRUCTION

CHAIR


A Chair Back	B Seat	C Front Leg	D Lock Washer Ø5/16"x13mm
			
1pc	1pc	2pcs	11pcs
E Flat Washer Ø5/16"x19mm	F Bolt Ø5/16"x3-1/2"	G Bolt Ø5/16"x3"	H Bolt Ø5/16"x2-1/2"
			
11pcs	4pcs	3pcs	4pcs
I Allen Key M5	J Wood Dowel Ø10x30mm		
			
1pc	1pc		



This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

-

2 Put Chair Back (A) on a smooth flat surface, attach the Seat (B) to the Chair Back (A) using Bolt (F) & Bolt (G), Lock Washer (D), Flat Washer (E) in both holes of Seat (B) and Chair Back (A). Turn the Allen Key (I) in Bolt (F) & Bolt (G).

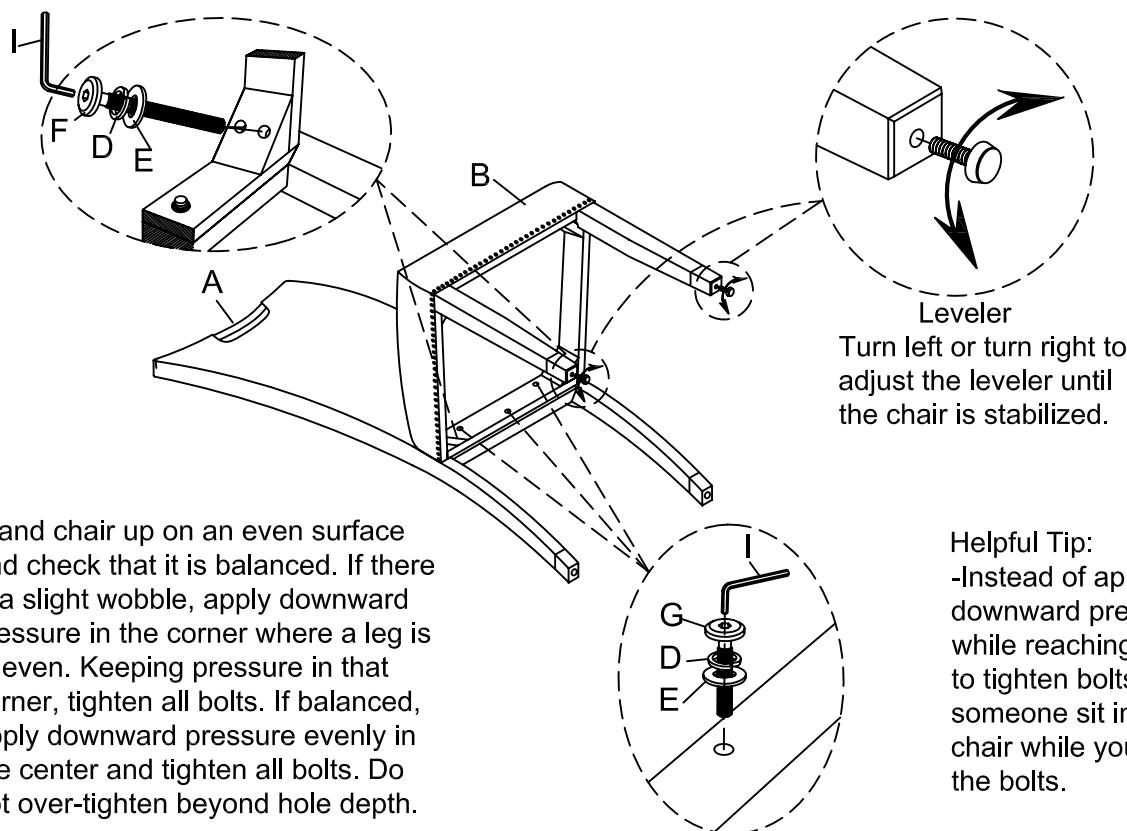

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.