 


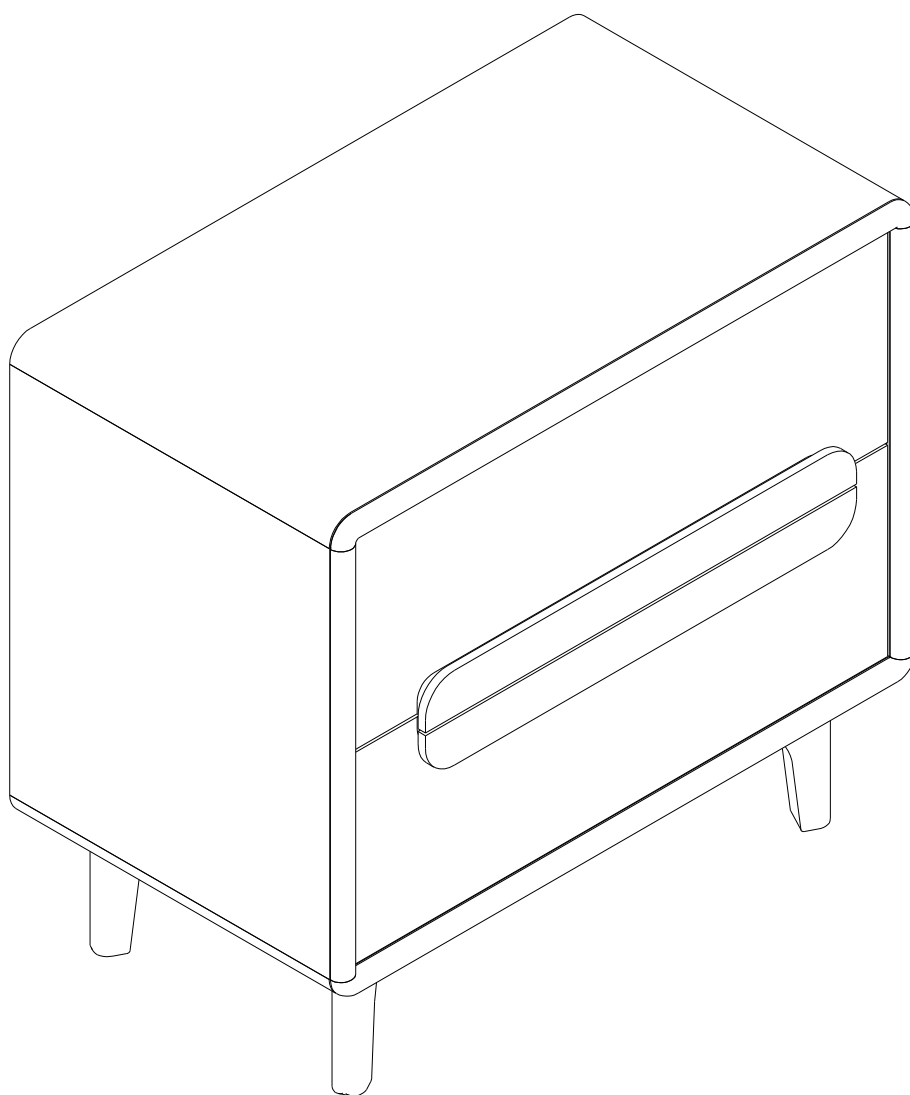

ITEM NO. NSCW1817

Scan for manual,
video & advice.



If you have any questions or concerns,
don't hesitate to reach out to us.

Call us: +1(833)324-2464 (8 AM to 5 PM PST Monday-Friday)
Email: customerservice@hulalahome.com

MAINTENANCE AND WARNINGS

Thank You For Choosing Our Furniture.

 
Please read the instructions and warnings carefully before use, to ensure safe and satisfactory operation of this product.

NOTE :


This brochure contains IMPORTANT safety info. Please read and keep it for future reference.



Weight Limitation
80 LBS

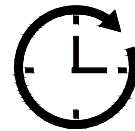

Installation:
55 minutes.

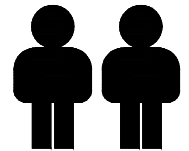 

Two Person



Before You Start

Please follow the steps below:



Unbox the package and check if all parts and accessories are complete.



If you find something missing, stop assembly and contact your supplier immediately.



Please do not completely tighten all the hardware until the entire assembly is completed! Be sure to tighten all the hardware once the assembly completed.



NOTE: Should be assembled on soft surface to keep balance.

After-Sales Service

- If you encounter any issues or need technical support during use, please contact our after-sales team. We offer long-term maintenance and warranty services.



Warranty



We strive to offer high , quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive replacement parts by purchasing them with our company if they are available.



Are you having difficulty with assembly? Missing parts? Please send email with your order number to **customerservice@hulalahome.com**

 


For return, please check the return policy with the retailer or market place you bought from. Appreciate your purchasing from us. Pop up your life by our furniture piece!

Daily Maintenance

- Keep furniture away from heat.
- Do not use cleaning agents containing acids, alkalis, or corrosive substances, as they may damage the surface. It is recommended to use neutral cleaning agents or specialized furniture cleaners.
- Do not place furniture under direct sunlight, material will possibly fade over time.
- Do not use on site dry cleaning machine.
- Children should not climb or jump on the furniture.
- Do not write on furniture without a padded barrier to protect the surface.
- Not for commercial use, for residential use only.

Exploded Diagram

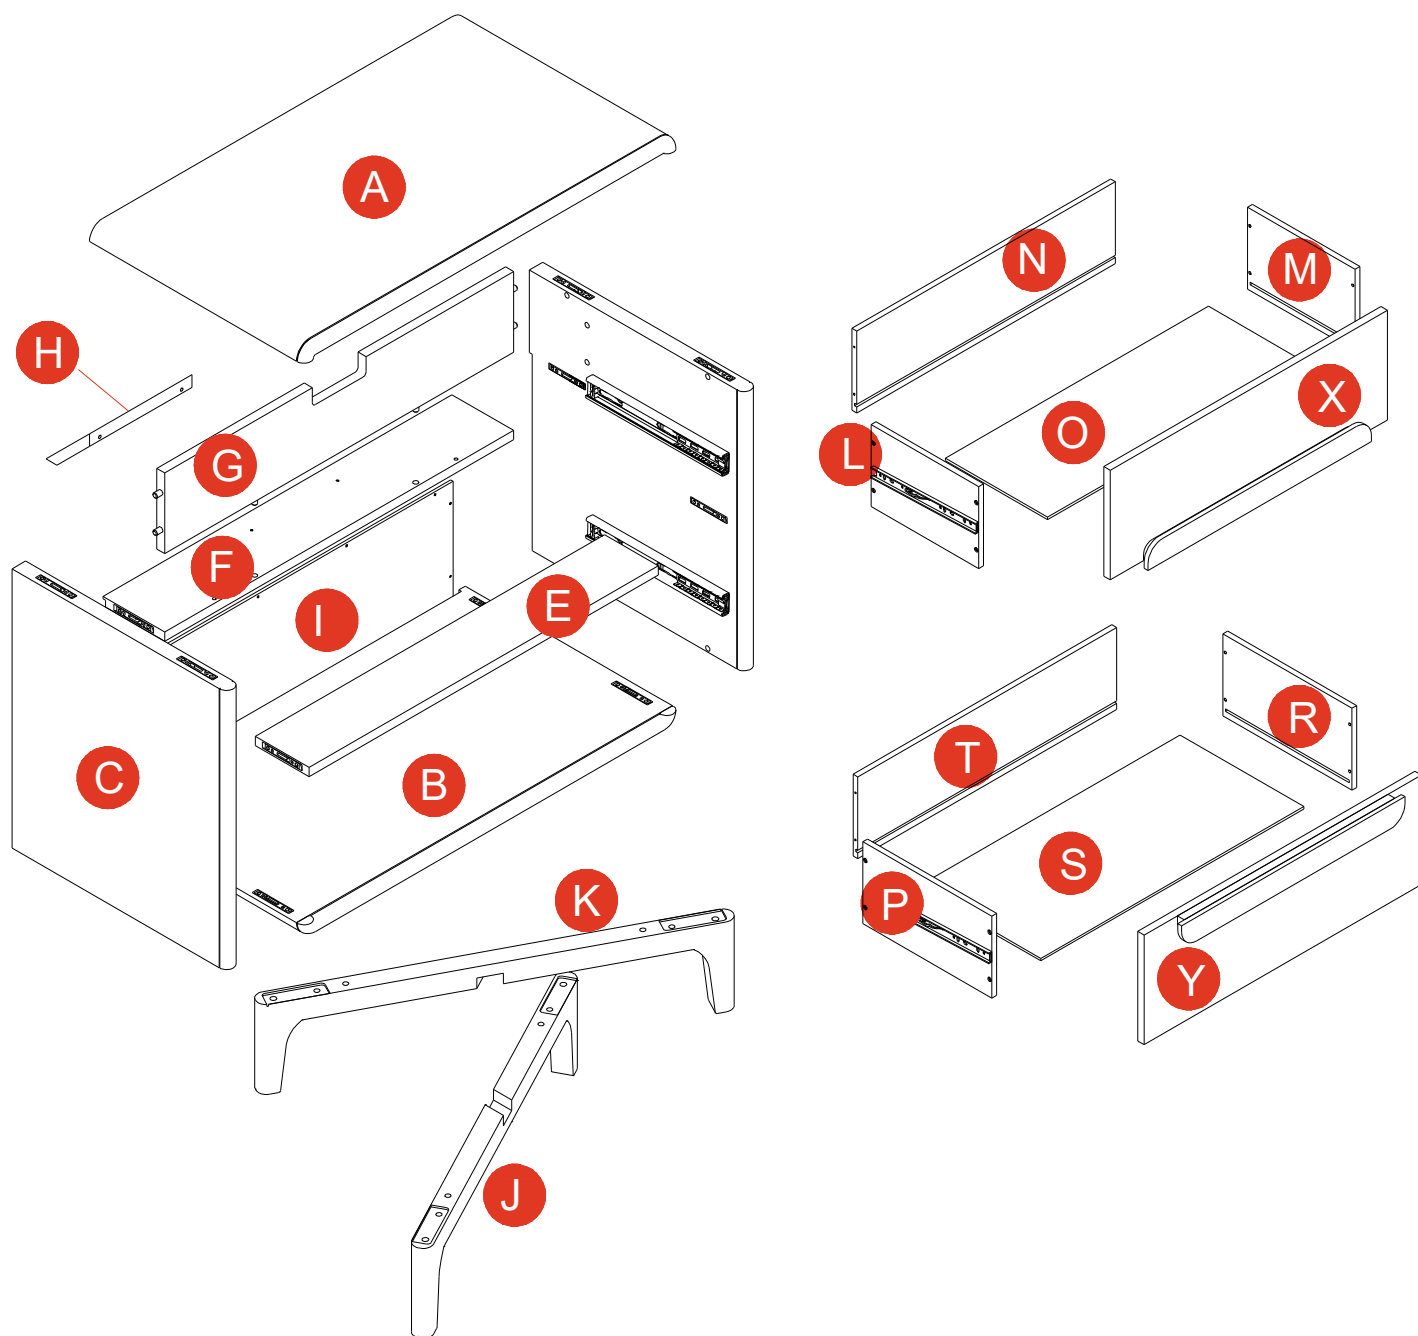

Parts List

A x1



 
Top Panel

B x1




Bottom Panel

C x1

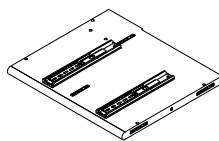


Left side Frame

 D x1

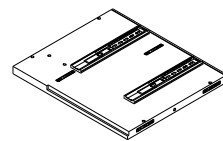


Right side Frame

 E x1

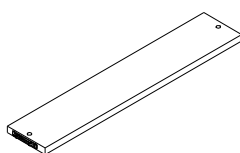


Front Rail

 F x1

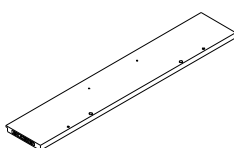


Back Rail 1

 G x1

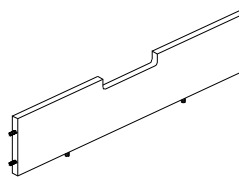


Back Rail 2

 H x1

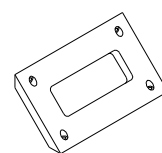


Socket Mounting Board

 I x1

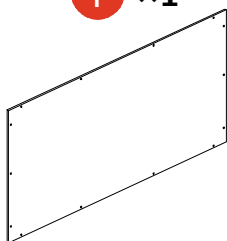


Back Panel

 J x1




Leg

 K x1



Leg

 L x1

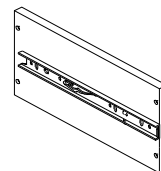


Left Side Drawer (top)

You can find them (J、K) in the bottom accessory box!


Hardware List

 M x1

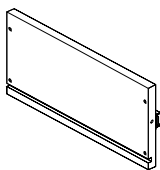


Right Side Drawer (top)

 N x1

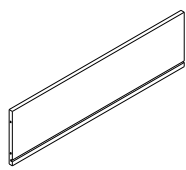


Back Panel Drawer (top)

 O x1

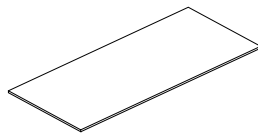


Top Panel Drawer (top)

 P x1

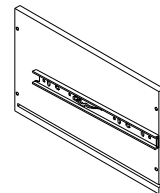


Left Side Drawer (bottom)

 R x1

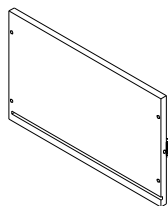


Right Side Drawer (bottom)

 S x1

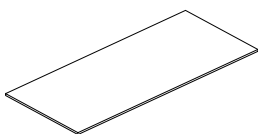


Top Panel Drawer (bottom)

 T x1

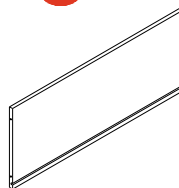


Back Panel Drawer (bottom)

 X x1

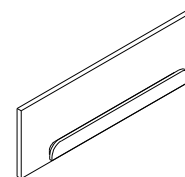

Front Panel Drawer (top)

 
Y x1

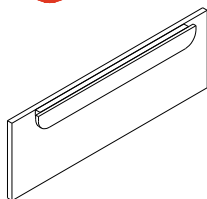

Front Panel Drawer (bottom)

Hardware List

 1 x4



Bolt Ø1/4"*1-1/2"

2 x8+1



Bolt Ø1/4"*3/4"

3 x12+2



Spring washer
Ø1/4"

4 x12+2



 
Flat washer
Ø1/4" *16*1.2mm

5 x8+1




Bolt Ø1/4"*3/4"

6 x1



Electrical socket

 7 x4




Metal plate
85*50*3mm

8 x22+3



screw Ø4*25mm

 9 x2



screw Ø3.5*12mm

10 x14+2



screw Ø3*15mm

11 x1



Anchor

12 x1



Metal wirel

13 x1



Pan head screw
Ø3.5*16mm

14 x2



 
L bracket

15 x1




Pan head screw
Ø3.5*38mm

16 x1



Allen key
M4

 17 x1




Screwdriver

Assembly Instructions

Step 1

 Open the accessory box and remove pieces (J, K) along with the hardware packet.


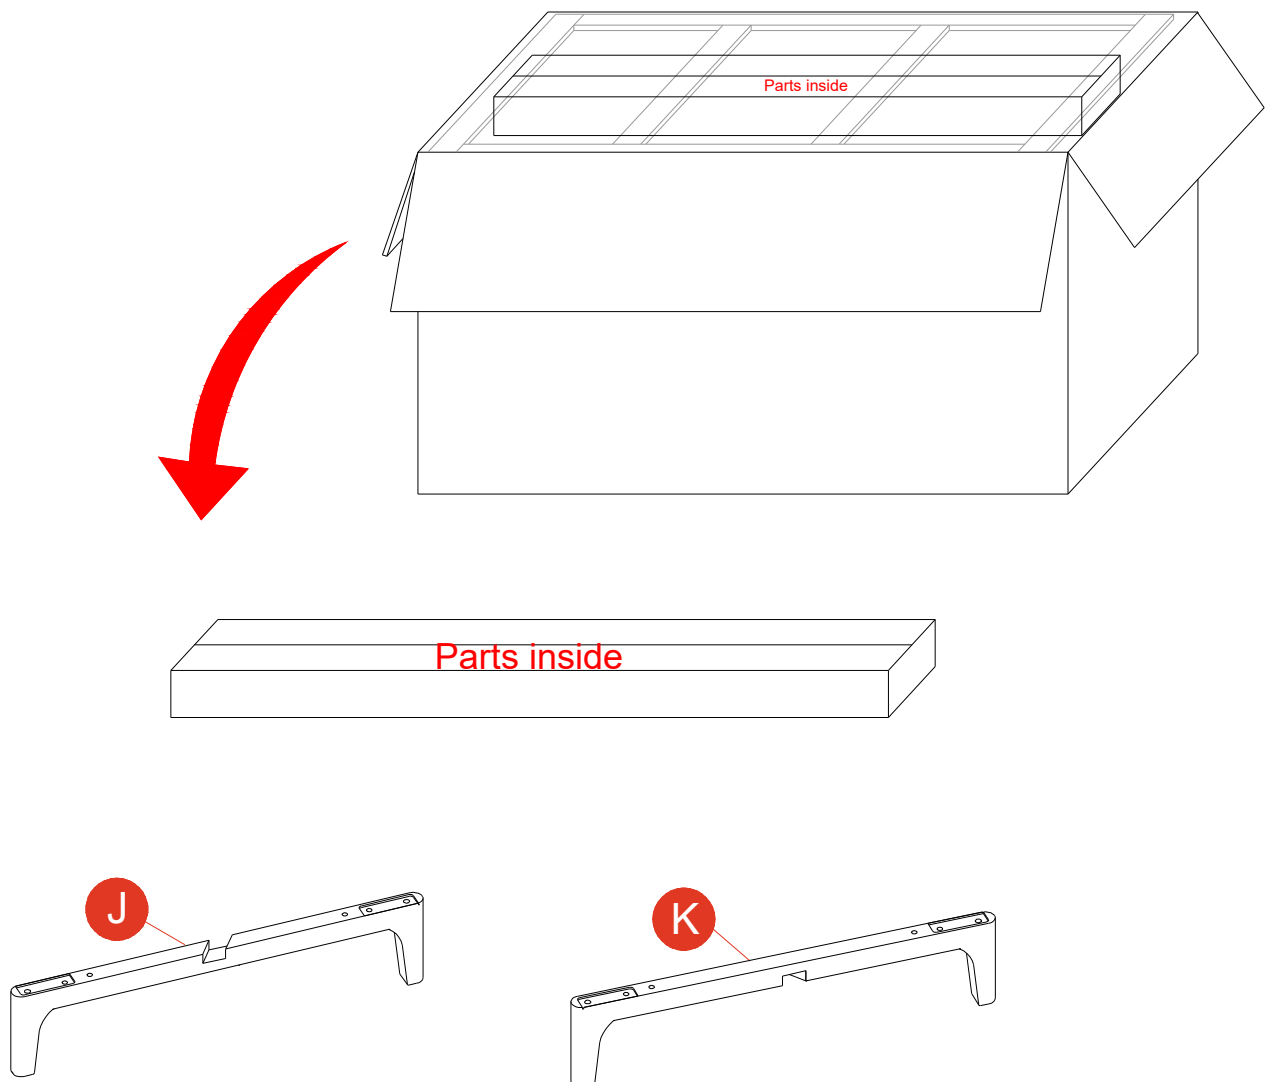


You can find them (J, K) in the bottom accessory box!

Step 2

Connect part (G) to part (F) with screw (8), tight screw with screwdriver (17).


8	 x 2	Ø4*25mm
17	 x 1	Screwdriver

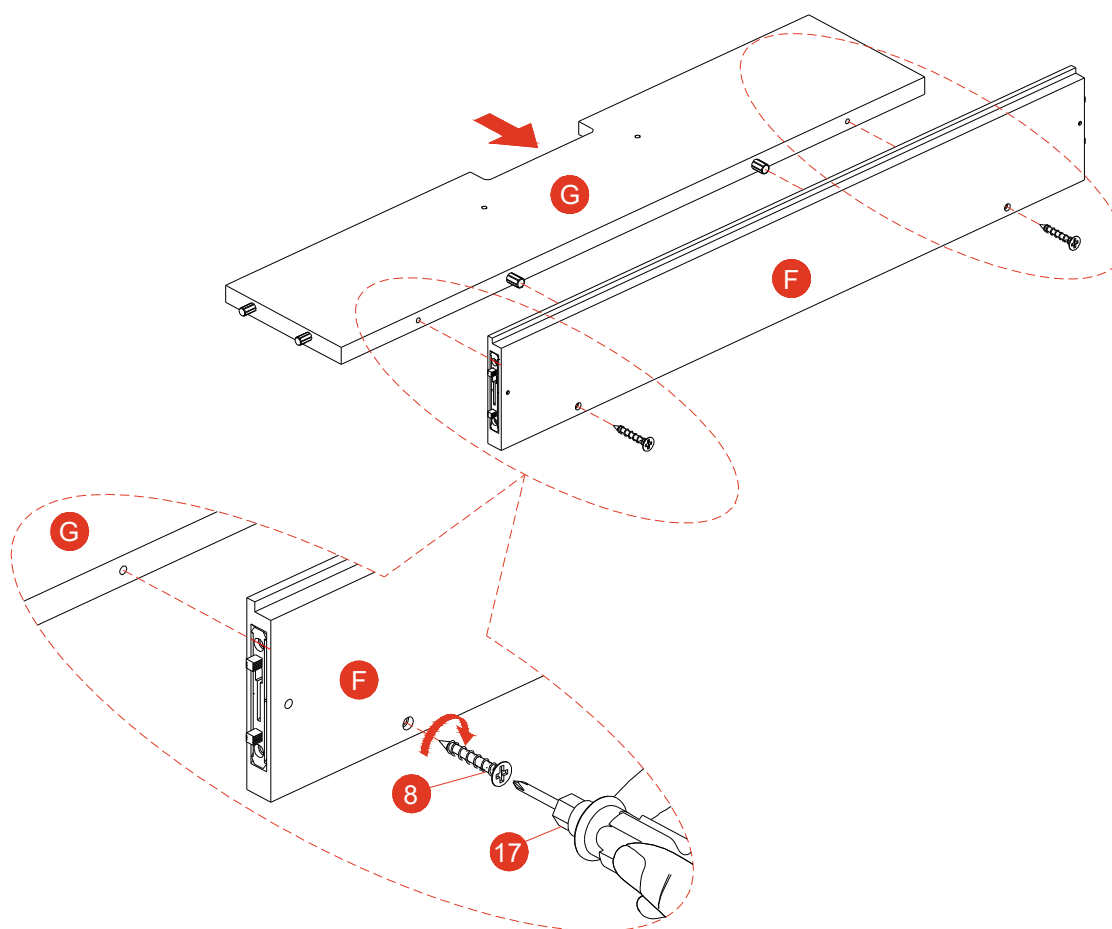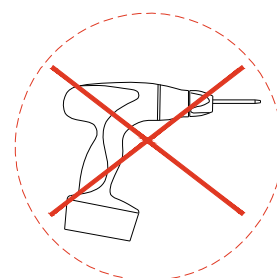  

Step 3


Insert panel F&G into panel C, make sure all holes aligned and then tighten it with allen key (16) as picture show.

16	 X 1	M4
----	---	----

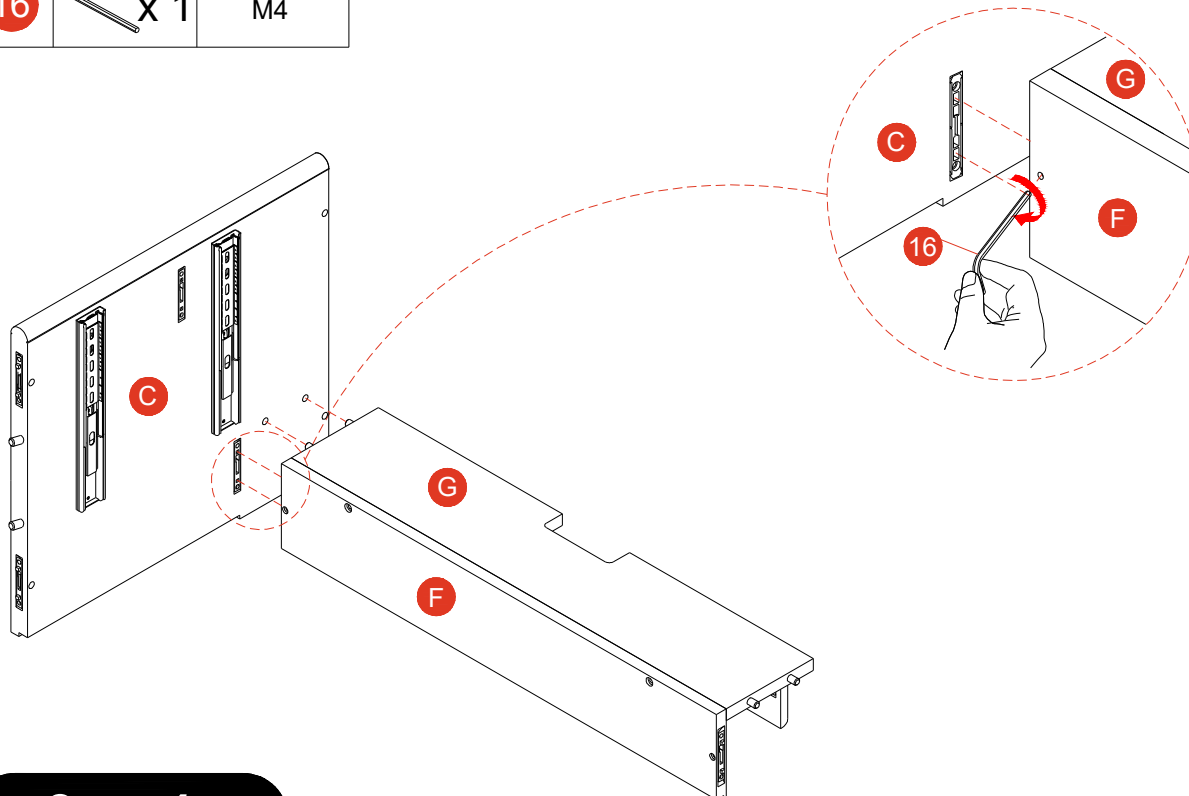 

Step 4

 
Insert panel (E) into panel (C), make sure all holes aligned and then tighten it with allen key (16) as picture show.

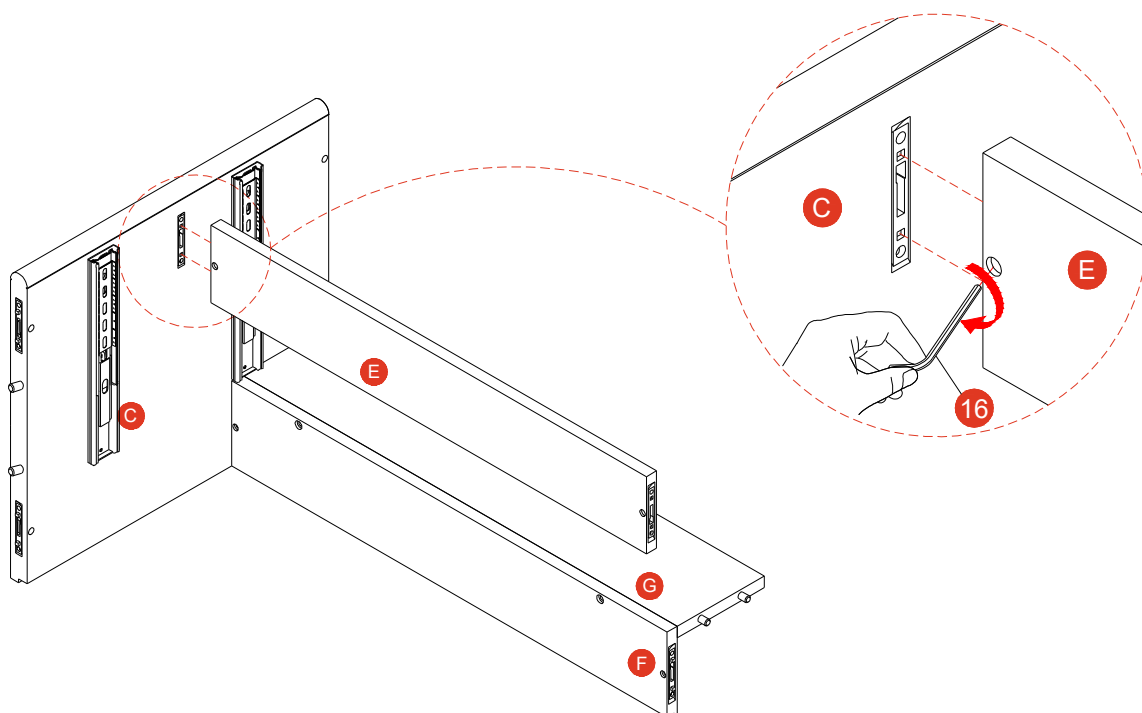

Step 5

Insert side panel (D) into the corresponding hole of preassembled step 3 , make sure all holes aligned and use allen key (16) to tighten it as picture show.

16	 X 1	M4
----	---	----

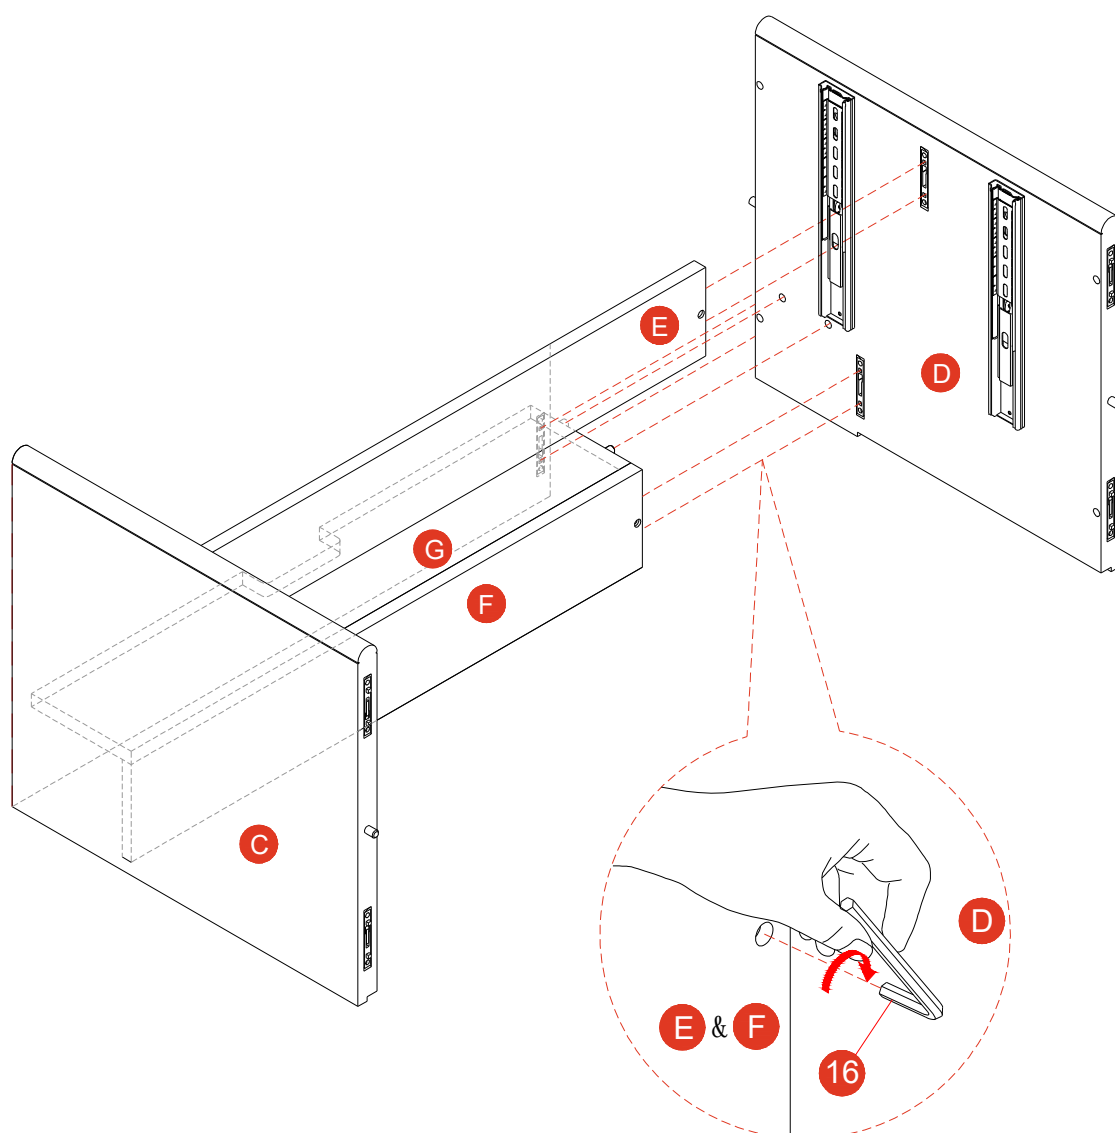 


Step 6

Insert panel (A) into panel (C,D), make sure all holes aligned and then tighten it with allen key (16) as picture show.

16	 X 1	M4
----	---	----



 
Note: The allen wrench must be keep at a 45 degree Angle to the panel A .

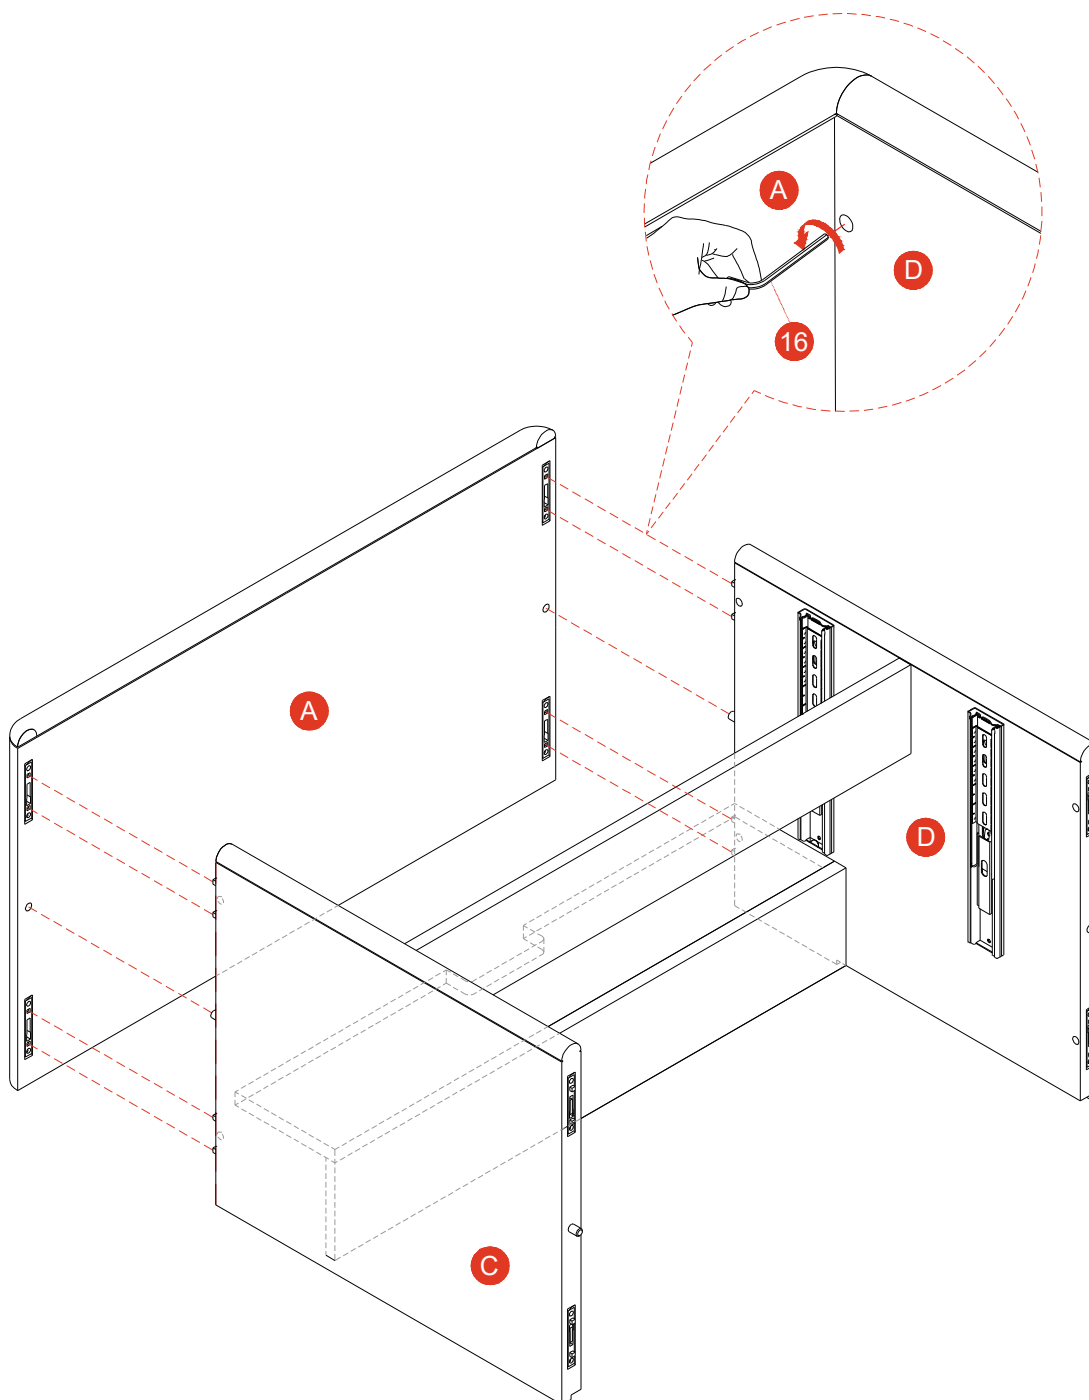

Step 7

Insert panel (B) into panel (C,D), make sure all holes aligned and then tighten it with allen key (16) as picture show.



16	 X 1	M4
----	---	----

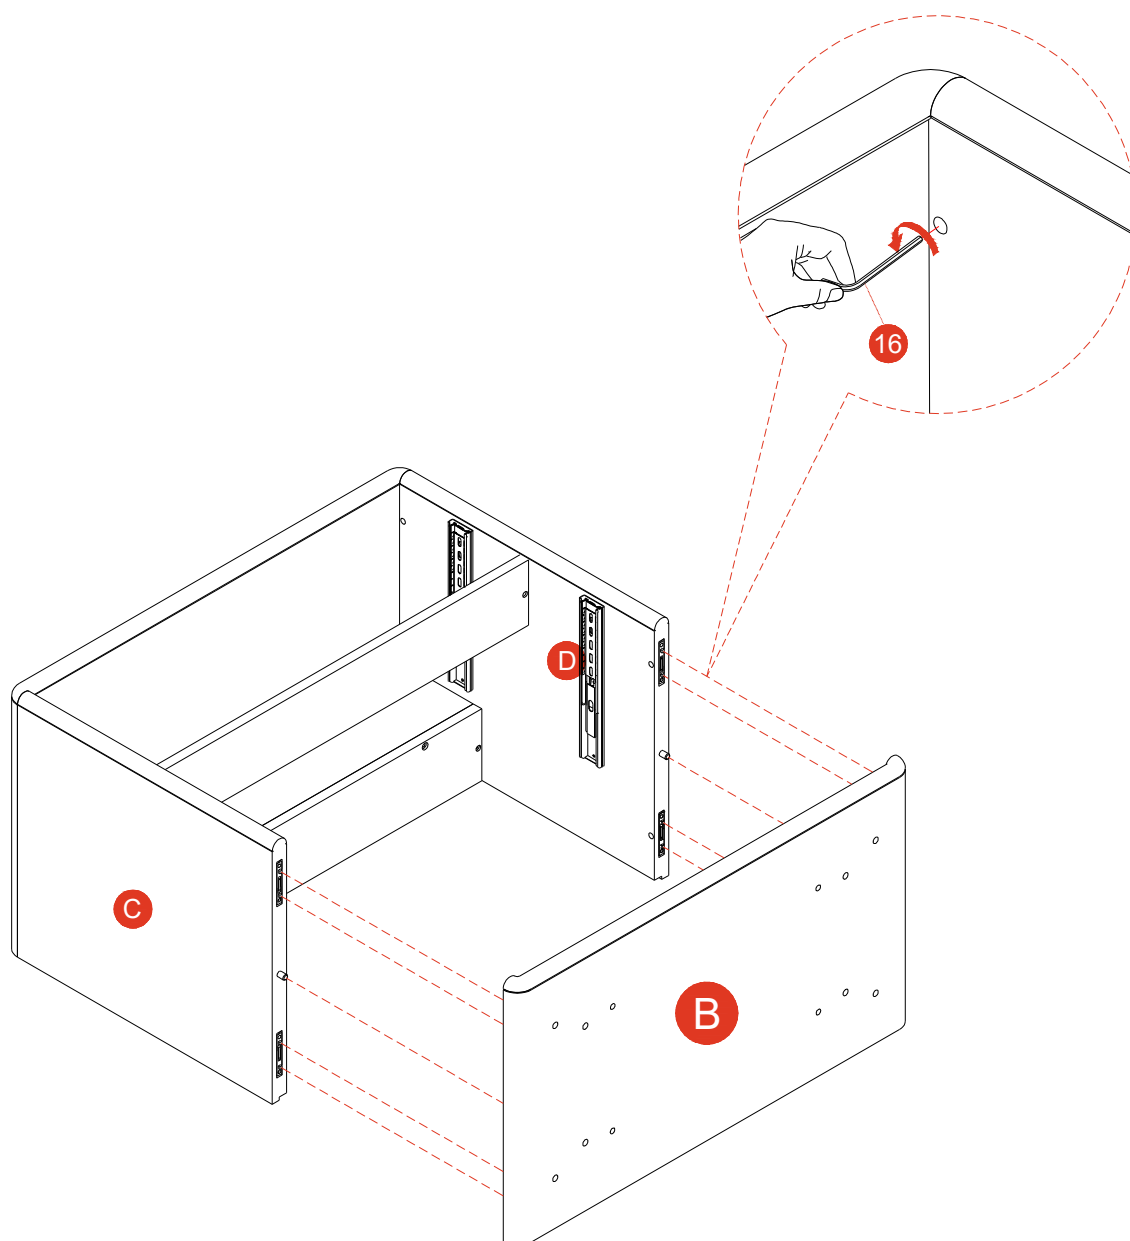 

Step 8


Insert back panel (I) into the groove of preassembled step 6, make sure all holes aligned and use screw (10) to attach them, tighten screw (10) with screwdriver (17).

10	 x 14	Ø3*15mm
17	 x 1	Screwdriver

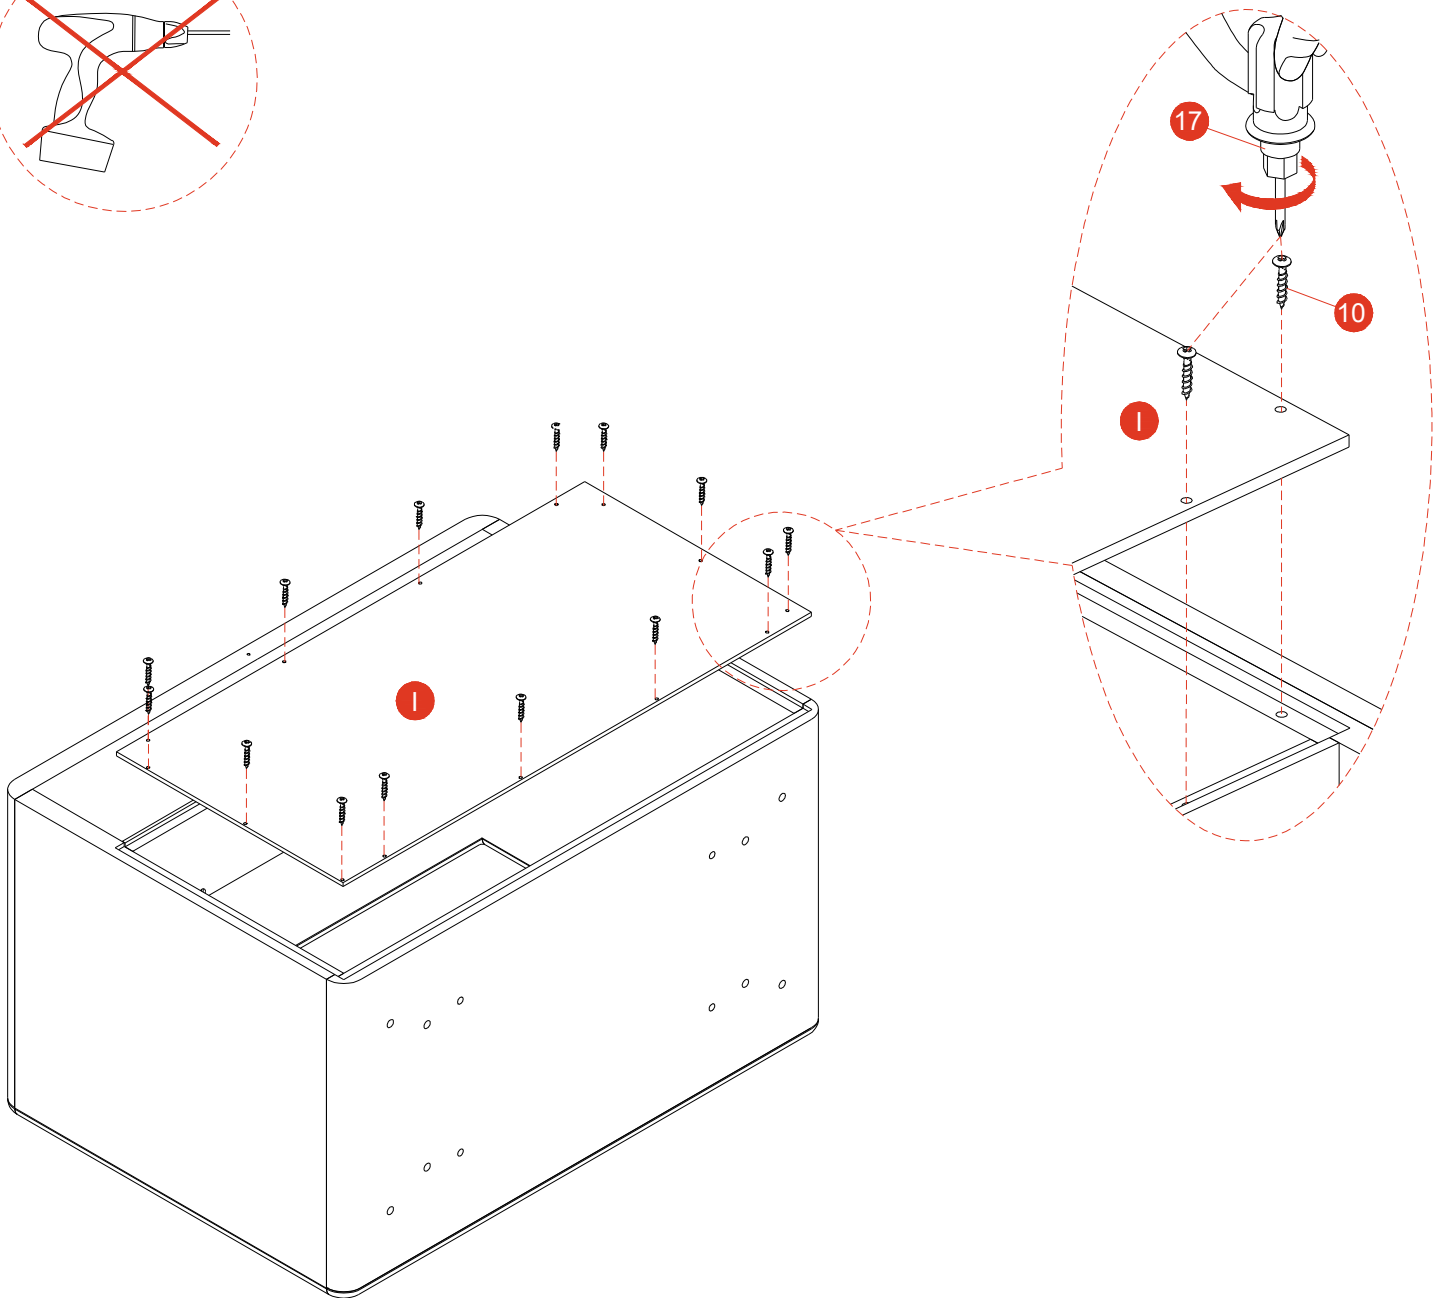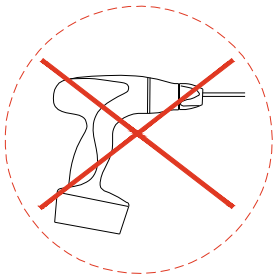  

Step 9

 
Connect part (K) to part (J)

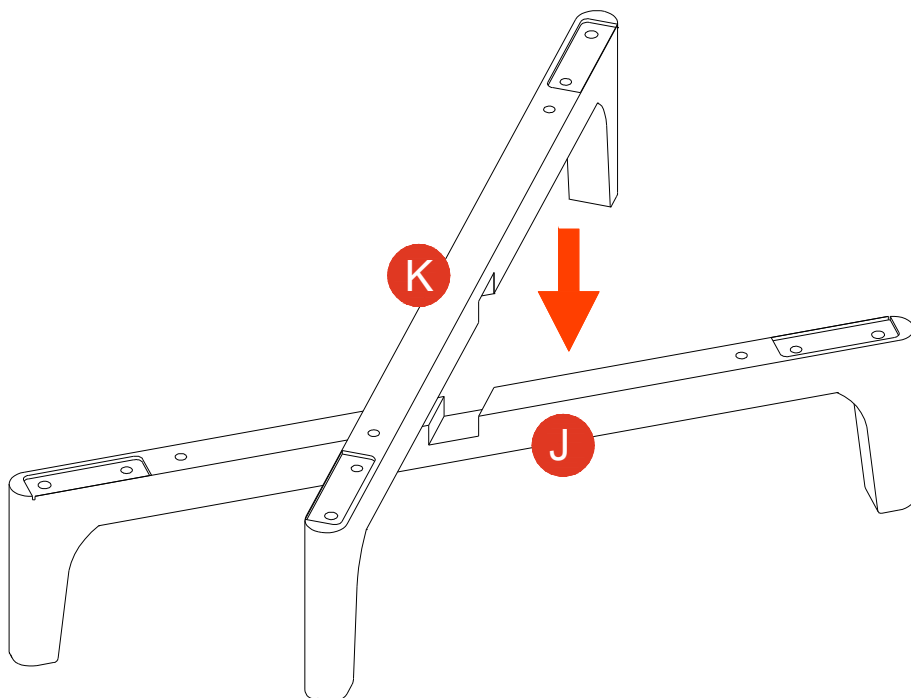

Step 10

Connect part (7) to part (J,K) with part (5), tight bolt with allen key (16).

5	x 8	Ø1/4" x 3/4"
7	x 4	Metal plate
16	x 1	M4

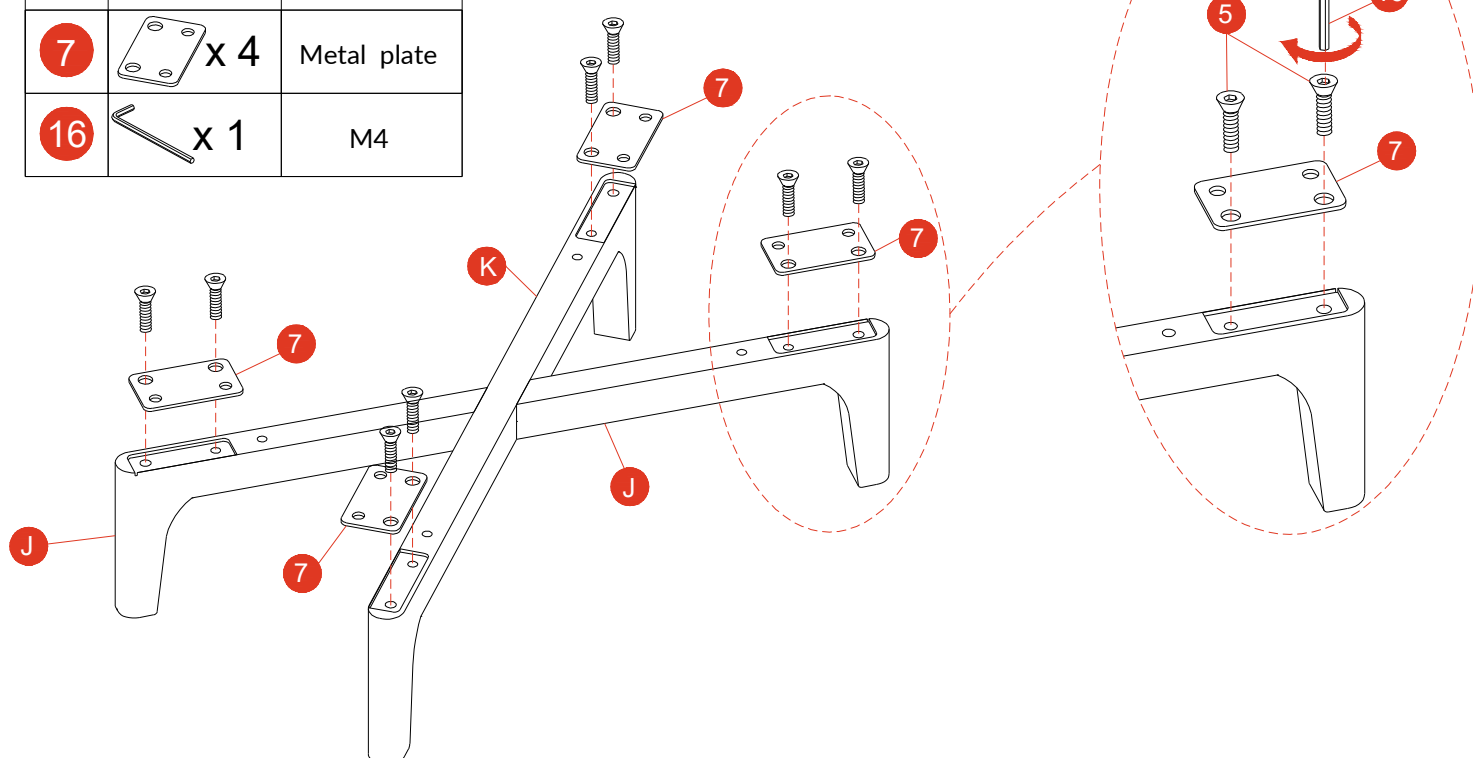 


Step 11

Connect part (J) to part (B) with bolt (1,2), spring washer (3) and flat washer (4),tight bolt with allen key (16).

1	 x 4	Ø1/4"*1-1/4"
2	 x 8	Ø1/4"*3/4"
3	 x 12	Ø1/4"
4	 x 12	Ø1/4" *16*1.2mm
16	 x 1	M4




 
Note: Bolts (1) and (2) must be installed into the correct holes as indicated in the instructions to avoid incorrect assembly.

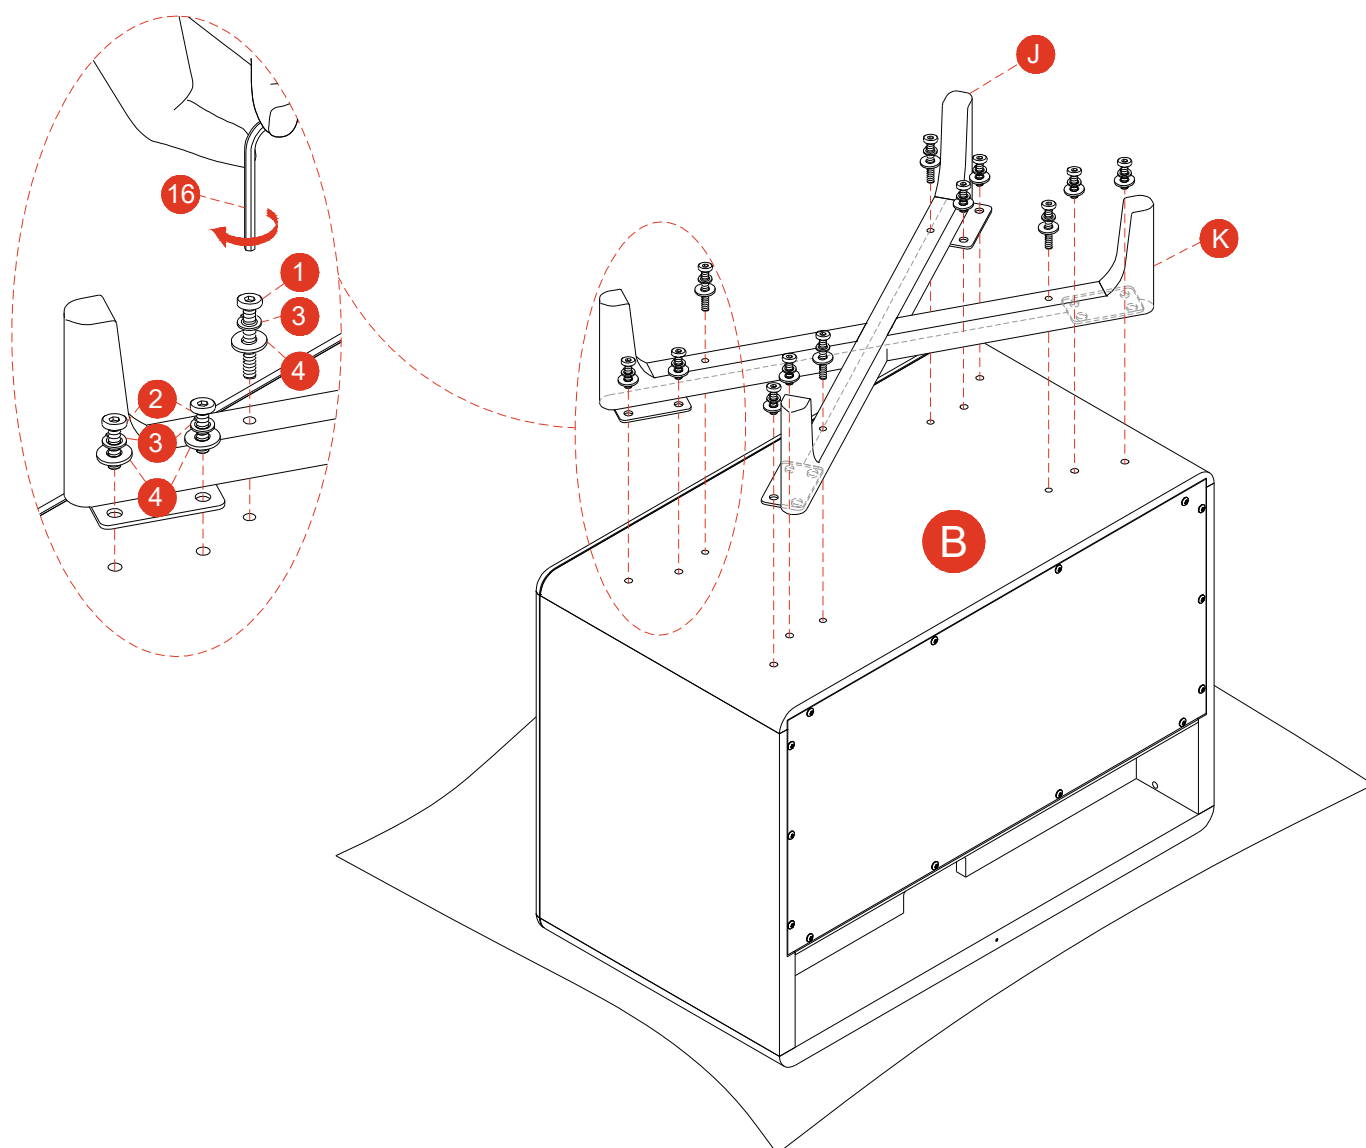

Step 12

Connect part (H) to part (G/F) with screw (8), tight screw with screwdriver (17).





8	 x 4	Ø4*25mm
17	 x 1	Screwdriver

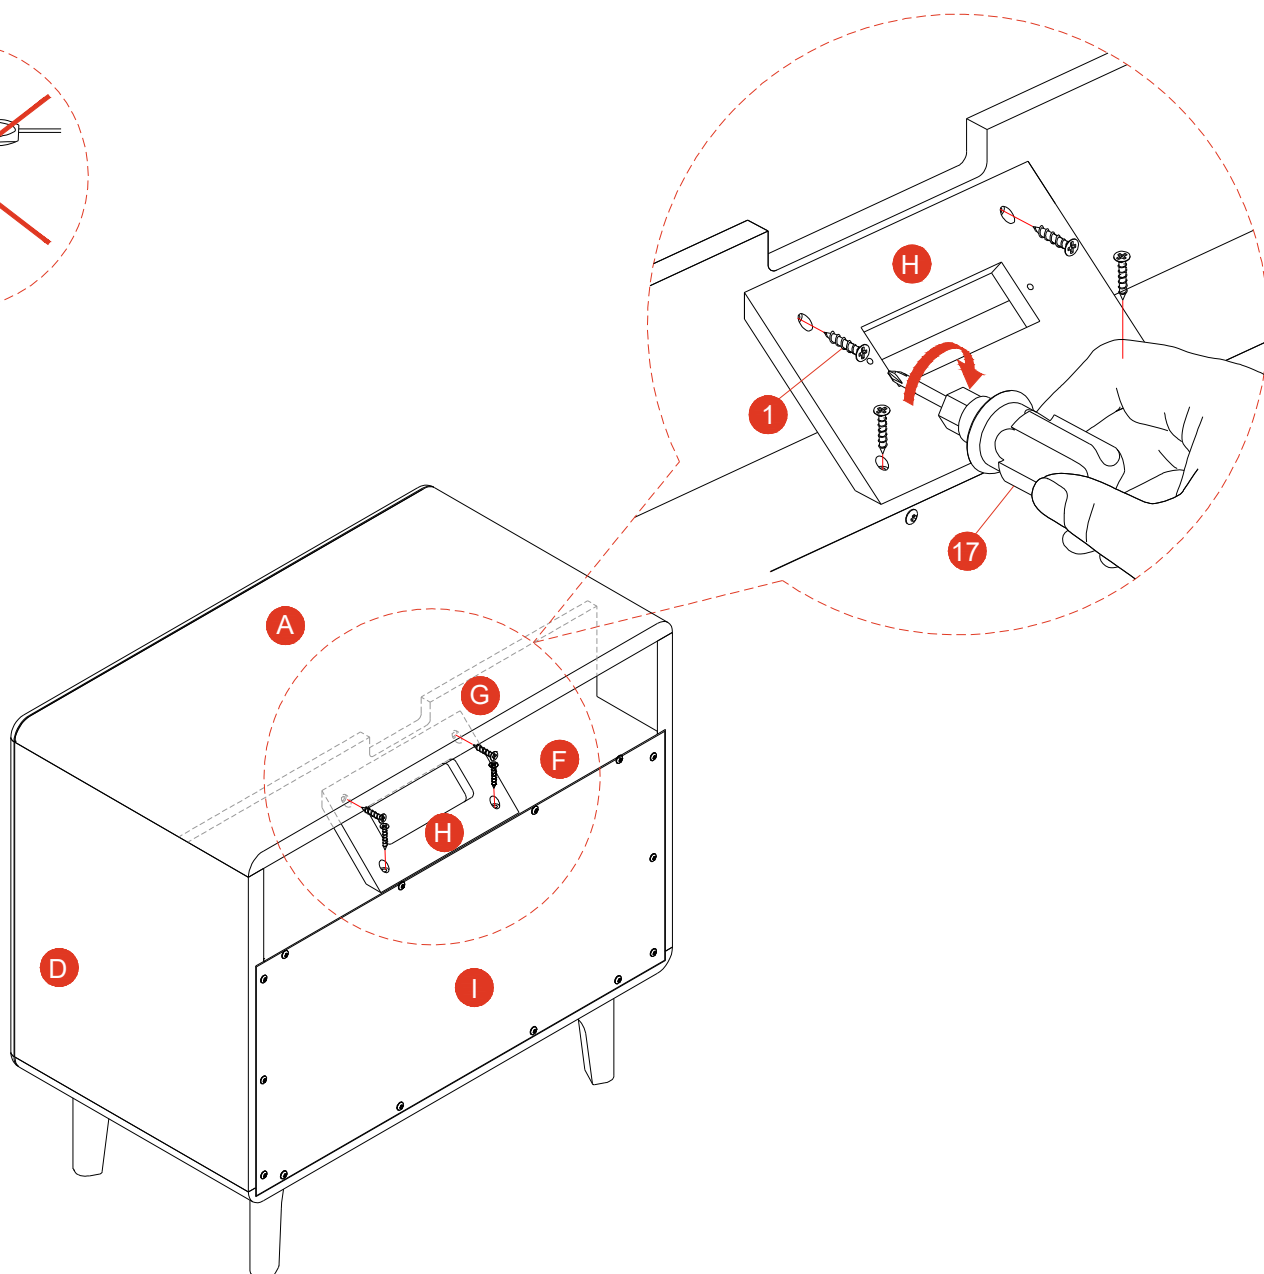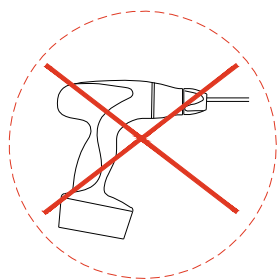  


Step 13

Connect part (6) to part (H) with screw (9), tight screw with screwdriver (17).



6	 x 1	Electrical socket
9	 x 2	Ø3*12mm
17	 x 1	Screwdriver

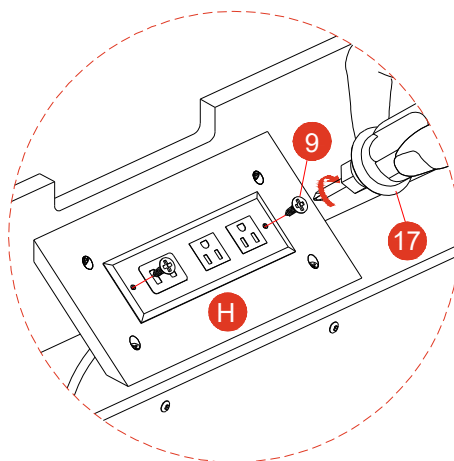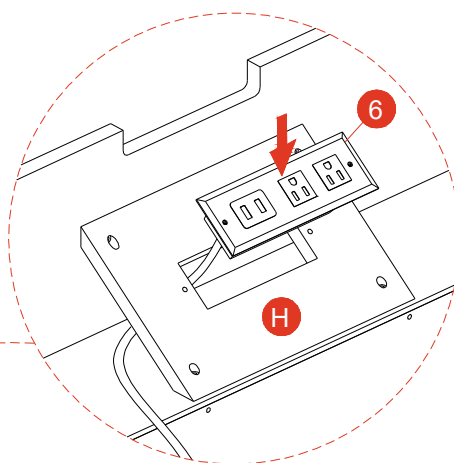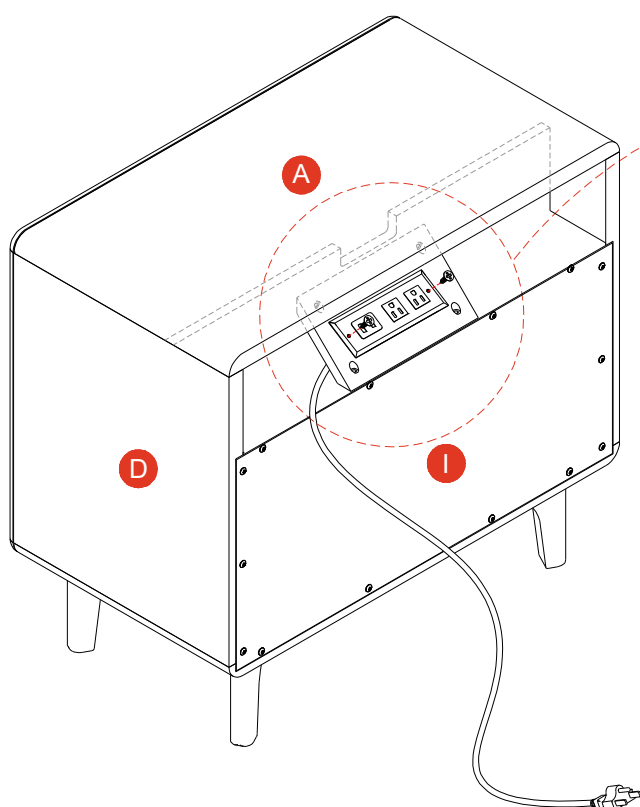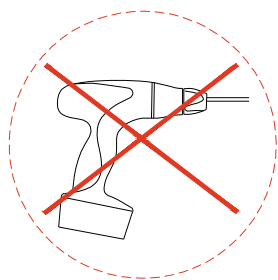    

 Step 14

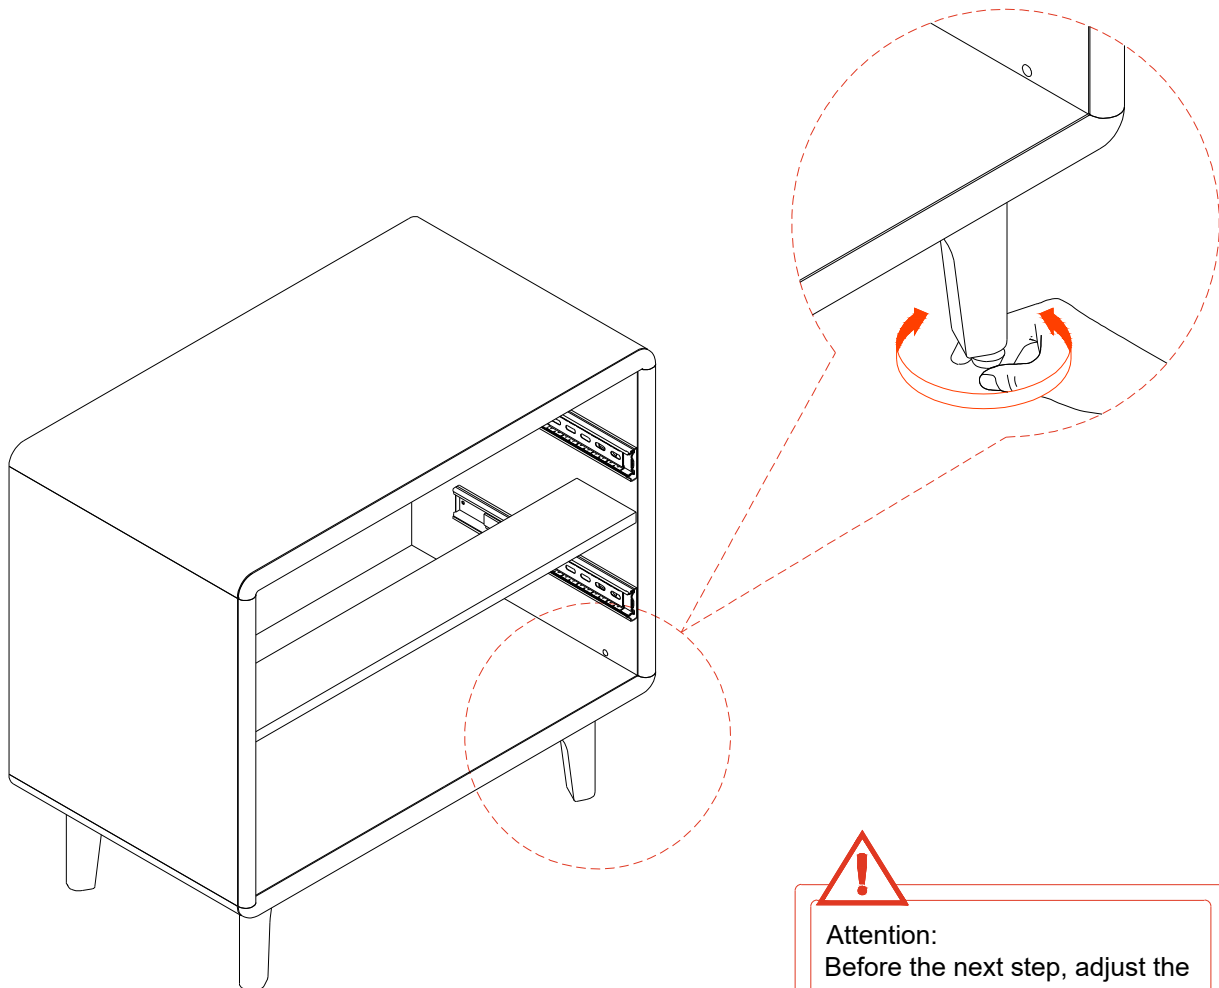

  
Attention:
Before the next step, adjust the
feet of the locker to keep it level.

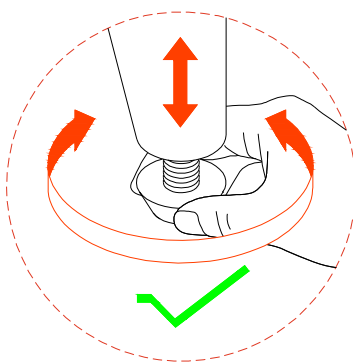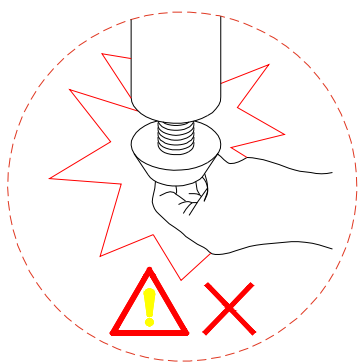


Step 15

Connect part (M/L) to part (X) with screw (8) and tighten it with screwdriver (17).
Slide in the part (O) into the groove of part (M/L). make sure they are also in groove in part (X).


8	 x 4	Ø4*25mm
17	 x 1	Screwdriver

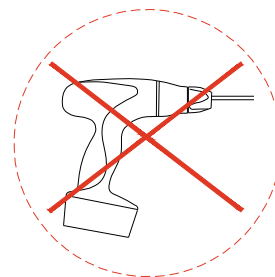 

 
Step 1

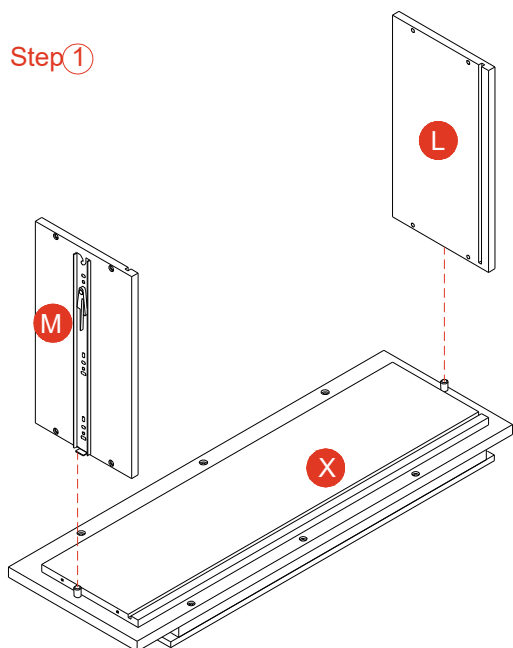

 Step 2

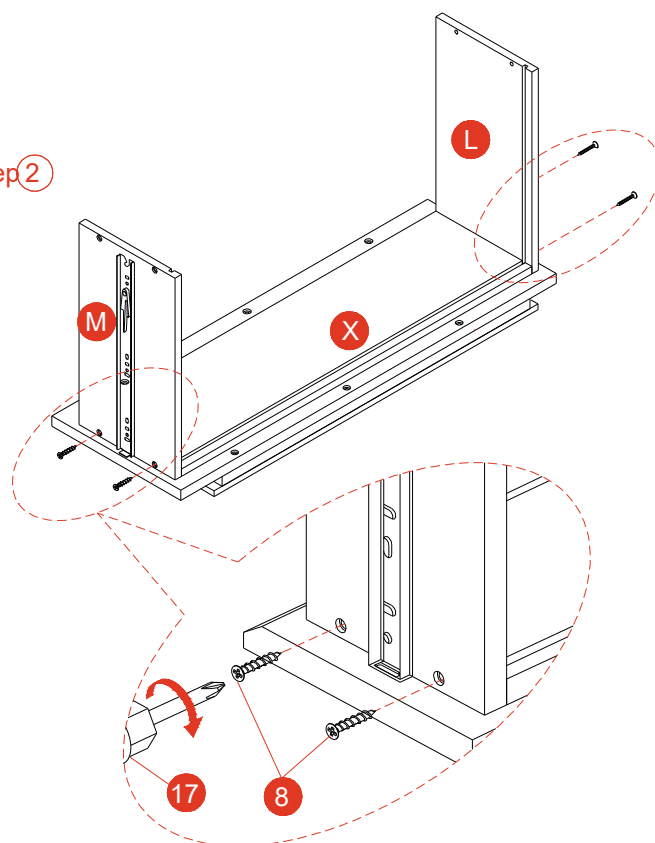

 
Step 3

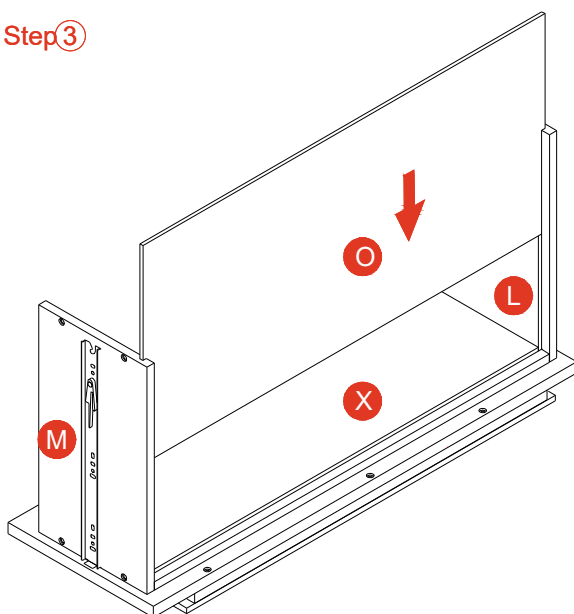

Step 16

Connect the (N) to (L/M) with screw (1) , and tighten it with screwdriver (17).


8	 x 4	Ø4*25mm
17	 x 1	Screwdriver

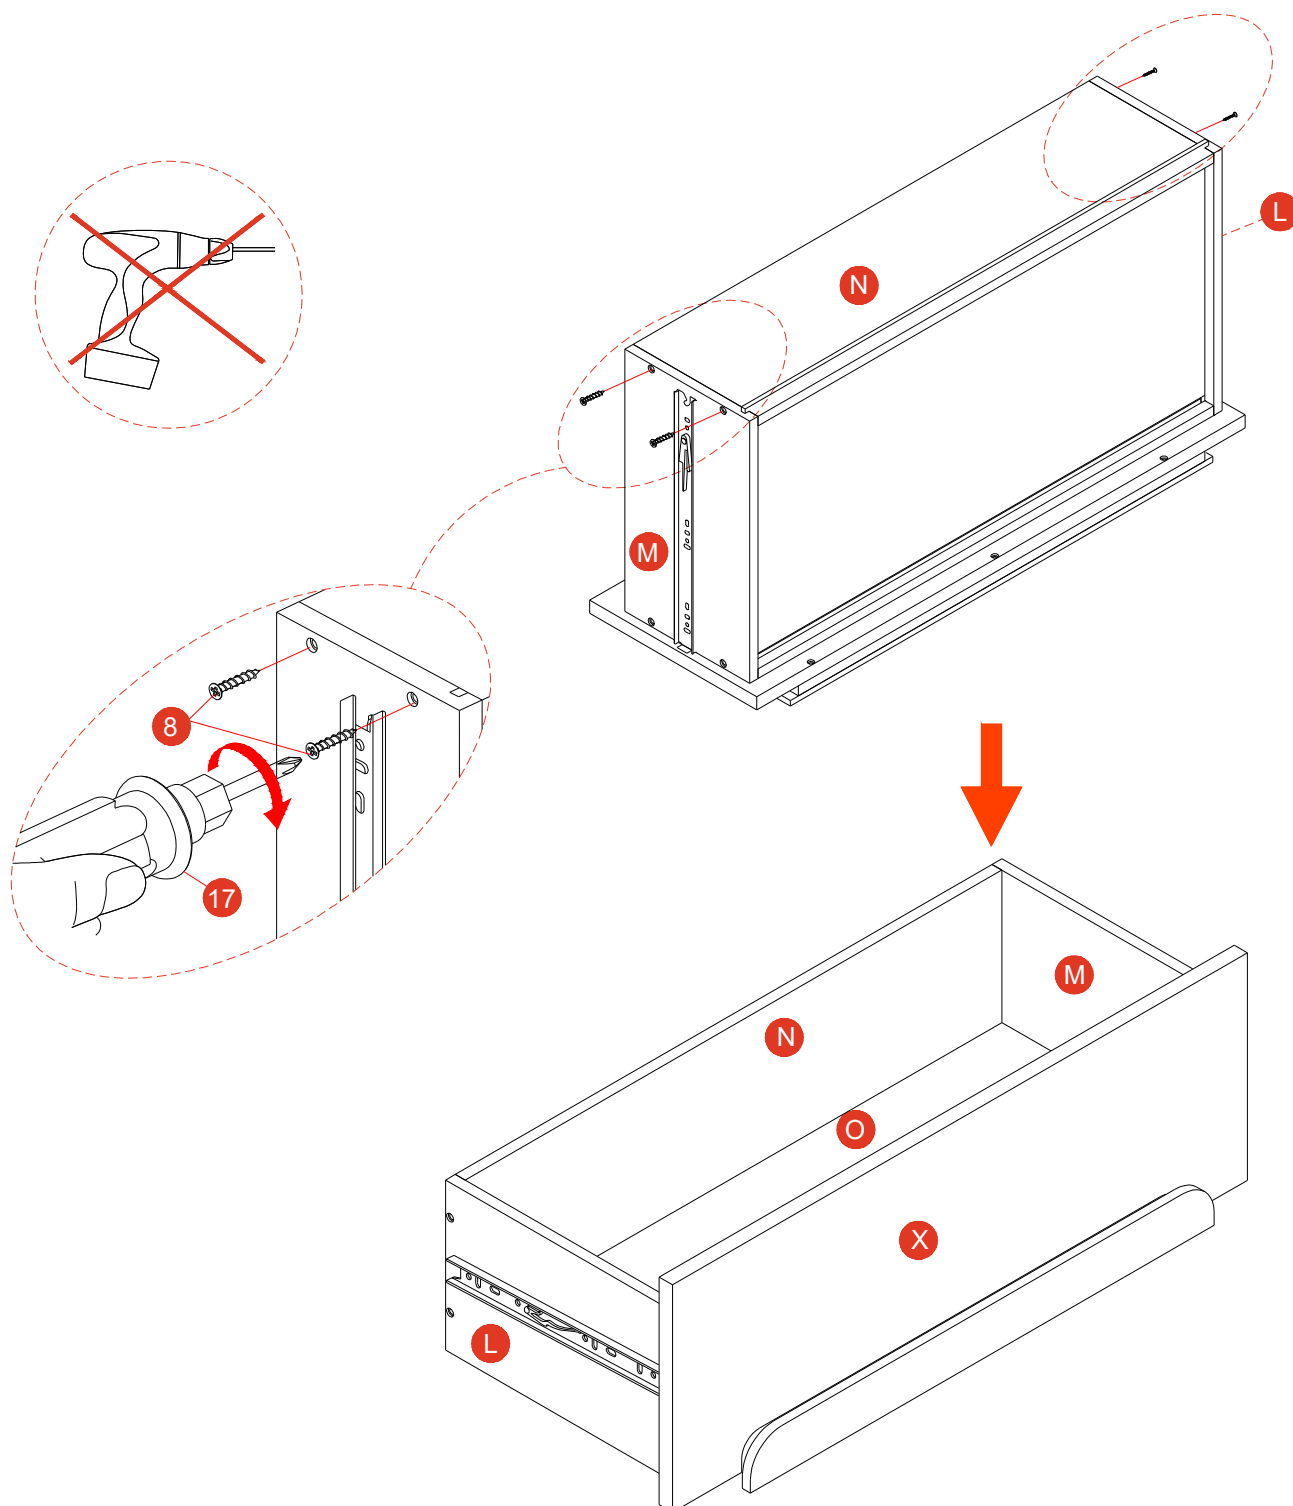 



Step 17



 Attention:
When installing the drawer,
slide the steel ball slide rail of side
panel to the most front as picture show.

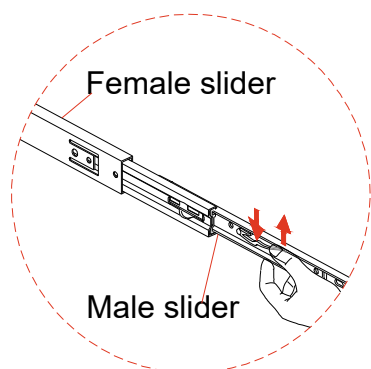


**Schematic diagram of
slide rail disassembly**

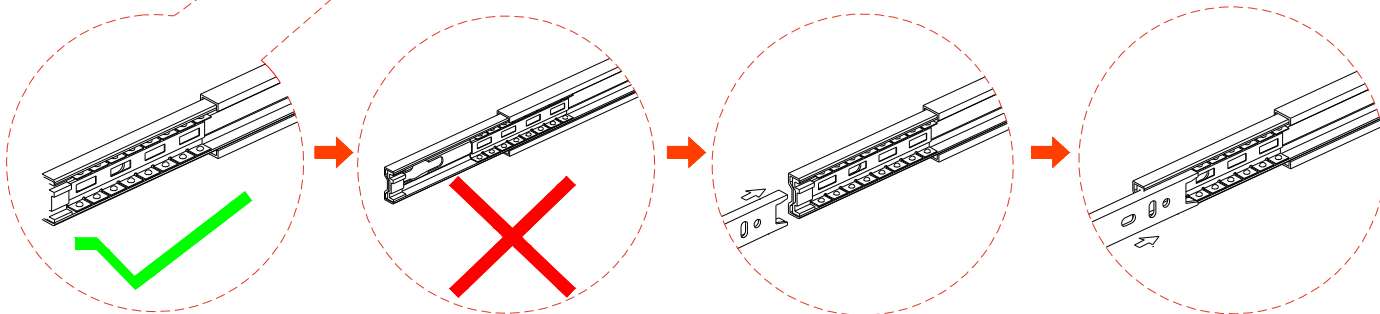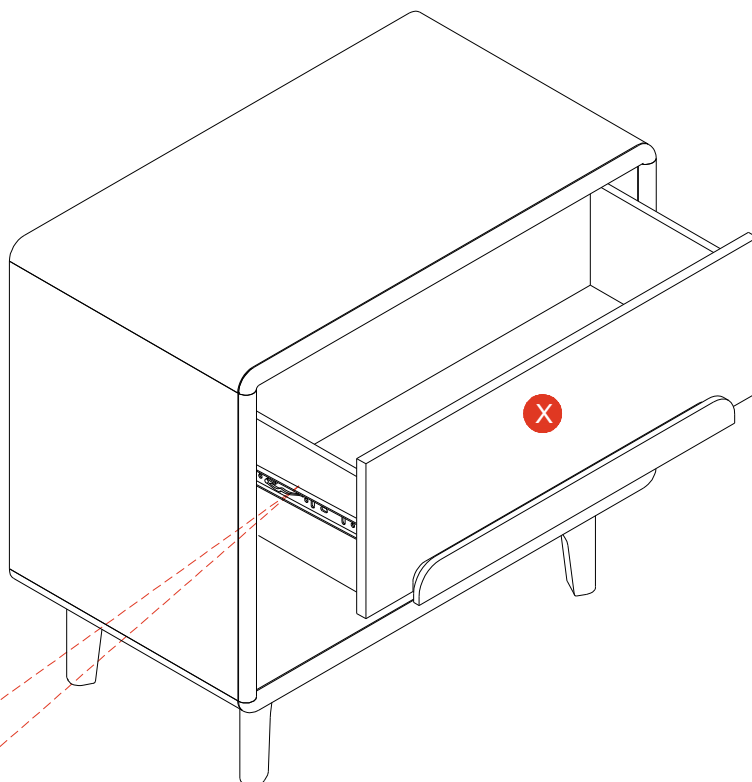  


Step 18

Connect part (R/P) to part (Y) with screw (8) and tighten it with screwdriver (17).
Slide in the part (S) into the groove of part (R/P). make sure they are also in groove in part (Y).


8	 x 4	Ø4*25mm
17	 x 1	Screwdriver

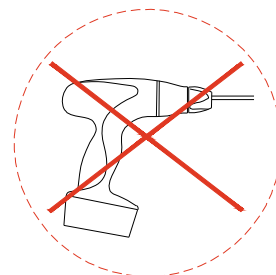 

 
Step 1

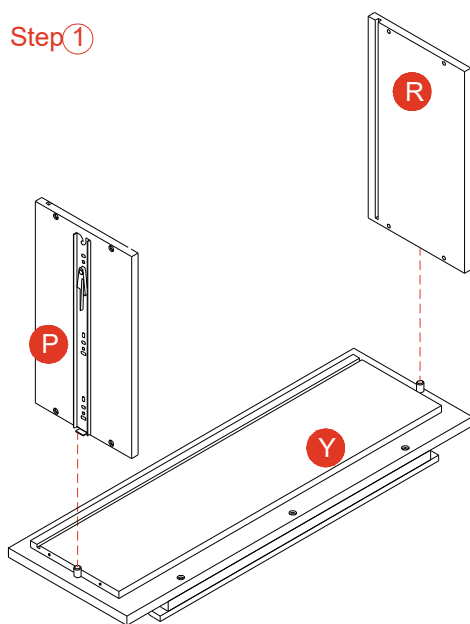

 Step 2

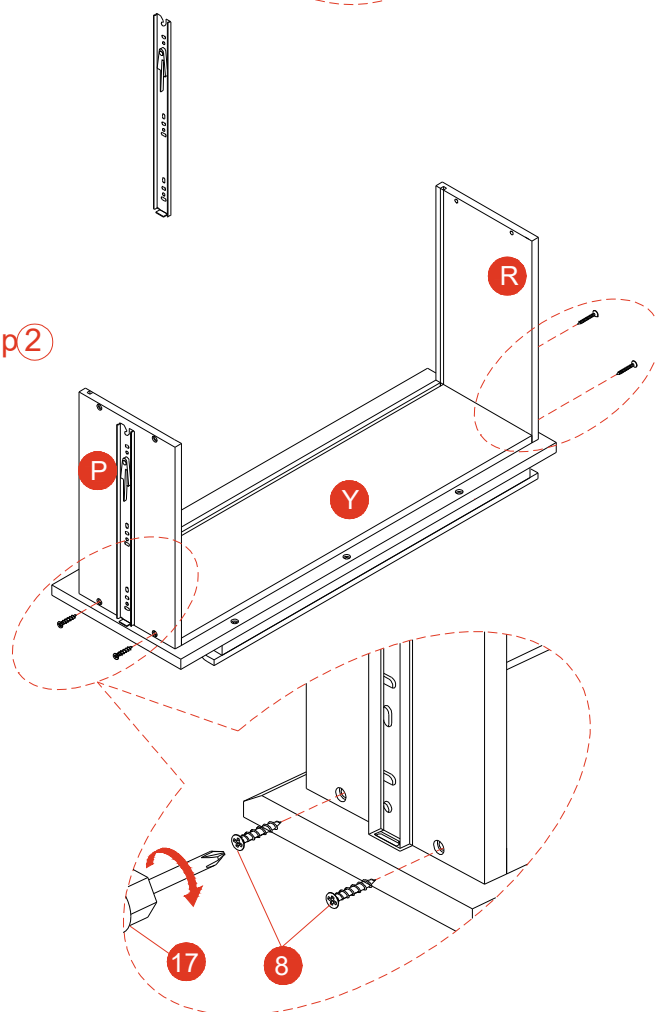

 
Step 3

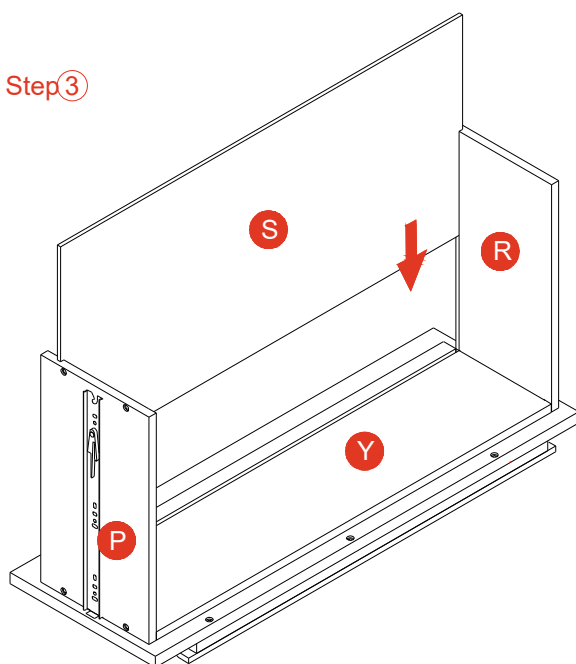

Step 19

Connect the (T) to (R/P) with screw (8) , and tighten it with screwdriver (17).


8	 x 4	Ø4*25mm
17	 x 1	Screwdriver

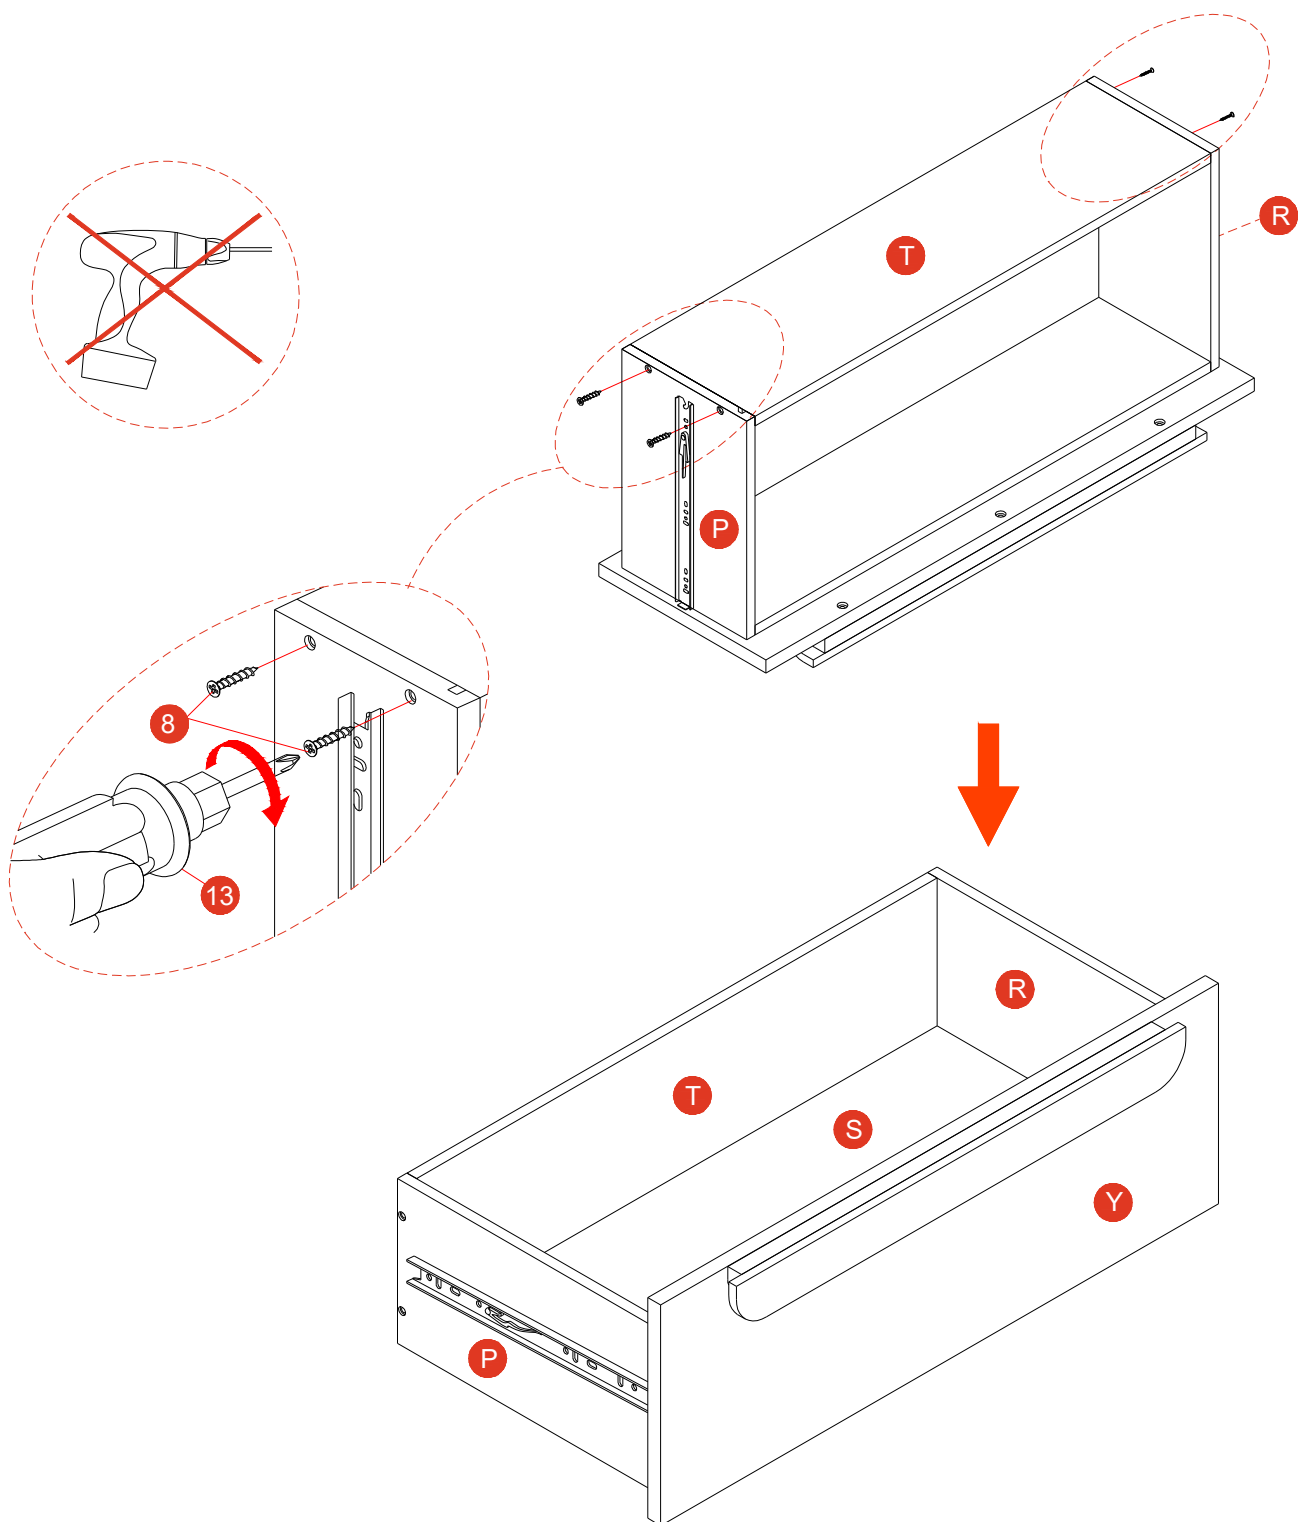 



Step 20



 Attention:
When installing the drawer,
slide the steel ball slide rail of side
panel to the most front as picture show.

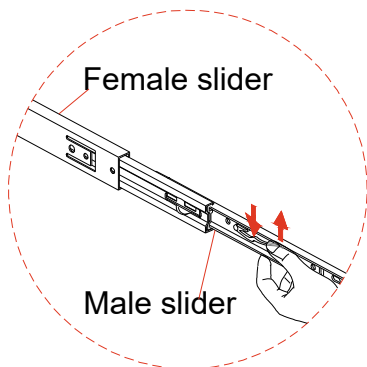


**Schematic diagram of
slide rail disassembly**

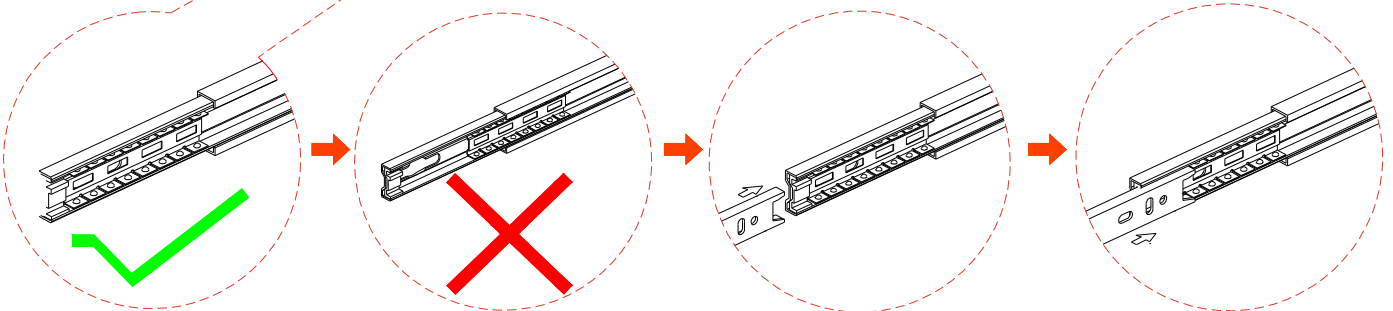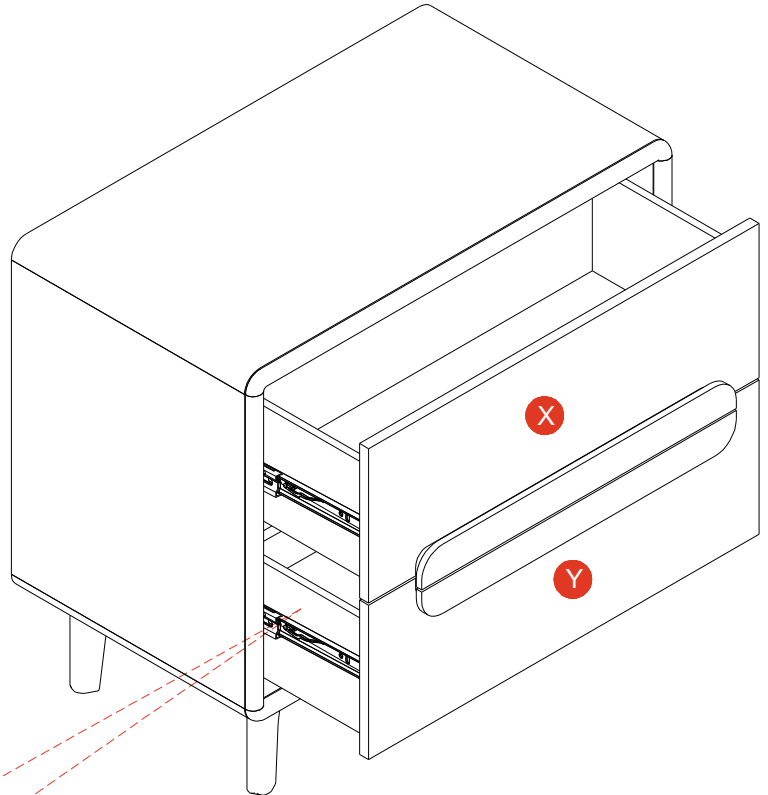  

Step 21

Use screw (13) to attach part (14) to top panel (A),tighten screw (13) with screwdriver (17).



13	 x 1	Ø3.5*16mm
14	 x 1	L bracket
17	 x 1	Screwdriver

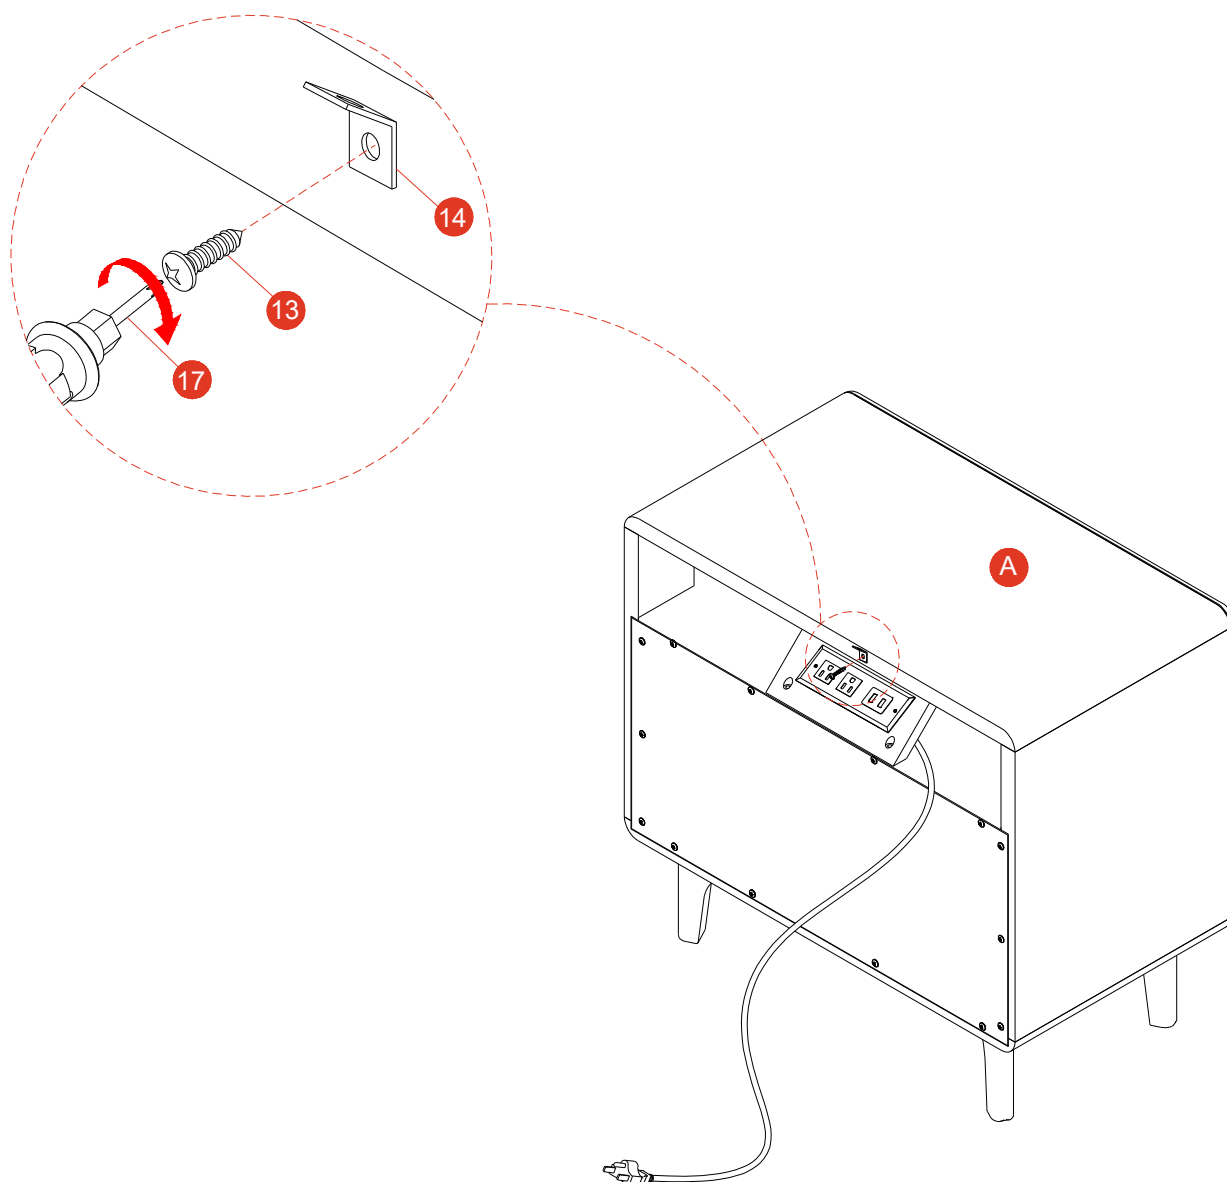 


Step 22

Install Anti-tip device (14) to the wall in this step.


11	 x 1	Anchor
14	 x 1	L bracket
15	 x 1	Ø3.5*38mm
17	 x 1	Screwdriver

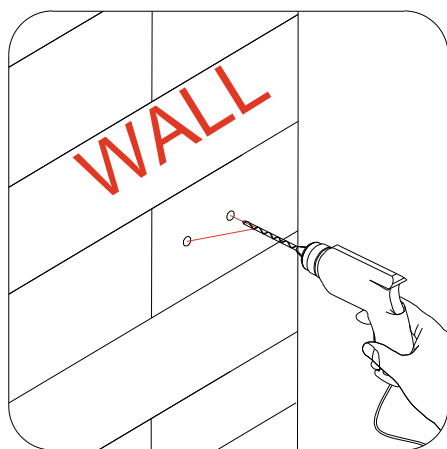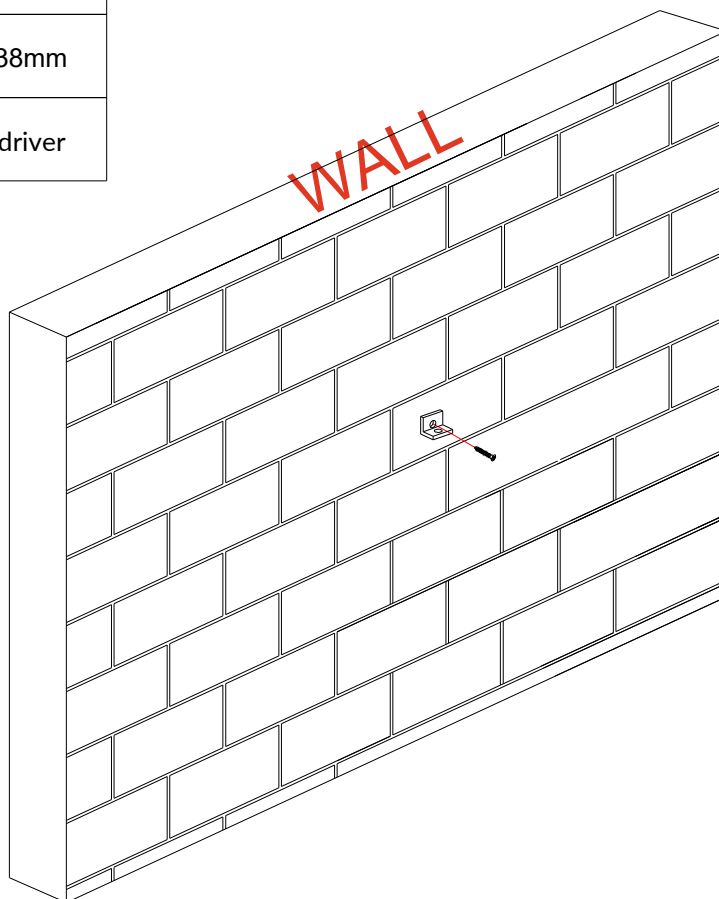  

 1. Drill a hole in the wall with an electric drill.

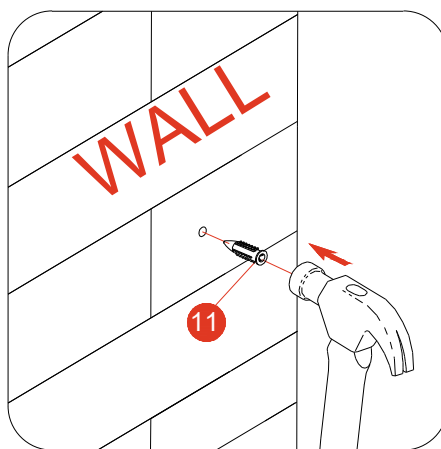

 2. Tap the plastic wall anchor into the hole with a hammer.

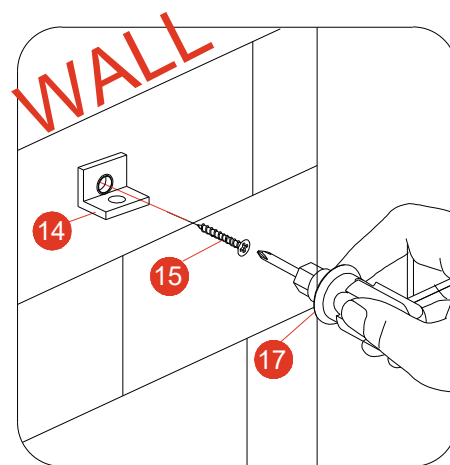

3. Secure the Anti-tip device (14) to the wall with screws (15)

Step 23

12



x 1

Metal wire

 
 
 


WARNING

Children have died from furniture tipover.

To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- For use with televisions weighing 35 lb or less. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

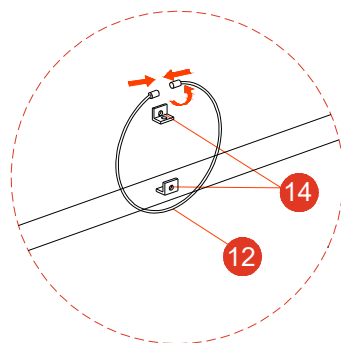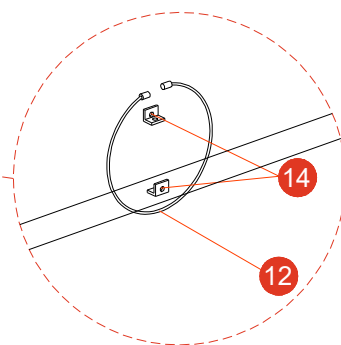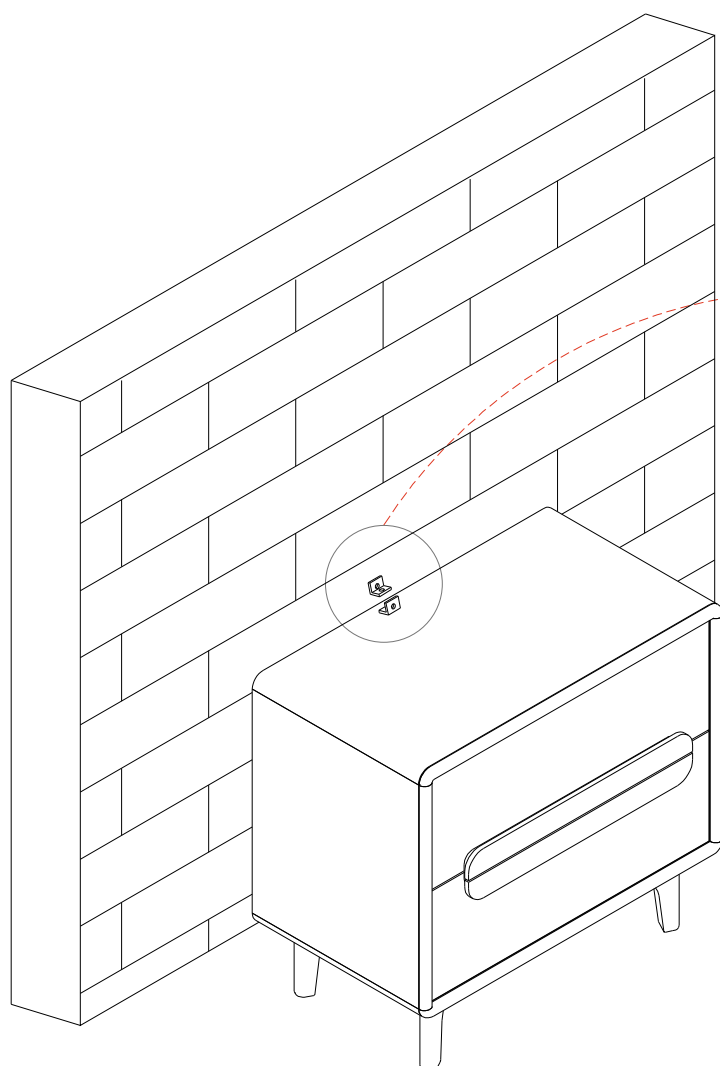

WWW.HULALAHOME.COM

Email: customerservice@hulalahome.com

Call us: +1(833)324-2464 (8 AM to 5 PM PST Monday-Friday)