TOOLS REQUIRED






Philips Screwdriver (Not Included)



2 - Persons Recommended



The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

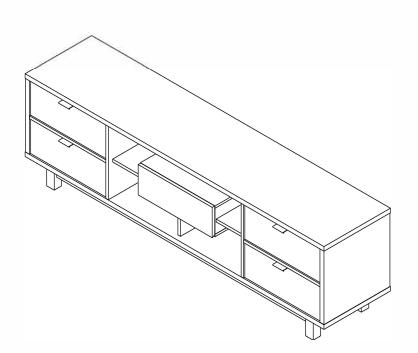

Thank you for your purchase!

We hope you enjoy this new addition to your home for many years to come.

Our commitment to providing quality products does not simply end when you purchase our product. We fully stand behind our products from start to finish. Our customer service well help with assembly questions as well as, if necessary, replacing damaged or missing parts. To help expedite our service, please have these assembly instructions readily available, along with your order receipt.



Are you missing anything?

Double-check all parts, hardware and accessories listed on Page 6 are accounted for.



Are there any irregularities or flaws in the parts? We can send replacements!

Check out our Quick Tips!

We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!

Prep Time!

 
Please review the assembly instructions and all diagrams prior to assembling. Arrange parts as recommended on Page 7 and group identical hardware together to make assembling easier.

PRE ASSEMBLY

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





 












Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

Suitable Location

Assembling near the area of the intended location is highly recommended.

Sufficient Space

Make sure you have enough space to move around during the assembly.

Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.


Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE



FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

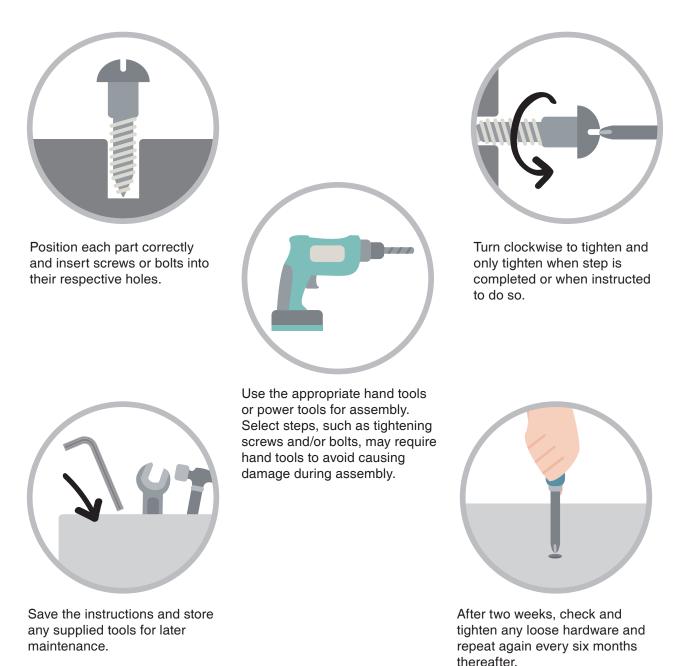

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

CAM LOCK FASTENER ASSEMBLY INSTRUCTIONS


Note :

Every cam lock bolt must have a cam lock connector in order to fasten the parts together.








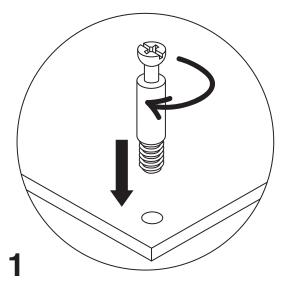

Screw the cam bolt into panel.

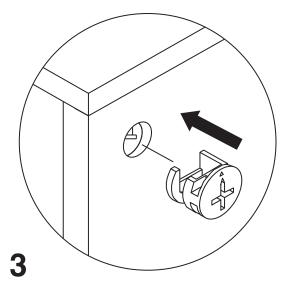


Align the cam lock with its side opening (or arrow) pointing to cam bolt.


cam bolt

cam lock

ck s

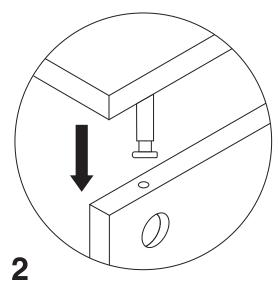

Insert the cam bolt into the bolt hole of joint panel.

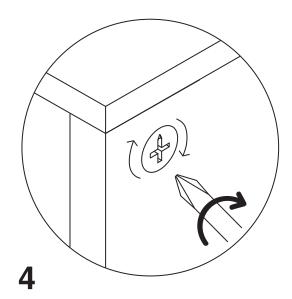


Turn the cam lock clockwise gently until it will not turn any more.


TV STAND

 Please keep instructions for future reference.

 Check the quantity and irregularity of parts and hardware before you start.

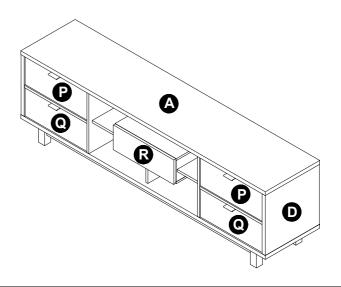

PARTS

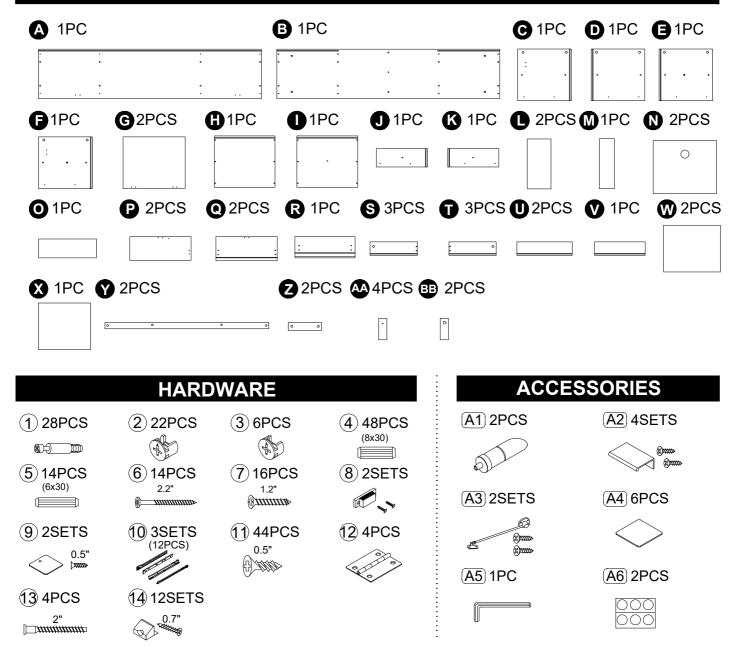

Q 2PCS	S 3PCS	3 PCS	1 2PCS	2PCS			
R 1PC	S 3PCS	3 PCS	1 PC	€ 1PC	_		Drawor
1PC	1 PC	• 1PC	• 1PC	() 1PC	2PCS	M 1PC	<u>Drawer</u>
G 1PC	1PC	2PCS	B 1PC	· · · · ·	· · · ·		
2PCS		2PCS	5 🗛 4PCS (■ 2PCS		_	
1PC	© 2PCS	0 1PC		PCS			
▲ 1PC		·····					


Identifying Drawer Rails

Each drawer requires a set of 4 rails. Please review the below instructions to help identify the different rails. Left and right determined from the viewpoint of opening the drawer.

Right/Left Panel Rail:

(C-shaped frame)

Align the drawer rails horizontally, with the oval and round holes resting flat against a surface. Rotate as needed so the rollers are located on your right-hand side. If the roller is closer to the bottom corner, this is the RIGHT panel rail. If the roller is closer to the top corner, this is the LEFT panel rail.

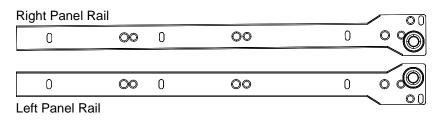

Right Drawer Rail

\Box	0 0	000
000	0 0	000

Right/Left Drawer Rail:


you, this is the LEFT drawer rail.


(S-shaped frame)


Align the panel rails horizontally. Rotate as needed so the rollers are located on your right-hand side. If the roller faces away from you, this is the RIGHT drawer rail. If the roller faces towards


Left Drawer Rail


When grouped together, the right drawer rail and right panel rail will interlock with rollers at opposite ends. Likewise for the left drawer and left panel rails.

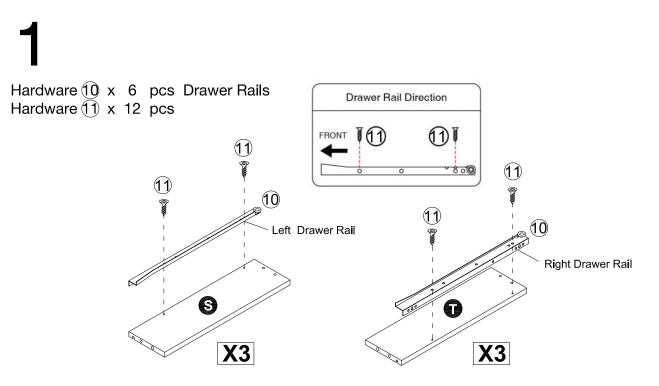

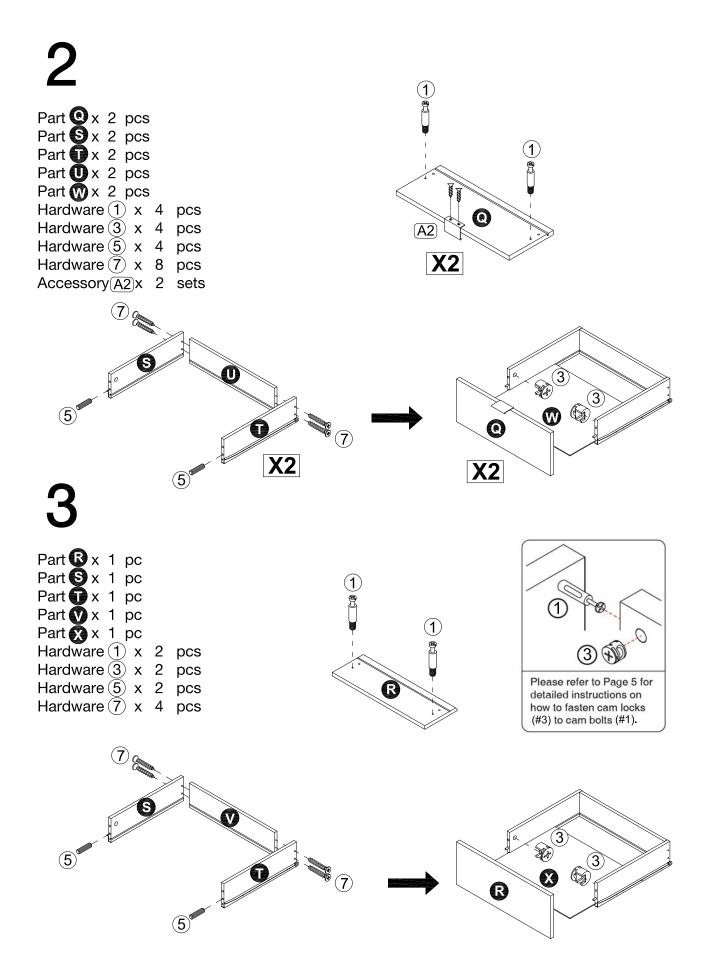

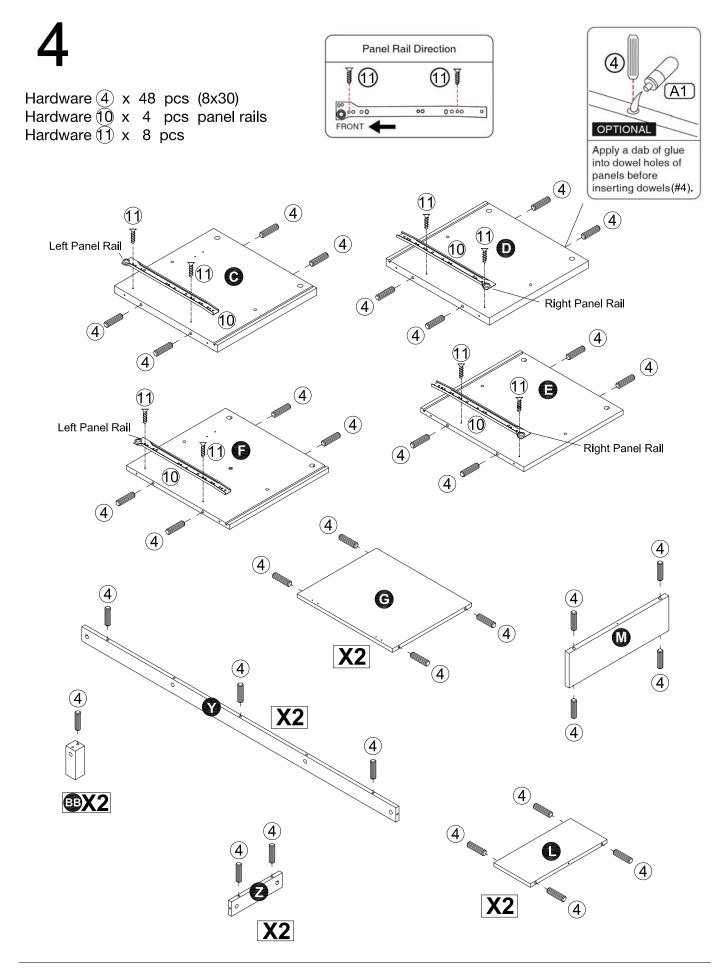


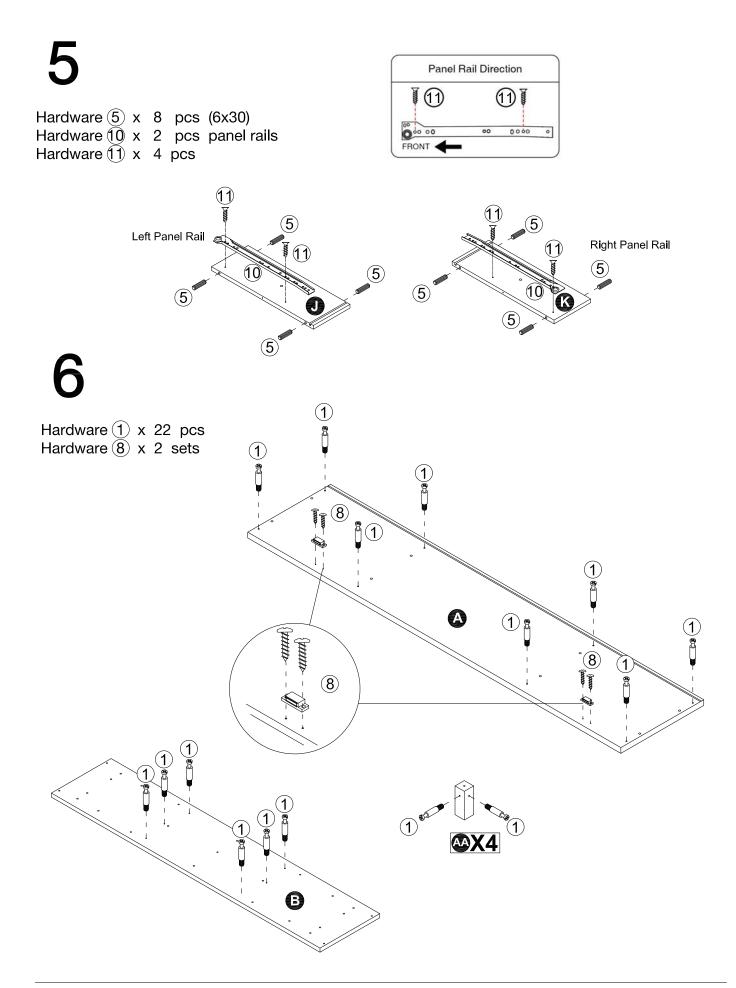


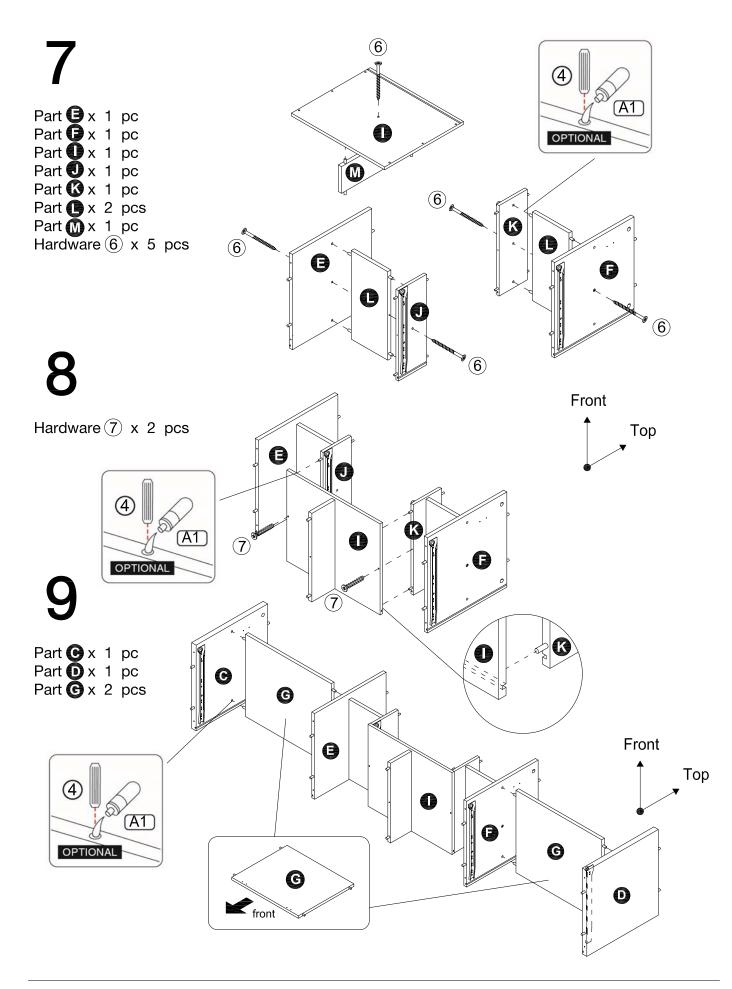


10


Part \bigcirc x 1 pc Hardware \bigcirc x 9 pcs

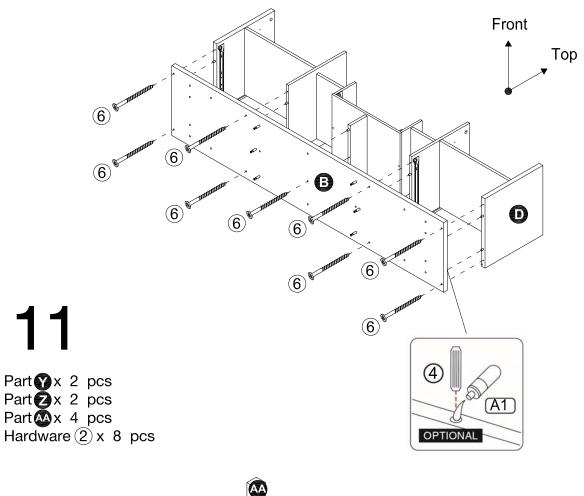


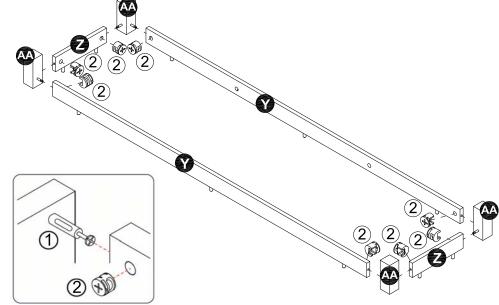

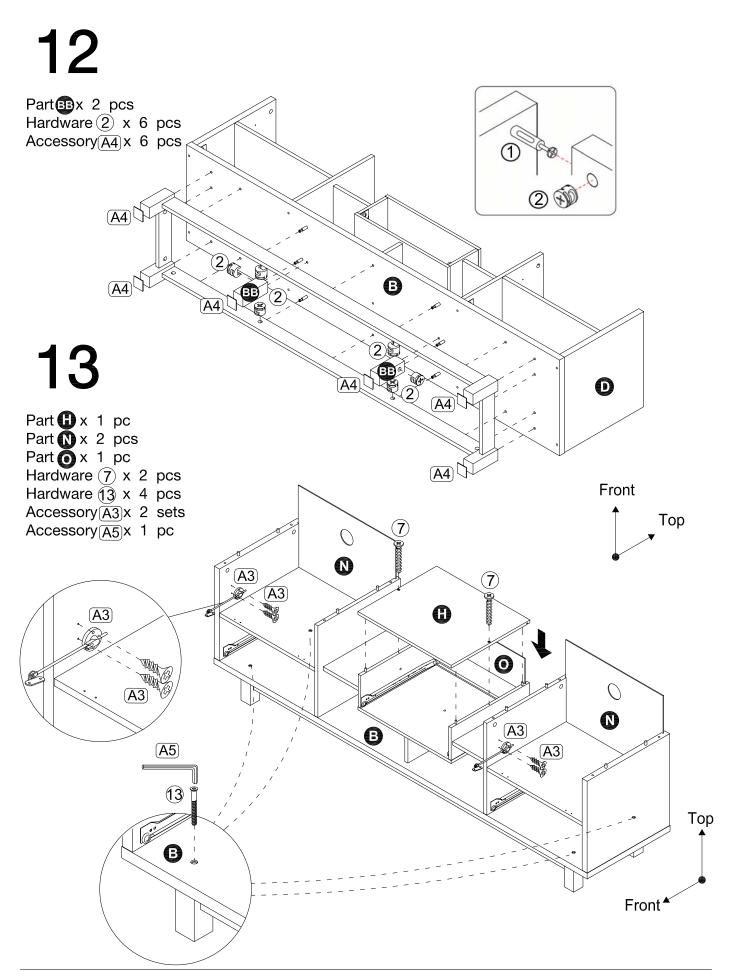




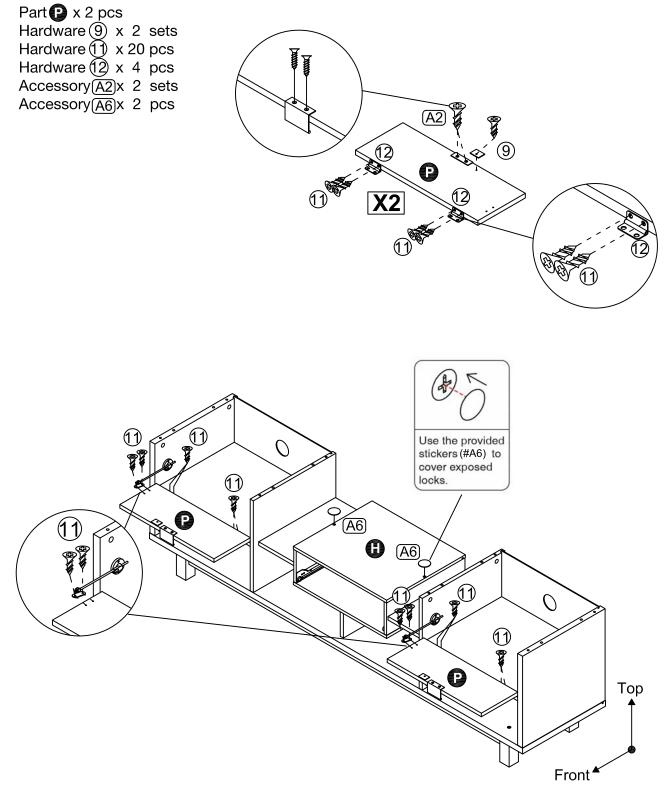

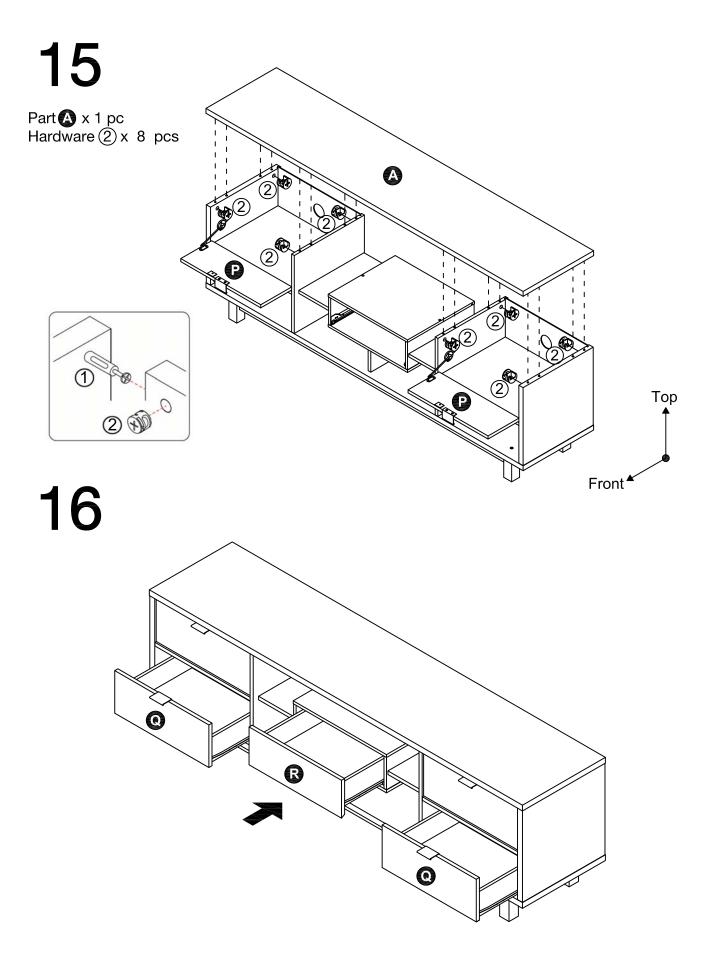

17

 Hardware 14 x 12 sets



Evenly space fixative plates (#14)throughout gaps between back and side panels, then secure with screws (#14).

[No pre-drilled holes]

18

ASSEMBLY COMPLETED



furniture rests on an ever and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.

Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

