

# FLOOR LAMP

Assembly Instructions  
Instrucciones De Asamblea  
Instructions d'Assemblée


## PARTS



A



B

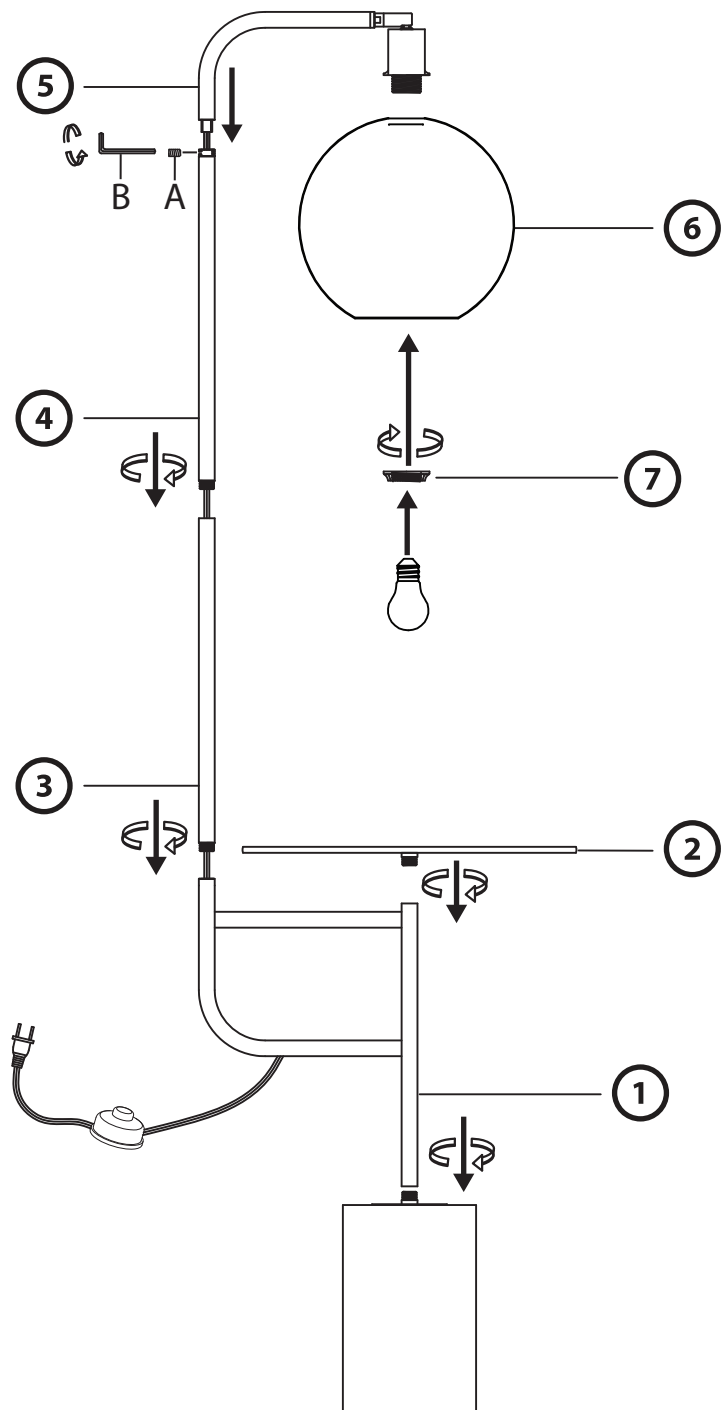

### CAUTION

For indoor use only. Keep out of reach of children and animals. Place on flat surface and away from flammable materials. Never operate this appliance if it has a damaged cord, plug or cable. Keep cord away from heated and/or damp areas.

Use 120V~60Hz, 60 watt max. type A E26 bulb only.