### **CARE AND MAINTENANCE**

Store outdoor furniture indoors or cover well when not in use. Remove wooden furniture from standing water. Dust regularly with small brush or vacuum Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.



#### **NOTICE**

- \* Please make sure that you have all parts indicated before you begin assembly of this item
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly
- \* This item may require periodic tightening

# **Part List and Hardware List**

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Frame back		1X
В	Frame Seat		1X
С	Frame Leg 1		1X
D	Frame Leg 2		1X
Е	Cushion seat		1X
F	Cushion Back		1X

PIECE	DESCRIPTION	PICTURE	QUANTITY
G	Bolt	<b>⊚</b> M8×70	8X
Н	Bolt	⊚ M6x50	2X
ı	Washer	M8.5/20X20	8X
К	Allen key	LG4	1X

Weight Capacity: 600 Ibs

Warning: Do not stand on chair

Warning: Do not over torque bolts / screws








Model# CPT1011A

Product Dimensions:30.9" W x 35.0" D x 32.1" H

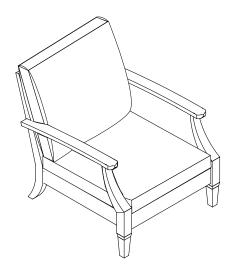


# **PREPARATION**

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

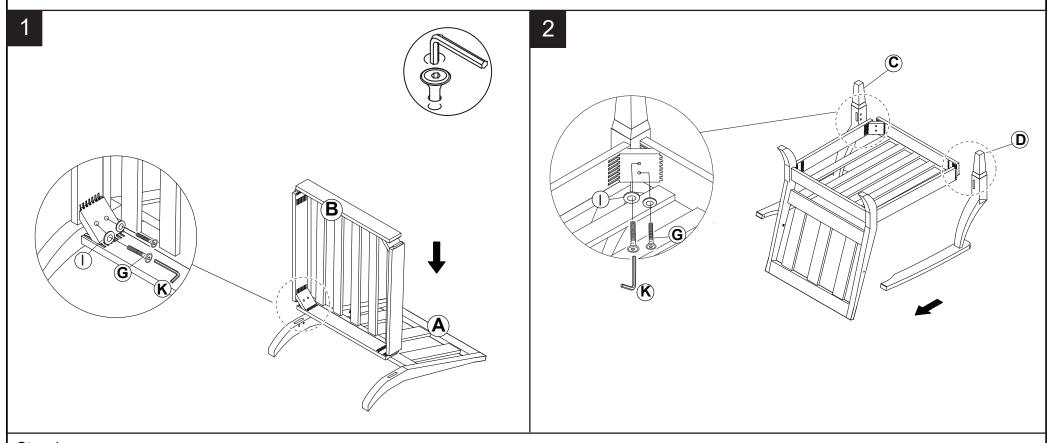

Step 1
Attach Frame Seat (B) to Frame Back (A) ,use Bolt Washer (I) tighten with allen key (K).

Step 2
Attach Frame Leg (C) and Frame leg (D),use Bolt (G) and(I) tighten with allen key (K).

# **PREPARATION**

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

