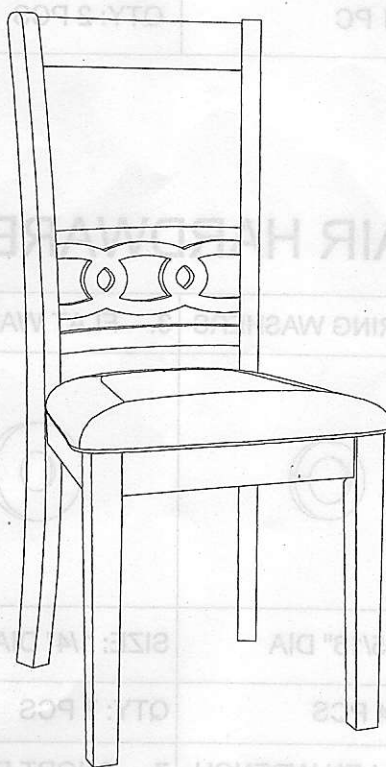


POUNDEX

ASSEMBLY INSTRUCTIONS

ITEM NO. F1812/F1813

DINING CHAIR

 
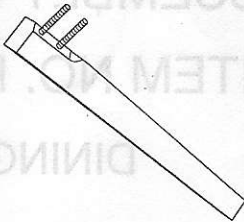


This page lists all the contents included in the Box. Please take time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

 
 
Cleaning & Care

Treat the surface with care, clean it with a dry or damp soft cloth.
Do not use abrasive cleaners. Hardware may be loosen over time.
Periodically check that all connections are tight.
A Phillips screwdriver is necessary for assembly.

CHAIR PART LIST

A. Back Legs	B. Seat Frames	C. Front Legs
		
QTY: 1 PC	QTY: 1 PC	QTY: 2 PCS

CHAIR HARDWARE LIST

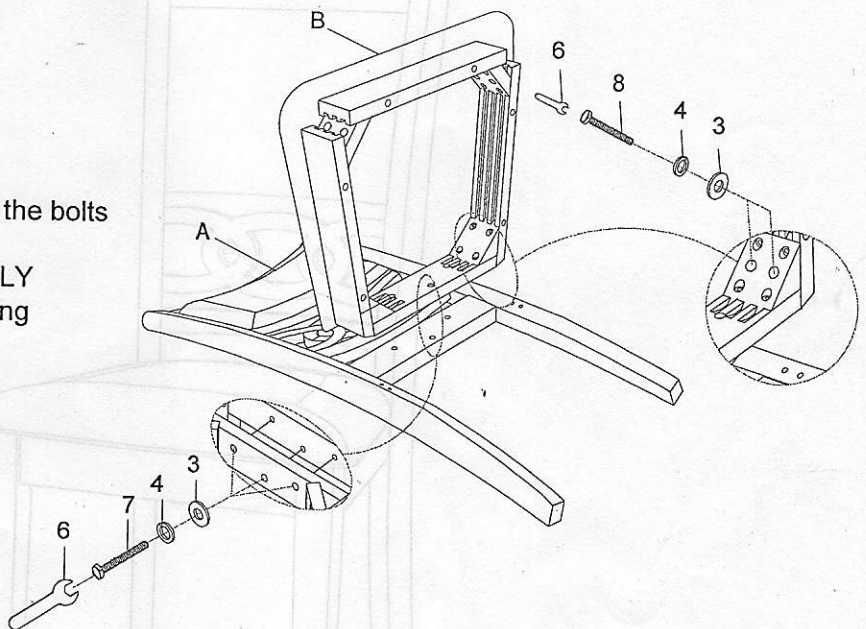
1. FLAT WASHERS	2. SPRING WASHERS	3. FLAT WASHERS	4. SPRING WASHERS
			
SIZE: 5/16" DIA	SIZE: 5/16" DIA	SIZE: 1/4" DIA	SIZE: 1/4" DIA
QTY: 4 PCS	QTY: 4 PCS	QTY: 7 PCS	QTY: 7 PCS
5. NUTS	6. ALLEN WRENCH	7. SHORT BOLTS	8. LONG BOLTS
			
SIZE: 5/16" DIA	SIZE: 5/16" DIA	SIZE: 1/4" x 1 3/4"	SIZE: 1/4" x 3"
QTY: 4 PCS	QTY: 1 PC	QTY: 3 PCS	QTY: 4 PCS

CHAIR ASSEMBLY INSTRUCTIONS

STEP 1

Put the Back Leg (A) and the Seat Frame (B) upside down on the soft and smooth surface. Then insert Long Bolts (8), Short Bolts (7), Spring Washer (4), and Flat Washers (3) into the predrilled holes of each corner, by using Allen Wrench (6).

Take the Allen wrench, and turn the bolts until the legs are secure. **DO NOT TIGHTEN COMPLETELY**. Stop when you feel you are adding force to tighten the bolts.



STEP 2

Attach the Front Legs (C) to the Seat Frame (B) by using Nuts (5), Spring Washers (2), and Flat Washers (1) with Allen Key (6).

Note:

The Seat Frame (B) has two screw holes on each side, which are used for attaching the seat. These holes are wider on the bottom and narrower on the top. Ensure the wider holes face towards you.

