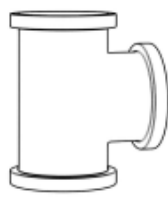
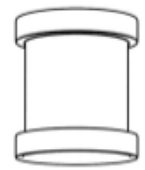
 
 



SKU: 6090-HG322BR

ASSEMBLY INSTRUCTION

		A  4 PCS	C  4PCS
		D  2PCS	E  8PCS
F  F 1 : 1.5" 6PCS F 2 : 2" 2PCS F 3 : 4" 4PCS F 4 : 5" 2PCS	G  G1: 10" 2PCS G2: 18.5" 1PC	H  2PCS	I  4PCS
J  16PCS	K   16PCS	  1PC	

Please unscrew all spare parts before assembling.
If you find the screw thread is rusty, please don't worry,
it will not affect the installation and use.

SKU: 6090-HG322BR ASSEMBLY INSTRUCTION

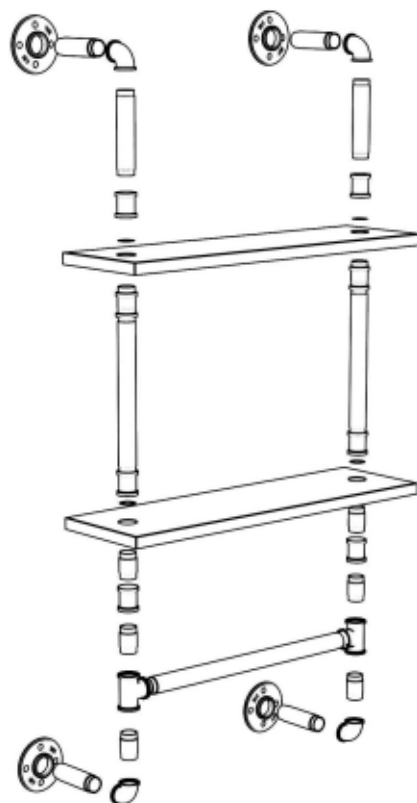


Decomposition Diagram

SKU: 6090-HG322BR


ASSEMBLY INSTRUCTION

STEP 1

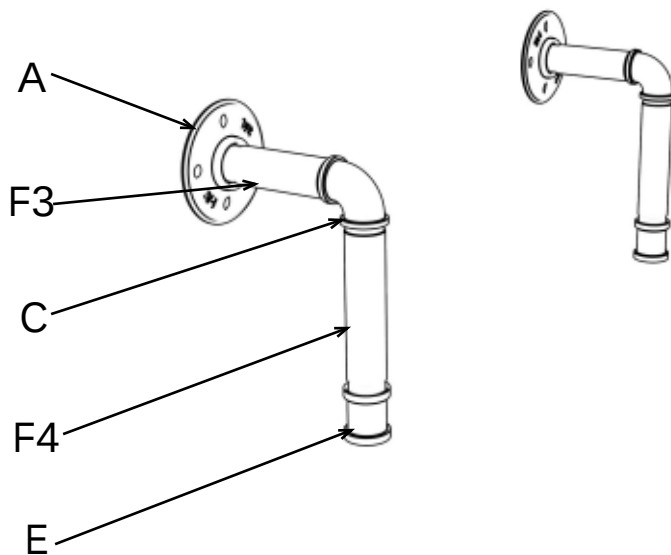

2PCS

STEP 2

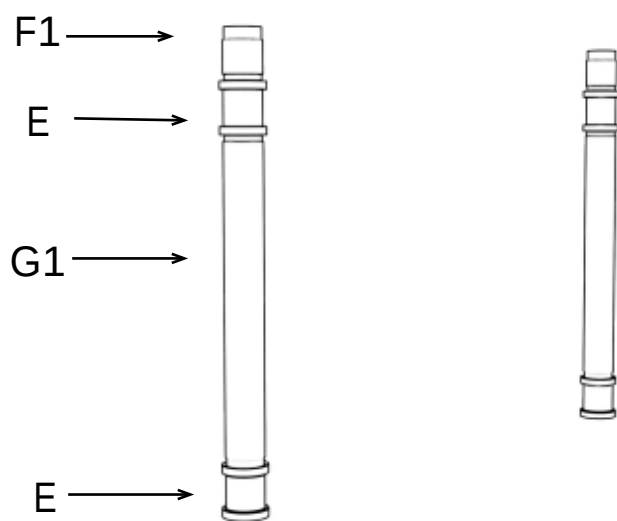


2PCS

SKU: 6090-HG322BR


ASSEMBLY INSTRUCTION

STEP 3

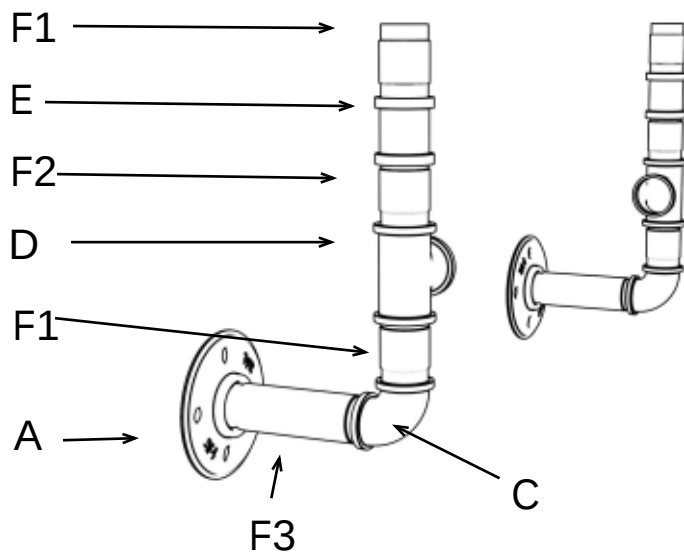

2PCS

STEP 4

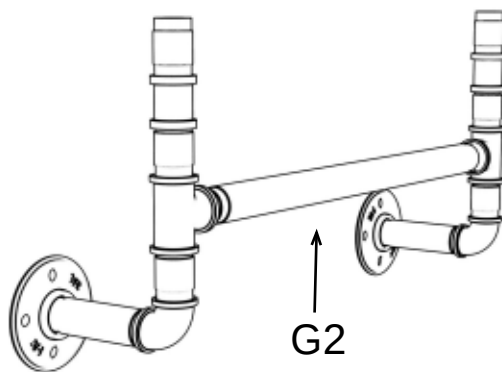


1PC

SKU: 6090-HG322BR

ASSEMBLY INSTRUCTION

STEP 5

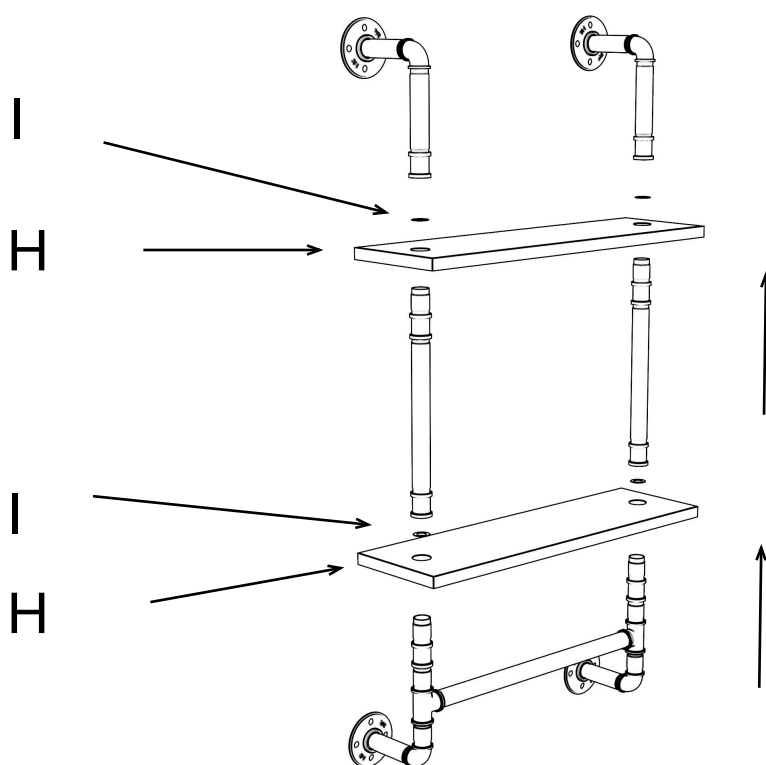

SKU: 6090-HG322BR

ASSEMBLY INSTRUCTION

STEP 6

