

NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

This is the original instruction, please read all manual instructions carefully before operating. reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

WARNING:

Carefully read and understand instructions and procedures before installing and using the threshold-ramp.


Do not modify the threshold-ramp design.


- Do not move a threshold-ramp while standing on it.
- During installation, please wear gloves to prevent hand injuries.
- Do not stack items or allow children to play on the RV Steps.
- Regularly check the structure and fasteners of the RV Steps to ensure its stability and safety.
- If the surface of the RV Steps is worn or damaged, please replace or repair it in time.
- Regularly check if the fasteners on the RV Steps are loose and tighten them as necessary.
- If the RV Steps is not used for a long time, store it in a dry, ventilated area and avoid direct exposure to sunlight.
- Check the surface of the RV Steps for wear and tear every 3 months, and replace or repair as necessary if there is significant wear or damage.

SAVE THESE INSTRUCTIONS

Model	HT231201A
Step Numbe (pcs)	2
Max. Load (kg)(single step)	200

Part List

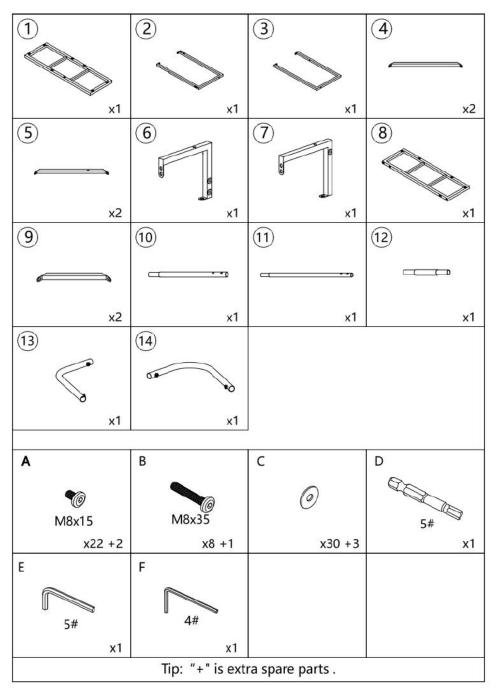

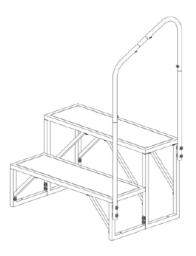

Done!

Manufacturer: Shanghaimuxinmuyeyouxiangongsi

Address: Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu,

shanghai 200000 CN.

Imported to AUS: SIHAO PTY LTD.1 ROKEVA STREETEASTWOOD

NSW 2122 Australia

Imported to USA: Sanven Technology Ltd. Suite 250,9166 Anaheim

Place, Rancho Cucamonga, CA91730



YH CONSULTING LIMITED.


C/O YH Consulting Limited Office 147, Centurion House, London Road, Staines-upon-Thames, Surrey, TW18 4AX





E-CrossStu GmbH.


Mainzer Landstr.69, 60329 Frankfurt am Main.

Installation procedure

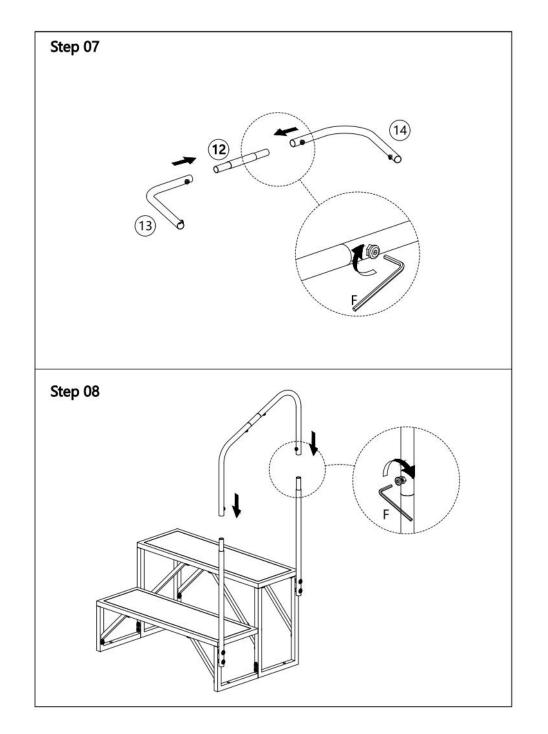


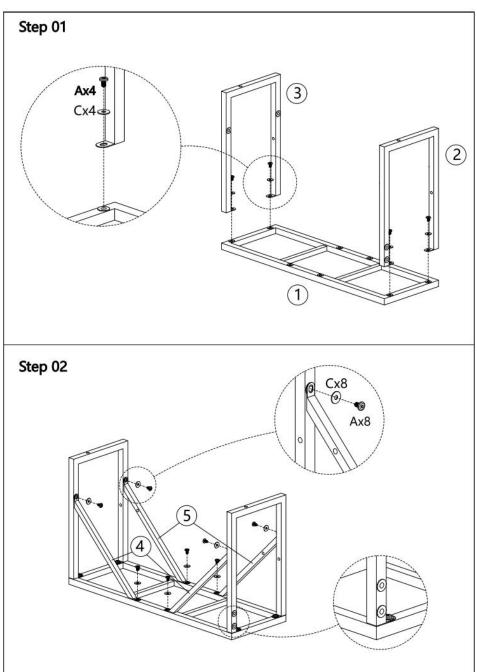

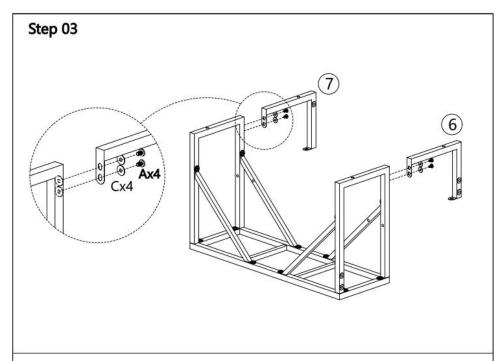

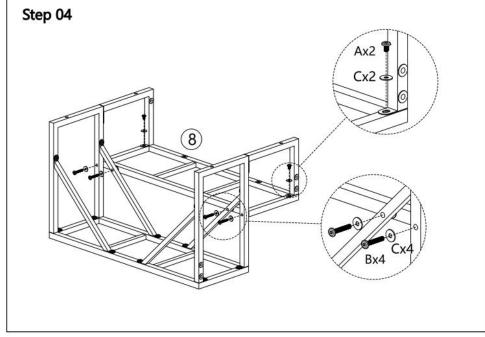

- 5 -

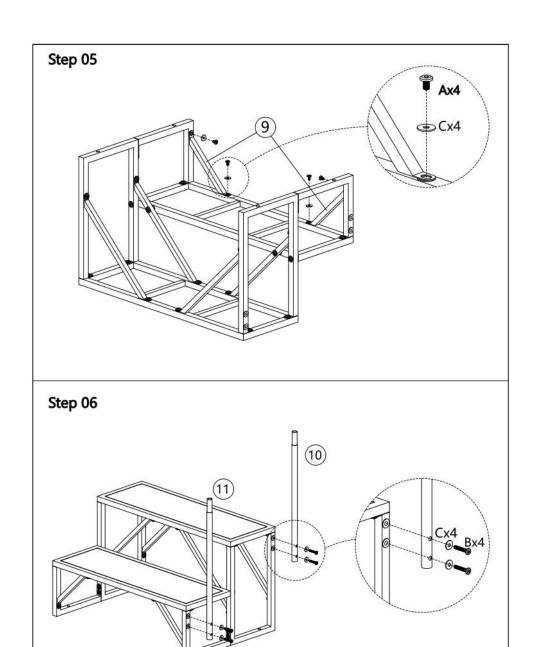

- 6 -