

ASSEMBLY INSTRUCTIONS



TV CONSOLE

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

ASSEMBLY TIME

30 MINUTES

MAX TV SIZE : 50"

 
PARTS IDENTIFICATION

A SIDE PANEL



6 PCS

B LOWER CROSS BRACE



1 PC

C LOWER LEFT DIVIDER PANEL



1 PC

D LOWER RIGHT DIVIDER PANEL



1 PC

E UPPER CROSS BRACE



1 PC

F UPPER LEFT DIVIDER PANEL



 
1 PC

G UPPER RIGHT DIVIDER PANEL




1 PC

H BOTTOM PANEL

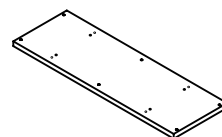


2 PCS

 I CROSS PANEL

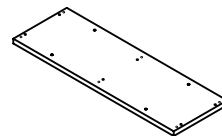

1 PC


 
J TOP PANEL

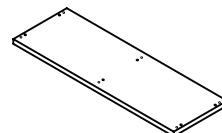

1 PC

HARDWARE IDENTIFICATION

  
Z

NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	4	CAM LOCK Ø 15x12mm SR		22 PCS
2	WOODEN DOWEL Ø 8x30mm		42 PCS	5	BOLT Ø 9.5x55mm SR		16 PCS
3	CAM BOLT Ø 7x35.5mm SR		22 PCS	6	STICKER Ø 20mm		4 PCS

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

 
STEP 1

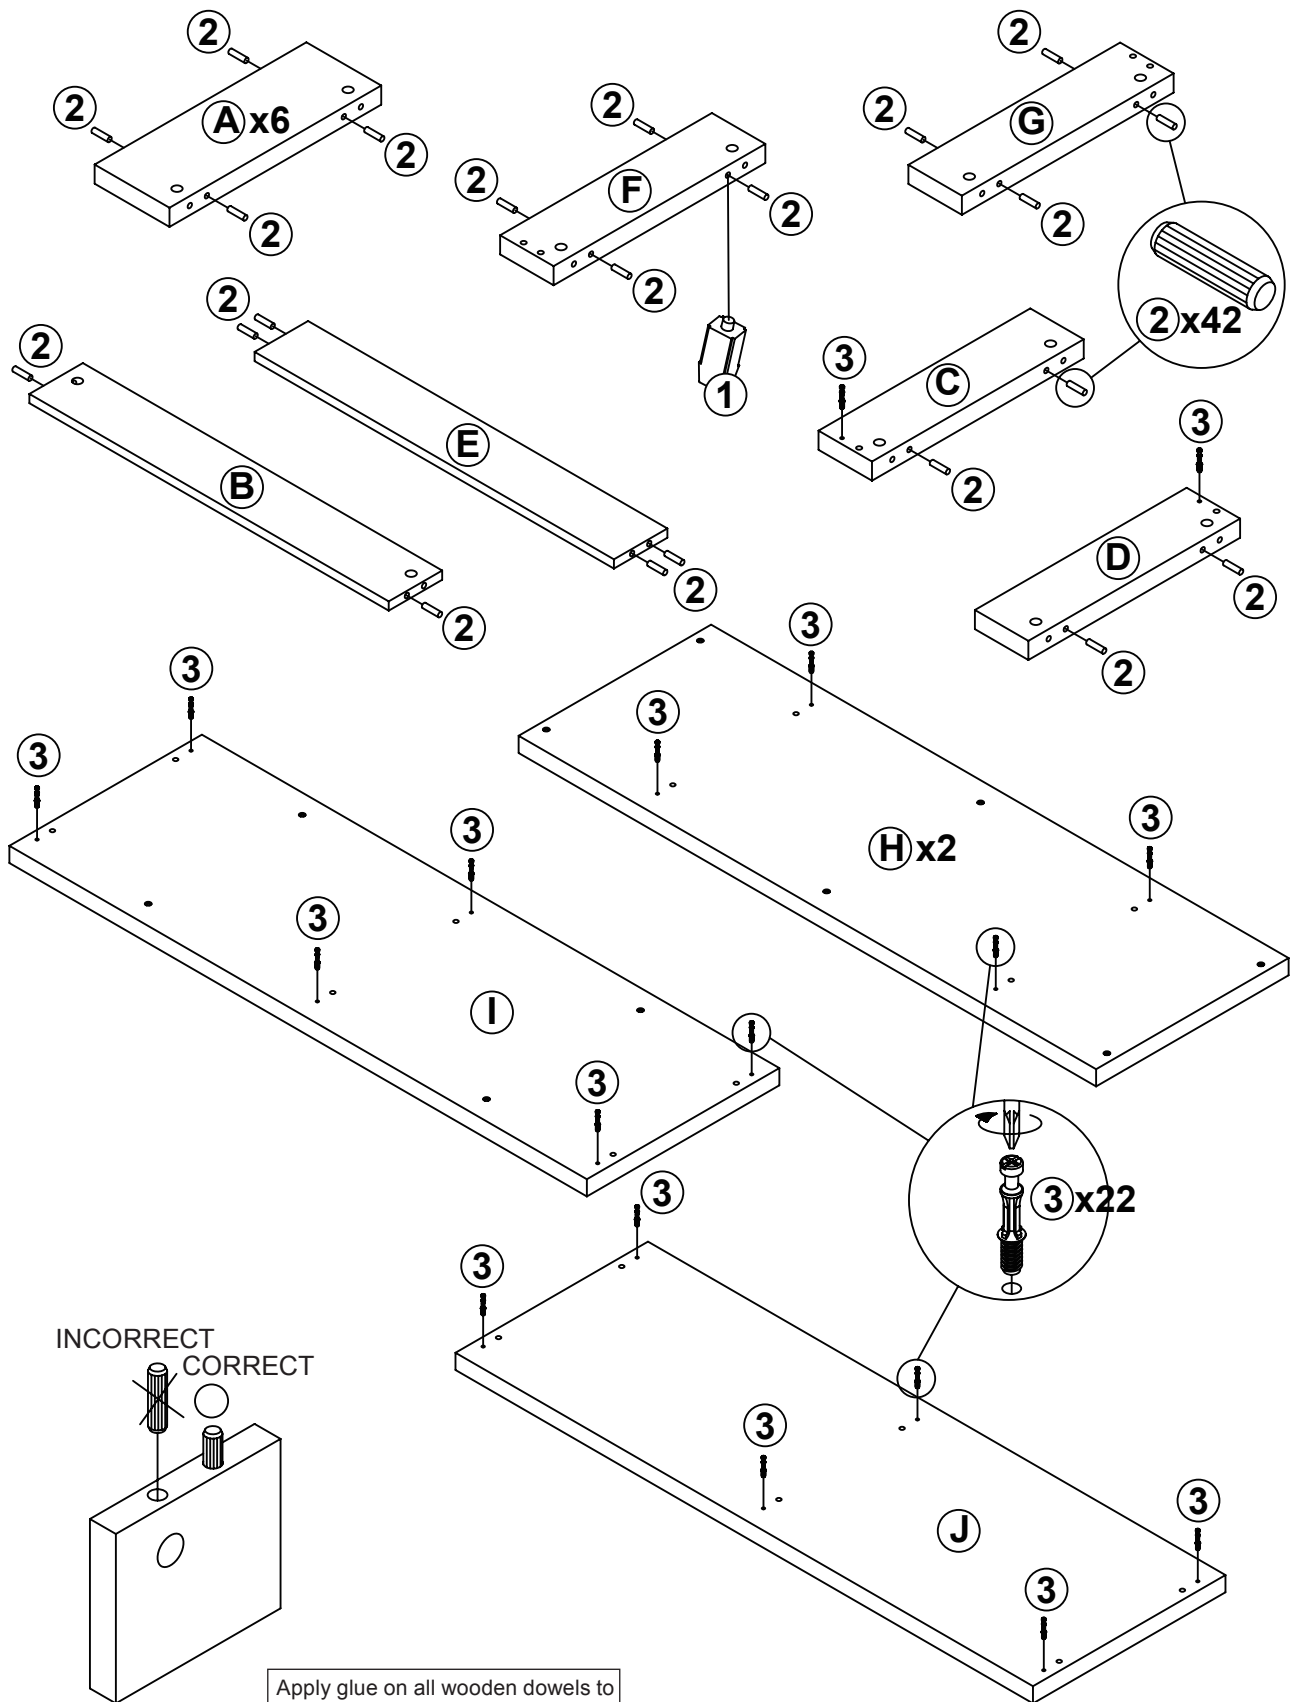


INCORRECT
CORRECT

Apply glue on all wooden dowels to ensure integrity of the structure.

 
STEP 2

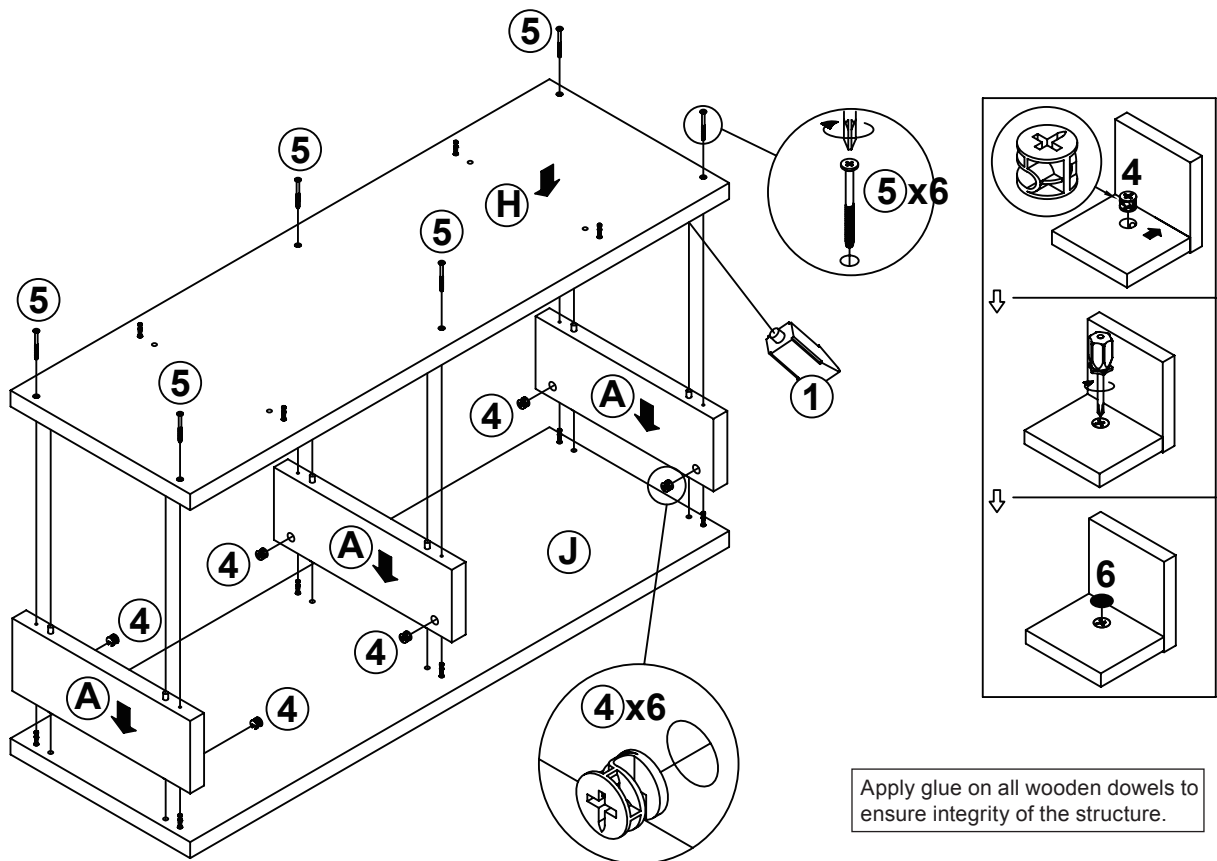

 STEP 3

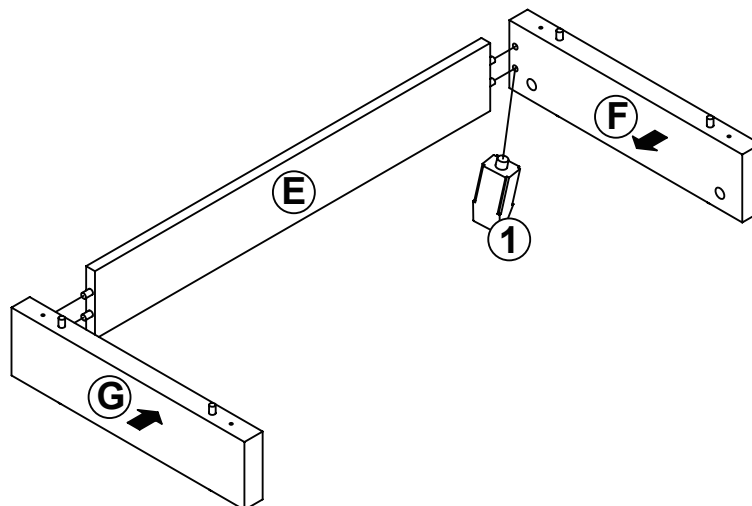


 STEP 4

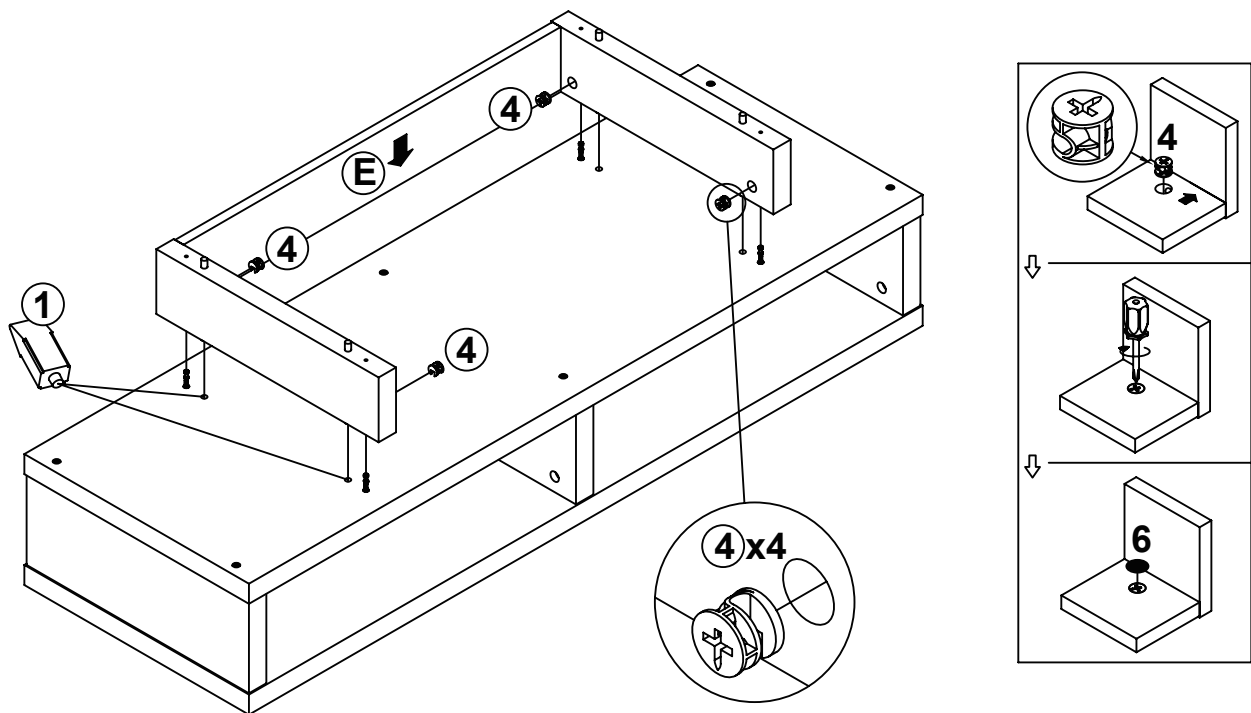


Apply glue on all wooden dowels to ensure integrity of the structure.

 
STEP 5

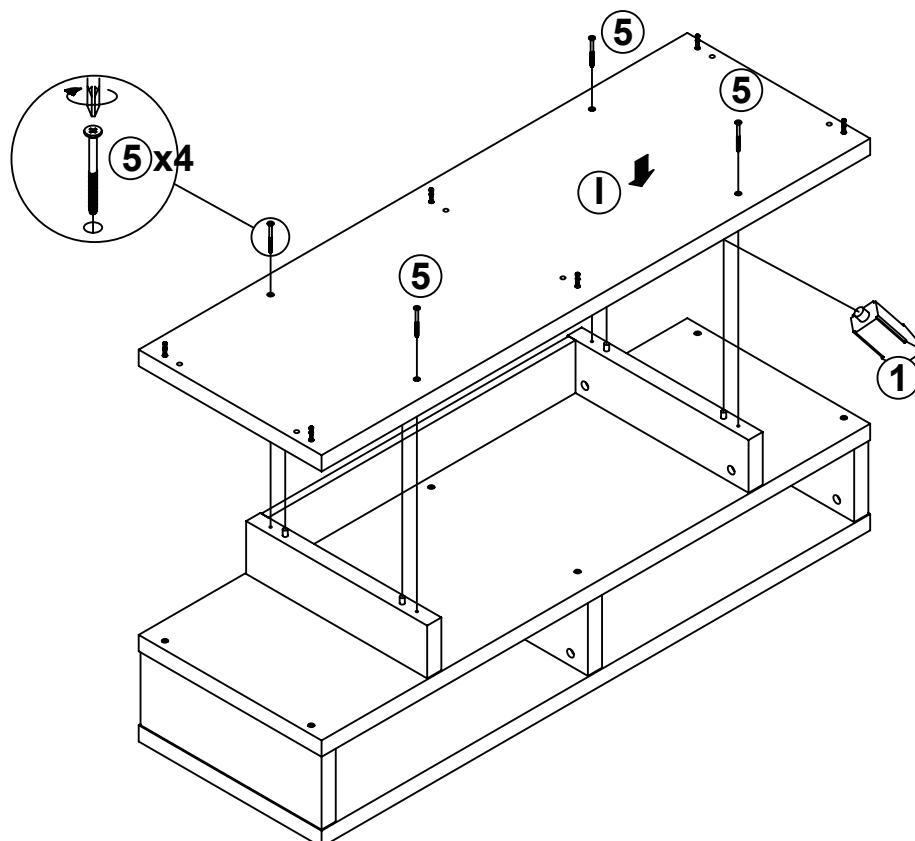


 
STEP 6

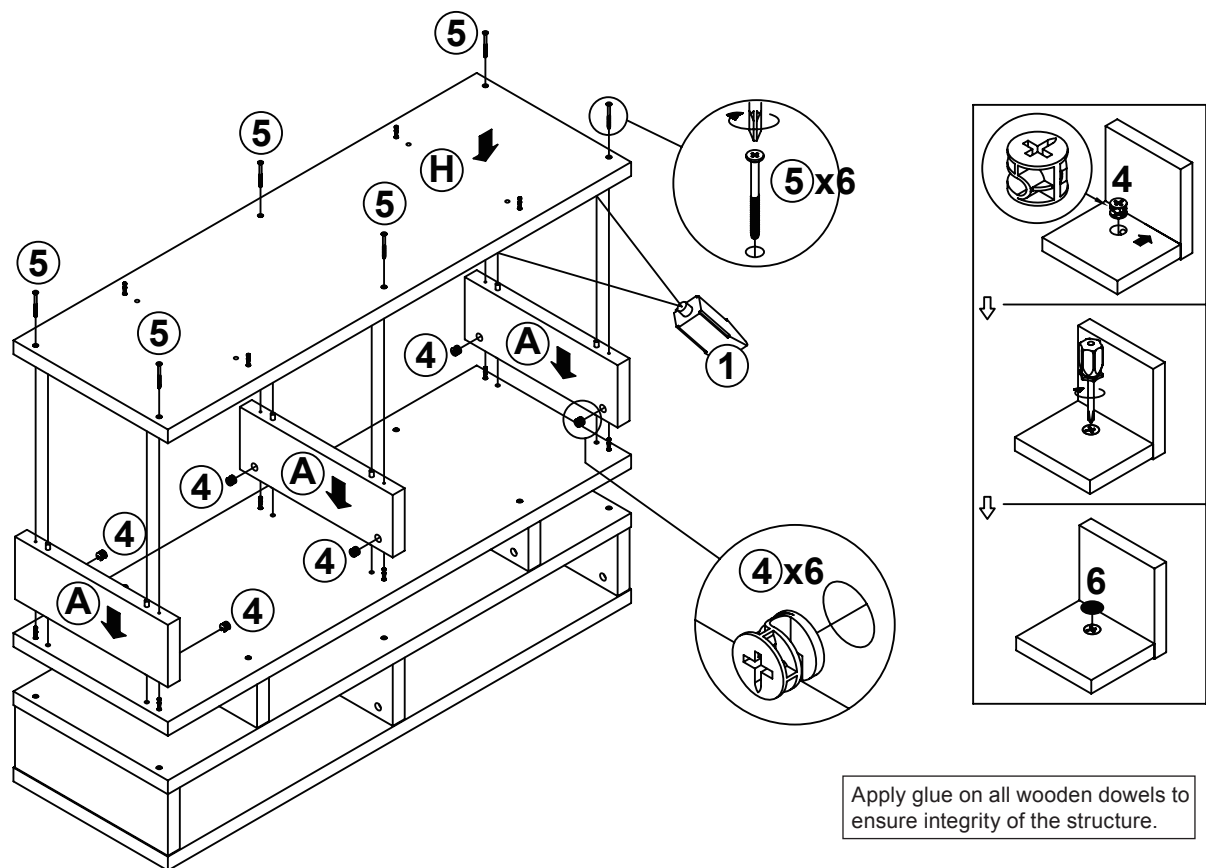

 STEP 7

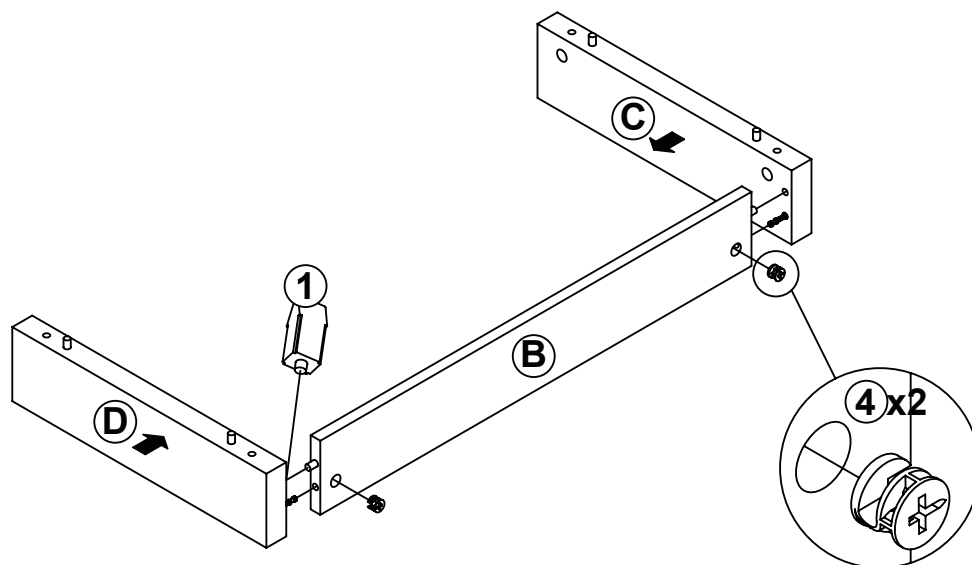


  
STEP 8

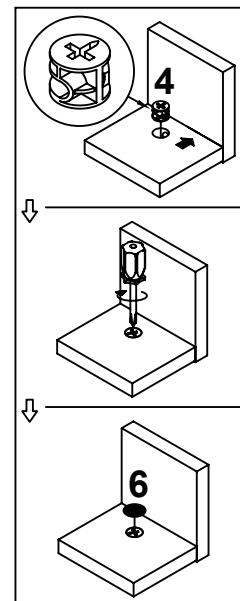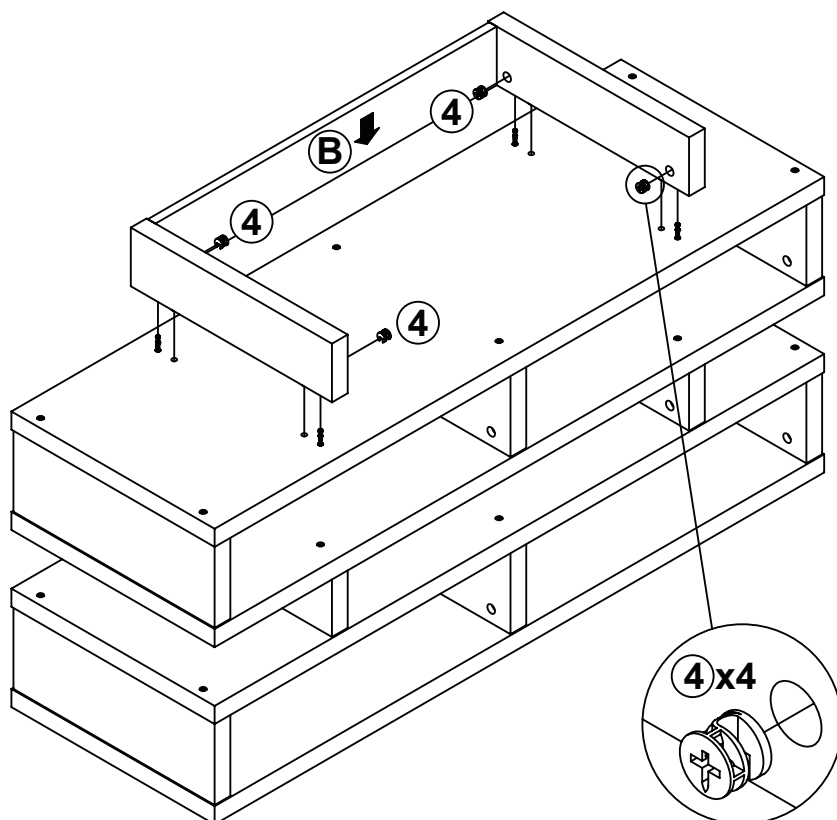

Apply glue on all wooden dowels to ensure integrity of the structure.

  STEP 9 COMPLETE

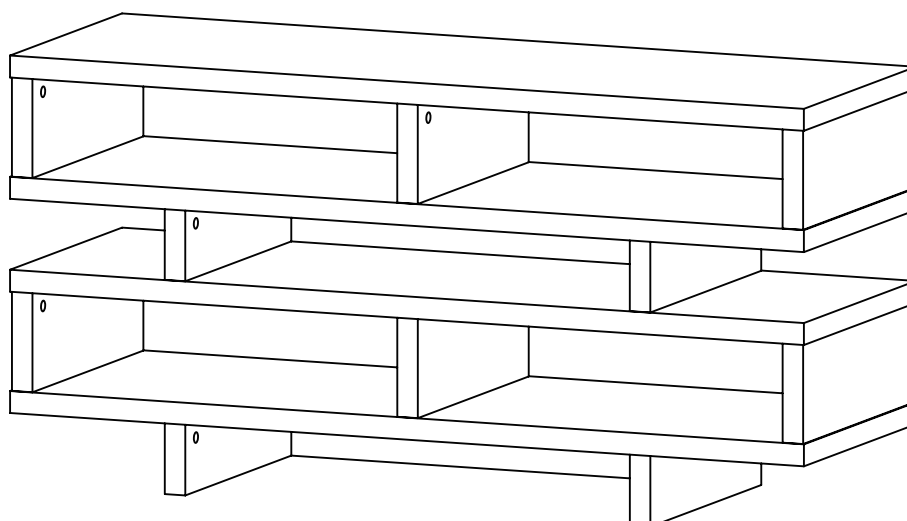

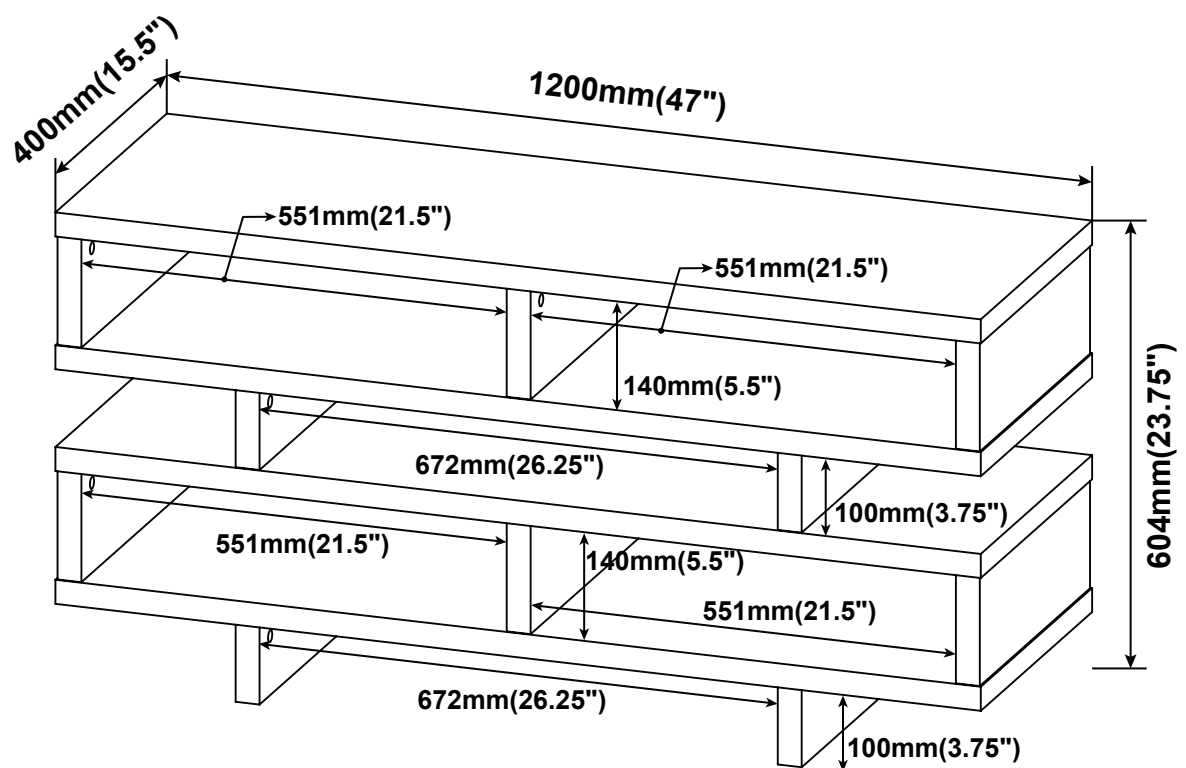

Note : Dimension tolerance $\pm 5\%$